 
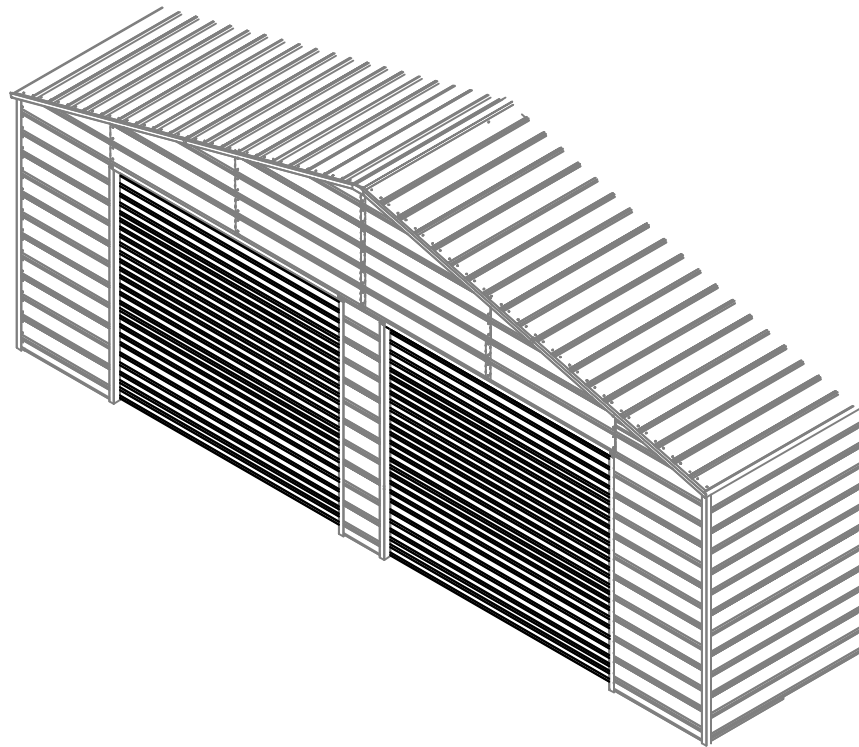 
 
 
 


Rolling shutter installation

Instructions for Assembly



NO.	PART	Qty.
JLM		1
BHZ		1
HGL		1
HGR		1
ZJL		1
ZJR		1
JT		6
SYG		1

NO.	PART	Qty.
PJ1		1
PJ2		1
PJ3		1
ST5		35
M8		6
F2		6



 
 
 
ZJL X1

 


ZJR X1




F2 X6

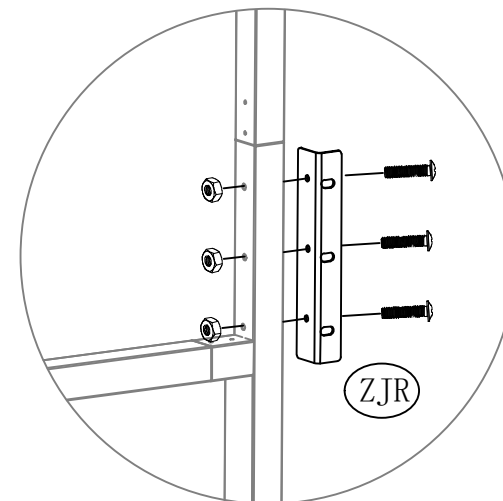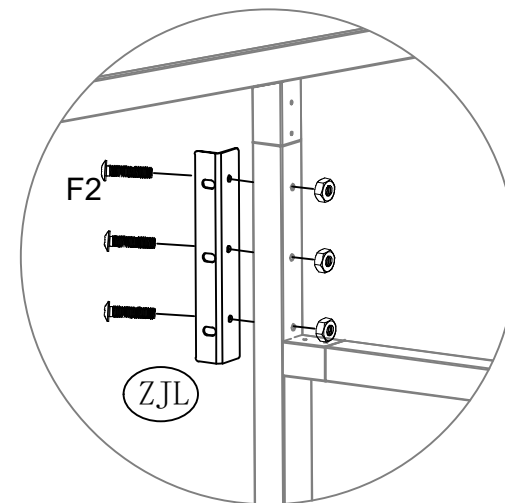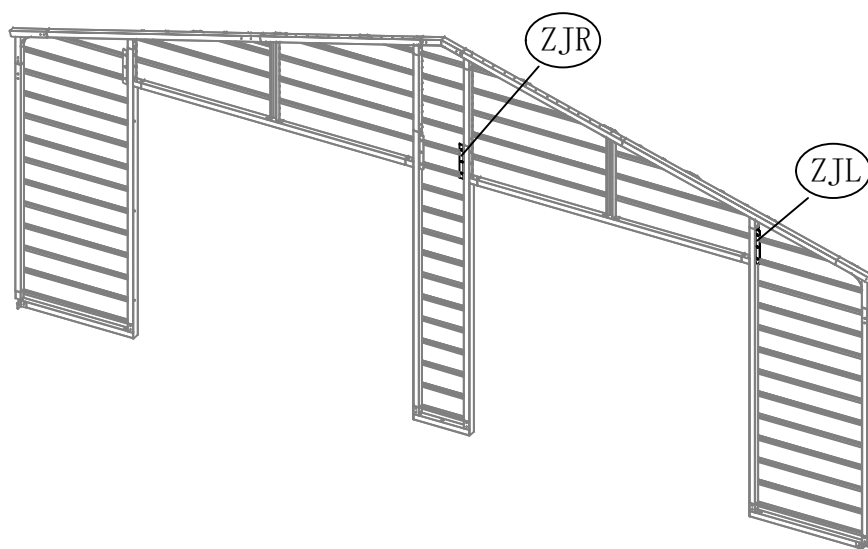

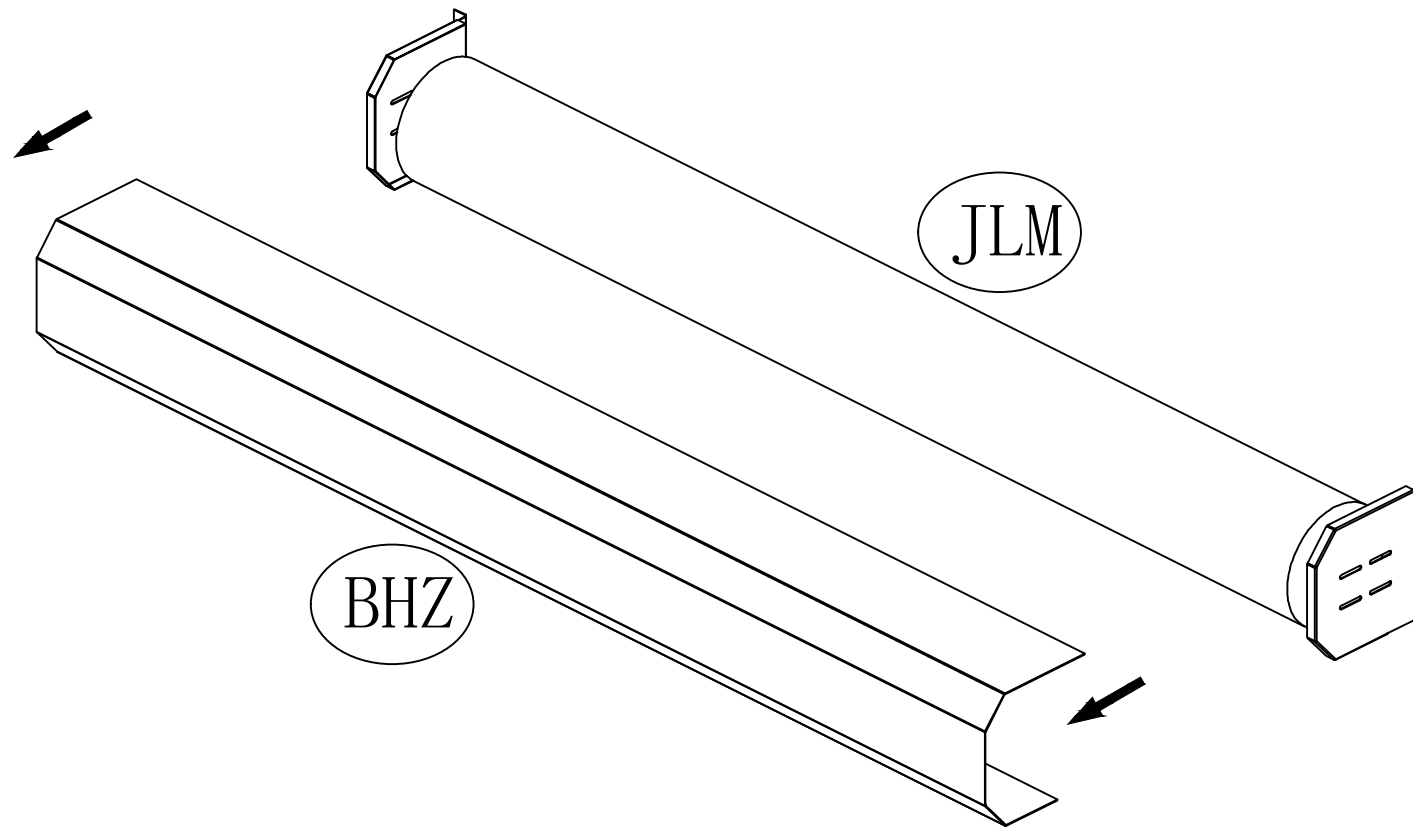


 
Separate the main body of the rolling
shutter door from the dust cover

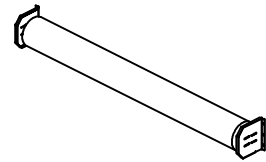




JLM X1



  
M8 X6

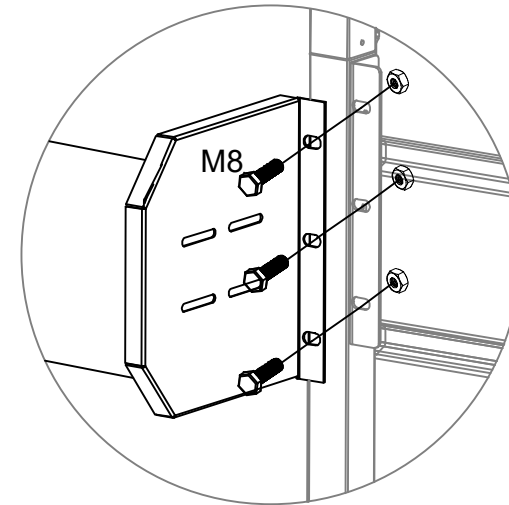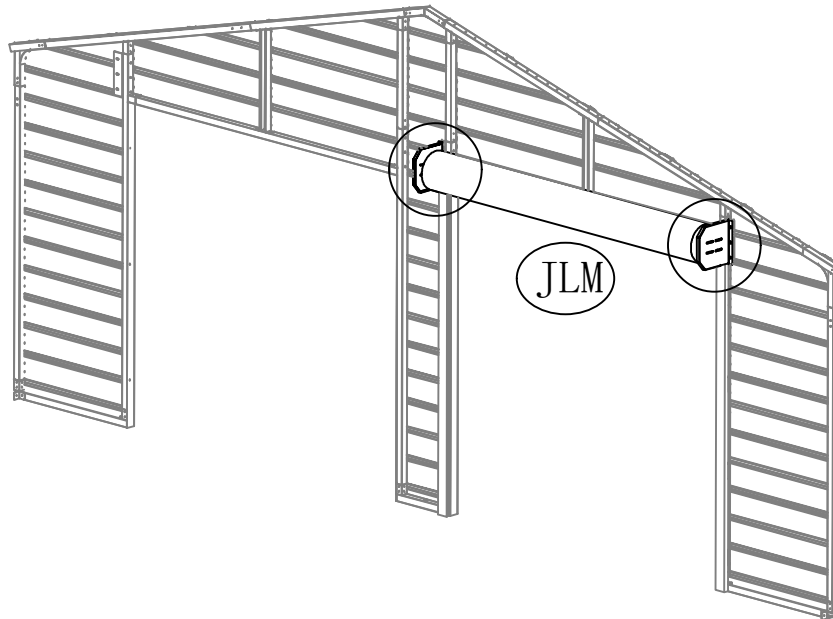

   
Install the main body of the rolling shutter door onto it

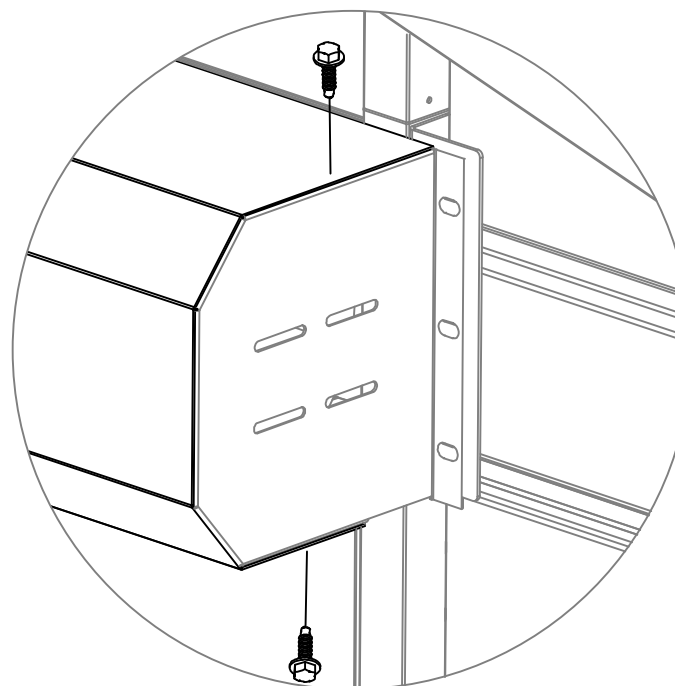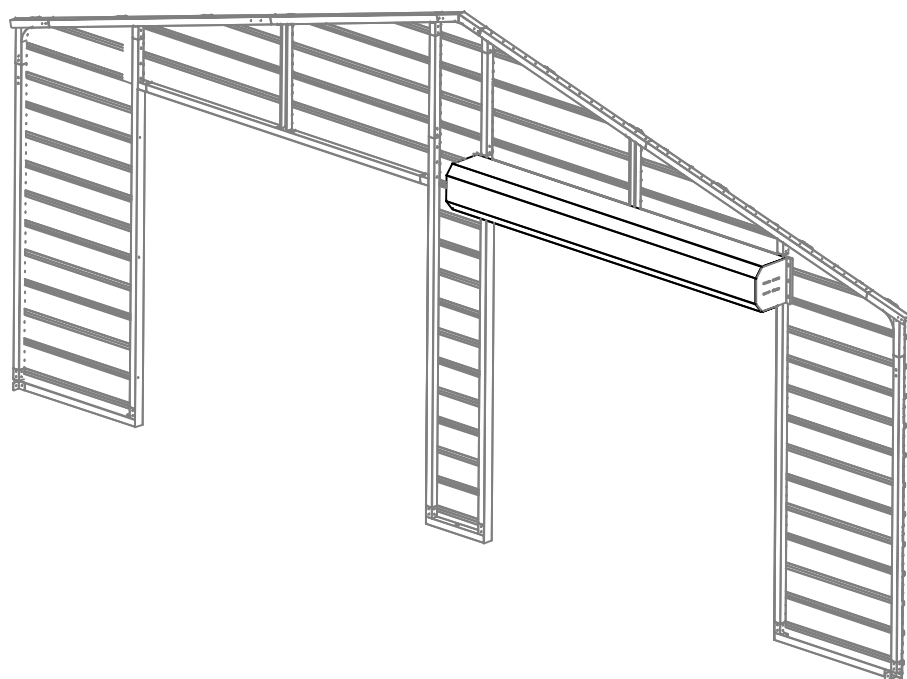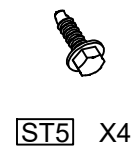

 Reinstall the dust cover onto the main body



HGL X1

 



HGR X1




JT X6



  ST5 X18

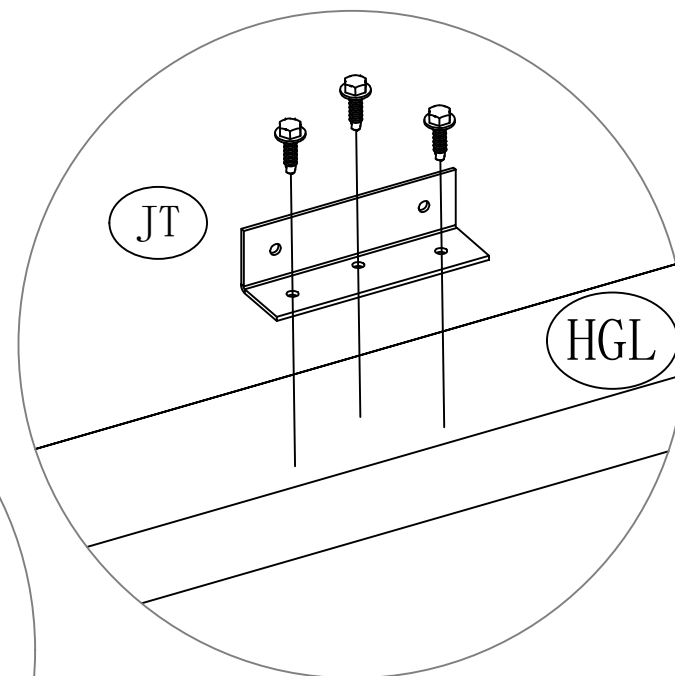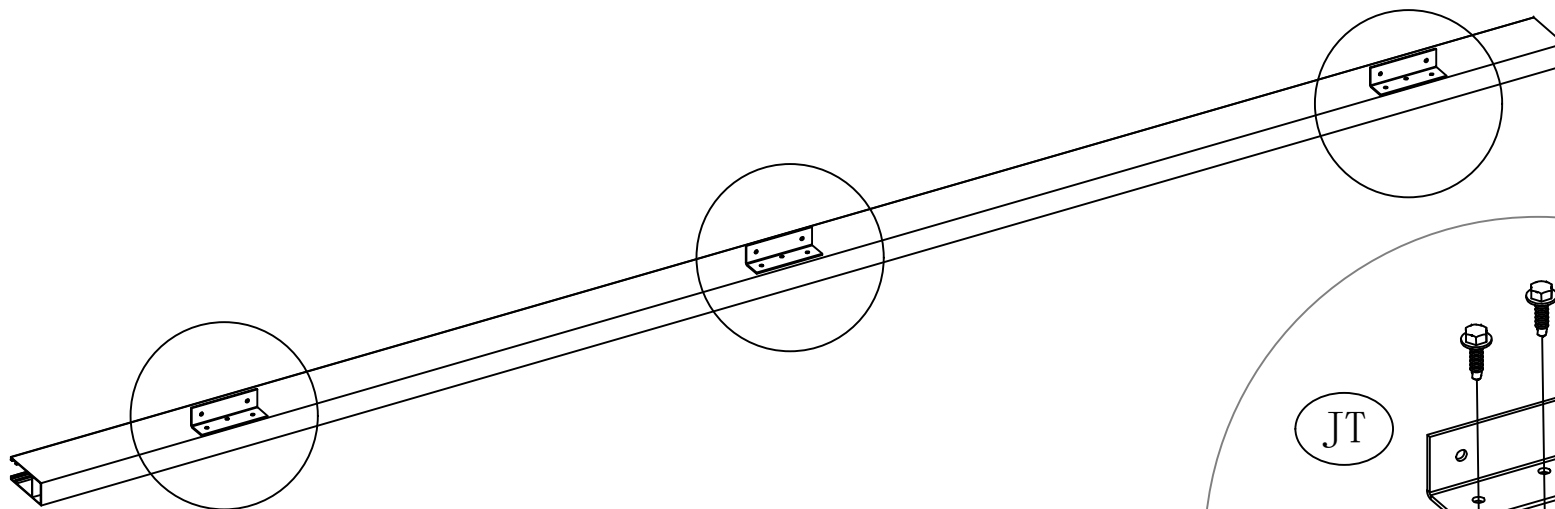

 Pay attention to the direction and be level

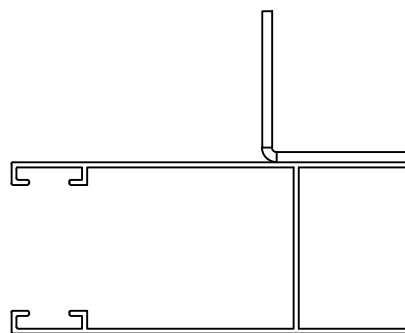

X2



ST5 X12

