

ASSEMBLY INSTRUCTION

▽ PARTSxQTY

▽ ASSEMBLY PROGRAM

<p>①</p> <p>E</p> <p>J</p> <p>F</p> <p>G</p>	<p>①</p> <p>(I)*4</p> <p>A</p> <p>(B)</p>
<p>③</p> <p>(H)*4</p> <p>A</p> <p>B</p> <p>D</p>	<p>④</p>

<p>Ax1</p>	<p>Gx5</p>
<p>Bx1</p>	<p>Hx4</p>
<p>Cx1</p>	<p>Ix4</p> <p>M6x20mm</p>
<p>Dx1</p>	<p>Jx4</p> <p>M6x25mm</p>
<p>Ex1</p>	<p>Fx1</p>
<p>Fx1</p>	