 


ZLINE

ATTAINABLE **LUXURY**[®]

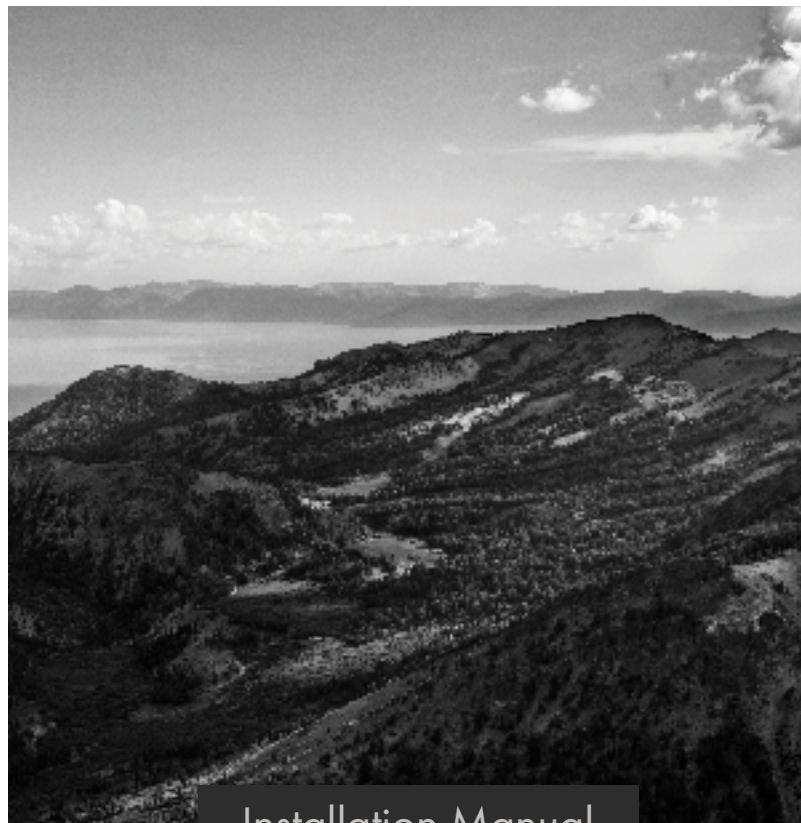

Installation Manual

INDUCTION COOKTOPS FCIND MODELS

zlinekitchen.com



ZLINE Kitchen and Bath provides Attainable Luxury, where the kitchen and bath of your dreams is never out of reach. Through our unique designs and unparalleled quality, we're dedicated to providing you an elevated experience in the heart of your home. With an endless selection of features and finishes, our inspiration is your reality.

ZLINE
ATTAINABLE LUXURY®



ZLINE is fueled by a passion for innovation—a relentless pursuit of bringing the highest end luxury designs and professional features into everyone’s homes.

Because we continually strive to improve our products, we may change specifications and designs without prior notice.

Scan the QR code to view the most up-to-date version of the Installation Manual and User Manual.

⚠ WARNING: This product can expose you to chemicals including nickel, which is known to the State of California to cause cancer. For more information, go to www.P65Warnings.ca.gov.

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS..... 1

 Installation Safety4

 Ventilation Safety5

BEFORE INSTALLATION..... 6

INSTALLATION8

WARRANTY..... 14

IMPORTANT SAFETY INSTRUCTIONS

- **NOTE:** This equipment has been tested and found to comply with the limits for a Consumer ISM equipment, pursuant to Part 18 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
- Please note that changes or modifications of this product are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

FCC DECLARATION OF CONFORMITY	
Unique Identifier	
Product Description	ZLINE Induction Cooktops
Model Number	FCIND24-A1, FCIND30-A1, FCIND36-A1
Trade Name	ZLINE
FCC Compliance Statement	This device complies with Part 18 of the FCC Rules.
Responsible Party – U.S. Contact Information	
Company:	ZLINE Kitchen and Bath, LLC
Address:	350 Parr Circle Reno, NV 89509
Telephone or internet contact information:	• 1-614-777-5004 • contact@zlinekitchen.com

IMPORTANT SAFETY INSTRUCTIONS

- The manufacturer will not be responsible for any damage to property or to persons caused by incorrect installation, improper use of the appliance, or failure to heed the warnings listed.
- This appliance has been designed for non-commercial, domestic use only.
- Please observe all local, state, and national codes and ordinances.
- The installer should leave these instructions with the consumer who should retain for local inspectors' use and for future reference.
- In Massachusetts, installation must be performed by a "Massachusetts" licensed installer.
- This manual does not cover all possible conditions that may occur during installation and/or operation. Always contact a qualified service technician or the manufacturer about problems you may not understand.
- Persons with a pacemaker or other implanted medical device should consult their physician before using this induction cooktop.



DANGER

DANGER: When you see this symbol in the instructions, it indicates a hazardous situation which, if not avoided, could result in death or serious injury.



WARNING

WARNING: When you see this symbol in the instructions, it indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

IMPORTANT SAFETY INSTRUCTIONS



WARNING If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.

- Metallic objects such as knives, forks, spoons, and lids should not be placed on the cooktop surface because they can get hot.
- After use, switch off the cooktop element by its control. Do not rely on the pan detector.
- The appliance is not intended to be operated by means of external timer or separated remote-control system.
- Danger of fire: Do not store items on the cooking surfaces.



WARNING The appliance and its accessible parts become hot during use.



DANGER USE CARE WHEN UNPACKING THE PRODUCT

- Remove all tape and packaging before using the appliance.
- Carefully dispose of the product's shipping box, plastic bags, and all other packing materials after the appliance is unpacked.
- Remove any protective film that may still be on your induction cooktop.
- Boxes covered with rugs, bedspreads, sheets, or other materials can become air-tight chambers. Never allow children to play with packaging material.
- Remove all staples from the box. Staples can cause cuts and destroy finishes if they come in contact with other appliances or furniture.
- Do not remove the model/serial plate attached to the appliance; doing so will not only void the product warranty, it will limit the ability for future service to be conducted on the cooktop in an effective manner.

IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION SAFETY



Installation and service on this product must be performed by a qualified installer or servicer. Ask the manufacturer to recommend a qualified technician and authorized repair service in your area.

- Never modify or alter the construction of the appliance by removing panels, wire covers, or any other part of the product.
- If the appliance is located near a window, NEVER hang long curtains or paper blinds on that window. They could blow over the cooking surface and ignite, potentially causing a fire hazard.
- If the appliance is used intensively for a long time, the effectiveness of the ventilation will have to be increased, for example by opening a window or increasing the power of the range hood operating above.
- Flammable materials and liquids should not be stored on the appliance or near surface units. This includes paper, plastic, and cloth items, as well as cookbooks, plastic ware, and towels. Do not store explosives such as aerosol cans on or near the appliance. Flammable materials may explode and result in fire or property damage.
- Keep the appliance area clear and free from combustible materials, gasoline, and other flammable vapors and liquids.



STATE OF CALIFORNIA PROPOSITION 65 WARNINGS

- The California Safe Drinking Water and Toxic Enforcement Act requires the Governor of California to publish a list of substances known to the state to cause birth defects or other reproductive harm and requires businesses to warn customers of potential exposure to such substances.

IMPORTANT SAFETY INSTRUCTIONS



VENTILATION SAFETY



An air curtain or other overhead cooktop hood, which operates by blowing downward airflow onto the cooktop, shall not be used/installed in conjunction with this cooktop.

- The appliance should have proper ventilation in order to keep the unit operating properly and maintain the temperature of immediate surroundings. Do not obstruct flow of ventilation air.
- It is the installer's responsibility to comply with installation clearances specified within this Installation Manual.
- The appliance should be located for convenient use in the kitchen; recessed installations must provide complete enclosure of the sides and rear of the cooktop.
- Avoid placing cabinetry directly above the appliance when possible. If cabinetry is used above the cooking surface, use cabinets no more than 13" (330 mm) deep.
- Contact a service technician and/or a qualified floor covering installer to check that wall coverings, countertops, and cabinets located around the appliance can withstand at least 200 °F (93 °C).



Explosion hazard conditions will exist unless you perform ALL of the following; failure to do so can result in death, explosion, or fire.

- Examples of a qualified person include:
 - Licensed heating personnel
 - Authorized service personnel

BEFORE INSTALLATION

MODEL	COOKING ZONES	ELECTRICAL SUPPLY	WATTAGE
FCIND-24	3 Zones	240 V, 40 A	7200 W
FCIND-30	4 Zones		7200 W
FCIND-36	5 Zones	240 V, 50 A	9000 W

MODEL	PRODUCT WIDTH	PRODUCT DEPTH	PRODUCT HEIGHT
FCIND-24	23 1/4" (591 mm)	20 1/2" (521 mm)	2 1/16" (52 mm)
FCIND-30	30 5/16" (770 mm)		
FCIND-36	35 7/16" (900 mm)		

MODEL	CUTOUT WIDTH	CUTOUT DEPTH	CUTOUT HEIGHT
FCIND-24	22 1/4" (565 mm)	19 1/2" (495 mm)	1 13/16" (46 mm)
FCIND-30	29 5/16" (745 mm)		
FCIND-36	34 7/16" (875 mm)		

BEFORE INSTALLATION

 
BEFORE YOU INSTALL THE COOKTOP, MAKE SURE THAT

- The work surface is square and level, and no structural members interfere with space requirements.
- The work surface is made of a heat-resistant material.
- If the cooktop is installed above an oven, the oven has a built-in cooling fan.
- The installation will comply with all clearance requirements and applicable standards and regulations.
- A suitable means of disconnection providing full isolation from the electrical supply must be incorporated into the permanent wiring and installed in accordance with applicable local codes and regulations.
- The disconnecting means must be of an approved type and capable of disconnecting all ungrounded (hot) conductors supplying the appliance.
- A means of disconnection from the electrical supply must remain readily accessible after installation.
- Use heat-resistant and easy-to-clean finishes (such as ceramic tiles) for the wall surface surrounding the cooktop.
- You have a 1/8" (3 mm) drill bit and a screwdriver.

INSTALLATION

CUTOUT DIMENSIONS

- **IMPORTANT:** Save for the local electrical inspectors' use.
- To eliminate the risk of burns or fire by reaching over heated surface units, cabinet storage space located above the surface units should be avoided. If cabinet storage is to be provided, the risk can be reduced by installing a range hood that projects horizontally a minimum of 5" (127 mm) inches beyond the bottom of the cabinets.
- Cut out the work surface according to the sizes shown in the drawing.
- For the purpose of installation and use, a minimum of 2" (50 mm) space shall be preserved around the hole.
- Be sure the thickness of the work surface is at least 1 3/16" (30 mm). Please select heat-resistant work surface material to avoid larger deformation caused by the heat radiation from the cooktop.

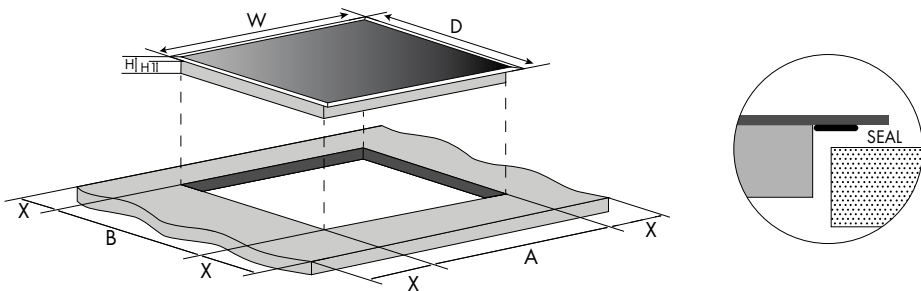

	WIDTH (W)	DEPTH (D)	HEIGHT (H)	A	B	H1	X
FCIND-24	23 1/4" (590 mm)	20 1/2" (520 mm)	2 1/16" (52 mm)	22 1/4" (565 mm)	19 1/2" (495 mm)	1 13/16" (46 mm)	2" (50 mm)
FCIND-30	30 5/16" (770 mm)			29 5/16" (745 mm)			
FCIND-36	35 7/16" (900 mm)			34 7/16" (875 mm)			

 


WARNING: Make sure the induction cooktop is well ventilated and the air inlet and outlet are not blocked.

NOTE: The safety distance between the cooktop and the cupboard above the cooktop should be at least 30" (762 mm).

INSTALLATION

CUTOUT DIMENSIONS

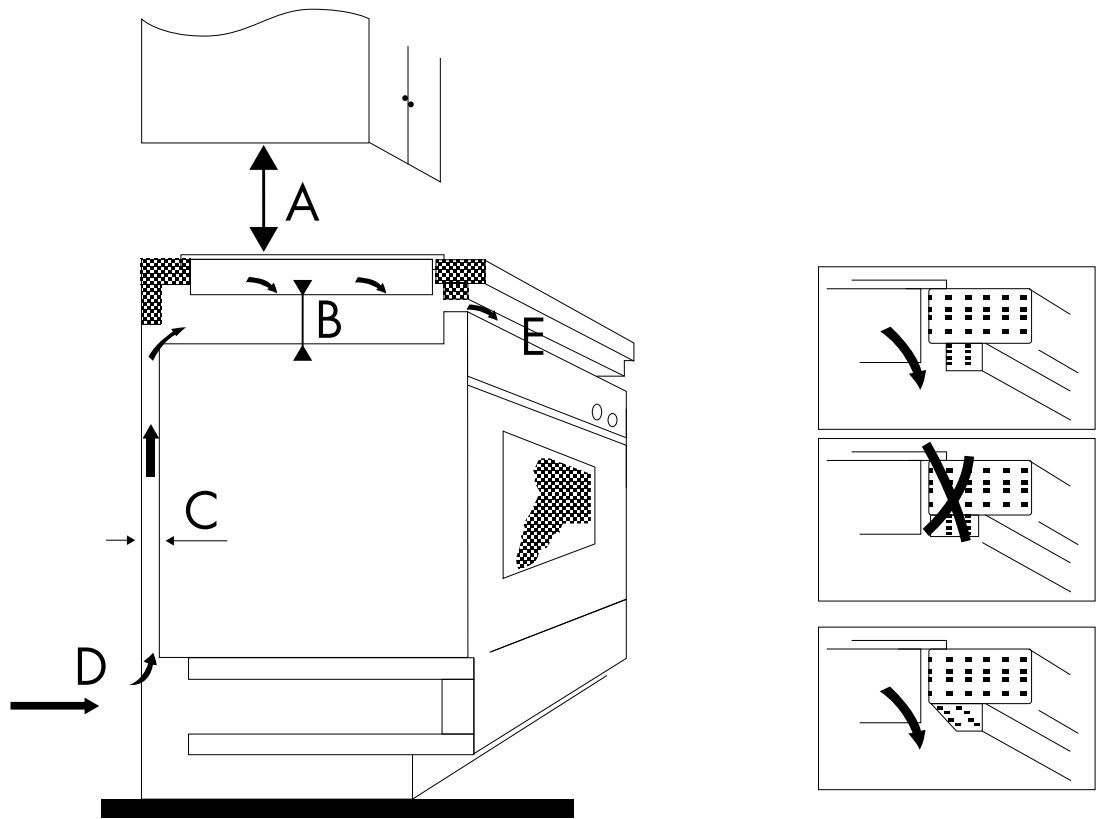


	A	B	C	D	E
FCIND-24	30"-36" (762 mm-914 mm)	2" (50 mm)	13/16" (20 mm)	Air intake	Air exit: 3/16" (5 mm)
FCIND-30					
FCIND-36					

IMPORTANT SAFETY INSTRUCTIONS

Mounting the Cooktop

 The cooktop is equipped with retention clips that apply tension against the countertop cutout to secure the unit once installed.

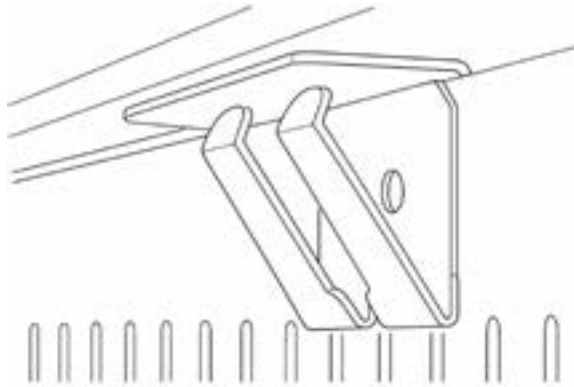

1. The induction cooktop must be installed by qualified personnel or technicians.
2. The cooktop shall not be installed directly above a dishwasher, fridge, freezer, washing machine, or clothes dryer, as the humidity may damage the cooktop electronics.
3. The wall and any surfaces located above the cooking zones must be made of heat-resistant materials capable of withstanding the heat generated during cooking.
4. To avoid any damage, the cookware and adhesive must be resistant to heat.

IMPORTANT SAFETY INSTRUCTIONS

ELECTRICAL SAFETY



ELECTRIC SHOCK HAZARD

- Check with an electrician that the wiring in your home is suitable for use with this appliance.
- Failure to follow these instructions can result in death, fire, or electrical shock.
- Any additions, changes, or conversions required to properly operate this appliance must be made by a qualified service technician in accordance with the manufacturer's instructions and all codes and requirements of the local governing authority.
- Failure to follow the instructions could result in serious injury or property damage. The qualified agency performing this work assumes responsibility for the conversion.
- A dedicated branch circuit is required. The branch circuit must be protected by a 2-pole Ground-Fault Circuit Interrupter (GFCI) circuit breaker, installed in accordance with the National Electrical Code (NEC) and local electrical codes.
- Connect only to a 240-volt, 60 Hz power supply. Electrical connection must be made with two hot (ungrounded) conductors (L1 and L2), and one equipment grounding conductor. Do not connect a neutral conductor to this appliance. When connected to a 4-wire supply, the neutral conductor must not be connected must be capped according to local electrical codes.
- Please ensure the cooktop is properly grounded.
- Ensure the power cord isn't accessible after installation.



WARNING: Before obtaining access to terminals, all supply circuits must be disconnected.



WARNING Cooktops are equipped with 3-wires for your protection against shock hazard and should be plugged directly into a properly grounded receptacle. Do not cut or remove the prong from this plug.



CAUTION Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation. Verify proper operation after servicing.

INSTALLATION

Connecting the cooktop to the mains power supply

 
This cooktop must be connected to the mains power supply only by a suitably qualified person. Before connecting the cooktop to the mains power supply, check that:

1. The domestic wiring system is suitable for the power drawn by the cooktop.
2. The voltage corresponds to the value given in the rating label.
3. The power supply cable sections can withstand the load specified on the rating label.

To connect the cooktop to the mains power supply, do not use adapters, reducers, or branching devices, as they can cause over heating and fire.

4. The power supply cable must not touch any hot parts and must be positioned so that its temperature will not exceed 167 °F (75 °C) at any point.

The power supply should be connected in compliance with the relevant standard. The method of connection is shown below.

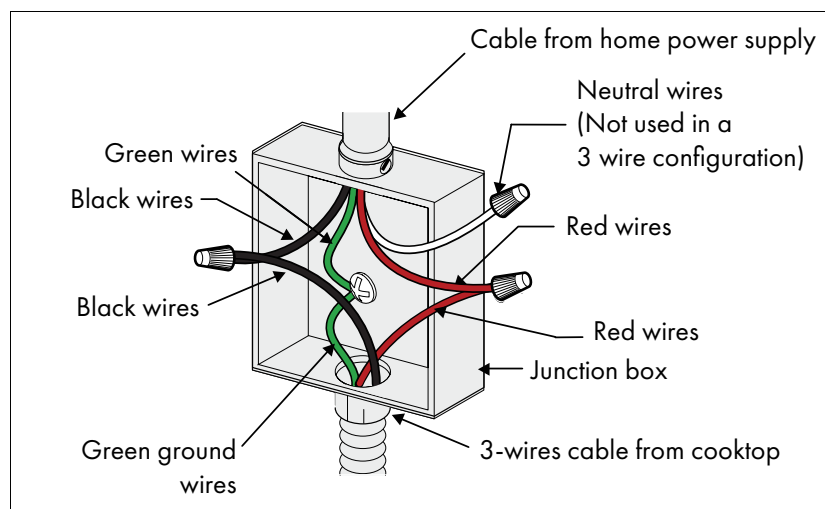

If the appliance is being connected directly to the mains, an appropriately rated circuit-breaker must be installed with a minimum opening of 1/8" (3 mm) between contacts.

- The installer must ensure that the correct electrical connection has been made and that it is compliant with safety regulations.
- The cable must not be bent or compressed.
- The cable must be checked regularly and replaced by authorized technicians only.

INSTALLATION

WHEN YOU HAVE INSTALLED THE COOKTOP, MAKE SURE THAT:

- The power supply cable is not accessible through cupboard doors or drawers.
- There is adequate flow of fresh air from outside the cabinetry to the base of the cooktop.
- If the cooktop is installed above a drawer or cupboard space, a thermal protection barrier is installed below the base of the cooktop.
- A means of disconnection from the electrical supply is readily accessible.

WARRANTY

COVERAGE

ZLINE Kitchen and Bath ("ZLINE") induction cooktops have a one year parts and service warranty.

ZLINE warranty periods begin from the original date of product delivery and solely cover the original purchaser of the product, delivered new and in its original carton. The limited warranty covers all parts and labor for necessary repairs if any part of the product, or the product itself, proves to be defective in materials or workmanship. The product must be deemed serviceable via troubleshooting with the ZLINE Customer Experience team. All service on ZLINE products under warranty must be performed by ZLINE-approved and ZLINE-certified service providers unless otherwise specified by ZLINE. Service will be provided during normal business hours. Products must be unobstructed and accessible to the service provider at the time of service. ZLINE's liability is limited to the original purchase price of the product. Additional injuries, losses, damages, or other inconveniences caused by product malfunction or defects in materials are not covered under the terms of this warranty.

TERMS

ZLINE warranties apply only to the original purchaser of a ZLINE product installed for normal residential use. This is defined as a single-family, residential dwelling in a non-commercial setting. Any warranty claim stemming from installation, operation, or any other use within a commercial setting is not covered under this limited warranty. Commercial settings include, but are not limited to: schools, churches, hotels, restaurants, vacation rentals such as Airbnb, daycare centers, private clubs, fire stations, common areas in multi-family dwellings, nursing homes, food service locations, and institutional food service locations such as hospitals or correctional facilities.

This warranty is non-transferable and will not under any circumstance be extended based on the date of installation — the warranty period takes effect from the date of delivery and only covers the original purchaser. The warranty applies only to products installed in the contiguous United States and the District of Columbia. Failure to secure certified warranty service per these terms will result in a forfeiture of the remaining warranty. Out-of-pocket payments will not be reimbursed unless prior approval is received from ZLINE and/or ZLINE-certified service contract partners. Unapproved out-of-pocket payments for service will not be reimbursed. All warranty procedures must be followed to maintain warranty coverage.

WARRANTY

If a product qualifies within the service window provided under these warranty terms, and ZLINE is unable to repair the product or a defective part of the product after a reasonable number of attempts, ZLINE reserves the right to offer to replace the defective part or the product or provide the original purchaser a full refund of the purchase price of the product (not including installation, removal, or other charges that were not included in the original purchase price). The original purchaser of the product must provide the original proof of purchase, including the purchase date, when filing a claim to obtain replacement parts, service, or refunds. Additionally, the original purchaser of the product must provide the serial number of the product when filing a claim to obtain replacement parts, service, or refunds.

This warranty shall not apply to any ZLINE product in which the original factory serial number has been removed, altered, or cannot be readily determined for any reason. Further, ZLINE is not responsible for damage resulting from, but not limited to: shipment, delivery, or improper installation; negligence or improper maintenance, misuse, or abuse of the product; unauthorized alteration, modification, or tampering with the product; accident, fire, floods, pest infestations, pandemics, natural disasters, or any other unpreventable or unexplained acts of nature, commonly referred to as "acts of God"; flare-up fires or damages caused by improper electric supply, electrical line current, voltage, or power surges; and service to correct installation not in accordance with the instructions contained in ZLINE's product manuals and/or with local government codes.

This warranty does not apply to aesthetic damage, scratches, or natural wear caused by normal use; second-hand, open box products, or products purchased from an unauthorized retailer; and damages or issues stemming from alteration or tampering with the cooktop, including, but not limited to, painting any portion of the product's interior or exterior and cutting the supplied power cord to manually hardwire the product.

In the event service is dispatched, and it is discovered that the reported issue is not covered under warranty based on the disclaimers above, the customer will be responsible for all service fees. Failure to pay these fees will result in the forfeiture of remaining warranty coverage.

WARRANTY

Information contained within ZLINE's installation and user manuals, in addition to product information included on ZLINE's website and all related digital listings, do not cover every possible condition and situation that may occur during the installation or operation of ZLINE products.

 
ZLINE reserves the right to make changes at any time to its products when considered safe, necessary, and useful. Always check the ZLINE website for the most up-to-date version of its product manuals: www.zlinekitchen.com/pages/manuals.

Do not install or operate any ZLINE product if it has missing or broken parts or if it arrives damaged due to shipping. If ZLINE products arrive damaged, contact ZLINE Customer Experience at 1-614-777-5004 for help. Failure to report a damaged appliance prior to installation or operation may void the warranty.

ZLINE disclaims responsibility for damage or injury caused by improper installation or use of any of its products. ZLINE is under no obligation, by law or otherwise, to provide concessions, including repairs, prorates, rebates, discounts, or replacements, once the warranty has expired.

SERIAL NUMBER LOCATION

Please write down the model number and serial number of your appliance. Both numbers are located on the rating tag located underneath your cooktop. Do not remove permanently affixed labels, warnings, or plates from the product. This will void the warranty. You may also consider attaching your receipt or proof of purchase to this manual.

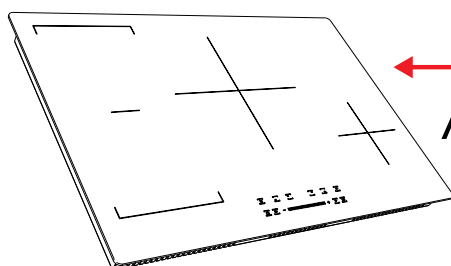

Appliance Tag



WARRANTY



SERVICE

For warranty service, please contact our Customer Service team at 1-614-777-5004 or visit www.zlinekitchen.com/contact to utilize our online Customer Experience Portal.



Scan the QR code to view the most up-to-date version of our Installation Manual and User Manual.



Need to purchase a part or accessory for your ZLINE product?
Visit www.zlineparts.com, ZLINE's official parts distribution partner.

This page left intentionally blank.

This page left intentionally blank.

1.0.1

zlinekitchen.com

1-614-777-5004

contact@zlinekitchen.com

ZLINE
ATTAINABLE LUXURY®