 


ASSEMBLY INSTRUCTIONS

30 INCH CABINET

 
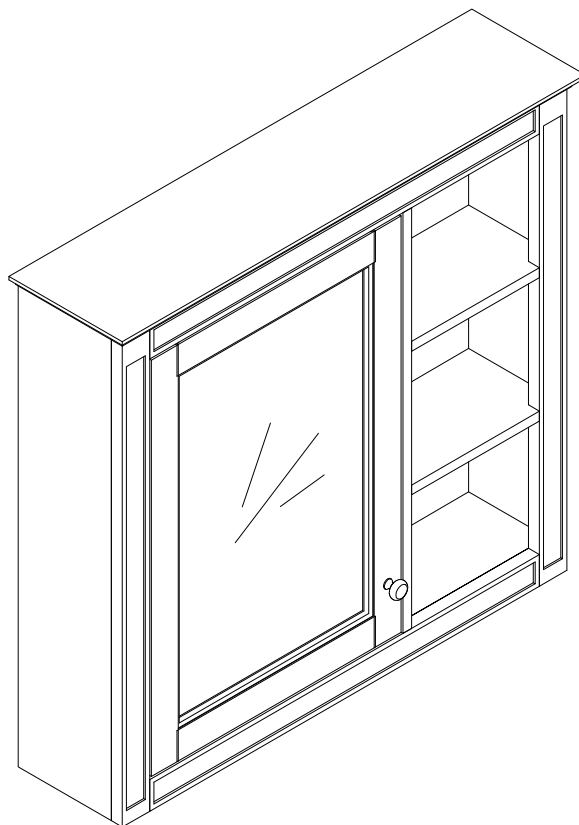 


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


*** Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!**
*** Please assemble on a clean soft surface to avoid damage.**

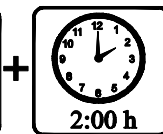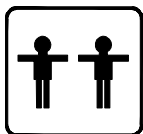

Tools Required

 

(Not included)

 

(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.


Before Installation

Important – Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions












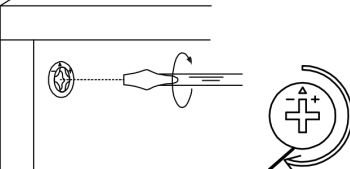 
	Diagram A Insert Cam Bolt into hole as shown in diagram A.
	Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
	Connect the panels together.
	Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
	To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

 Detail View - CABINET

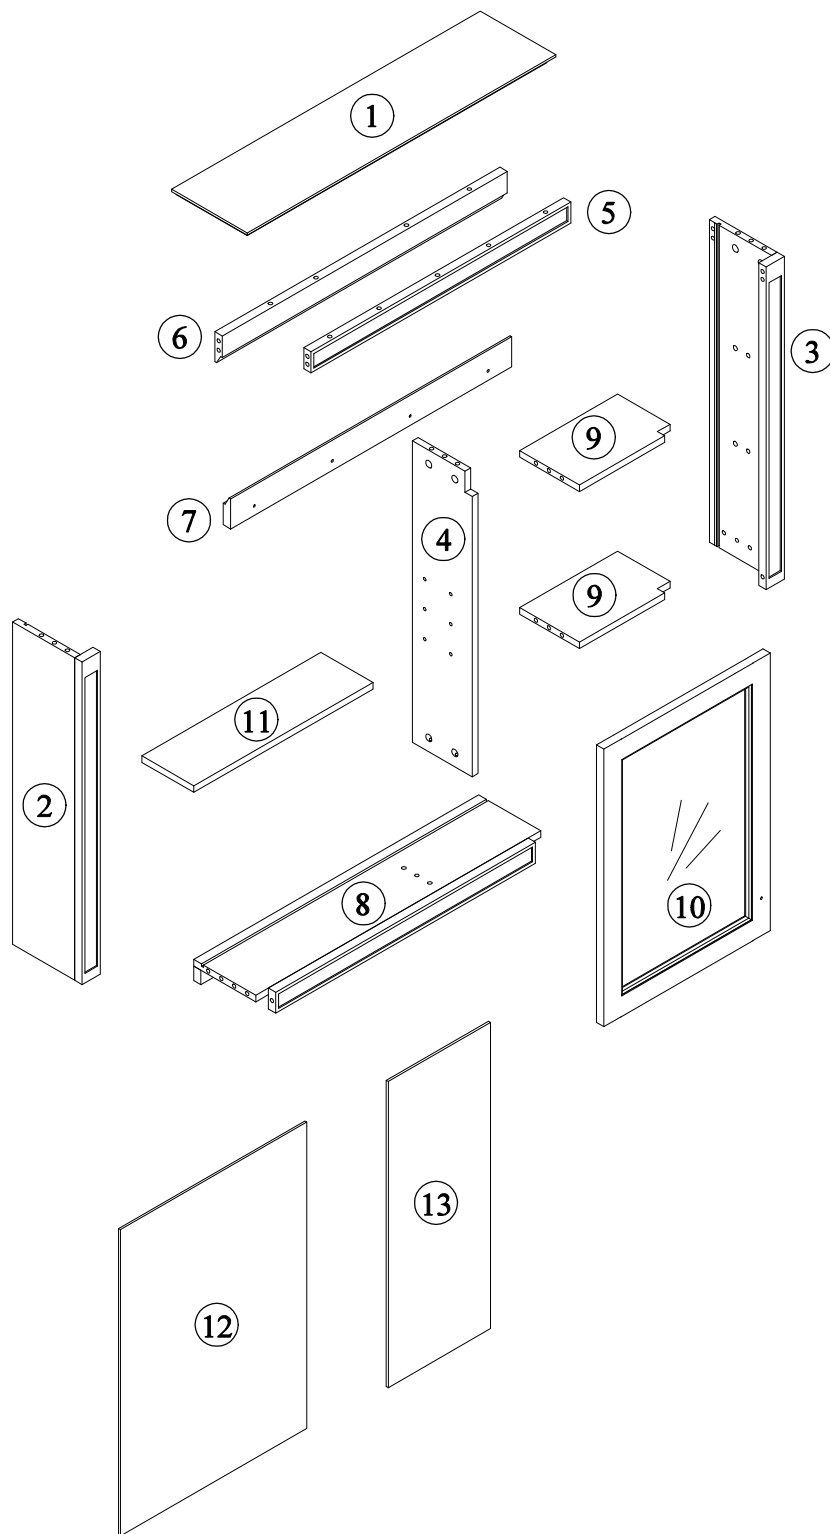


Identifying the Hardware-Identify the hardware using the illustrations below.

            
Part List

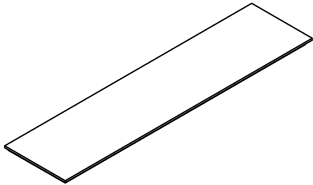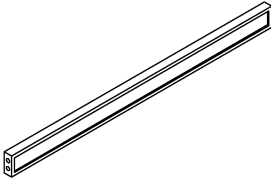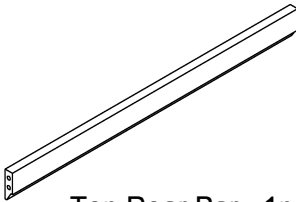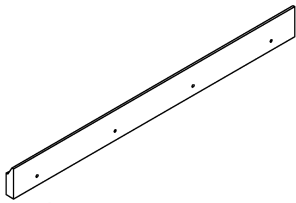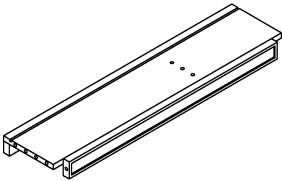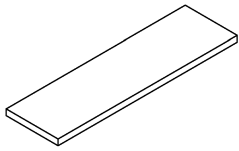1	 Top Panel - 1pc	2	 Side Panel Left - 1pc
3	 Side Panel Right - 1pc	4	 Mid Panel (A) - 1pc
5	 Front Bar Top - 1pc	6	 Top Rear Bar - 1pc
7	 Connect Bar - 1pc	8	 Bottom Panel - 1pc
9	 Mid Panel (B) - 2pcs	10	 Door Cabinet - 1pc
11	 Adjustable Shelf - 1pc	12	 Back Panel Left - 1pc
13	 Back Panel Right - 1pc		

 
Hardware List

A  ø6x35mm	B  ø14.5x12mm	C  ø10xø5x50mm
Three in one bolts (29pcs)	Three in one lock (29pcs)	Flat head screw - 4pcs
D  ø12x55mm	E 	F  ø5/32"x20mm
Plastic stopper - 4pcs	Handle (1pc)	Handle screw (1pc)
G 	H  ø7xø3.5x15mm	I 
Damping hinge (2pcs)	Flat head screw (12pcs)	Laminate pad(4pcs)
J  ø8x30mm	K  ø7xø3.5x15mm	
Wood dowel (22pcs)	Round head screw(3pcs)	

 
STEP: 1

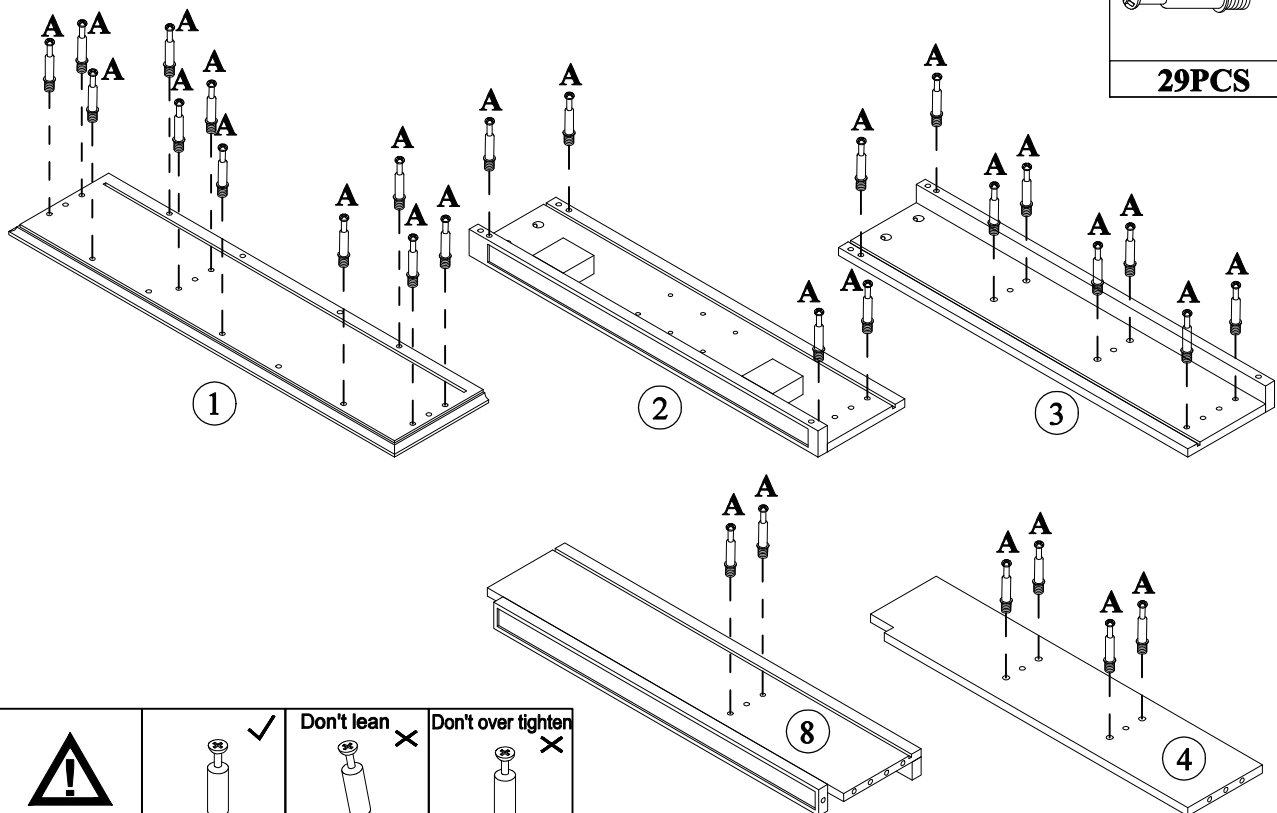

STEP: 2


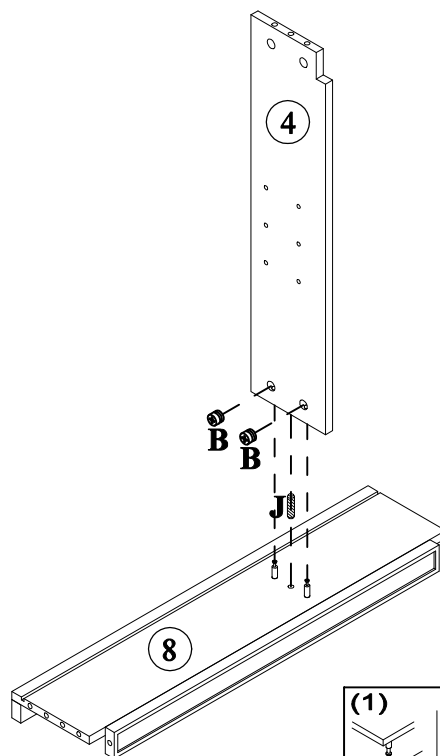 


B	J
2PCS	1PC

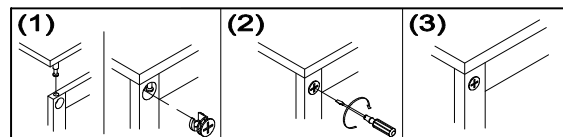 



STEP: 3

B		J	
4PCS		2PCS	

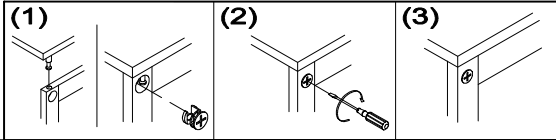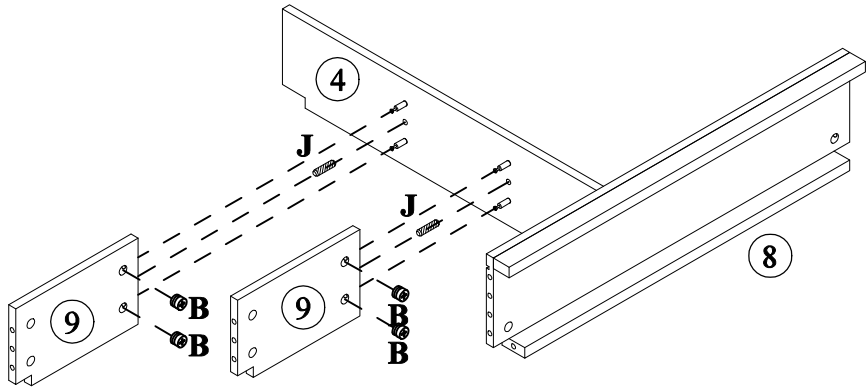  


STEP: 4


B		J	
12PCS		12PCS	

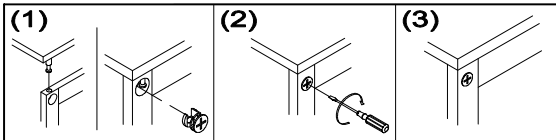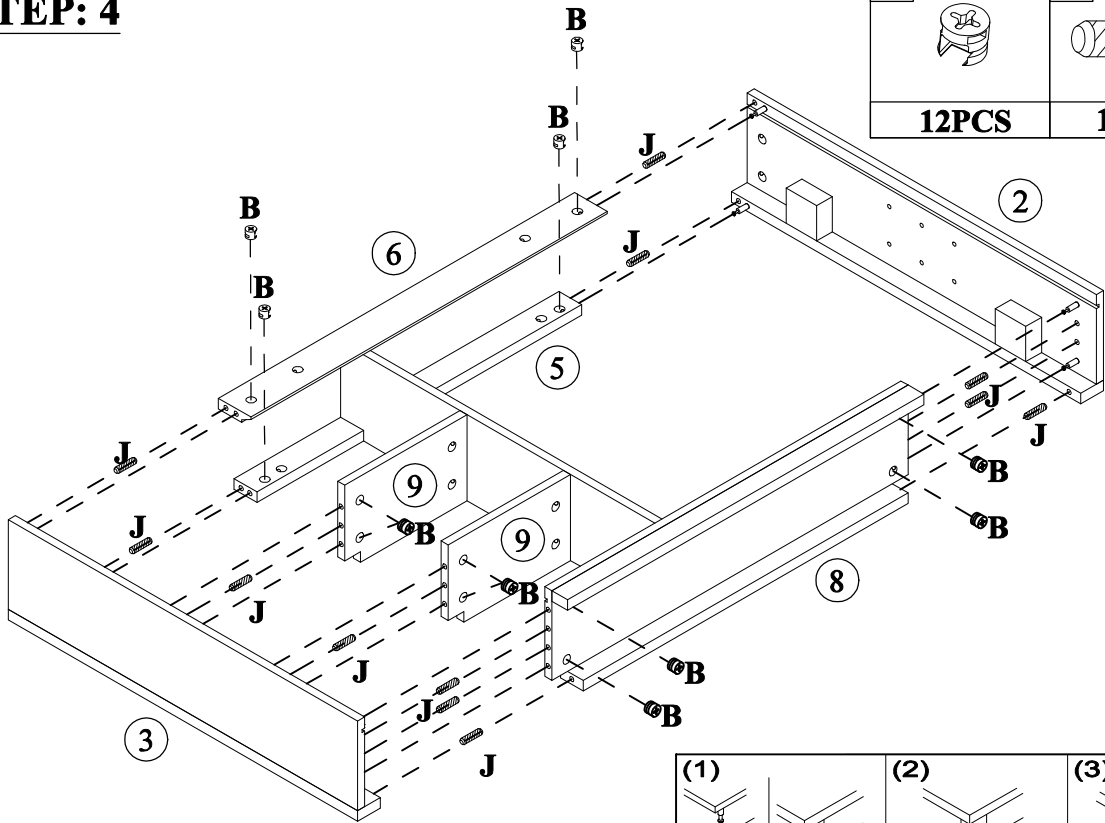  


STEP: 5

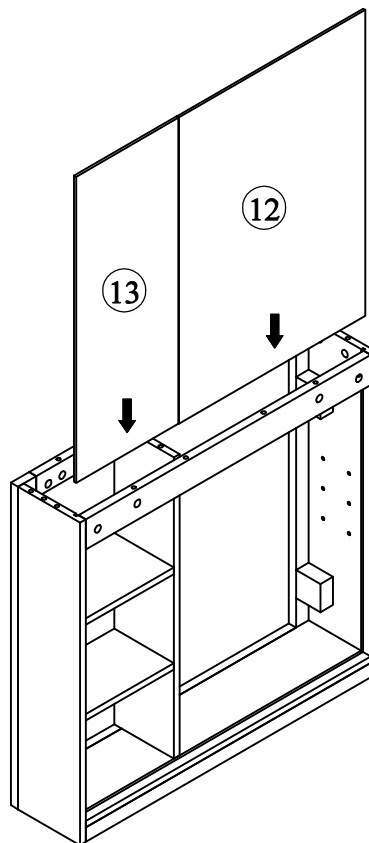 


STEP: 6

 
B	J
	
11PCS	7PCS

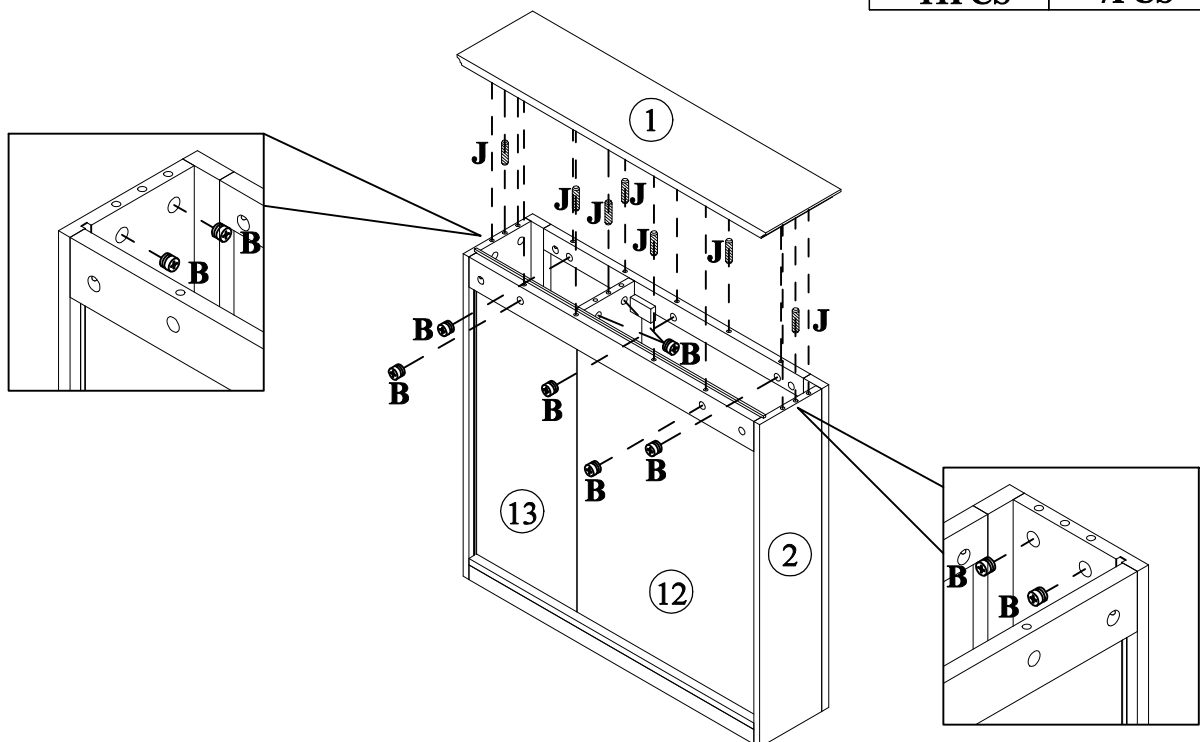 


STEP: 7


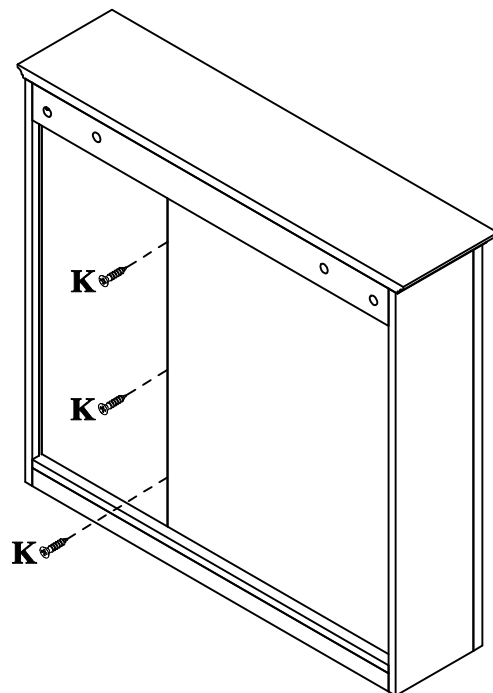 
**K****3PCS**

 STEP: 8

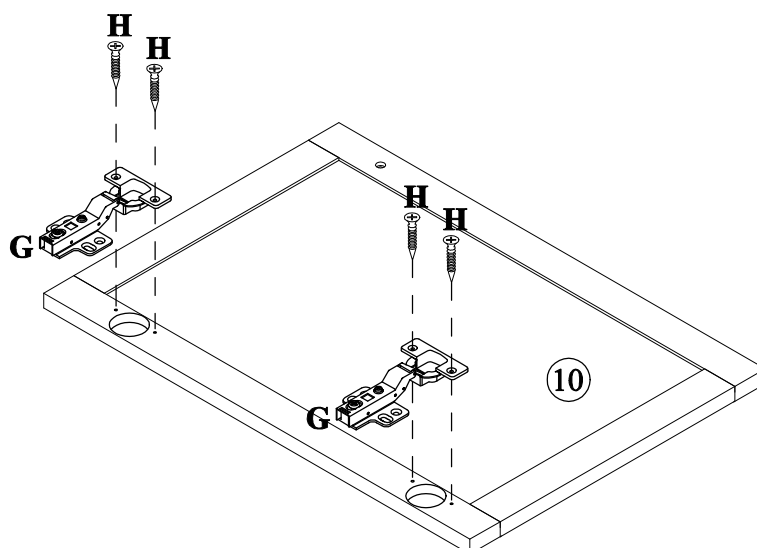**G****2PCS****H****4PCS**

 STEP: 9


E	F	H
		
1PC	1PC	8PCS

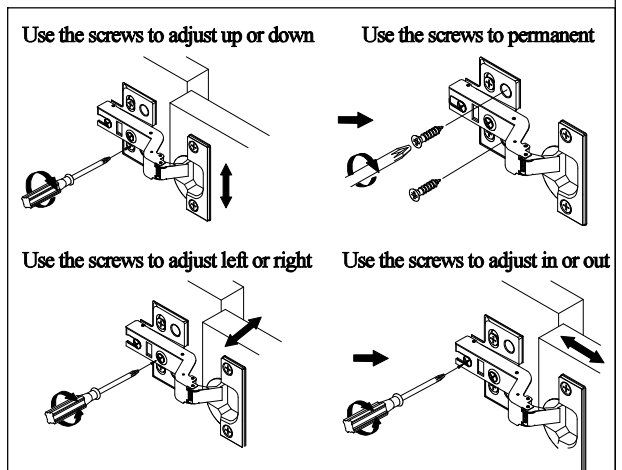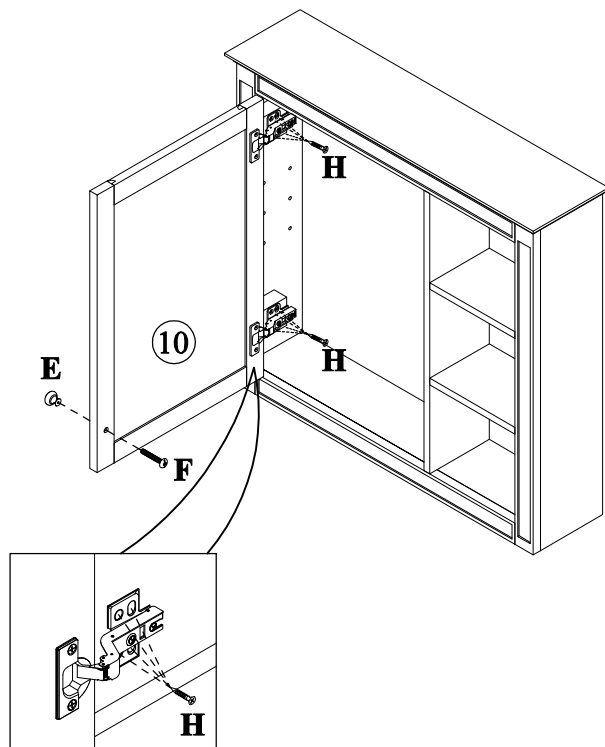  


STEP: 10


I

 4PCS

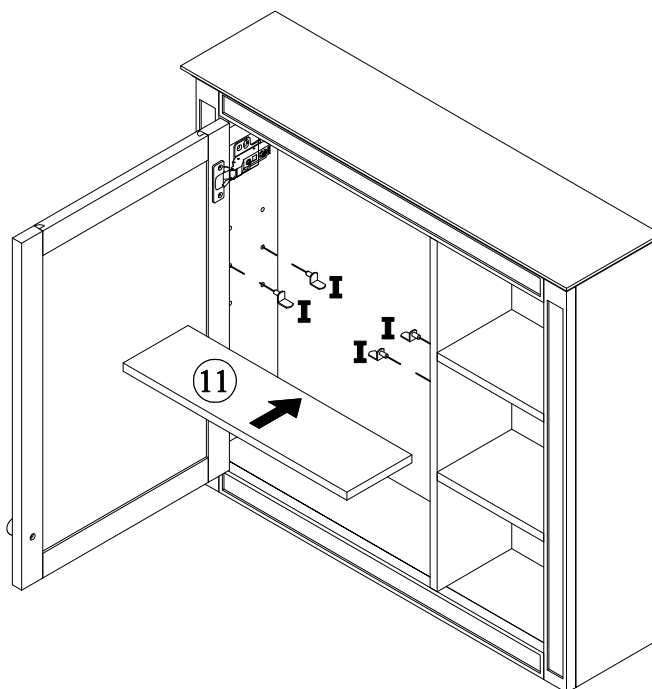

STEP: 11

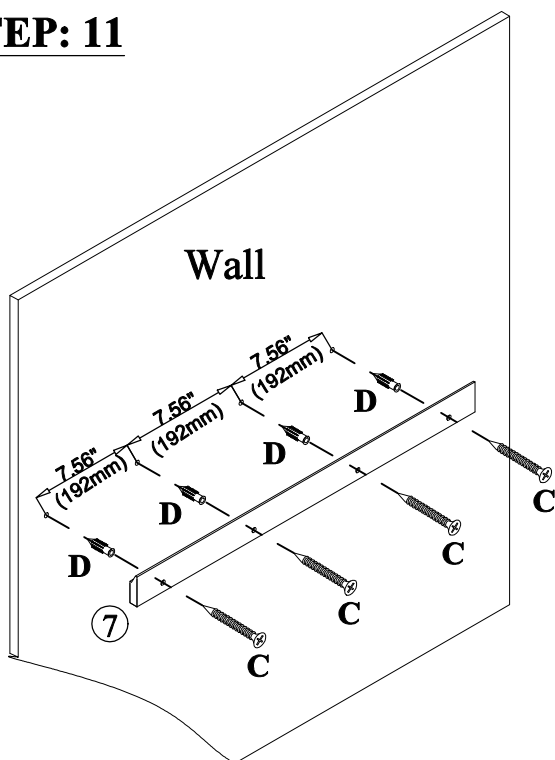 

 
C	D
	
4PCS	4PCS




Draw the spacing between the walls and the No.7, punch holes in the wall, and fix the No.7 to the wall with screws.

Note: Appropriate distance from the top of cabinet to the ground is 74.8".

 
STEP: 12

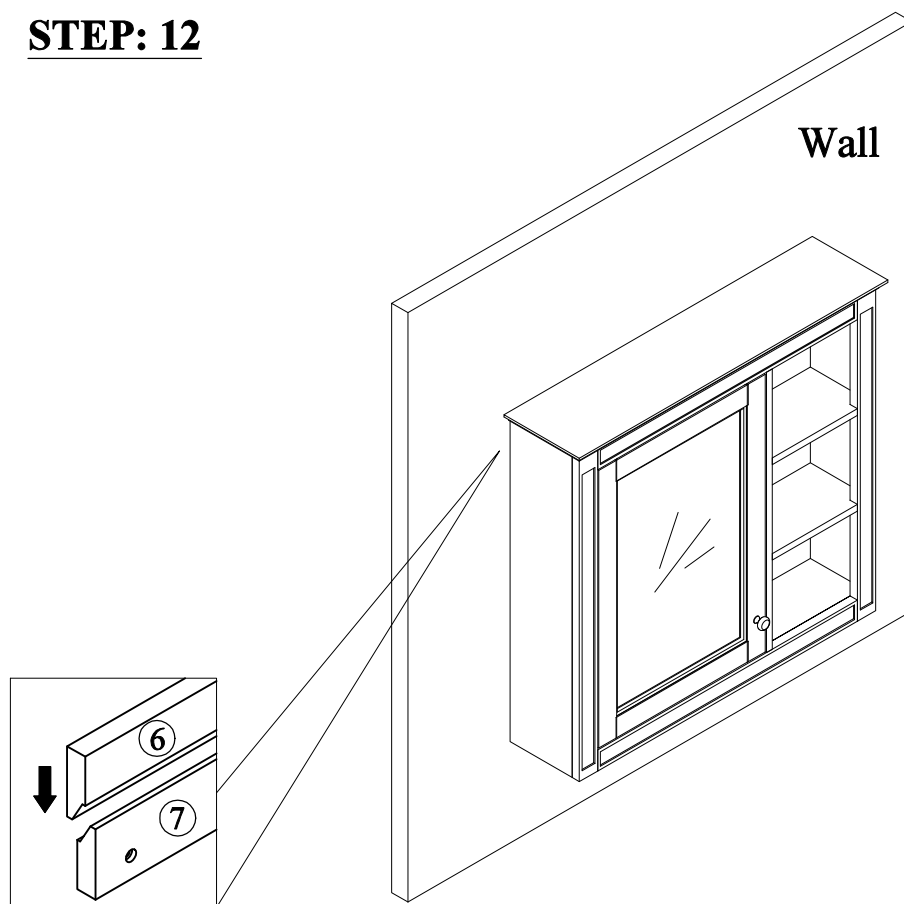

STEP: 13

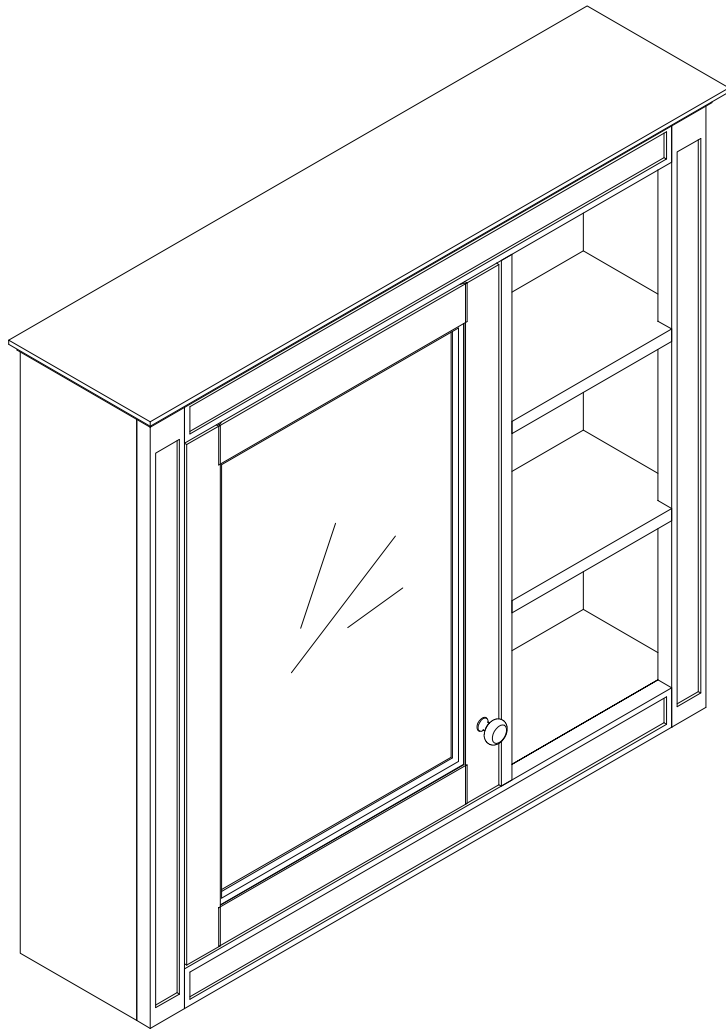 

HINGE ADJUSTMENTS

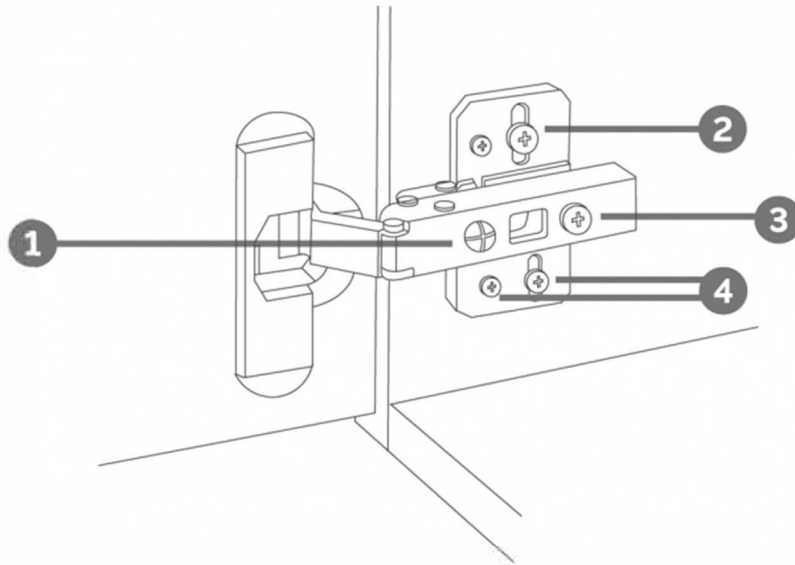 


① Sideways / Tilt adjustment

Turn the screw

clockwise to move the door further away from the side of the cabinet

 anticlockwise to move the door closer to the side of the cabinet

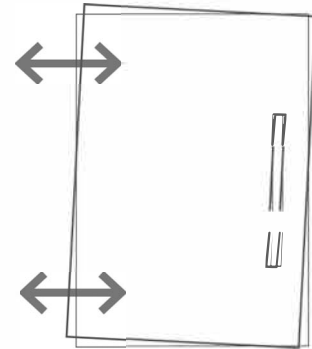


② ④ Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up

 anticlockwise to move the door down

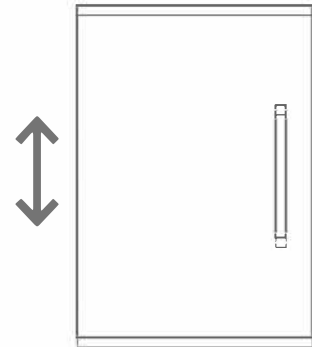

③ Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

