

To Remove a Sliding Shelf



Step 1: Remove Bottles and Extend the Shelf to its Maximum Limit



Step 2: Lift the Left Lever and Fully Extend the Shelf



Step 3: Lower the Right Lever and Fully Extend the Shelf



Step 4: Disassembly Complete