

CARE AND MAINTENANCE

Regularly clean and dry thoroughly. Make sure to empty any water accumulated inside the frames. To completely empty the water from the frames, take off the foot caps and tilt the frames to let water flow out. Water that has accumulated inside the frames may be subjected to freezing temperatures. This can cause a problem to the frame tubing. Such damage is not covered under our warranty. Constantly clean, drain and dry the product completely before storing it for the winter. For best result, always store and or protect your furniture when not in use. We suggest having available outdoor furniture covers to protect the furniture. Always have at least two people to help with transporting and cleaning the product to avoid any potential injury and or damage.

FRAMES

Cleaning- Use gentle soap and warm water. Do not use strong ingredients, cleansers, and bleach solutions. Rinse with clean water and dry product completely.

FABRICS (CUSHIONS).

Brush off any dust on the fabric, then wash with moderate soap with warm water. For hard to clean stains and mildew, wash with a solution of 236ml and 59.2ml soap per 3.79 L water. Clean thoroughly to remove soap. Allow fabric to dry.

Maintenance- The most effective way to take care of the product is to store the product in a dry space and use furniture covers.