


INSTALLATION INSTRUCTIONS

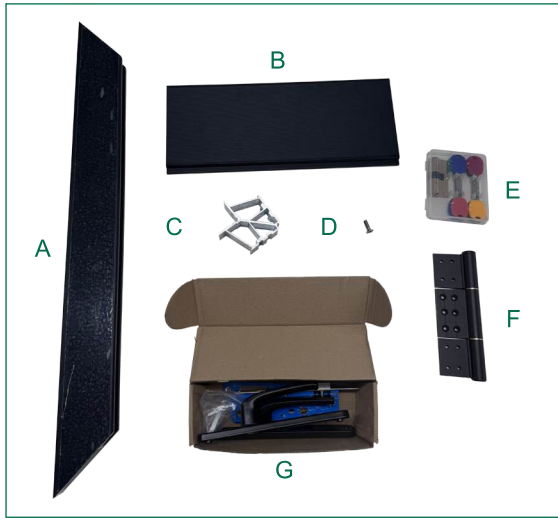

■ LIST OF ACCESSORIES

- A: Door frame ×8
- B: Door panel ×18
- C: Aluminum Alloy connectors ×8
- D: Hex Socket Head Cap Screws ×8
- E: Keys and lock cylinders
- F: Hinge ×6
- G: Lock (Includes handle*2, lock frame*1, square bar*1 and screws: tek0.16*1.5in×2, #10*2.2in×2, #10*1.8in×1)

1 Prepare all the accessories required for installation.

■ ADDITIONAL ACCESSORIES INCLUDED (Optional Use)

These are complimentary accessories provided with the product. You may choose to use them based on your specific installation needs.




Rectangular Strike Plate ×1

Mounted on the latch side of the gate, this plate helps guide the gate's push or pull direction during opening and closing.



Ground Anchor Pin ×1

Used to secure the gate in place, providing stability when closed.

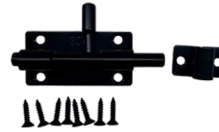

Gate Latch Bar ×1


Used to secure and lock the gate in place.




Wheel ×2

Mounted at the bottom of the gate to assist with smooth sliding or swinging.

INSTALLATION STEPS – LOCK SIDE OF DOUBLE GATE

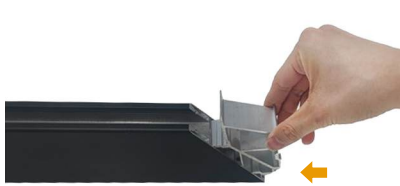

2 Insert the Aluminum Alloy parts into the lower door frame. (Please wear protective gloves)

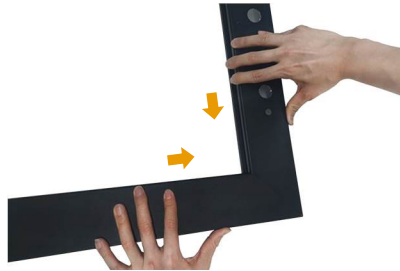

3 Connect the lower frame to the left and right frame with the Aluminum Alloy parts.



4 Use a Allen key to screw the hex socket screws into the metal buckles.



5 The basic structure of the door frame is completed, ready to install the door panels.



6 Insert the aluminum alloy gate panel into the gate frame one by one.



TURN TO THE NEXT PAGE →



7 Fit aluminum alloy connectors into the upper door frame, then snap into the left and right door frames.




8 Door frame and panels installation is complete.



9 Remove the protective film on the door frame. (be sure to remove it completely!)



10 Install the lock cylinder. (Please confirm the direction of opening the door before installation)

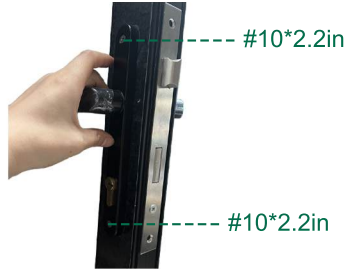

11 Fixed lock cylinder.



12 Install the yellow keyhole.



13 Insert the handlebar holder.



14 Turn the handle to move it to the correct position Before installing in the gate.



15 Fasten the handle with screws.



16 All installation work is completed.

Tip To change the gate opening direction, adjust the latch bolt orientation.



The latch bolt should be positioned facing downward.



Insert the latch bolt into the lock housing.



Rotate the latch bolt 360 degrees.




Release the latch bolt.



The gate opening direction has been successfully changed.

INSTALLATION STEPS – STRIKE PLATE SIDE (LATCH RECEIVER SIDE)

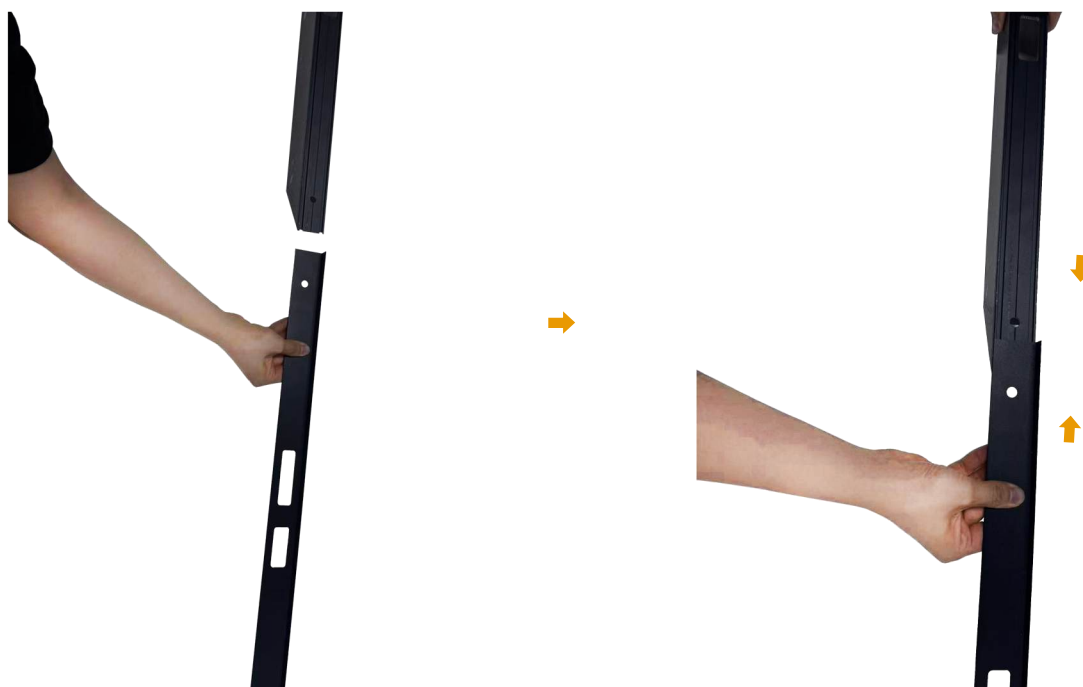

17 First, insert the rectangular guide plate into one side of the gate (the latch side), making sure the two slots are properly aligned. You only need to use one guide plate. The way you insert it will determine whether the opposite gate panel opens outward (push) or inward (pull). Please confirm the intended opening direction before securing the plate in place.

18 Simply repeat steps 2 through 7 on the other side to finish the installation.

PRODUCT ►

