



**INSTRUCTION MANUAL**  
**CREPE MAKER**  
**Model: BLA03B**



Please read these instructions carefully and retain for future reference.

# IMPORTANT SAFEGUARDS

## • READ ALL INSTRUCTIONS

- Make sure the voltage in your outlet is the same as the voltage indicated on the appliance's rating label.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug – do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Close supervision is necessary when your appliance is being used by children or infirm persons.
- Young children should be supervised to ensure that they do not play with the appliance.
- Never leave an appliance unattended while in use.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surfaces.
- Do not operate any appliance with a damaged has malfunctioned or has been damaged in any manner. In order to avoid the risk of an electric shock, never try to repair the appliance yourself. Take it to an authorized service station for examination and repair.
- Do not use outdoors or for commercial purposes.
- Unplug the unit when finished using.
- **Do not immerse the appliance in water or any other liquid.**

## BEFORE THE FIRST USE

Remove all packaging materials.


Clean the baking plates with a damp cloth or sponge.

Slightly grease the baking plates with a little cooking oil.

Take care to prevent water from running into the appliance.

## PARTS IDENTIFICATION

Before using your appliance for the first time, you should become familiar with all of the parts. Read all Instructions and Safeguards carefully.

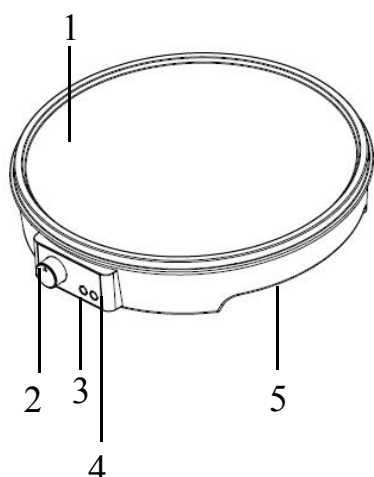


1. Non-stick Plate
2. Knob
3. Power Light (Red)
4. Ready Light (Green)
5. Base

## USING YOUR APPLIANCE

Before using the appliance for the first time, peel off any promotional materials and packaging materials, and check that the cooking plates are clean and free of dust. If necessary, wipe over with a damp cloth. For best results, pour a teaspoon of vegetable oil on to the non-stick plates. Spread over with an absorbent kitchen towel and wipe off any excess oil.

When your appliance is heated for the first time, it may emit slight smoke or odor. This is normal with many heating appliances. This does not affect the safety of your appliance.

- Place the unit on a level surface making sure it is not in contact with a wall, corner or curtains.
- Never cut crepes on the baking plate. Use only wooden or heatproof plastic utensils to avoid scratching the nonstick coating.
- Inset the pin plug into the power outlet, you will notice that the red power light and the green ready light will go on. Turn the temperature knob to MAX and the green ready light goes off. Indicating the appliance is heating up.
- Allow your appliance to pre-heat until the green ready light goes on. This indicates that the cooking plate have reached the correct temperature for cooking.
- For best results, lightly spray the cooking plate with a cooking oil spray before using. This will assist in the removal of the crepes after cooking.
- Once the green ready light is goes on pour crepe batter onto the baking plate spreading it with a circular movement using the batter spreader.
- The green ready light will continue to goes off and on during the cooking process indicating that the appliance is heating up appropriately.
- Allow the crepe to cook until the surface is no longer liquid and the crepe can be moved slightly.
- Using a spatula, lift and flip the crepe completely.
- Continue to cook on this side until the underside is browned slightly and easily lifted. Remove crepe to a wire rack and allow to cooling slightly before stacking on a plate.
- Adjust the temperature as needed after the first crepe is done.
- Repeat as needed, stacking crepes layered between sheets of wax paper. Cover stack with foil and place in a 200°F oven to keep warm.

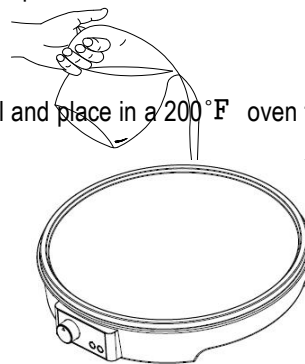

## CLEANING AND CARE

- Always turn off the power and remove the plug after and before cleaning.
- The cooking plate are coated with non-stick cooking surface, therefore little cleaning is required. Simply wipe cooking plate over with a damp cloth.
- Do not immerse the appliance in water or other liquid.
- Do not use abrasive scouring pads, powders or cleaners.
- Do not place in the dishwasher.
- Before next use, lightly grease the cooking plate for easy removal of cooked crepes.

## STORAGE

- Always unplug the appliance before storage.
- Always make sure the appliance is cool and dry before string.

**www.J-JATI.com**  
**Design In Brooklyn**  
**Assembled in China**



**If for any reason , the product was not in  
your standerds , please feel free to  
contact us at any time to exchange for  
refund . No matter where you purchase it  
from .**

**WWW.J-JATI.COM**