 

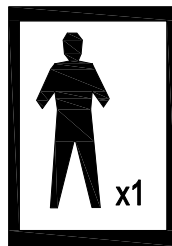


ASSEMBLY INSTRUCTION

SOFA SET

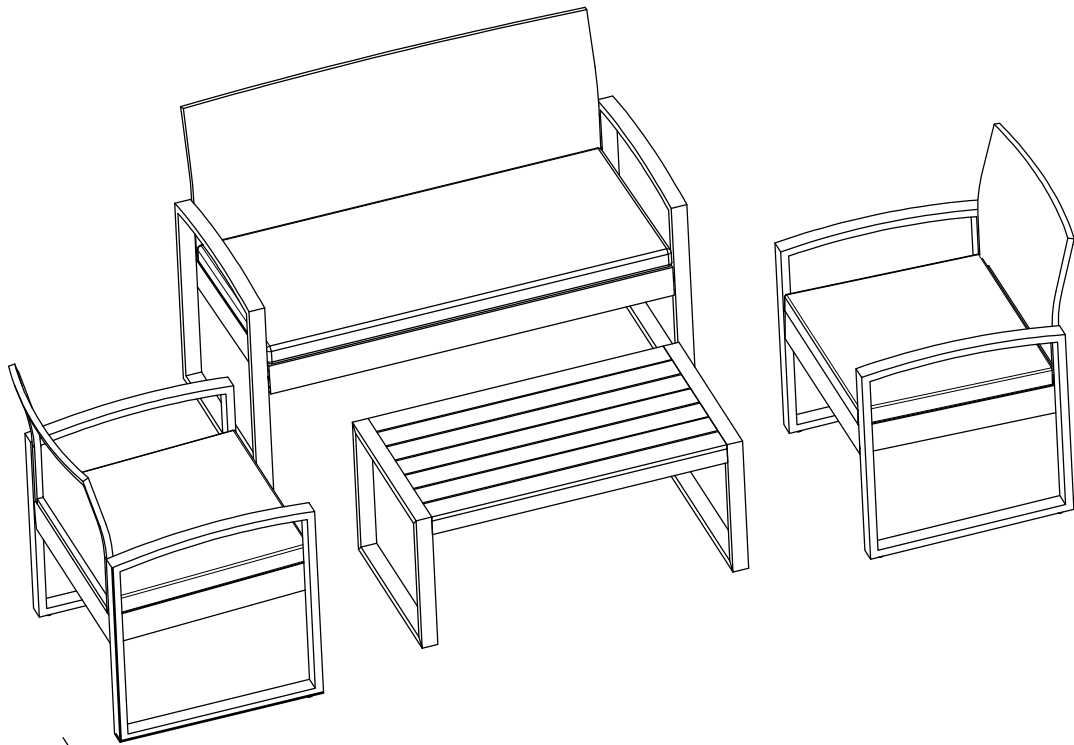

Notice:

1. Tighten all screws ☐ ☐ ☐ ☐ before fitting. It is recommended to use an Allen wrench instead of an electric drill.
2. Place the item on a flat surface to adjust and ensure stability.
3. Gradually tighten all screws with tools.
4. If screws do not align with holes during assembly, please loosen all other screws ☐ ☐ ☐ ☐ and continue the assembly process.
- ☐ If the item is not stable, please loosen all screws, adjust it on a flat surface, and then tighten all screws again.
- ☐ Note: If one or more screws are fully tightened during assembly, there is a chance that others will not align with the holes.
- ☐ Additionally, all holes are designed to be relatively larger to provide more space for adjusting the screws.

A-3	B-3	C-1	D-1	E-2	F-2
G-2	H-1	I-28	J-8	K-36	L-16
		M6x30	M6x15	D16/8x1	M6
M-2	N-1	O-1			
		4			

"DO NOT tighten the screws until all of parts set into correct position"

1








2

3

4

FINISH/COMPLETE

2/4

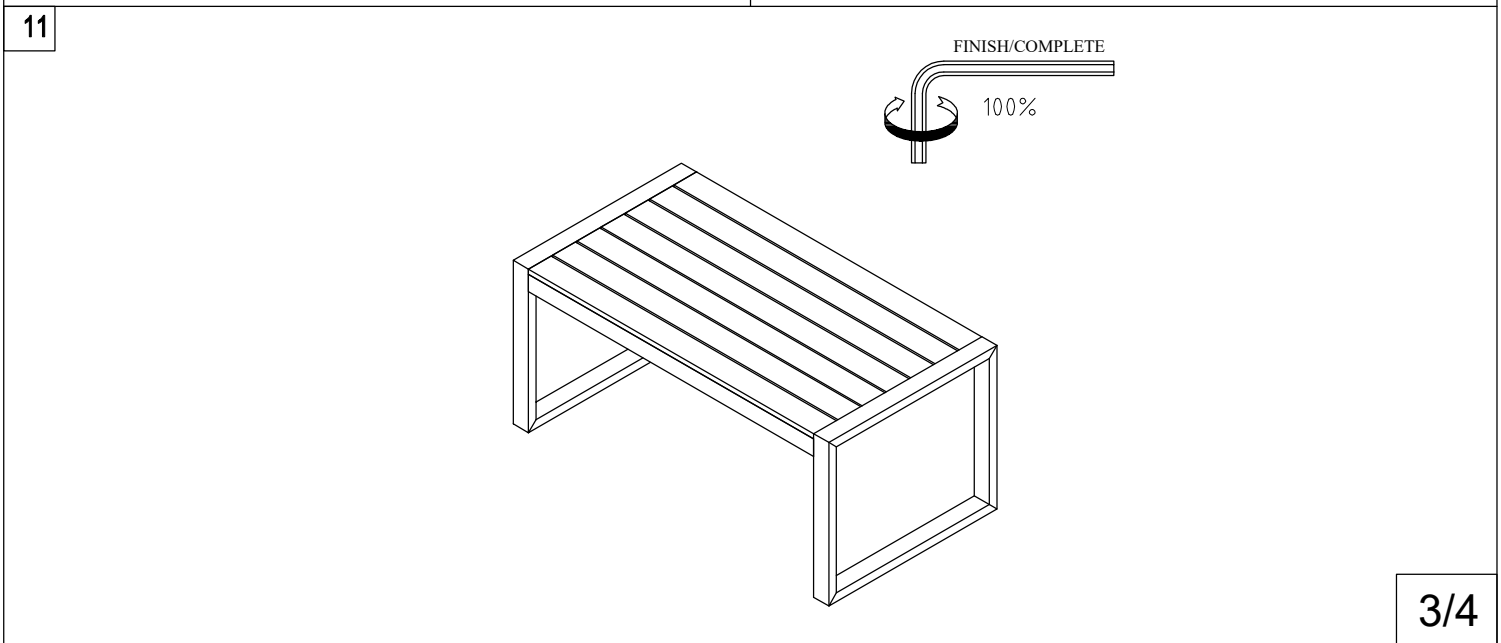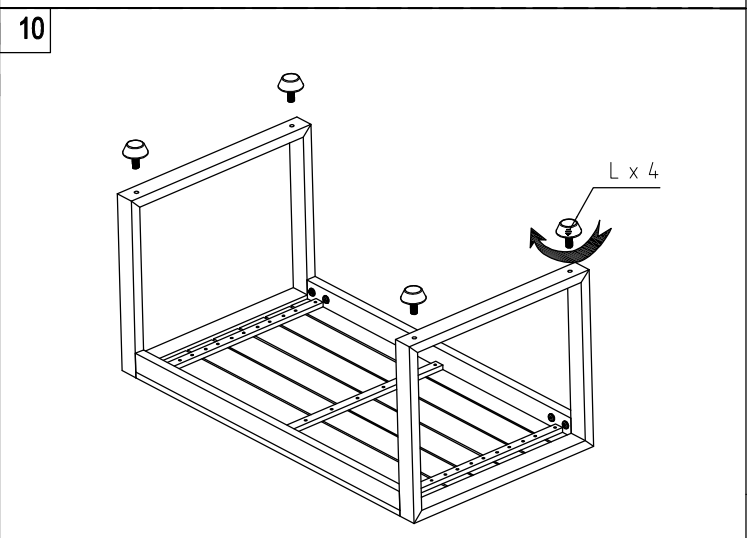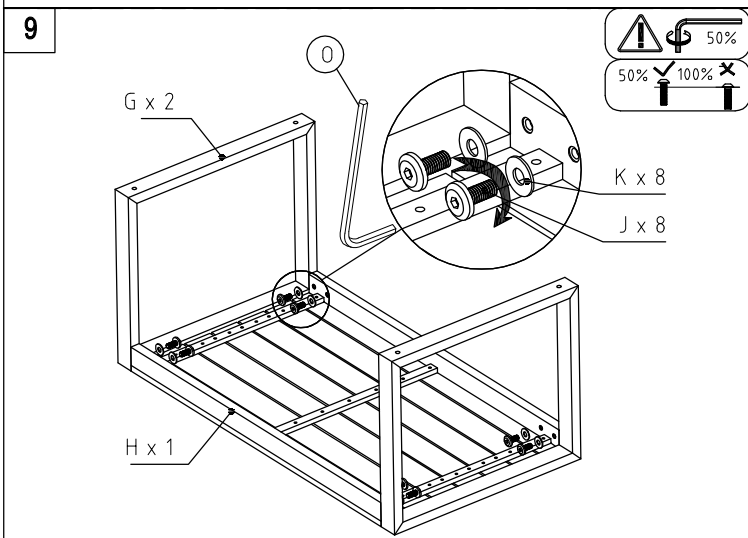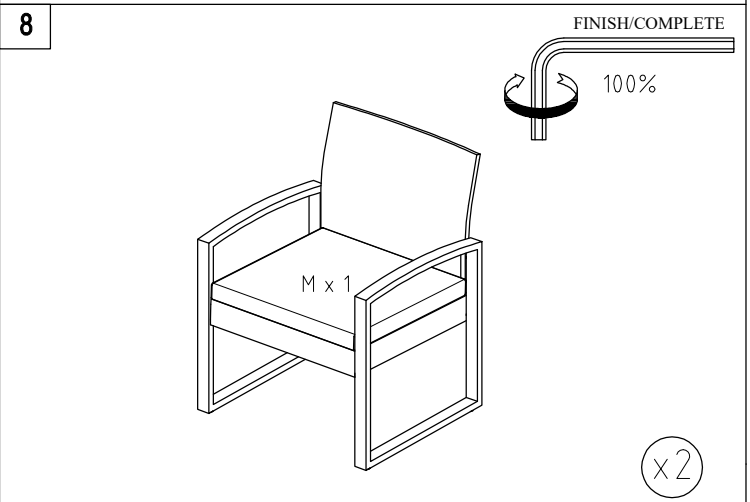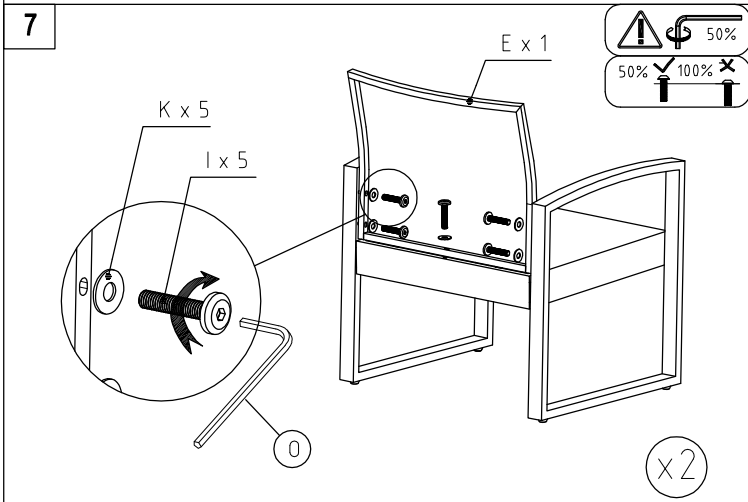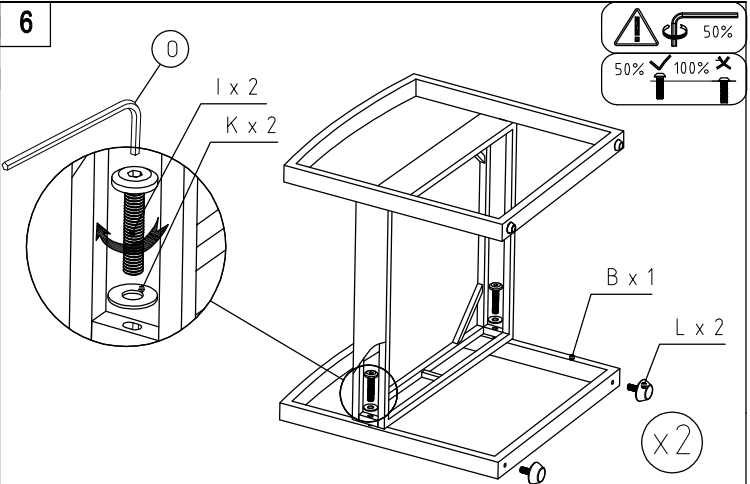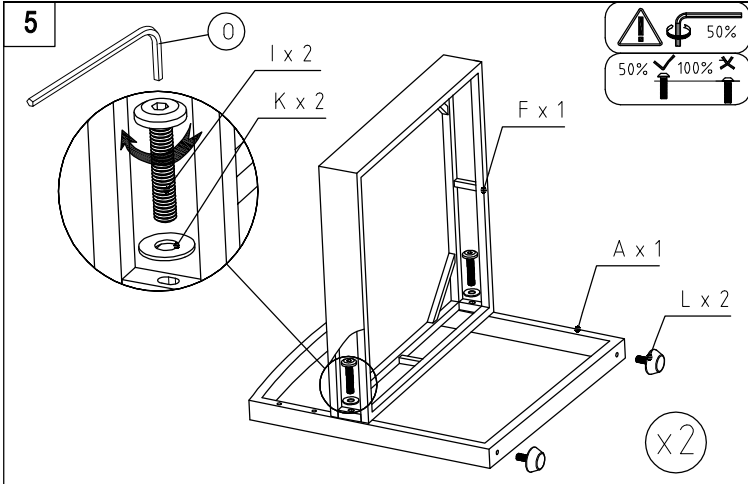

THANK YOU FOR CHOOSING US

Thank you for your order. If you are satisfied with our product, please leave a positive review. Our goal is to provide high quality outdoor furniture with outstanding customer service - all at an affordable price.

One year warranty

If there is a manufacturing defect, we will send you a FREE replacement within 1 year of your purchase date.

1. Email title "Warranty Registration"
2. Write "order platform, PO number, order date, product name"
3. Click to send