



### Precautions and maintenance methods

- ★ It is not allowed to operate continuously for more than 3 minutes at a time.
- ★ The operation should be started after a 1-minute rest. And not more than 10 cycles
- ★ Do not load or unload any cups while the motor is running
- ★ **Do not put your fingers or other instruments into the conditioning machine while the blade is rotating.**
- ★ For food with high mixing viscosity, please use less than 1/3 of the maximum capacity.
- ★ Do not disassemble the cup set by yourself to avoid danger.
- ★ When cleaning, please note that the power cord should be unplugged from the socket.
- ★ After each use, be sure to rinse the stainless steel cup and knife set with clean water.
- ★ Do not wash the body with water to avoid motor, switch and other parts failure.
- ★ Do not use gasoline or volatile solvent when wiping to avoid damaging parts.
- ★ Do not use hot water above 60°C to dry parts, easy to cause danger.
- ★ If the power cord is damaged, it must be replaced by the manufacturer or by a service representative or a person with similar qualifications to avoid danger.



### So the product warranty card

#### Maintenance record

Maintenance date	Fault condition	Parts replacement	The user signature	Maintenance signature

Thank you for purchasing our home appliances, which are well designed and high quality. It will bring great convenience to your life. If the machine breaks down, please contact the after-sales service center as soon as possible. The company will provide good maintenance service.

1. This product from the purchase date, with the warranty card warranty service.

2. During the warranty period, all parts damaged due to product quality problems can be replaced and repaired.

3. Where the warranty period or one of the following circumstances, as appropriate to charge maintenance fees and spare parts.

- When the warranty card is not presented;
- Damage caused by careless use or mistake;
- Failure to open the housing by itself;
- Damage caused by force majeure.

# Blender Silent Breaker

Thank you for purchasing our conditioning machine. Please read this manual carefully before use. Please keep it in good condition for a rainy day.

## Operating instruction



Model : GRT-LY8001

### attention

■ If ingredients are to be added to the mixture, please first check whether the "start switch" is located "OFF position", remove lid and add ingredients, then continue stirring.

- ★ When the smoothie is stirred by this machine, the ratio of ice cubes to fruit and water is 2:3:3. Pour into a cup and stir. Do not exceed 1800ml of water.



### Each name




### Method of use

- Please read the whole manual carefully first
- Please turn on/off the back of the machine first. Is the indicator light on?
- Place the ingredients in the sauce cup and select the desired file on the function panel position. Wait until the ingredients are processed and the motor stops completely. Remove from conditioning cup.

### Usage of 1800ml conditioning cup

1. Place the conditioning cup on the main body.
2. The main function is smoothie making (with simple making method). Please add the right amount of fruit, ice, water or in the right way Juice to finish making smoothies. Maximum capacity scale (as shown)

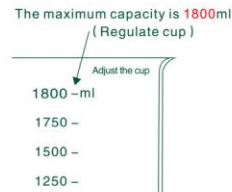

### Troubleshooting and emergency handling

- For food with high The bottom is equipped with [safety power off switch] in case of load will automatically power off, at this time please Material in half, then press [bottom] button, can be used again.
- In case of spark or fire, unplug the power cord immediately. Head, and the nearest contact dealers or negotiate the company to deal with.



### Specifications

Voltage	110 V	Frequency	50-60Hz
Consumed power	2200W	Capacity	2000ml
Weight	6.5kg	Size	230*280*450(mm)