

# CEDAR LOG DINING CHAIR



Please check contents **before** assembly. If any items are missing or damaged, **do not take the unit back to the store.** Call for customer service and we will save you time by correcting any prob-blems directly for you.

**LOG DINING COMPONENTS**

Preassembled Back

2 Back Legs  
26" Long  
11 3/8"

2 Front Legs  
26" Long  
9 3/4"

Preassembled Seat

2 Chair Arms

2 Leg Braces

**NOTE: Cracks or Checks in logs are part of the natural beauty of cedar logs and should not be considered defects.**

**HARDWARE**

Fourteen 2 1/2" screws

**TOOLS REQUIRED**

Rubber Mallet

Block of Wood & Hammer

7/16" Socket

#2 Phillips Screwdriver

Optional: Power of battery screw gun.


**NOTE: Read all instructions before starting.**

- Do not completely tighten any screws until the unit is fully assembled and setting on a level surface.
- Use a rubber mallet (or a block of wood between the hammer and the unit) to drive doweled ends into holes as far as possible.

## TIPS

- A battery operated or electric drill will make assembly faster and easier.
- Use a good quality penetrating oil or wood deck sealer with a UV inhibitor and an anti-fungal. (Make sure product is intended for outdoor use.)
- If staining or finishing before assembling, tape off all dowel ends. (Finishes will cause the dowels to swell, making assembly difficult.

**STEP 1** Lay assembled seat on floor. Insert dowel end of uprights on assembled back into holes on the back seat rail, adjust uprights in or out as needed to align properly. Do not tap on seat back with hammer.

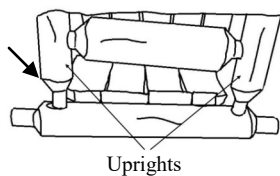

Tap uprights in or out until dowel drops into hole.

To keep the seat rail from splitting, lay the back on the floor and drive the seat onto the doweled ends by hitting on the bottom of the seat assembly.

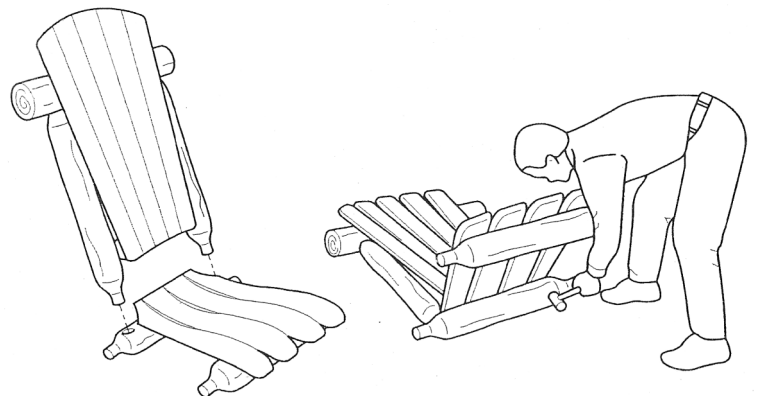


figure 1

STEP 2 Put ARMS onto legs by inserting dowel ends of front and back legs into holes in arms. (NOTE: Position of the hole on back leg is lower than hole on front leg.) Drive arm onto leg assembly as far as possible, stopping where taper begins. The drilled holes on each Leg should face the same direction as shown in figure 2.

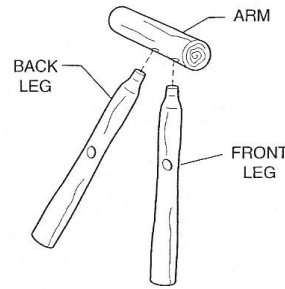


figure 2

STEP 3 Lay back and seat assembly on its side and insert dowel ends of seat rail into holes on each leg. Drive legs on as far as possible. Turn assembly over and repeat procedure for the other side. Figure 3

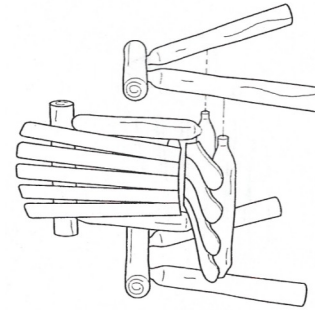



figure 3

STEP 4 Set chair in upright position on a level surface and when legs are in proper position, bring ARM in against UPRIGHT. Tighten the preinstalled lag screws into the pilot hole in the arm with a wrench or socket.

Secure doweled joints in place with screws perpendicular to the doweled ends as shown in figure 4 and circled example in figure 6. Repeat procedure for other side.

figure 4


5" HEX WASHER HEAD SCREW  
2-1/2" SCREW

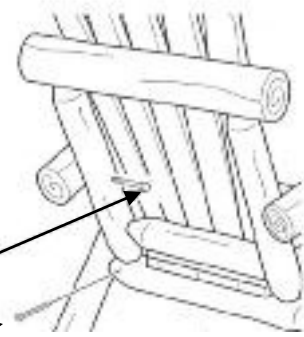

STEP 5 Tilt chair back and screw a brace on each side of front legs to chair bottom. Figure 5.

STEP 6 Set unit on a level surface and tighten down all lag screws firmly to secure unit. Secure all dowel joints in place with screws perpendicular to the doweled end as shown in figure 6.

figure 5

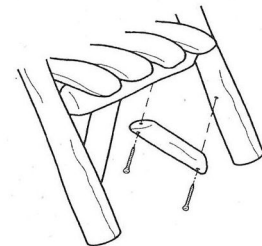

Your chair is now assembled and ready for finish or immediate use.

If you have hardware left over after completing your unit, it most likely has been assembled incorrectly, and may not be safe to use. Please call Customer Service for assistance.

Check all joints for tightness before and during each usage season.

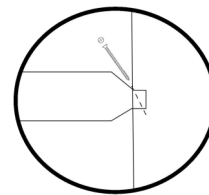


figure 6



**We recommend:**

WeatherSeal Premium Oil-Based Exterior Wood Stain & Sealant

www.ContinentalProd.com