

# ASSEMBLY INSTRUCTIONS

 
 
## 4PC DINING SET

ASSEMBLY  
REQUIREMENTS

2-Person  
Assembly

90 Minutes  
Assembly Time  
Approximate


Tools Required  
(Not Provided)

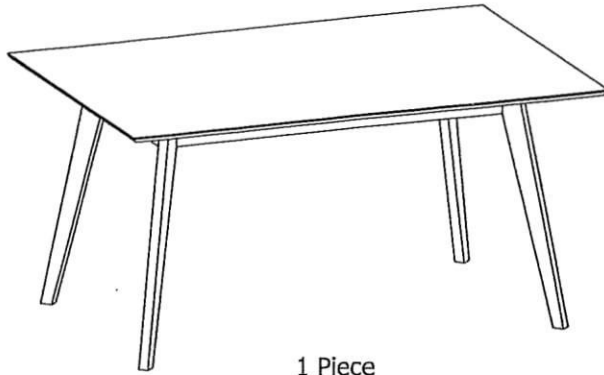

1 Piece



 2 Pieces

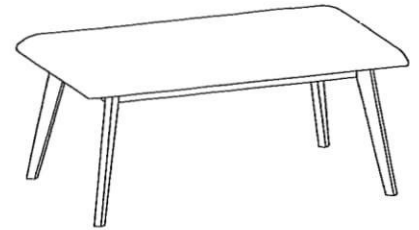

1 Piece

### Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product. Contact our customer service department in case there are any missing or damage parts or hardware. Replacement parts are normally shipped within 2 or 3 days.

Within 30 days From delivery date

We appreciate your business!

### ASSEMBLY PREPARATION

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List and ensure parts and hardware are correct before assembly. Contact customer service for missing parts.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

### SAFETY PRECAUTION

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

### TIPS FOR ASSEMBLY

1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Identify all of the parts, hardware and quantities required for each step.
4. During assembly, do not over-tighten any fittings as this may cause damage.
5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
6. Always place the product on a flat, level surface.
7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

### CARE AND MAINTENANCE



- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.
- Do not drag and/or pull the furniture.

This product is for indoor and household use only - not for commercial use.




# ASSEMBLY INSTRUCTIONS

## 4PC DINING SET-TABLE

 
### Parts List

Item	Description	Qty
1	Table Top 	1
2	Table Leg 	4

### Hardware List

Item	Description	Qty	Extra	Item	Description	Qty	Extra
A	Allen Key 	1		D	Flat Washer 	8	2
B	JCBB Screw M8x60mm 	8	2	E	LEG STUD 	4	1
C	Spring Washer 	8	2	**EXTRA HARDWARE FOR SPACE USE.			

## STEP 1

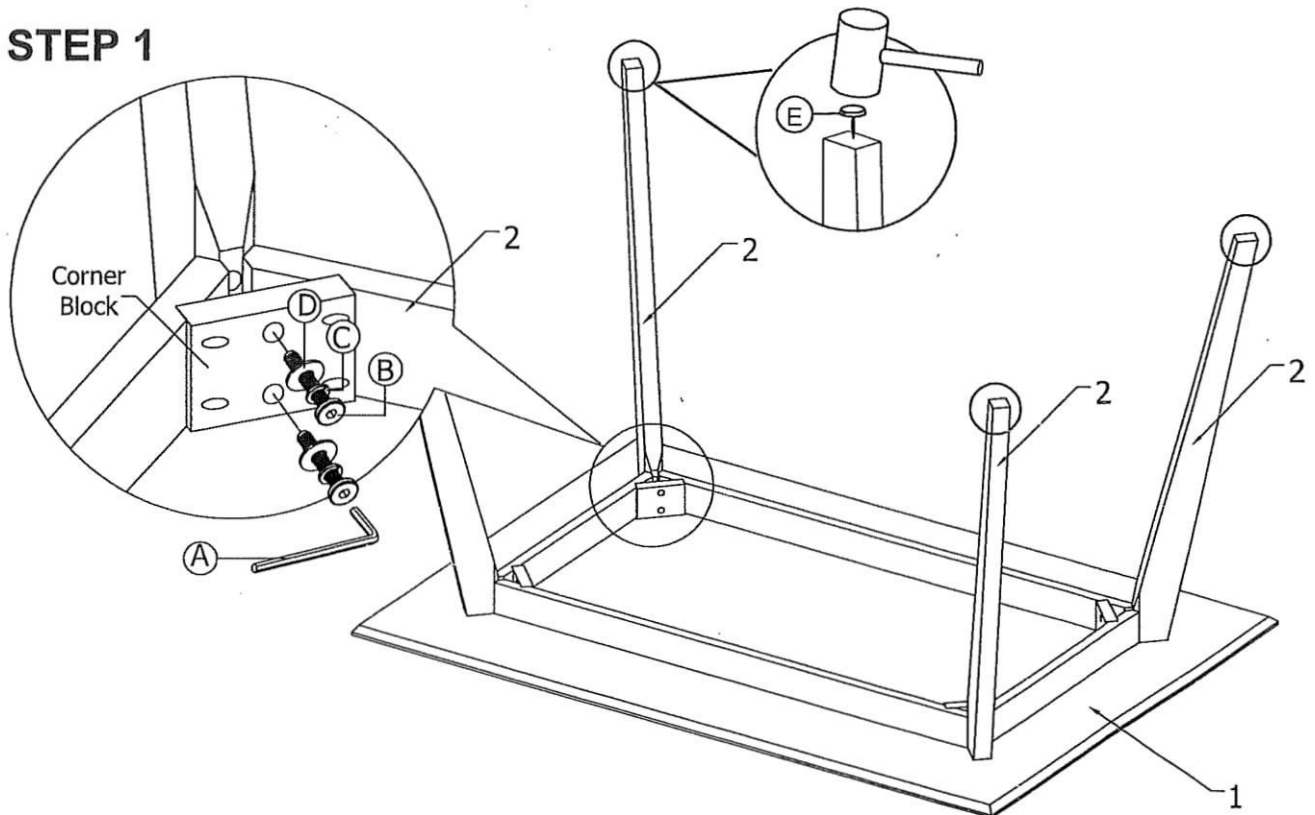




 


- a) With assistance, place Table Top (1) bottom-side up on a flat surface & soft material to prevent scratch and damage.
- b) Position a Table Leg (2) against the corner of the table aprons and align the screw holes on (2) to the screw holes on the corner block.
- c) Insert Screw (B) fitted with Spring Washer (C) and Flat Washer (D) through each hole on the corner block into screw hole on (2). Use Allen Key (A) to drive (B) to fasten Table Leg (2) to corner block. Do not tighten (B) completely until both screws are in place on each leg. Do not over-tighten.
- d) Repeat the above assembly procedure for the other three legs.
- e) Use a mallet or hammer to gently nail leg stud (E) into each of the leg.
- f) With assistance, set the table right-side up when all of the legs are assembled.  
The assembly of the table is complete.








 
# ASSEMBLY INSTRUCTIONS

## 4PC DINING SET-CHAIR

### Parts List (FOR 2 COMPLETE CHAIR)

 
Item	Description	Qty
1	Leg Assembly (L&R) 	4
2	Front Apron 	2
3	Back Apron 	2
4	Leg Support 	2
5	Cushion Seat 	2
6	Backrest 	2

### Hardware List (FOR 2 COMPLETE CHAIR)

Item	Description	Qty	Extra
A	JCBC BOLT M6x30mm 	8	1
B	JCBC BOLT M6x40mm 	8	1
C	SPRING WASHER 	8	1
D	WOOD DOWEL M8x30mm 	12	1
E	CSK SCREW M4x32mm 	12	1
F	ALLEN KEY 	1	
G	WOOD BUTTON 	8	1
H	LEG STUD 	8	1

\*\*EXTRA HARDWARE FOR SPACE USE.

## STEP 1

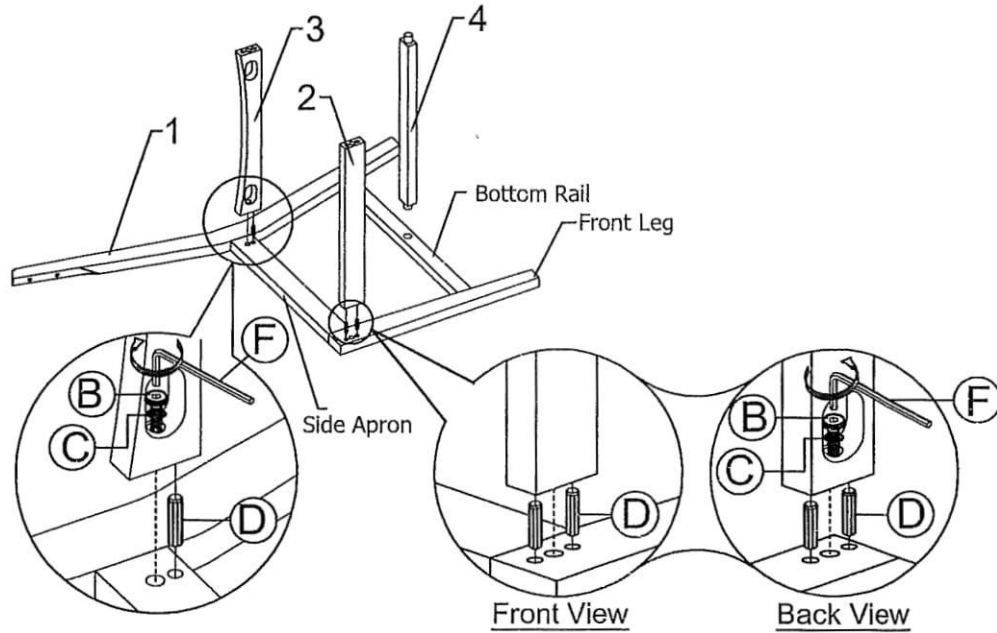


- Lay 1x Leg Assembly (1) as shown on a flat surface & soft material to prevent scratch and damage.
- Insert 3x Wood Dowel (D) into the designated holes on Side Apron and Front Leg of (1).
- Attach Front Apron (2) to Front Leg via Wood Dowels. Next, use Bolt (B) fitted with Spring Washer (C) to fasten (2) to Front Leg. Use Allen Key (F) to drive and tighten (B).
- Attach Back Apron (3) to Side Apron via Wood Dowel. Note the orientation of the curve edge of (3). Next, use Bolt (B) fitted with Spring Washer (C) to fasten (3) to Side Apron. Use Allen Key (F) to drive and tighten (B).
- Attach Leg Support (4) to Bottom Rail of (1).

# ASSEMBLY INSTRUCTIONS

 
## 4PC DINING SET-CHAIR

### STEP 2

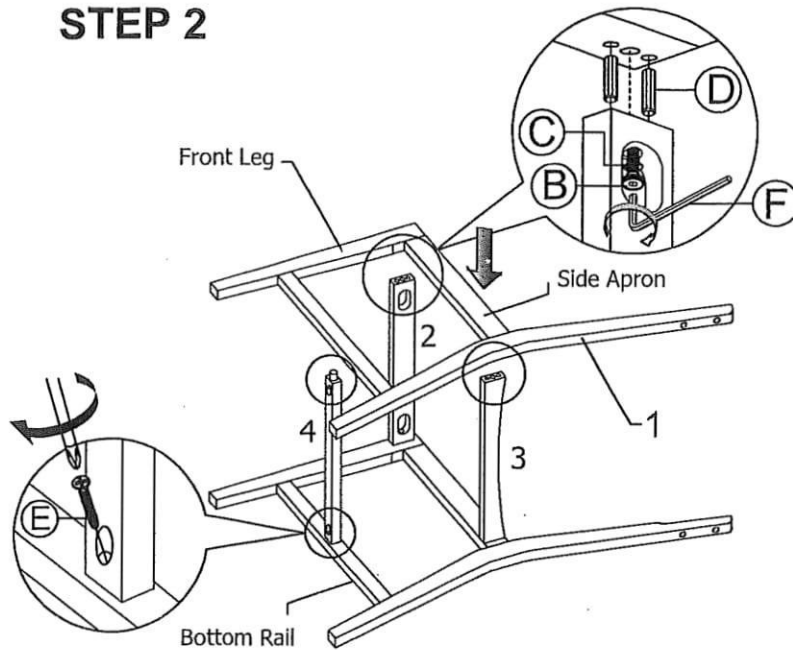


- Insert 1x Wood Dowel (D) into the designated hole on Back Apron (3).
- Insert 2x Wood Dowel (D) into designated holes on Front Apron (2)
- Attach second Leg Assembly (1) to (4) and to (2) & (3) via Wood Dowel.
- Use Bolt (B) fitted with Spring Washer (C) to fasten (3) to Side Apron. Use Allen Key (F) to drive and tighten (B).
- Use Bolt (B) fitted with Spring Washer (C) to fasten (2) to Front Leg of (1). Use Allen Key (F) to drive and tighten (B).
- Use Screw (E) to fasten (4) to Bottom Rail.

### STEP 3

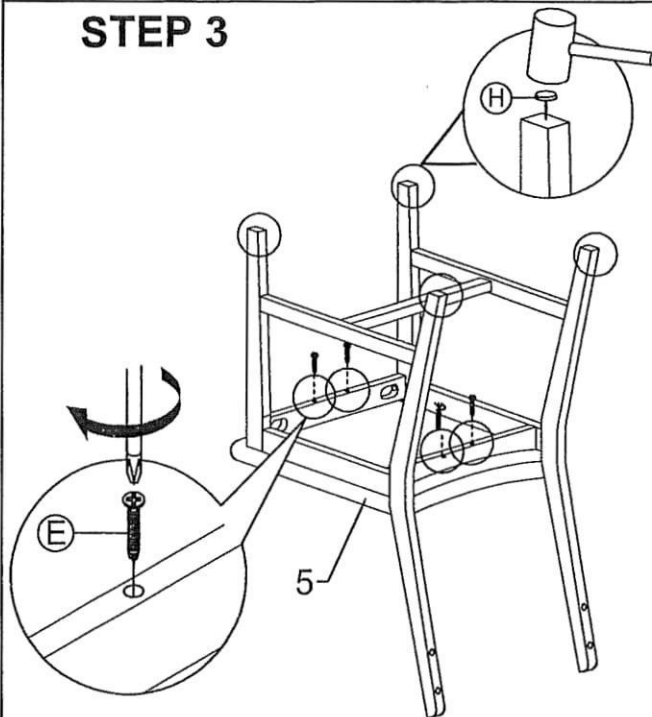 

- Place the Cushion Seat (5) bottom-side up on an elevated surface (e.g. table top).
- Position the assembly from STEP 2 with the legs facing up as shown.
- Center the Side, Front & Back Apron to the Cushion Seat with rear of the Cushion Seat against the Back Legs.
- Use Screw (E) to fasten Cushion Seat to the Front & Back Apron. Use a Phillips Screwdriver to drive the screws. Do not tighten the screws completely until all screws are in place.
- Use a mallet or hammer to gently nail Leg Stud (H) into each of the leg.
- Set the chair right-side up

### STEP 4

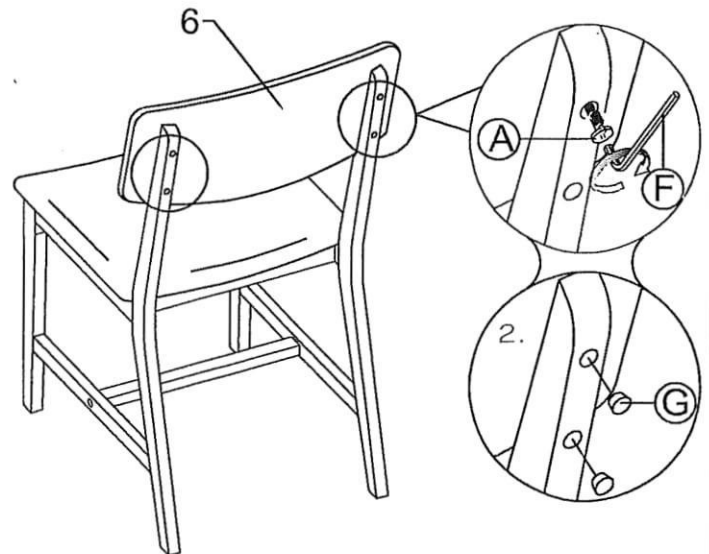 



- Position Backrest (6) to align the bolt holes on (6) to the bolt holes on the Back Support.
- Use Bolt (A) to fasten (6) to Back Support. Use Allen Key (F) to drive and tighten (A). Do not tighten the bolts completely until all the bolts are in place.
- Use Wood Button (G) to conceal bolt holes. The assembly of the chair is complete.




 
 
# ASSEMBLY INSTRUCTIONS

## 4PC DINING SET-BENCH

 
### Parts List

Item	Description	Qty
1	Cushion Top 	1
2	Bench Leg 	4

### Hardware List

Item	Description	Qty	Extra	Item	Description	Qty	Extra
A	Allen Key 	1		D	Flat Washer 	8	2
B	JCBC Screw M6x70mm 	8	2	E	Leg Stud 	4	1
C	Spring Washer 	8	2	**EXTRA HARDWARE FOR SPACE USE.			

## STEP 1

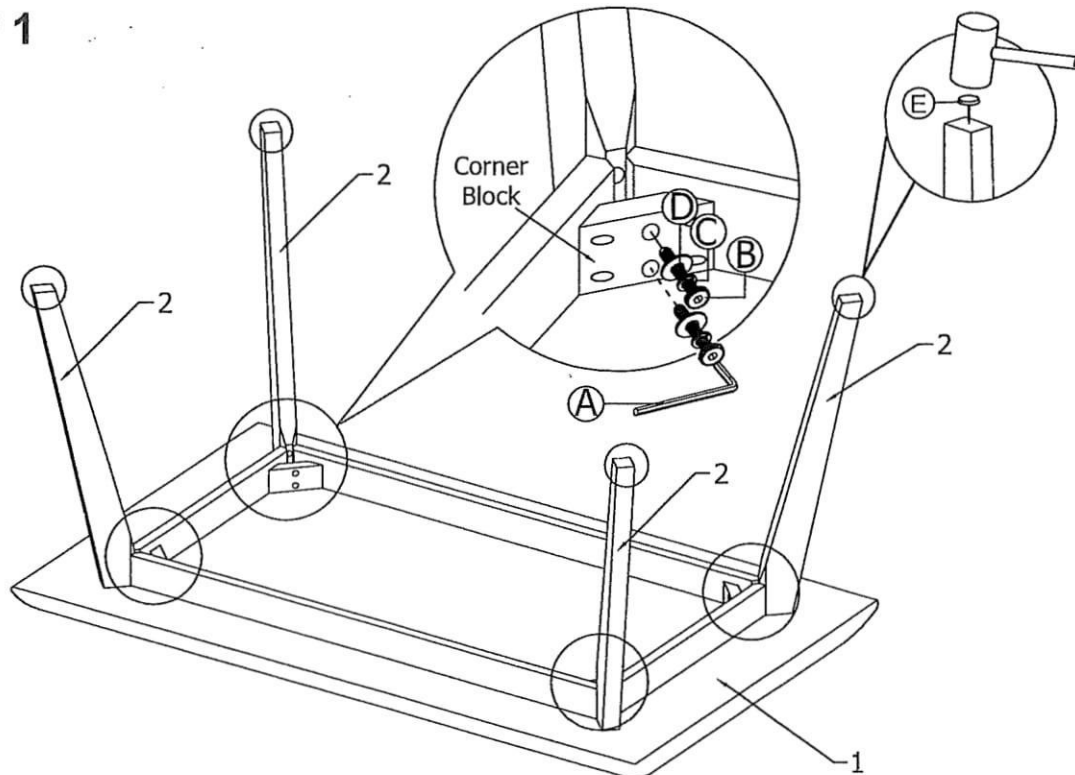

- a) Place Cushion Top (1) bottom-side up on a flat surface & soft material to prevent scratch and damage.
- b) Position a Bench Leg (2) against the corner of the bench aprons and align the screw holes on (2) to the screw holes on the corner block.
- c) Insert Screw (B) fitted with Spring Washer (C) and Flat Washer (D) through each hole on the corner block into screw hole on (2). Use Allen Key (A) to drive (B) to fasten Bench Leg (2) to corner block. Do not tighten (B) completely until both screws are in place on each leg. Do not over-tighten.
- d) Repeat the above assembly procedure for the other three legs.
- e) Use a mallet or hammer to tap in Leg Stud (E) onto each leg.
- f) Set the bench right-side up.  
The assembly of the bench is complete.