


ASSEMBLY INSTRUCTION

DRESSER

BEFORE YOU START ASSEMBLING,
PLEASE MAKE SURE ALL PARTS & HARDWARE ARE INCLUDE IN BOX :

| NO | PARTS | QTY |
|----|---------|------|
| 1 | DRESSER | 1 PC |

| NO | HARDWARE | QTY |
|----|-----------------------------------|-------|
| A | SCREW $\varnothing 8 \times 2"$ | 1 PC |
| B | SCREW $\varnothing 8 \times 5/8"$ | 1 PC |
| C | RESTRAINT STRAP | 1 PC |
| D | BRACKET | 2 PCS |
| E | PLASTIC ANCHOR | 1 PC |

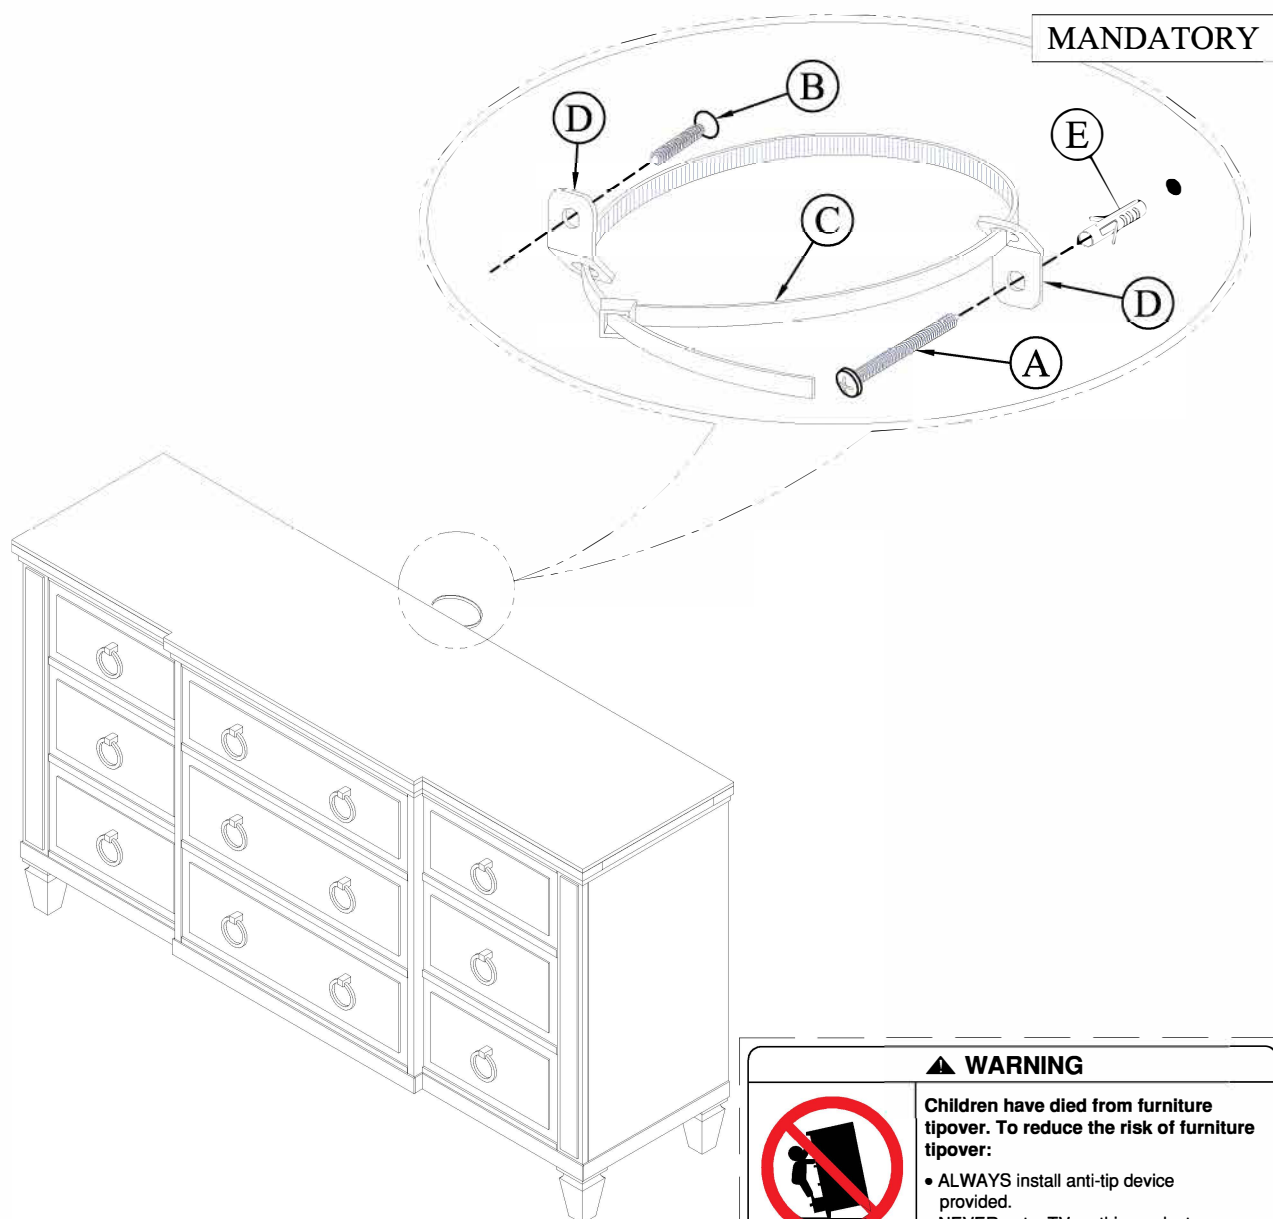

▲ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on any drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.
Do not remove!*