

TAYAMA®




User Manual Electric Mini Chopper Model: TY-388C

Please read all instructions carefully before operating the appliance and keep for future reference.

Warning: In order to avoid injury caused by misuse, please read the manual carefully before using this product and strictly follow the purpose stated in the manual to use this product. Thank you for using our Electric Mini Chopper.

This product is one of the electric mini chopper food processor series products independently developed by our company. Unique shape design, easy to clean. It is a good helper in the family kitchen. This product can be used to chop up various kinds of food, shortening your prepping time! The container bowl is made of food grade glass, making food more healthy and hygienic.

Components and Installation Drawing

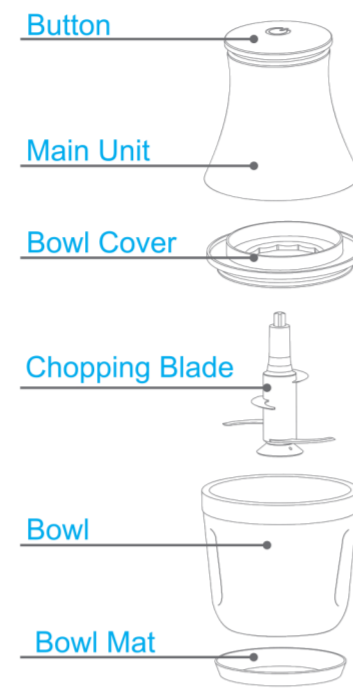

Performance Characteristics

1. Unique shape design.
2. 4 pieces shadowless cyclone blade design, perfect for mincing and chopping.
3. Safety switch design to protect and prolong the life of the appliance.
4. Transparent glass chopping bowl, easy to view.
5. Removable parts, easy to clean.

Method of use

| Use steps: | |
|--|---|
| | 1. Clean the chopping bowl, chopping blade and lid according to the cleaning and maintenance instructions before use. |
| | 2. Remove the body and lid and place the chopping bowl on a flat, clean, dry place. |
| | 3. Make sure the chopping blade is placed accurately on the rotary axis in the center of the chopping bowl. |
| | 4. Put the proper amount of food in the bowl according to the guide for chopping and mixing food. If the position of the chopping blade deviates after putting food into the bowl, please adjust the position of the chopping blade first to ensure meeting three points above. |
| | 5. Put the lid on the bowl, and then put the body on the lid, check whether it is properly placed, and ensure that the body, chopping blade and lid are assembled in place. |
| | 6. Plug in the power cord and switch on the power supply. |
| | 7. Hold the body by hand, press the switch, the machine starts to work, release the switch, the machine stops working. For chopping time refer to the chopping and mixing food guide. Consumers can shorten the chopping time according to their personal preferences. |
| <p>Note: In order to prolong the service life of this product, the maximum working time is not more than 30 seconds. If the chopping is not completed after 30 seconds, please let the product rest for 2 minutes before continuing to work.</p> | |


8. Do not remove body immediately after use. Wait for the blades to stop rotating, before unplugging the power cord and then removing the body.
9. Open the lid and take out the chopping blade before removing the food.

(The chopping blade is very sharp, please use extreme caution when handling sharp objects.)

Tips: Do not put water or food materials higher than 158°F(70°C) into the bowl for processing to avoid the deformation of the bowl body caused by heat and water leakage.

Chopping and Mixing Guide

In order to prolong the service life of the machine and obtain good chopping effect, please refer to the following "chopping and mixing guide".

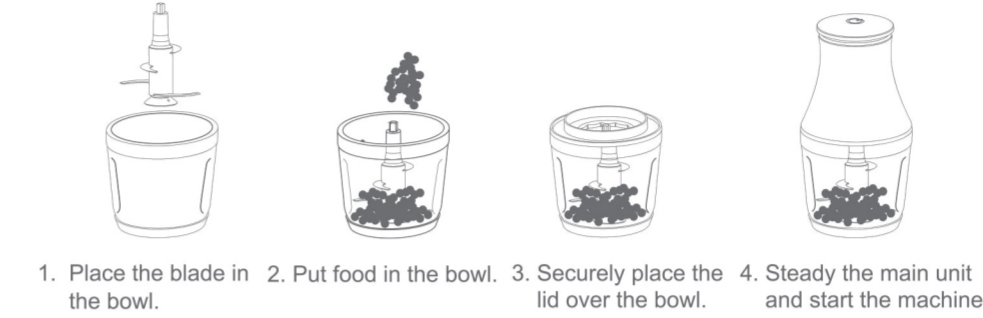

| Food | Weight | Maximum Time (Seconds) | Note |
|------------|--|------------------------|-------------------------------|
| Pork | Cut into small pieces approx. 20x20x50mm | 30S | Remove bones, skin and tendon |
| Beef | Cut into small pieces approx. 20x20x50mm | 30S | Remove bones, skin and tendon |
| Garlic | 100g | 15S | |
| Hot pepper | 100g | 15S | |
| Carrot | Cut into small pieces approx. 20x20x50mm | 15S | |
| Celery | 100g | 15S | |

Note: The weight in the table is for reference only, do not exceed the maximum limit marked on the chopping bowl.

| | | | |
|-----------------------|------|-----|--|
| Cooked sweet potatoes | 50g | 30S | Add a moderate amount of liquid to help chopping and mixing. |
| Cooked carrots | 50g | 30S | |
| Apple | 100g | 30S | |

Tip: After use, add about 100mL water to the chopping bowl and start the machine to clean easily.

Important Safeguards

1. This appliance has been designed for use with a 120V electrical outlet. Do not use any other electrical outlet.
2. Always plug the power cord directly into the wall outlet. Never use the unit with a shared power supply with other appliances may cause damage or fire.
3. Insert or remove the power cord by holding the plug, never pull on the power cord.
4. Do not use hard objects to scrape the machine, damage may occur.
5. Always unplug the machine after use to avoid danger of electric shock, leakage and fire.
6. This product cannot be used to process hard things, such as bone meat, coffee beans, pepper, ice or frozen food, etc.
7. The temperature range of the chopping bowl is 0°~50°C. Do not place the chopping bowl in the microwave oven. Do not place extremely hot food in the chopping bowl.
8. Before adding food, check whether the blade is properly installed and running smoothly. If the blade cannot rotate or rotates slowly, please unplug the power cord first. Check if there is any blockage in the bowl and properly adjust and secure blade and lid.
9. After adding food, please check if the chopping blade has deviated from the correct position. If the blade does not operate quickly within a few seconds, please unplug the power cord and remove any excess food, and repeat the process.
10. The blade is extremely sharp, please do not directly touch the blade. Hold the lever on the blade when removing and installing.
11. Do not exceed the maximum working time of this product (30 seconds). After continuous working for 30 seconds, allow the machine to rest for 2 minutes before using again.
12. To prevent against electric shock or damage to the machine, do not get the power cord wet. Do not use the machine if the plug or cord is damaged.

Before First Use

Before using the Mini Chopper for the first time, wash the components except for the Main Unit and power cord using a dish cloth or nonabrasive sponge with warm, soapy water. Rinse the components with clean water and dry thoroughly.

- Remove blade protectors before use and cleaning.
- Place the bowl mat under glass jar to prevent slipping or moving.
- Never place or use the glass jar in a microwave oven.
- Do not fill content above the MAX line indicated.
- Working cycle: After 30 seconds of chopping, let the machine rest for 2 minutes before continuing.



Statement

All information in this material has been carefully checked, if there are any typographical errors or misunderstandings in the content, please consult our company.

In addition: If there is any technical improvement of the product, it will be compiled into the new manual without further notice. If there is any change in the appearance and color of the product, please refer to the actual product.

Tayama Appliance USA Inc.

www.tayama-usa.com
Email: support@tayama-usa.com

Details of "Food Contact" Materials

| The product and food contact materials are in accordance with the relevant food safety standards | | |
|--|---|----------------|
| Part name | Material | Standard |
| Bowl | Calcium sodium glass | GB4706.1-2005 |
| Lid | Acrylonitrile styrene copolymer (AS) | GB4706.30-2008 |
| Blade holder | Poly (POM)/ propylene homopolymer (PP) of 1,3,5-trioxycyclohexane and 1,3-dioxycyclopentane | GB4706.30-2008 |
| Chopping blade | 30 cr13 stainless steel (SUS420J2) | GB4706.30-2008 |
| Shaft components | Stainless steel under 06 cr19ni10 (SUS304) | GB4706.30-2008 |
| Sealing ring | Polydimethylsiloxane (silicone rubber) | GB4706.30-2008 |
| <p>Tips: Different types of food contact parts and materials may be different, please refer to the actual purchased model.</p> | | |
| <p>Conditions of use :</p> <ol style="list-style-type: none"> 1. Stainless steel parts to avoid contact with strong acid substances. 2. The operating temperature of POM shall not be higher than 121°C. | | |

| | | |
|----------------------------------|---|--|
| Abnormal vibration or loud noise | 1. The cutter holder is not installed properly. | 1. Remove the ingredients and place the blade holder in place. |
| | 2. Product placement is not stable. | 2. The product is placed smoothly. |
| | 3. The voltage is too high. | 3. Check whether the voltage is too high. |
| | 4. Too many ingredients. | 4. Turn off the power and remove excess ingredients. |

Product Specifications

| Product name | Electric Mini Chopper |
|-------------------------|--------------------------------------|
| Product model | TY-388C |
| Rated voltage/frequency | 120V~60Hz |
| Rated power | 200W |
| Rated capacity | 0.6L |
| Continuous running time | ≤30S |
| Time interval | ≥Two minutes |
| Configuration | Single bowl plus four knife assembly |
| Speed | 3500 RPM to 4800 RPM |
| Product figure | |

13. If the machine malfunctions during use or is damaged, immediately unplug the cord. Do not use or attempt to repair a malfunctioning appliance!

14. This machine is not intended to be used by persons with reduced physical sensory or mental capabilities, or lack of experience and knowledge unless they are under the supervision of a responsible person or have been given proper instructions in using the appliance. This appliance is not intended for use by children.

Maintenance

| | |
|--|--|
| | <ol style="list-style-type: none"> 1. Remove the power plug from the power socket immediately after use. 2. Each part can be cleaned with detergent and sponge, do not use hard steel wire to avoid damage to the surface. 3. Do not immerse the machine in water. Wipe the outer surface of the product with a wet towel only, and do not wash it with water to avoid electric leakage and failure. 4. When the product is not used for a long time, please clean it and put it into a ventilated and dry place in the packing box, so as not to be affected by moisture. |
|--|--|

FAQ Analysis

| Fault phenomenon | Cause analysis | Troubleshooting |
|---|--|---|
| It does not work after power is turned on | Check the lid and bowl for proper alignment | Unplug and adjust the parts and components |
| The machine stops during use | 1. The voltage is too low. 2. Motor overload automatic stop protection. | 1. Check the voltage. 2. It is recommended to leave the machine for 30 minutes before starting it. |
| The motor had a bad smell in the first few uses | It is normal to have some odor during the initial usage. | |