

Wooden Folding Fence Instruction Manual



Before using this product, please read the instruction manual carefully to avoid incorrect usage. Retain the manual for future reference.








Safety Precautions for Wooden Folding Fence

To maintain a safe environment for children and to prevent any accidents, it is crucial to follow these safety precautions when using a wooden fence.


1. **Adult Supervision:** Always ensure that an adult is present and supervising children when the folding fence is in use. This supervision is necessary during the assembly, use, and disassembly of the fence.
2. **Proper Assembly:** Carefully follow the provided assembly instructions to ensure the fence is assembled correctly and securely. Incorrect assembly can result in instability and potential collapse of the fence.
3. **Inspect Before Use:** Conduct a thorough inspection of the fence before each use to check for any signs of damage, wear, or loose parts. If any issues are found, do not use the fence until it is repaired or replaced.
4. **Avoid Rough Play:** Teach children not to engage in rough play such as climbing, jumping, or pushing against the fence. Such actions can cause the fence to become unstable and potentially fall over.
5. **Maintenance:** Regularly maintain the fence according to the care instructions provided. Proper maintenance helps to ensure the fence remains safe and functional.
6. **Environmental Conditions:** Avoid using the fence in adverse weather conditions like high winds or heavy rain, as these conditions can affect the stability of the fence.
7. **Keep Away from Edges:** Place the fence away from any edges such as stairs, ledges, or elevated surfaces to prevent children from falling from heights.

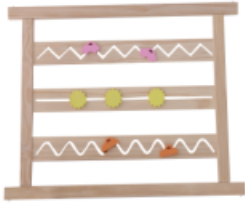By adhering to these safety precautions, you can significantly reduce the risk of accidents and ensure a safe play environment for children using the wooden folding fence. Failure to comply with these warnings can lead to serious injuries or accidents. Always prioritize safety and exercise caution when using this type of equipment.

Package List

 <p>X5</p>	 <p>X1</p>	 <p>X1</p>
 <p>X1</p>	 <p>X8</p>	 <p>X8</p>
 <p>X8</p>		

- Before you begin the installation, please read the installation steps carefully to prevent installation errors and ensure that the item can be folded properly.
- The playpen should be installed from the bottom to top
- When connecting the first panel to the second panel, pay attention to the orientation of the connectors: the protrusions of both the bottom and top connectors should face toward you, with the smaller end on the left and the larger end on the right.
- When connecting the second panel to the third panel, the protrusions of both the bottom and top connectors should face away from you, with the larger end on the left and the smaller end on the right.
- When connecting the third panel to the fourth panel, the protrusions of both the bottom and top connectors should once again face toward you, with the smaller end on the left and the larger end on the right.
- Please continue to connect the remaining panels in the above sequence. This order will ensure that the panels can fold smoothly after installation.

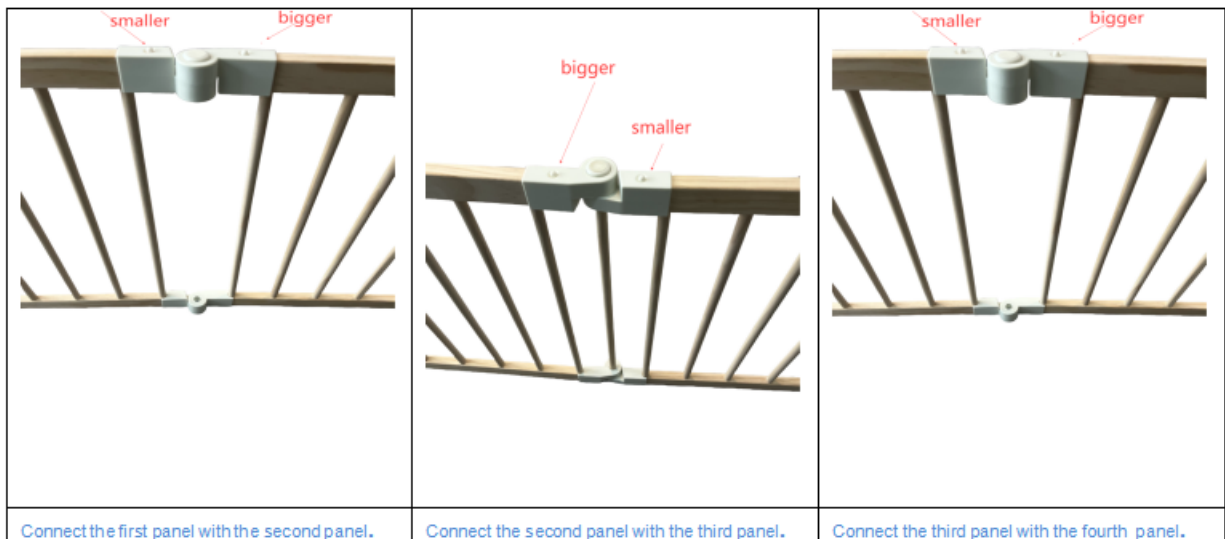

Step 1: Assemble Two Panels

Select any two panels and link them together using the connectors at the bottom. Press the button on the plank, and push it toward the pre-drilled hole of the angle connector until the raised button on the plank is fully inserted into the pre-drilled hole of the connector.



Step 2: Place the wooden column at the bottom into the groove of the connecting piece.



****Note:**** The connecting piece at the bottom should not be pressed down, while the one at the top can be pressed down. Please be careful not to confuse them.

Step 4: Install the top connecting piece in the same way as the bottom connecting piece.




Step 5: Please install the remaining panels in the same way as the two panels mentioned above. ***Be sure to pay attention to the orientation of the connecting pieces.***

Here are some tips for opening the door:


Press the door button, push the connector to the right, and finally lift the button upwards. The door can then be easily opened.




Here are some tips for using the connecting pieces:

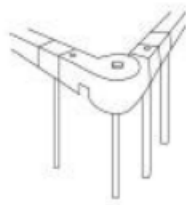

Use your thumb to press down on the raised latch for easy and free adjustment.

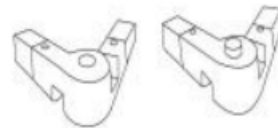

Pressing your thumb down allows the connector to freely move, and releasing your thumb secures the connector in place.

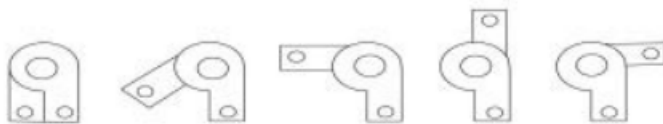

To extend the fence, **keep pressing** the raised latch on the curved connector. This lets each panel open freely to the angle you want, then let go of the latch to lock the fence in place. **If you don't have enough strength in your thumb, you can press down with your palm.**



Stay tuned for more funny design products...

Do you have any problems or missing parts? Please let us know. We are here to help you solve problems 24/7.

Email us: info@ggffhome.com