



ITEM #: RV-CIL7259-5

IMPORTANT SAFETY INSTRUCTIONS

- To avoid injury or damage, mount only on a surface that is sturdy.
- To avoid electric shock, make sure the electricity is turned off at the main circuit breaker panel. If you are replacing an existing fixture, turn off the following in order: fixture, wall switch, and main fuse or breaker box.
Note: Some types of fuses must be unscrewed to shut the power off.
- If you are unclear as to how to proceed, please consult a licensed electrician.

UNPACK THE FIXTURE: Check the contents of the box. Box should contain all items on the parts diagram.



For any replacement parts or installation issues, please Contact Us!

Email: help@kira-home.com


Facebook/Instagram: @KiraHomeDecor

Phone: 888.208.2085

INSTALLATION INSTRUCTIONS

1. Measure Canopy (D) height with measuring tape. Adjust hex nut on Nipple (E) furthest away from Mounting Plate (A) to the height of measured Canopy (D) plus 1/4" to allow Nipple (E) to protrude through Canopy (D) during installation.
2. Secure Mounting Plate (A) to the junction box (not included) using Mounting Screws (B) provided. Ensure Mounting Plate (A) is positioned with Nipple (E) pointing away from the junction box.
3. Place Canopy (D) against the ceiling by inserting Nipple (E) through the appropriate hole located on Canopy (D). Adjust Nipple (E) and hex nut until 1/4" of the threaded portion is visible. Remove Canopy (D) and Mounting Plate (A) from the ceiling and set them aside.
Note: If 1/4" of Nipple (E) is not visible, remove Canopy (D) and re-adjust the hex nut on Nipple (E) to proper length.
4. Remove Rod Screws (R) from Connecting Rods (N) and set them aside.
5. Thread the bottom of Connecting Rods (N) into the holes on Socket Assembly (K).
6. Secure Top Frame (M) to the Top of Connecting Rods (N) with Rod Screws (R) ensuring the larger holes on Top Frame (M) are facing upwards.
7. Place Screw Caps (V) into the hole over Rod Screws (R).
8. Screw Center Rods (L) into Socket Assembly (K), threading and pulling through any necessary Wire (H).
9. Assemble one end of each Chain (G) to each Pendant Loops (J) by opening Quick Links (Q) closing it around Pendant Loops (J).

10. Weave Wire (H) up through every three links on one Chain (G). Use wire cutters to cut Wire (H) 10" beyond the length of Chain (G) to allow for easier wire connection.
11. Secure top of each Chain (G) to Canopy Loops (I) with Quick Links (Q).
12. Thread Wire (H) through bottom of Canopy (D). Set the fixture aside.
13. With a drill, make a hole in your junction box and insert a plastic anchor. With the help of a friend, lift the fixture.
14. Thread Support Cable (S) through Mounting Plate (A). Attach Washer (T) and Support Cable (S) from Canopy (D) onto the junction box using Screw (U). Secure tightly.
15. Re-secure Mounting Plate (A) to the junction box using Mounting Screws (B) provided.
16. Using the wire graph below, connect the appropriate wires from the fixture to the corresponding wires in the electrical junction box (not included) and secure Wire Connectors (C).

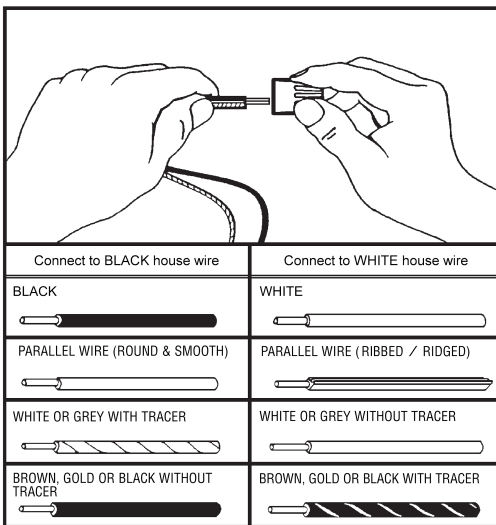

- A. Connect the ground wire (bare copper or green) from your fixture to the:
 - 1) ground wire in the junction box, or
 - 2) ground screw in the junction box
- B. Connect the BLACK house wire to fixture hot wire that corresponds to diagram (black, round & smooth, white/gray with tracer, brown/gold without tracer).
- C. Connect the WHITE house wire to fixture neutral wire that corresponds to diagram (white, ribbed/ridged, white/gray without tracer, brown/gold with tracer).

17. Place all Wires (H) and Wire Connectors (C) back into the junction box.
18. Place Canopy (D) against the ceiling, ensuring Nipple (E) is protruding through the hole in Canopy (D). Secure the fixture in place to Nipple (E) with hex nut and Decorative Cap (F).
Note: If the fixture doesn't sit flush against the ceiling, remove the fixture and readjust Nipple (E) and hex nut.
19. Remove Socket Covers (O) from the sockets. Place Shades (P) over the sockets and replace Socket Covers (O) over them.
Note: If Socket Covers (O) sit crooked, gently bend them back into place. This will not damage any of the sockets/wiring.
20. Install bulbs (not included) into the sockets on Socket Assembly (K).

Enjoy your new fixture!

Kira Home

ITEM #: RV-CIL7259-5 - PARTS DIAGRAM

HELPFUL TOOLS: Safety Goggles, Screwdriver, Wire Cutter/Stripper, Ladder, Measuring Tape

