




Installation Instructions







1. Parts Included



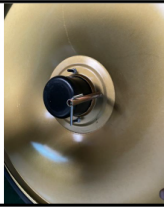

			
Base	Pump Cover	Pump	Step Pedal
			
Backrest	Footrest	Seat	Nuts & Tools
			
Seat Cushion	Leg rest		



2. Installation Instruction

Step 1. Install the pump to the Base

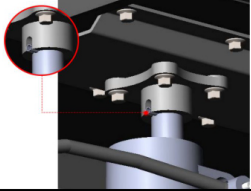

Parts you will need for this step.

			
Base	Pump Cover	Pump	Step Pedal & Screws

			
1-1. Align the 4 screw holes on the pump and the base, and insert the pump into the base.	1-2. Put the long end of the wrench through the sleeve.	1-3. Tighten the 4 nuts with the tool to secure the base and pump. (Make sure the screws are tightened to avoid wobbling of the chair)	1-4. Insert the step pedal into the pump, and tight the screws on both sides of the pump.







	
1-5. Put on the pump cover to the pump.	1-6. Align the cover with the screw hole of the pump, use the "cross" end of the wrench to tighten the screws to secure the cover.

Step 2. Install the Seat to the Pump

	
<p>2-1. Place the seat onto the pump (please note the pinon the pump toward the gap of the pump joint).</p>	



Step 3. Install the Leg Rest

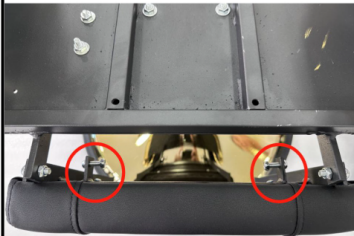

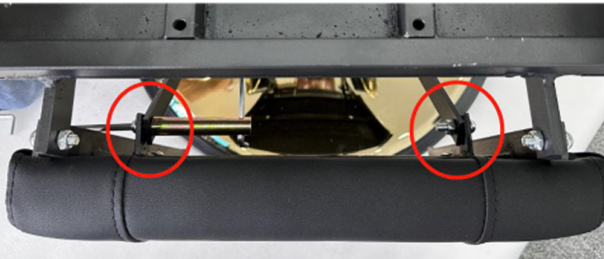
Parts you will need for this step.

		
<p>Leg Rest</p>	<p>Tools</p>	<p>Chair</p>
		
<p>3-1. Remove the screws pre-installed on both sides of the leg rest.</p>	<p>3-2. Align the 2 screw holes of the leg rest and the seat, insert the 2 screws, and then tighten the nuts with the tools.</p>	

Step 4. Install the Footrest Connector



Parts you will need for this step.



	
<p>Tool</p>	<p>Tool</p>

		
<p>4-1. Remove the screws and nuts pre-installed on both sides of the leg rest.</p>	<p>4-2. Align the screw holes of the leg rest and the seat, insert the screws removed from previous step, and then tighten the nuts with the tools.</p>	

Step 5. Install the Footrest




Parts you will need for this step.


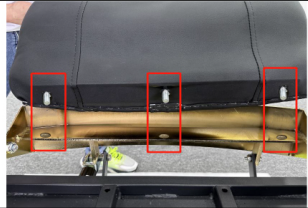


	
Footrest	Tools

	
5-1. Remove the 4 screws pre-installed on both sides of the footrest rest.	5-2. Align the screw holes of the leg rest and the footrest, insert the screws removed from previous step, and then tightem them.

Step 6. Install the Backrest to the Seat

Parts you will need for this step.

		
Back Rest	Screws	Tool

			
6-1. Remove the nut pre-installed on the back rest.	6-2. Align the screw holes of the back rest and the seat, insert the back rest to the seat.	6.3 Tighten the nut remove from the previous step with the tool.	



Please feel free to contact us if there are any problems with installation or items. We will reply to you within 24 hours.