 


78" MID-CENTURY MODERN TELEVISION STAND WITH ELECTRIC FIREPLACE

ASSEMBLY, CARE & USE INSTRUCTIONS

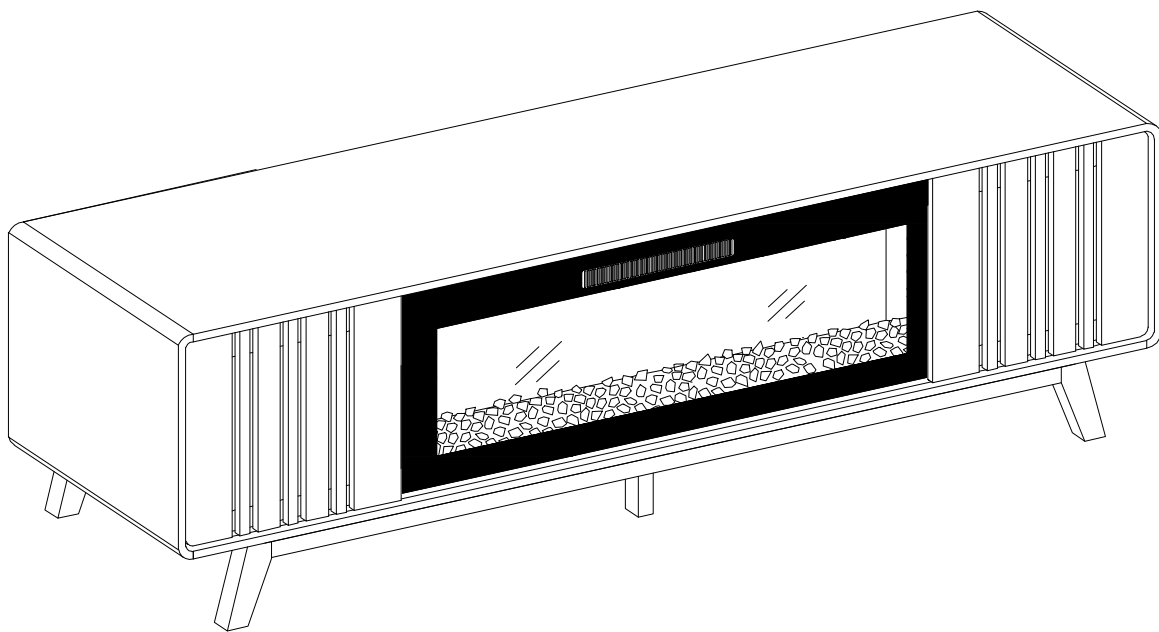

W135-ZF42WA

 
 
Thank you for your trust in purchasing our electric fireplace media mantel. We are committed to continuously developing quality products designed to enhance your home. For more information and to view our full range of products available for your home improvement needs.

 
CAUTION: This unit is intended for use only with the products and maximum weights indicated. Use with other products or products heavier than the maximum weights indicated may result in instability causing possible injury.

Note: Flat Panel TVs with base support should be placed squarely in the center of the stand with no overhang on any side.



Weight limitations are as follows:

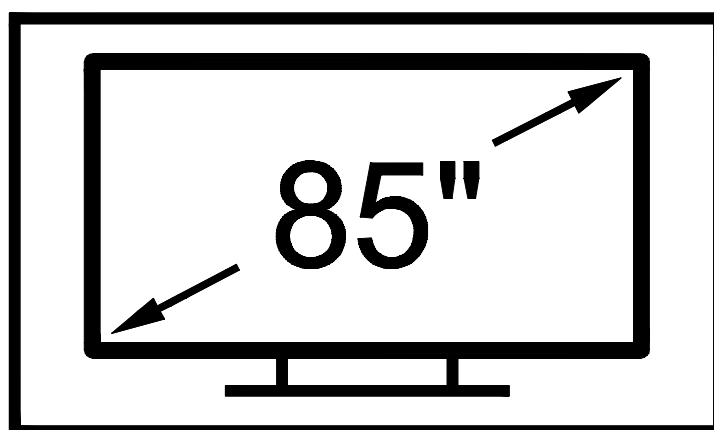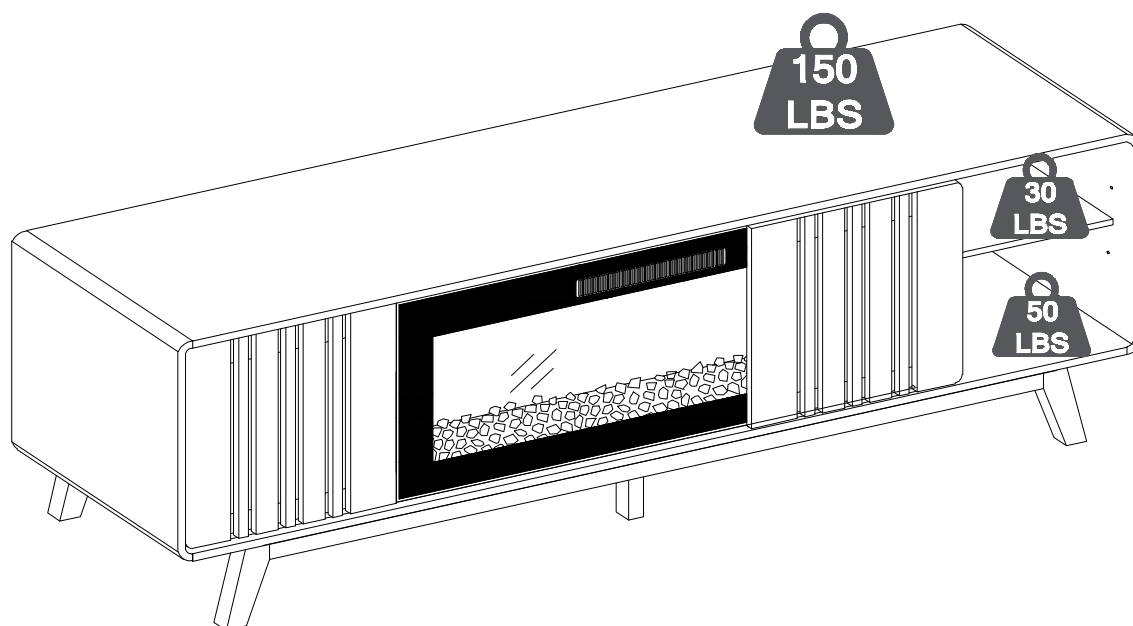


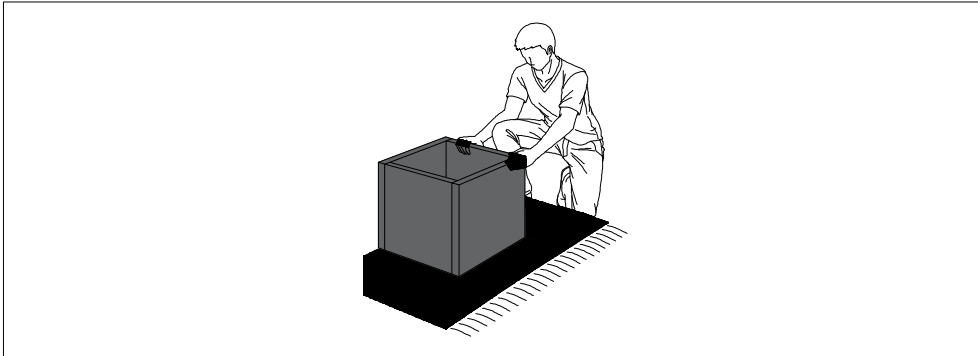

Assemble the furniture on an empty carton, carpet, or rug to prevent scratches or damage.

For safety, please keep pets and children away from the assembly area.

 Ensure the product is fully assembled before use. If you are missing any hardware or products, do not use it until you have restored the missing parts.

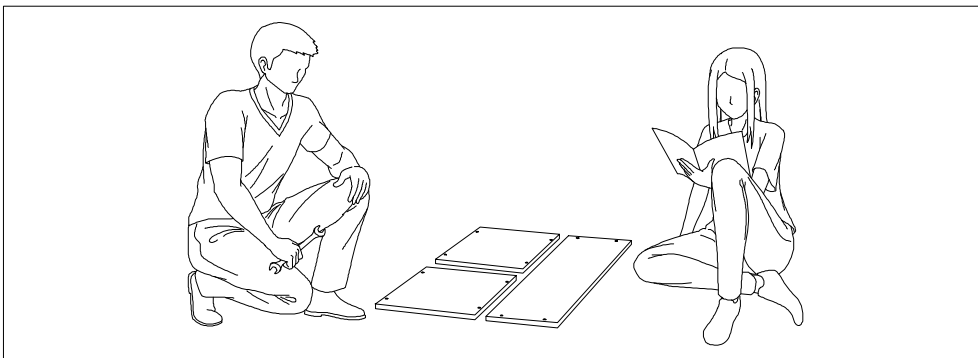

This furniture requires 2 people for assembly.

Read this instruction manual prior to assembly to familiarize yourself with the various steps.

Lay out all components and hardware separately on a flat surface and make sure that no parts are missing or damaged before assembly. Do not destroy or discard any packaging until you are certain that you have all the necessary parts for assembly.

 
Hand tight all hardware and careful not to over tighten to avoid damaging the product.

CAUTION


There are small components used in the construction of this product. Loose items should be kept away from pets and children to avoid a choking hazard.

Keep all plastic bags and packaging film away from pets and children to avoid suffocation


How to use the cam lock system

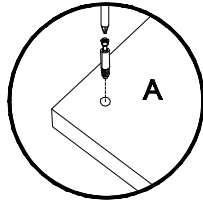

 
1. Screw cam bolt into panel

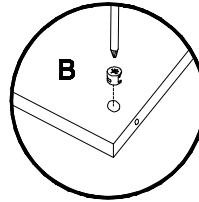

 
2. Push cam into panel - arrow feature on cam top points to panel edge

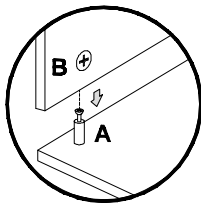

 3. Align cam bolt(s) with cam(s) and insert all the way into cross-bored hole(s)

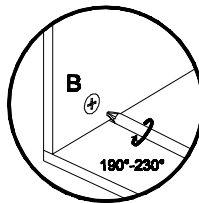


 4. Rotate cam(s) clockwise 190°-230° to lock panels together



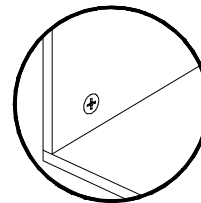


5. Panels should be tight against each other and connection should be rigid

 Insert the wood dowel at least half way by tapping lightly with a rubber mallet, IF NECESSARY

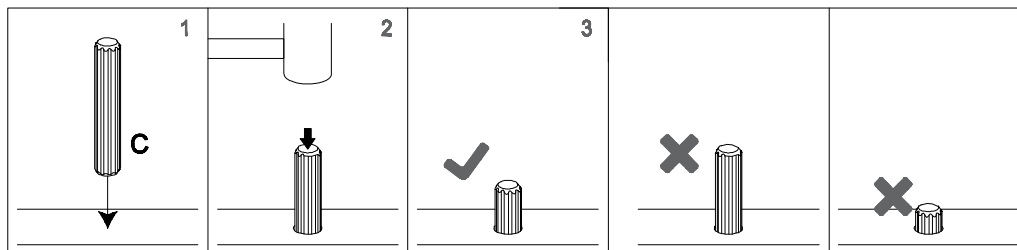


   Insert the CAM-LOCK Tighten until shoulder is flush with overtighten or undertighten















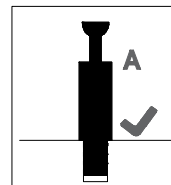
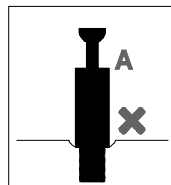
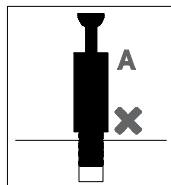


⚠ WARNING










 
- Unit must be placed on a level surface or leveled with included hardware(when applicable).
- Do not sit or stand on or allow children to climb, sit or stand on the assembled product.
- For safety reasons, it is imperative that this unit be mounted to the wall.
- Do not use without installing the tip restraint..Unit can tip over causing severe injury or death.
- Do not exceed the recommended weight limits.
- Evenly distribute the weight on each level and always keep the heavier loads on the bottom.
- Before cutting, drilling or hammering into any wall or floor surface, verify the location of electrical, plumbing and gas lines. Cutting may cause serious injury.

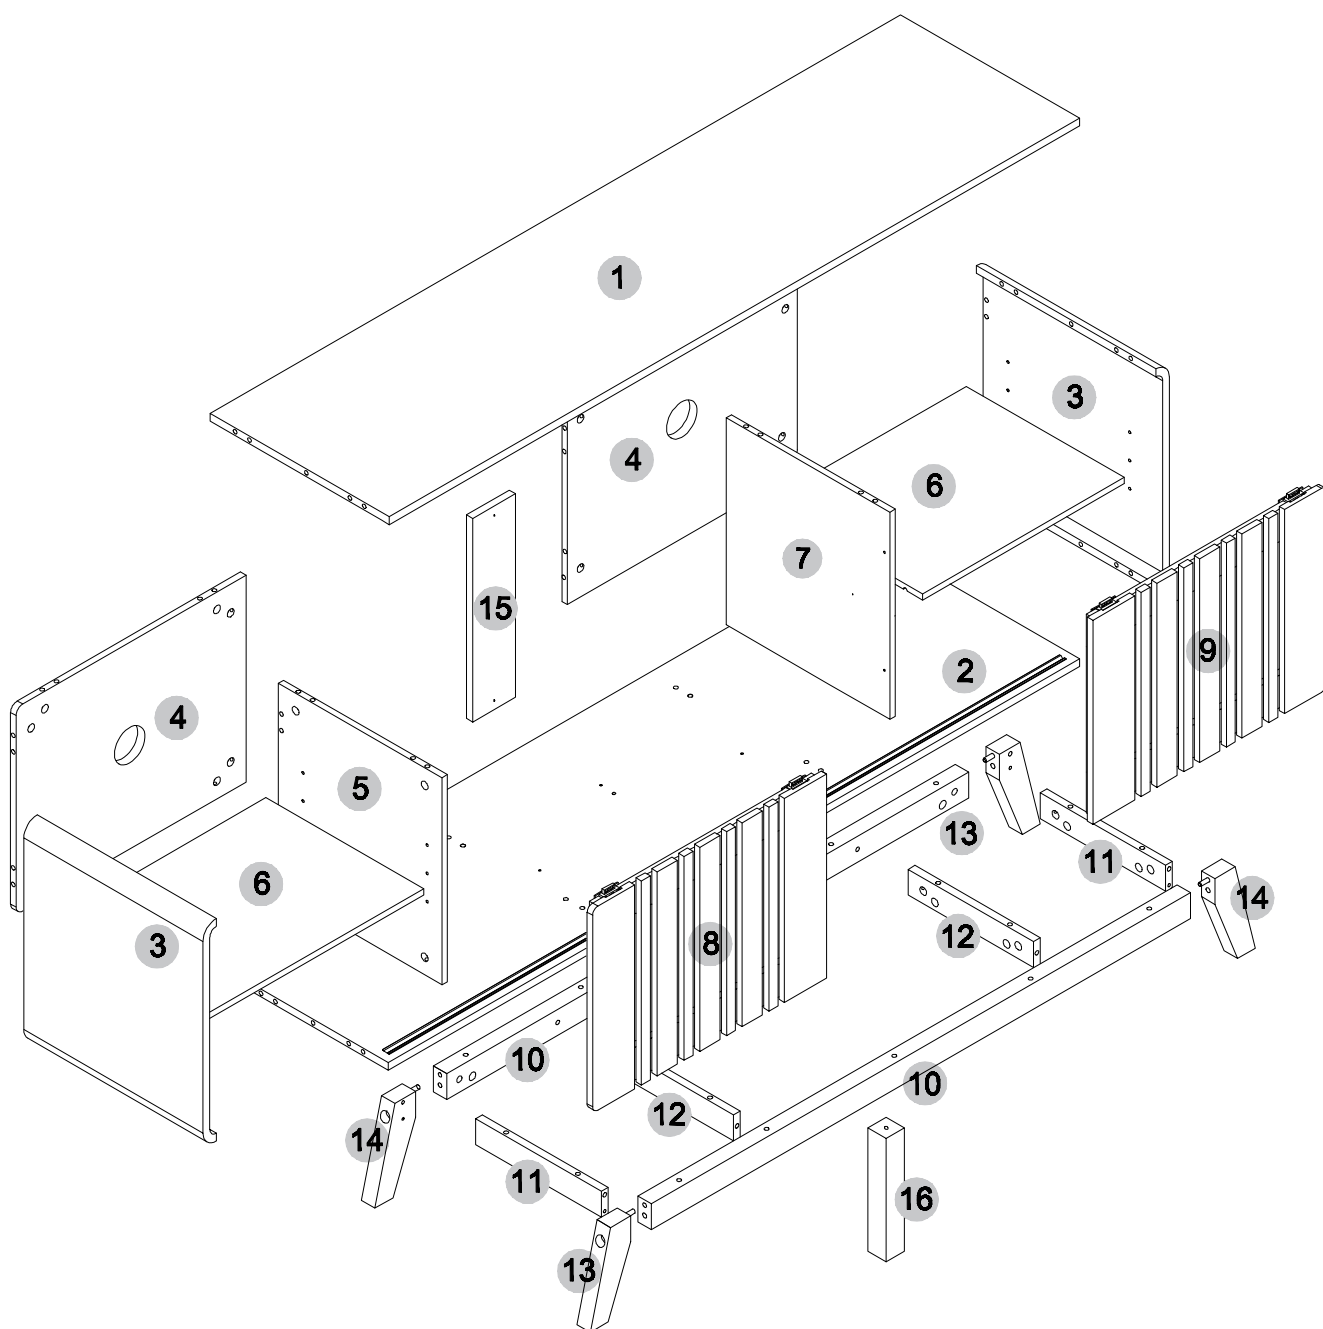

Parts List

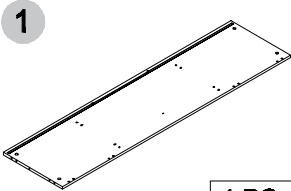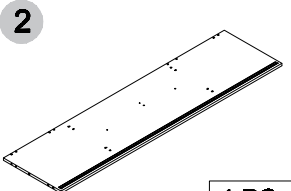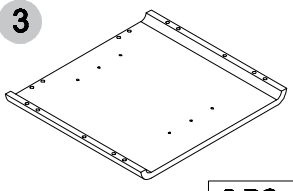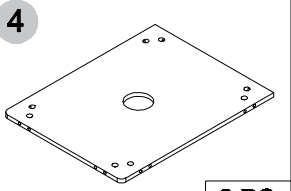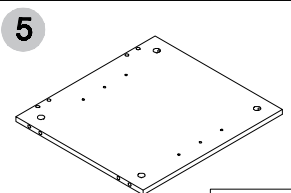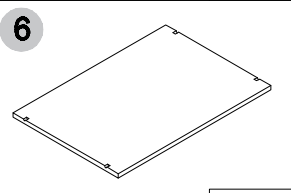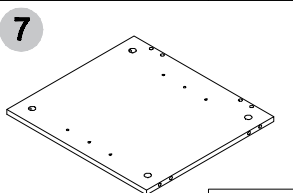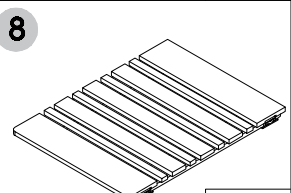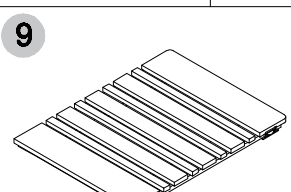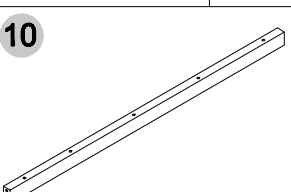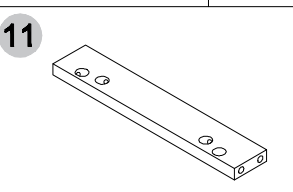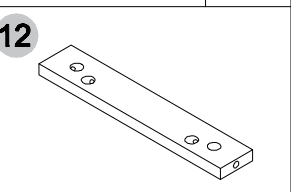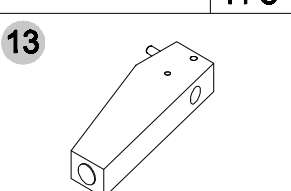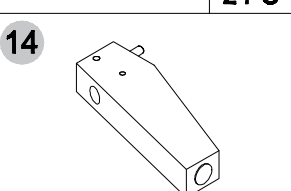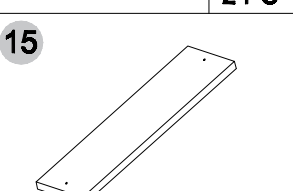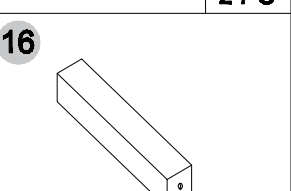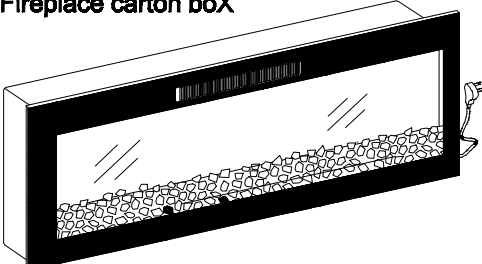                  1 PC	 1 PC	 2 PC	 2 PC
 1 PC	 2 PC	 1 PC	 1 PC
 1 PC	 2 PC	 2 PC	 2 PC
 2 PC	 2 PC	 1 PC	 1 PC
 Fireplace carton box  Metal bracket x2  4X12mm screw x4+4  Metal bracket x2  3X8mm screw x2			

          
Hardware List

 A 46+5 PCS	Ø15*10MM  B 54+5 PCS	Ø6*30MM  C 24+2 PCS	Ø8*30MM  D 20+2 PCS
 E 12+1 PCS	Ø3.5*12MM  F 4PCS	Ø6*80MM  G 4 PCS	Ø5*19  H 8 PCS
Ø10*2MM  I 4 PCS	Foot Pad  J 4PCS	Ø23*30MM  K 1 PCS	25*25*16*1MM  L 2PCS
 M 1 PCS	Ø9.5*11MM  N 4+2 PCS	M4  O 1PCS	 P 2PCS
Ø5*48MM  Q 1 PCS	M3  R 1 PCS		
 S 2 PCS	Ø4*35MM  2 PCS	 4 PCS	Ø3.5*15MM  2 PCS

STEP 1



 
A X 8

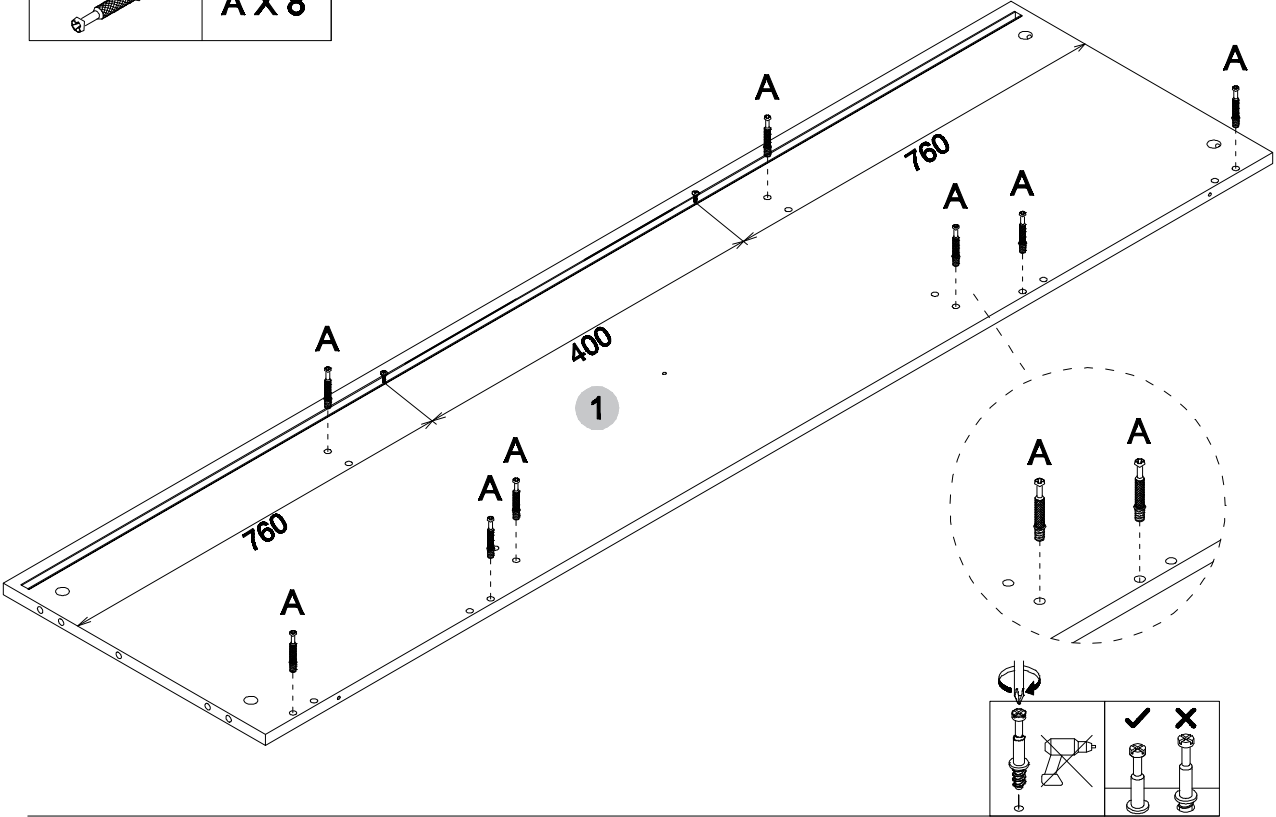


STEP 2




 A X 8

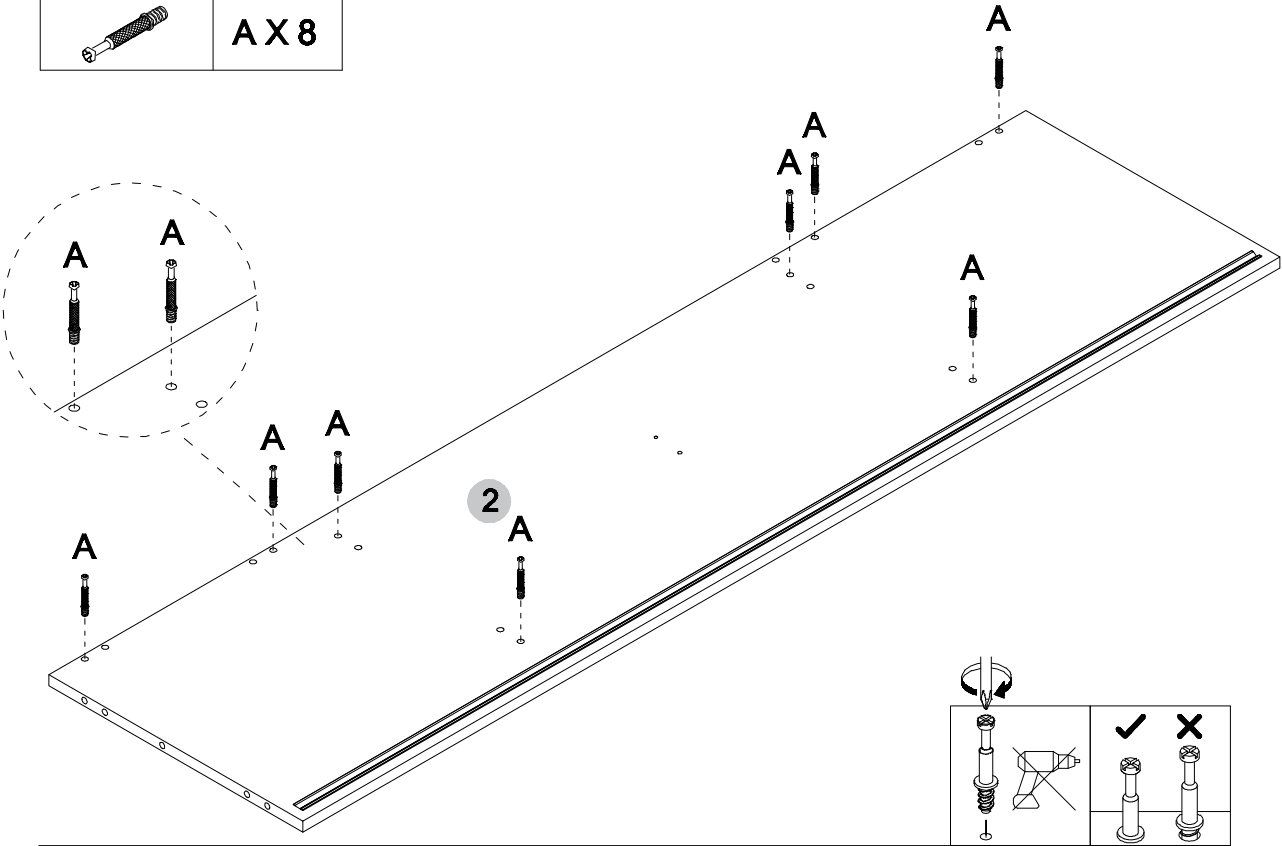


 
STEP 3

	A X 4		E X 4
---	-------	---	-------

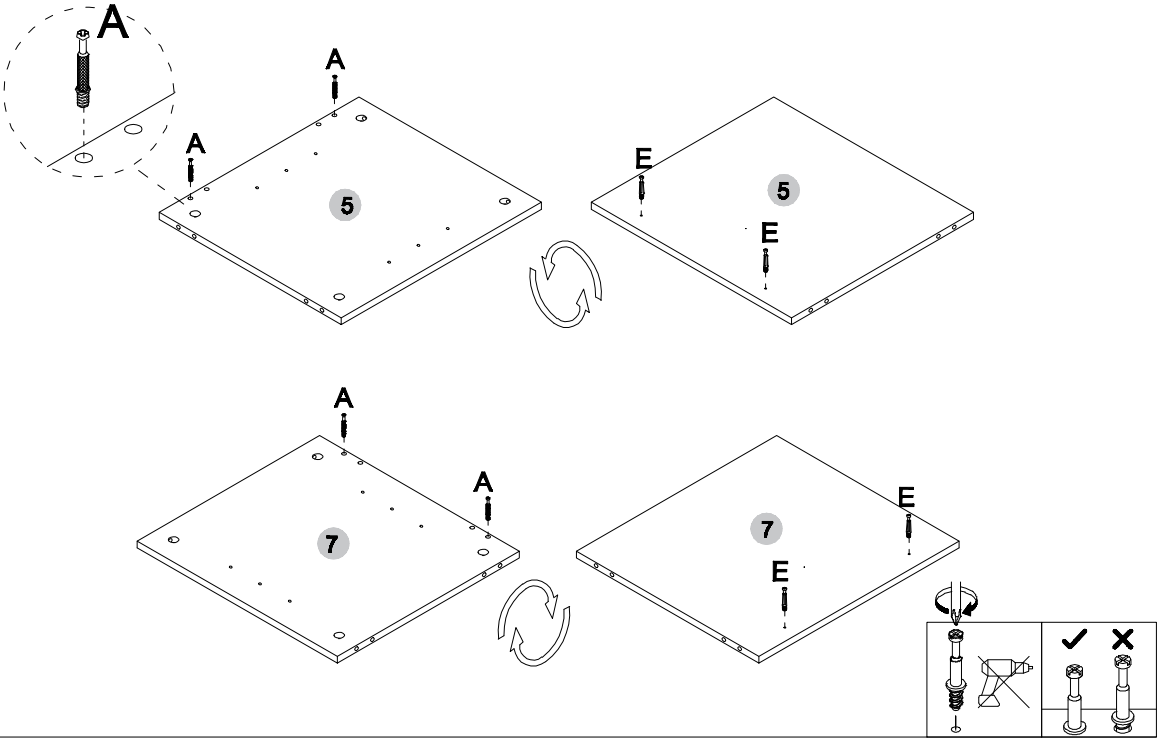 

 
STEP 4

	A X 4		E X 8
---	-------	---	-------

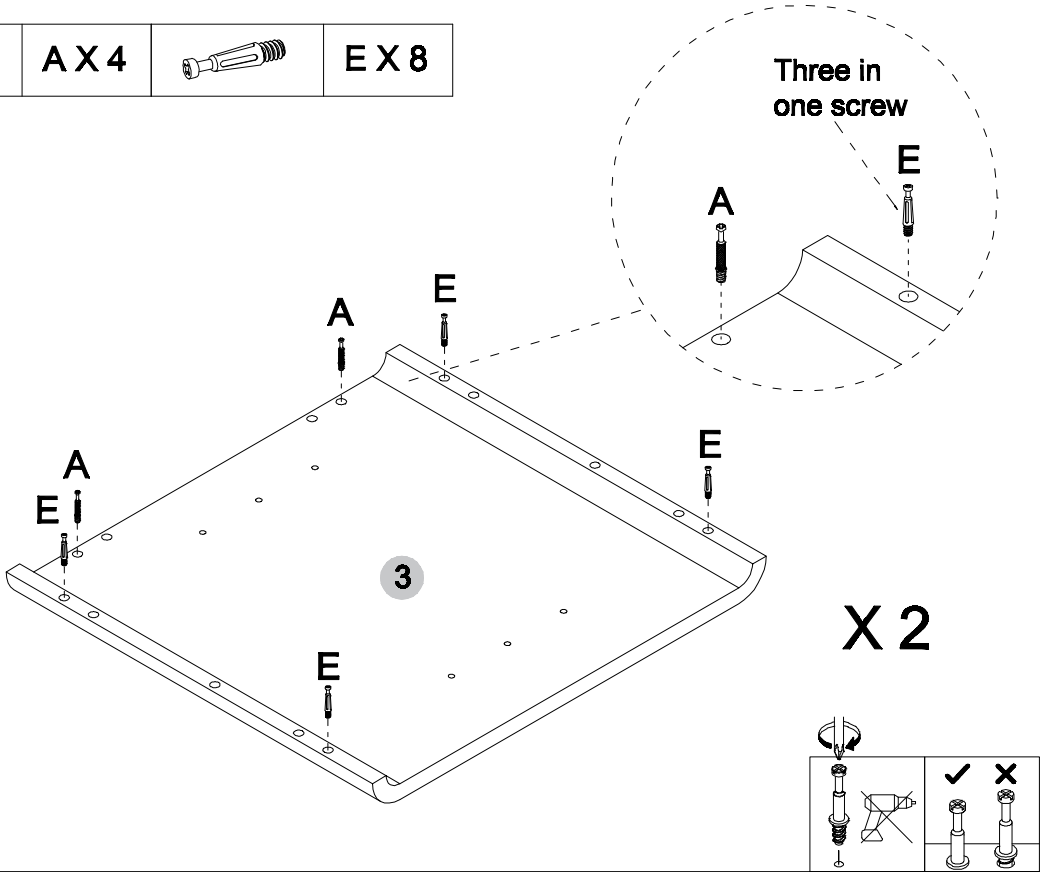 



STEP 5

	B X 4
	C X 4

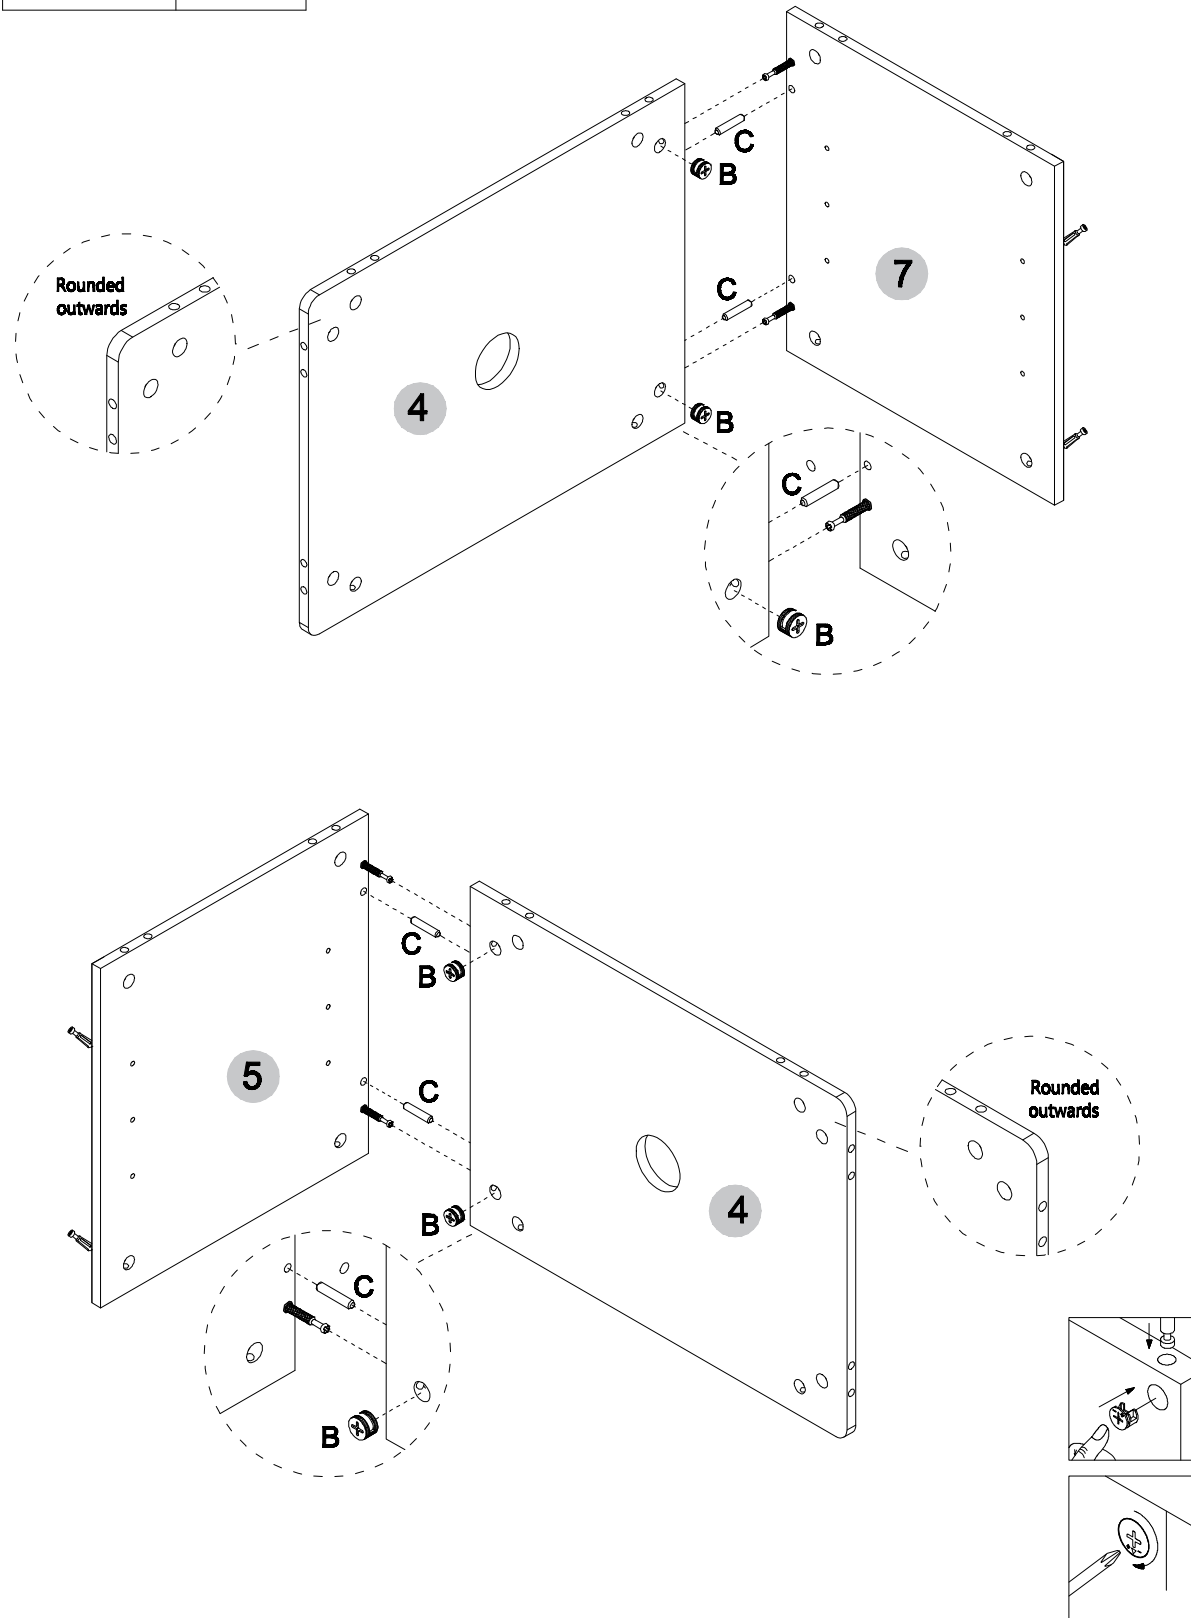 


STEP 6

	B X 8
	C X 8

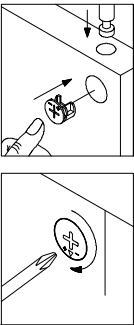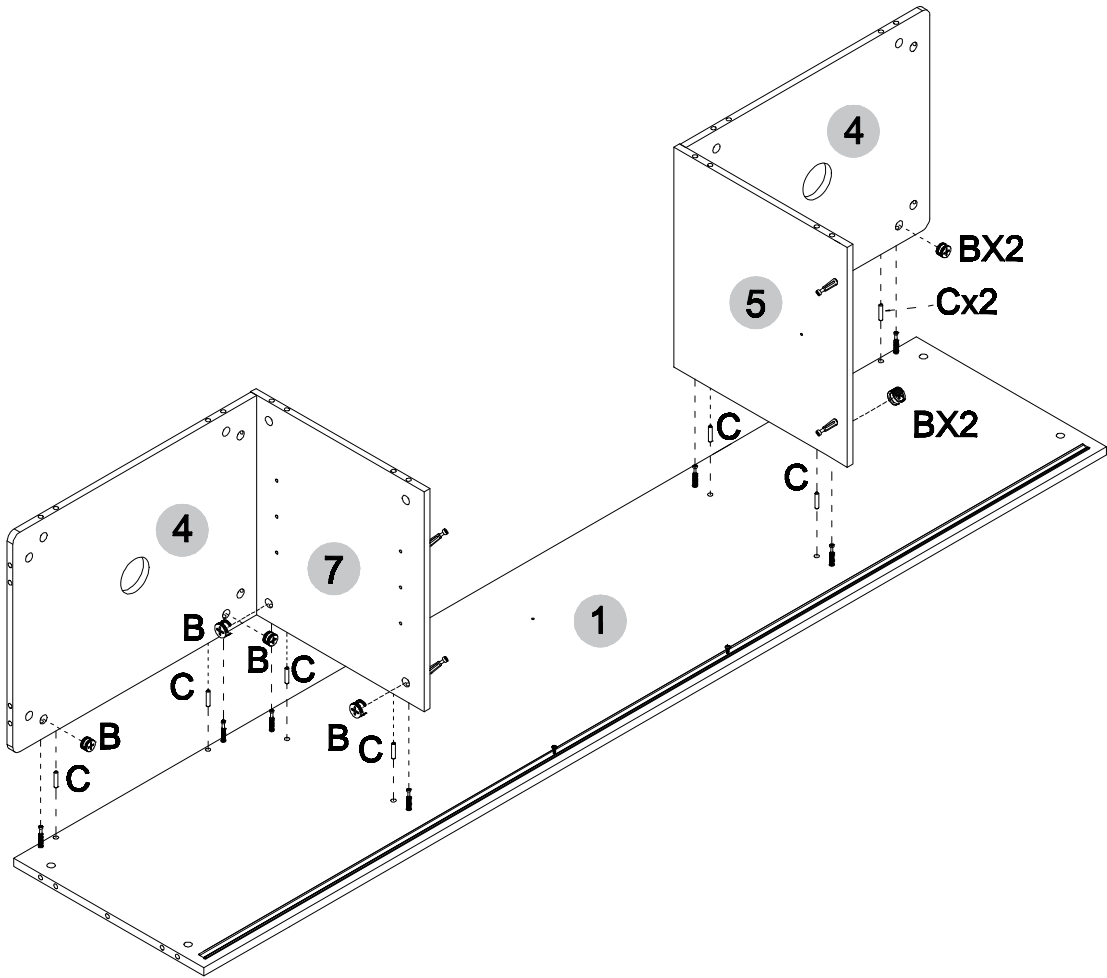  





STEP 7

	Q X 1
	K X 1
	R

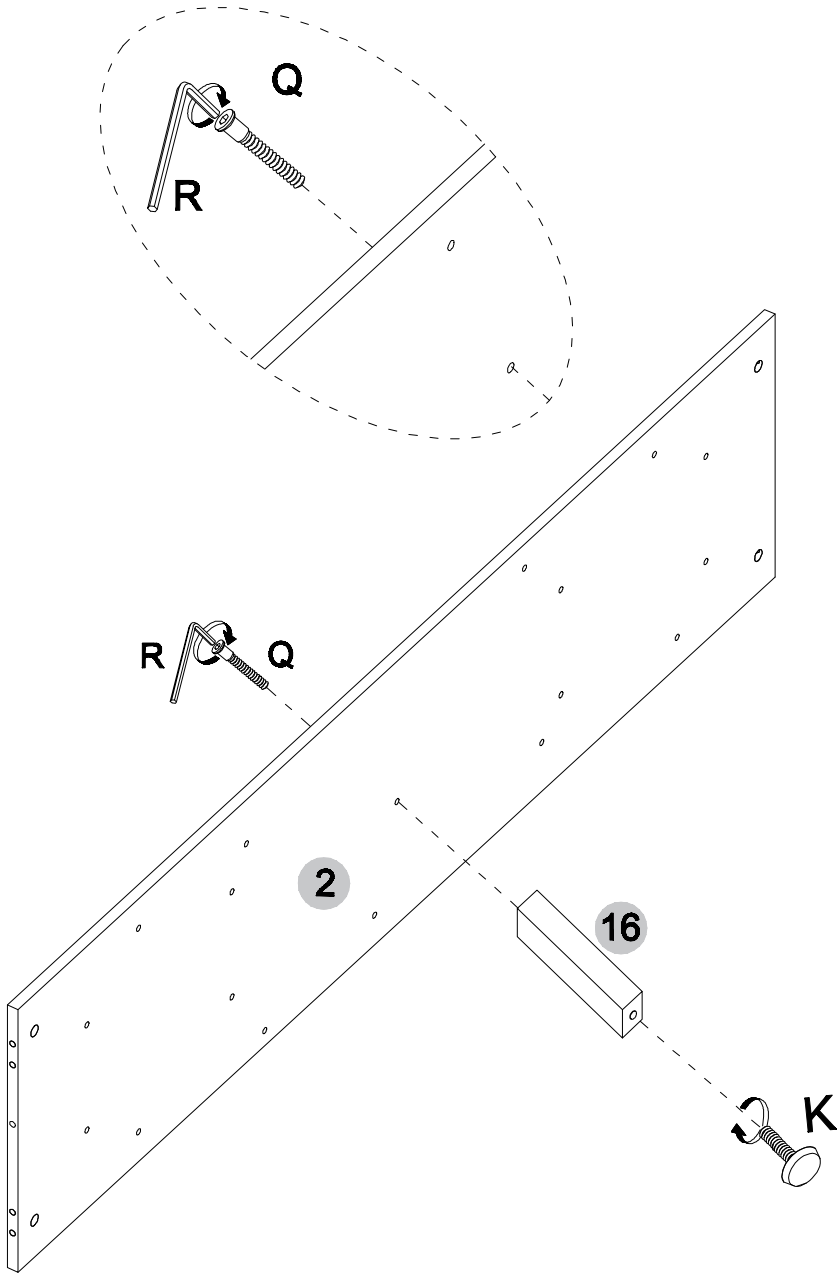 


STEP9

	C X 4		B X 12
	D X 12		

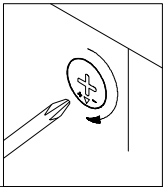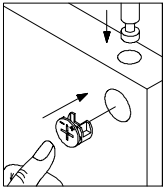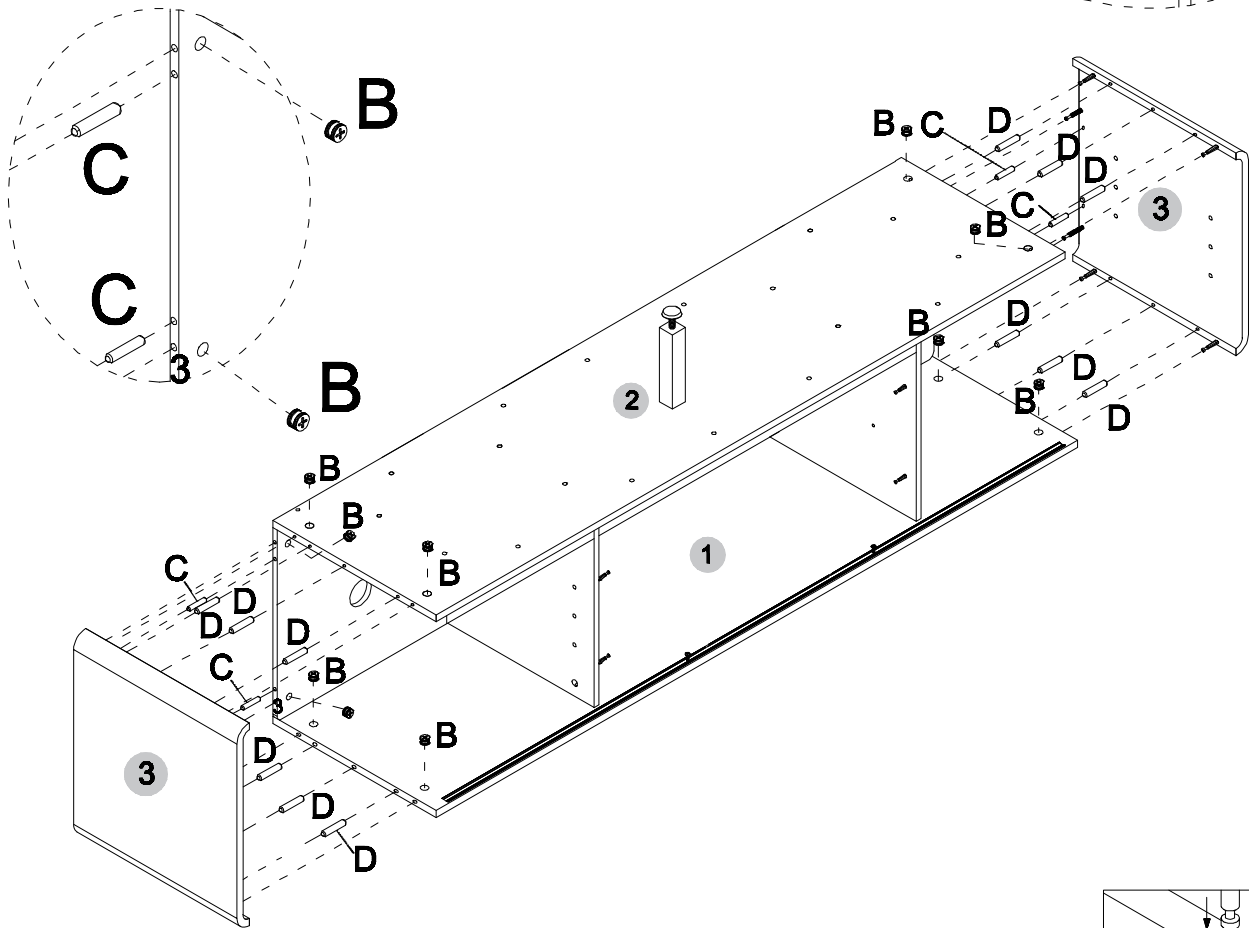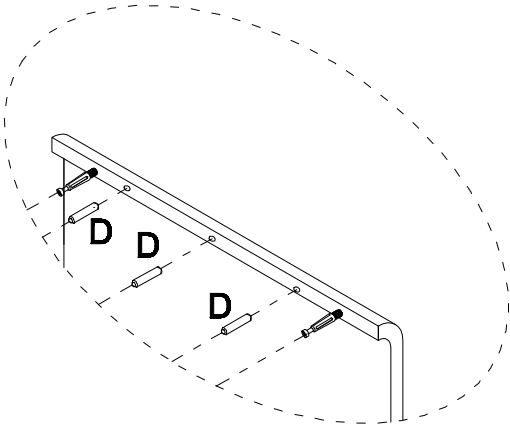    


STEP 10

	N X 4		M
	G X 4		O

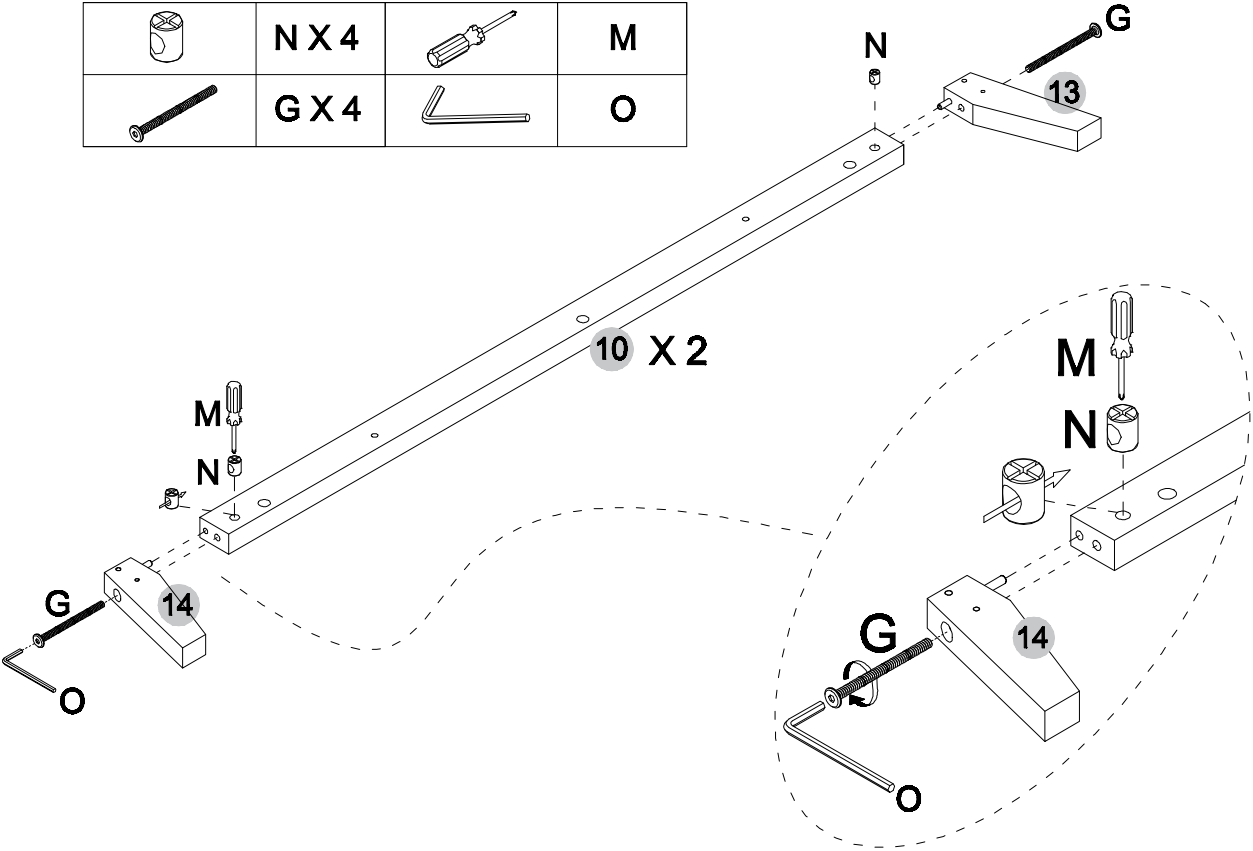 


STEP 11

	A X 8		D X 4
	J X 4		

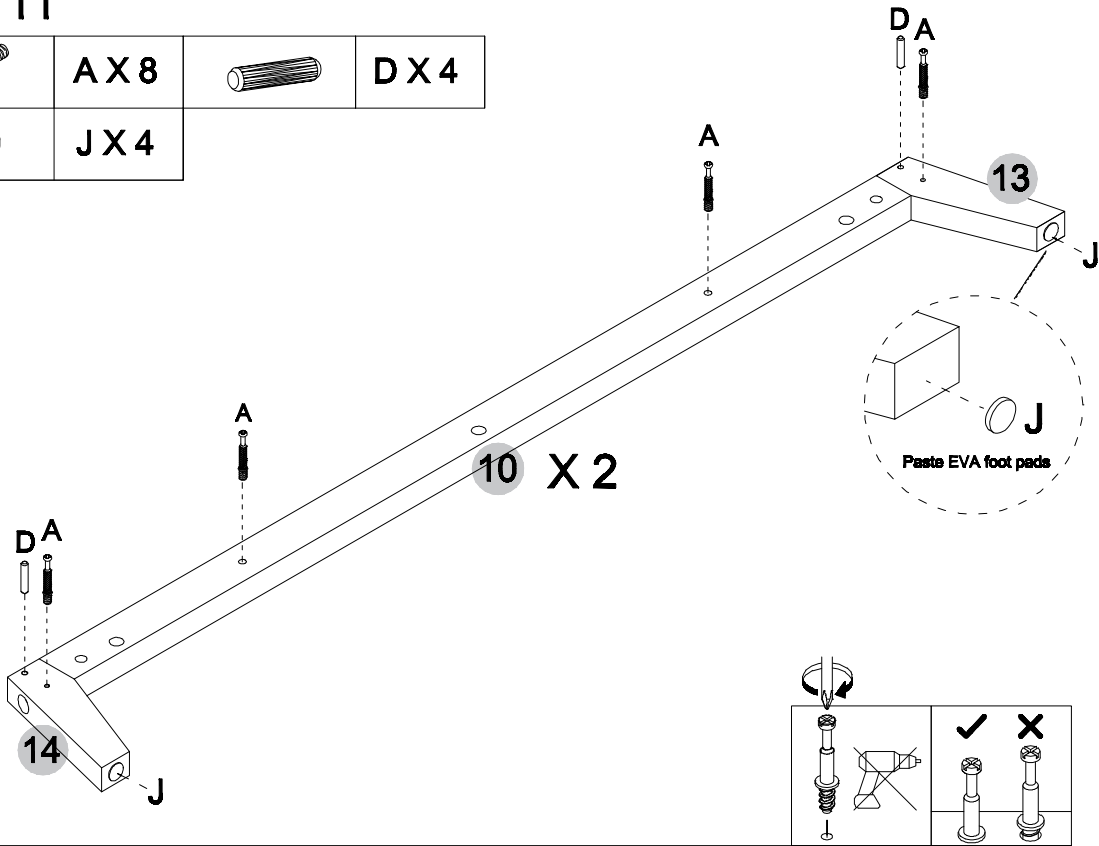 



STEP12

	B X 4
---	-------

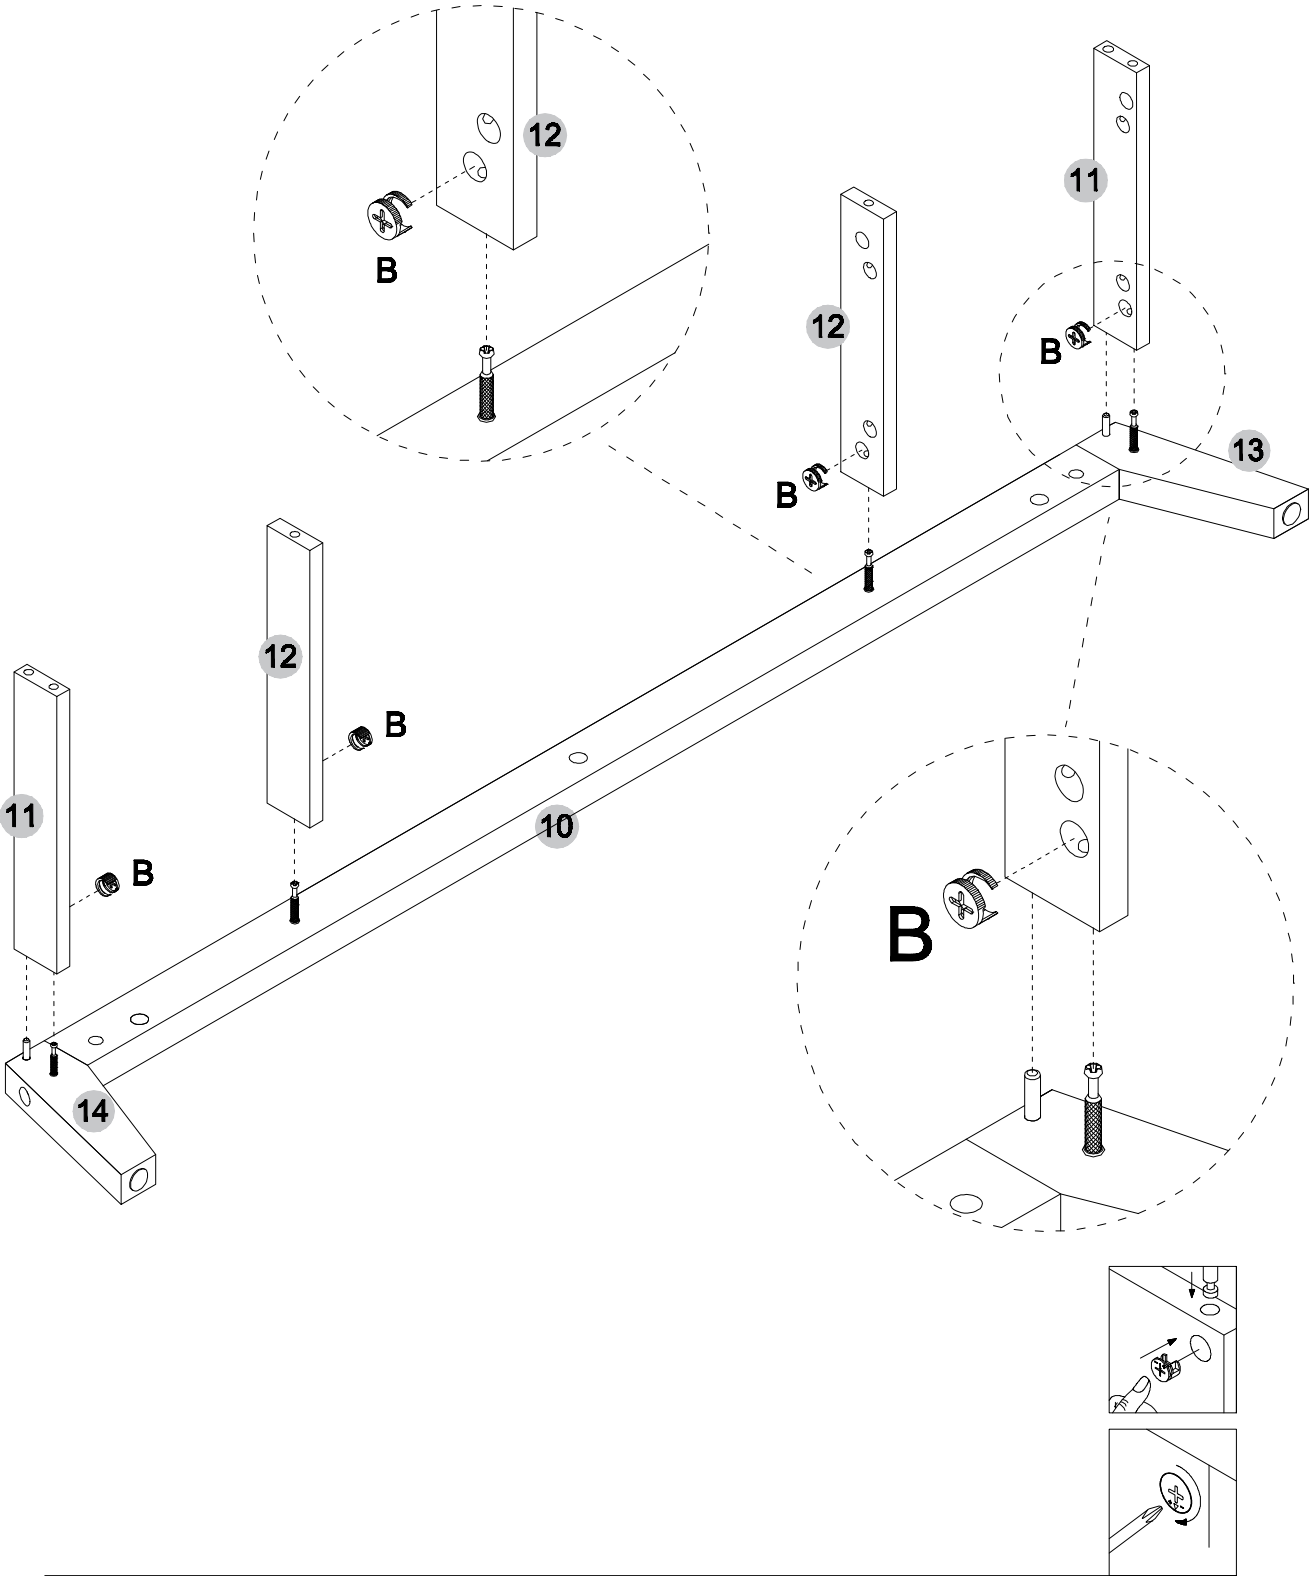 



STEP 13

	B X 4
---	--------------

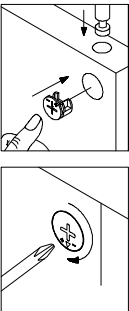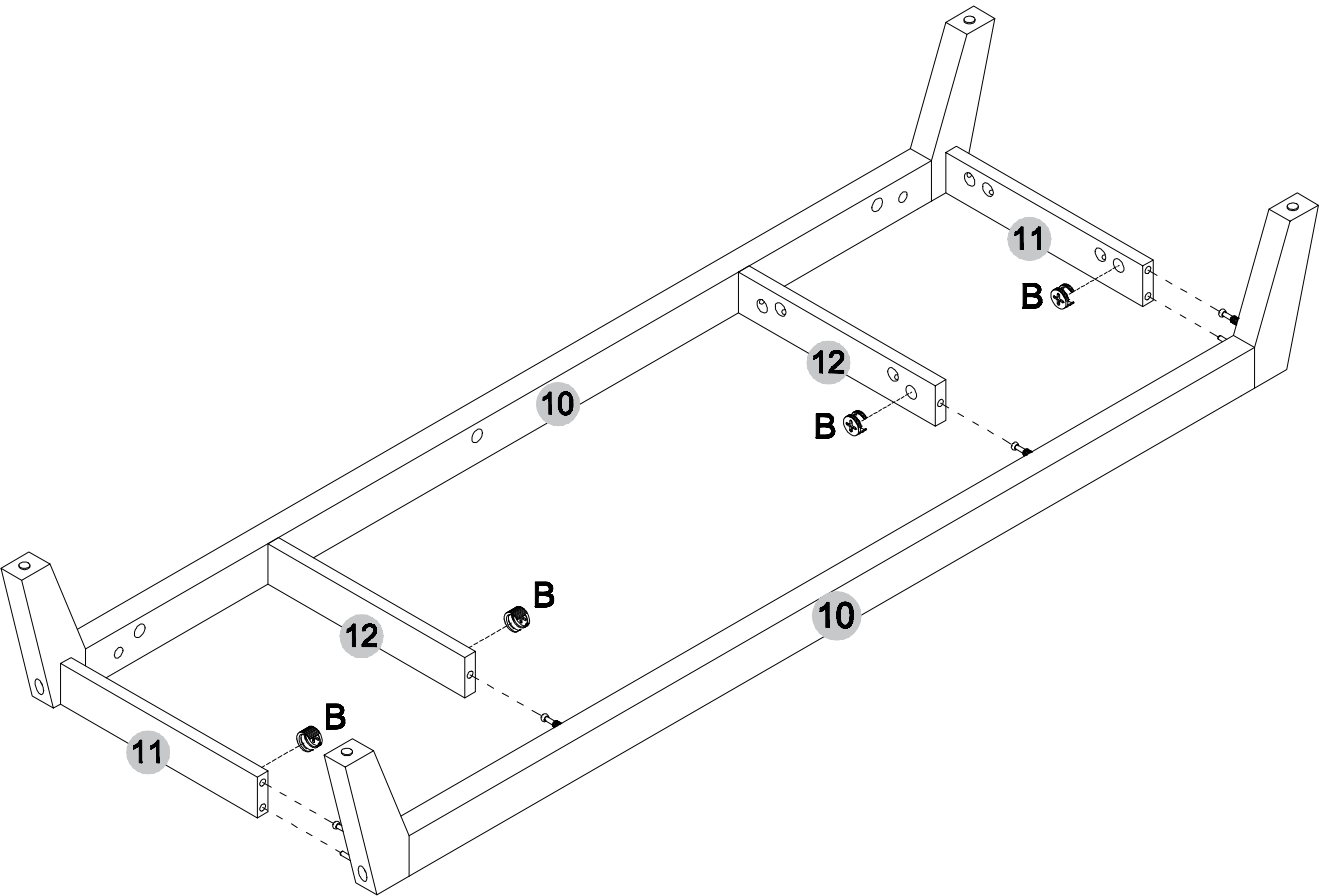  


STEP 14

	A X 14
	D X 4

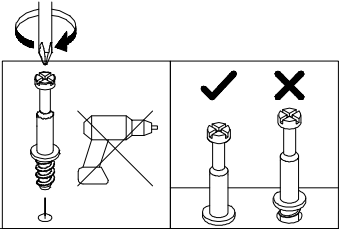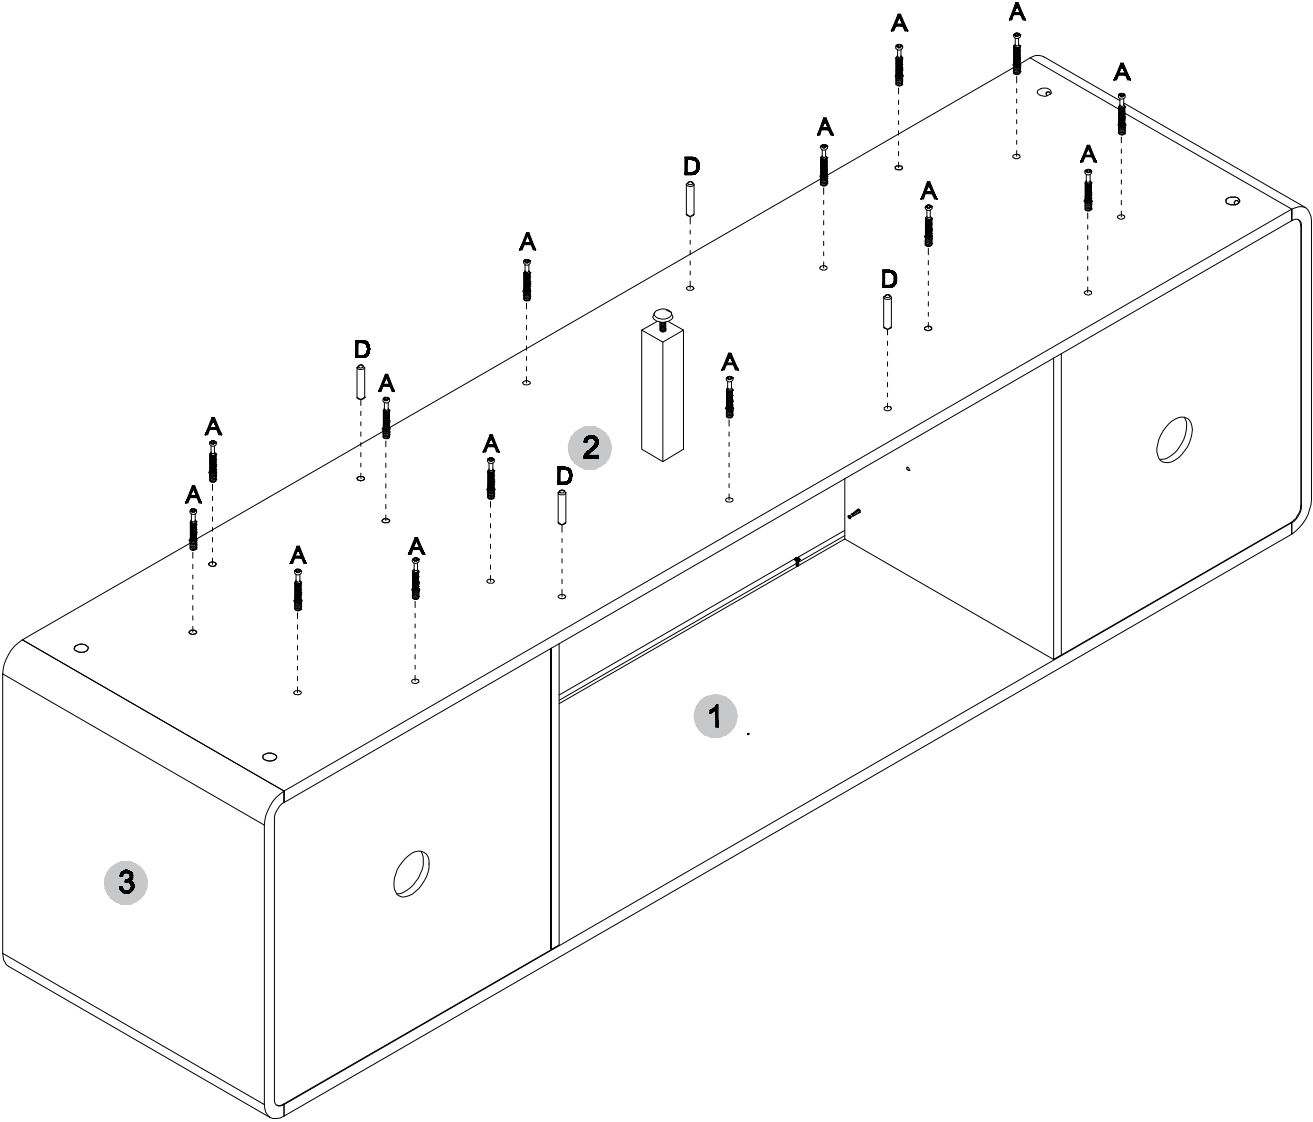  


STEP 15


	B X 14
---	--------

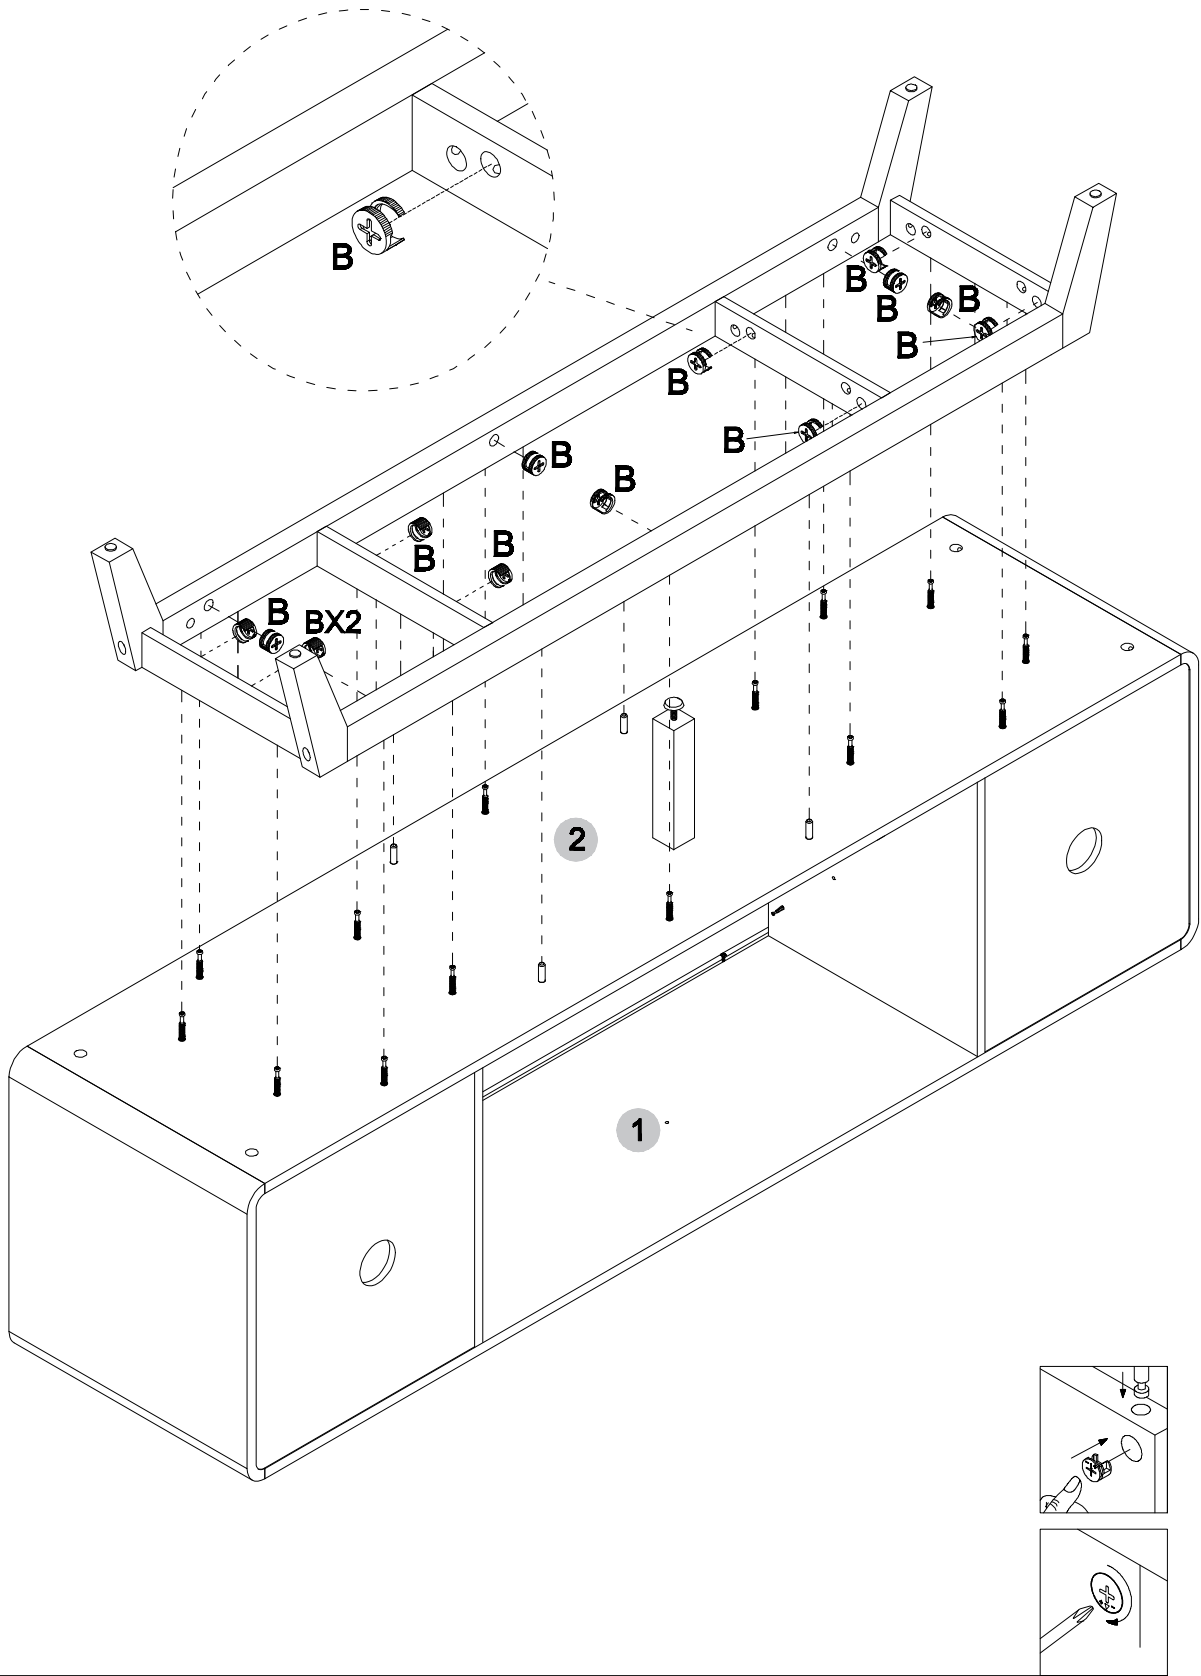 


 
STEP 16

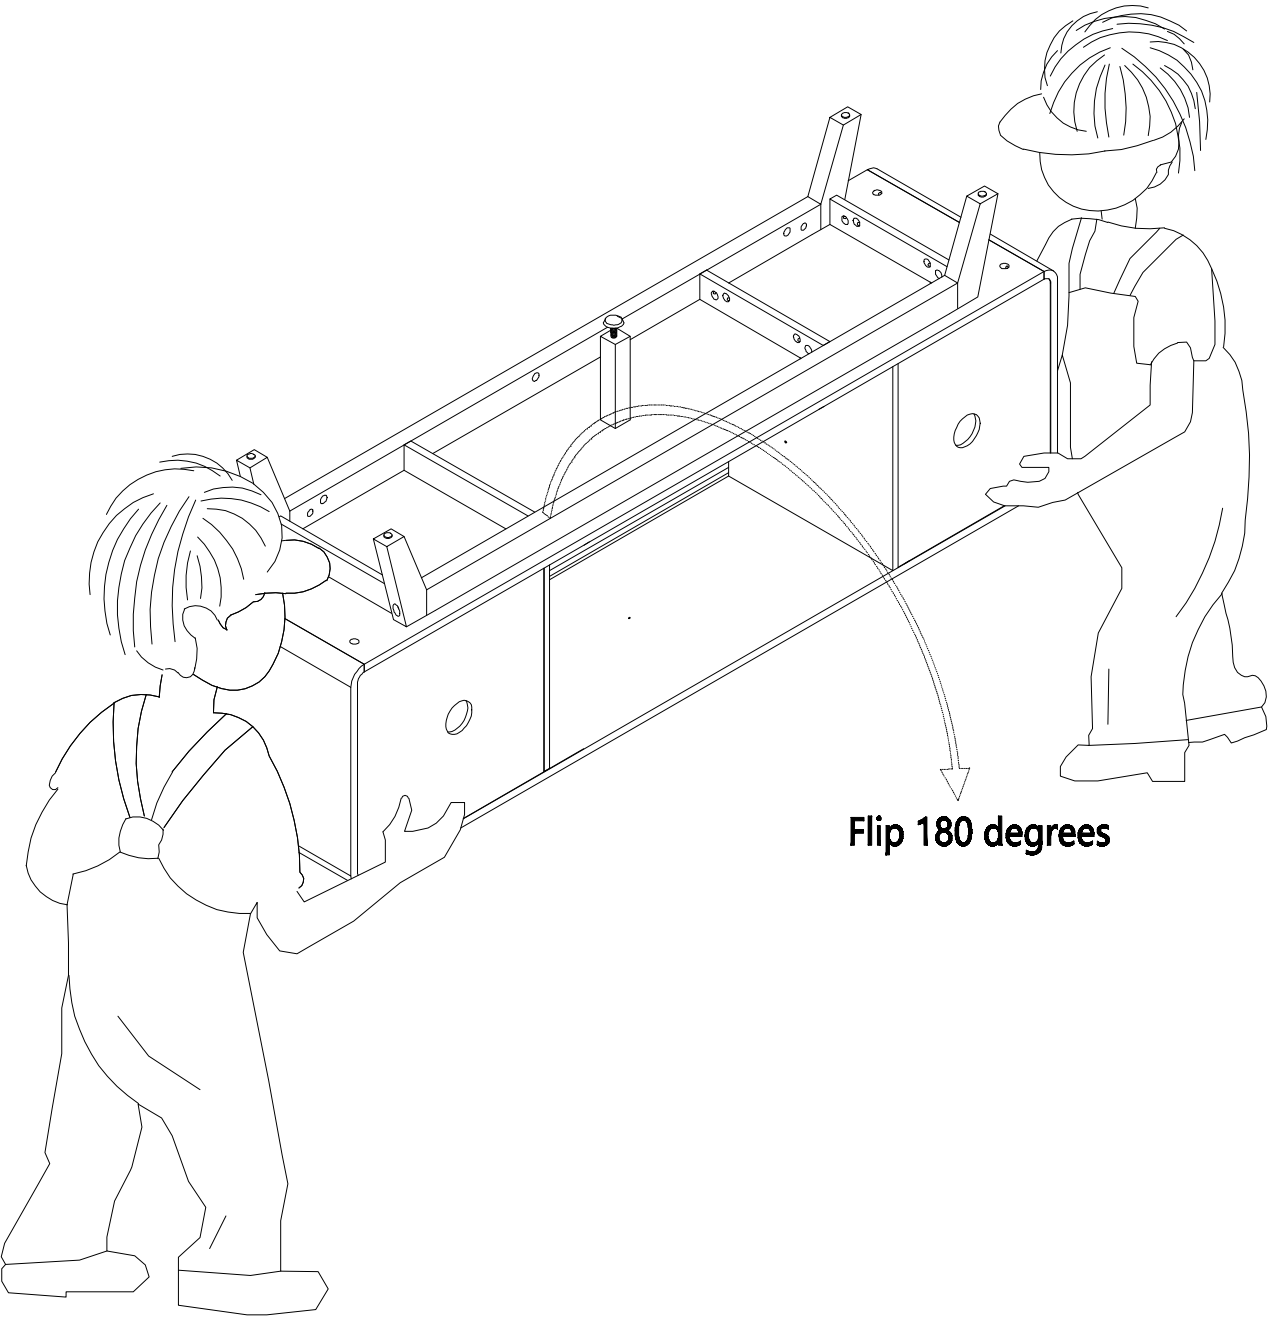





 
STEP 17

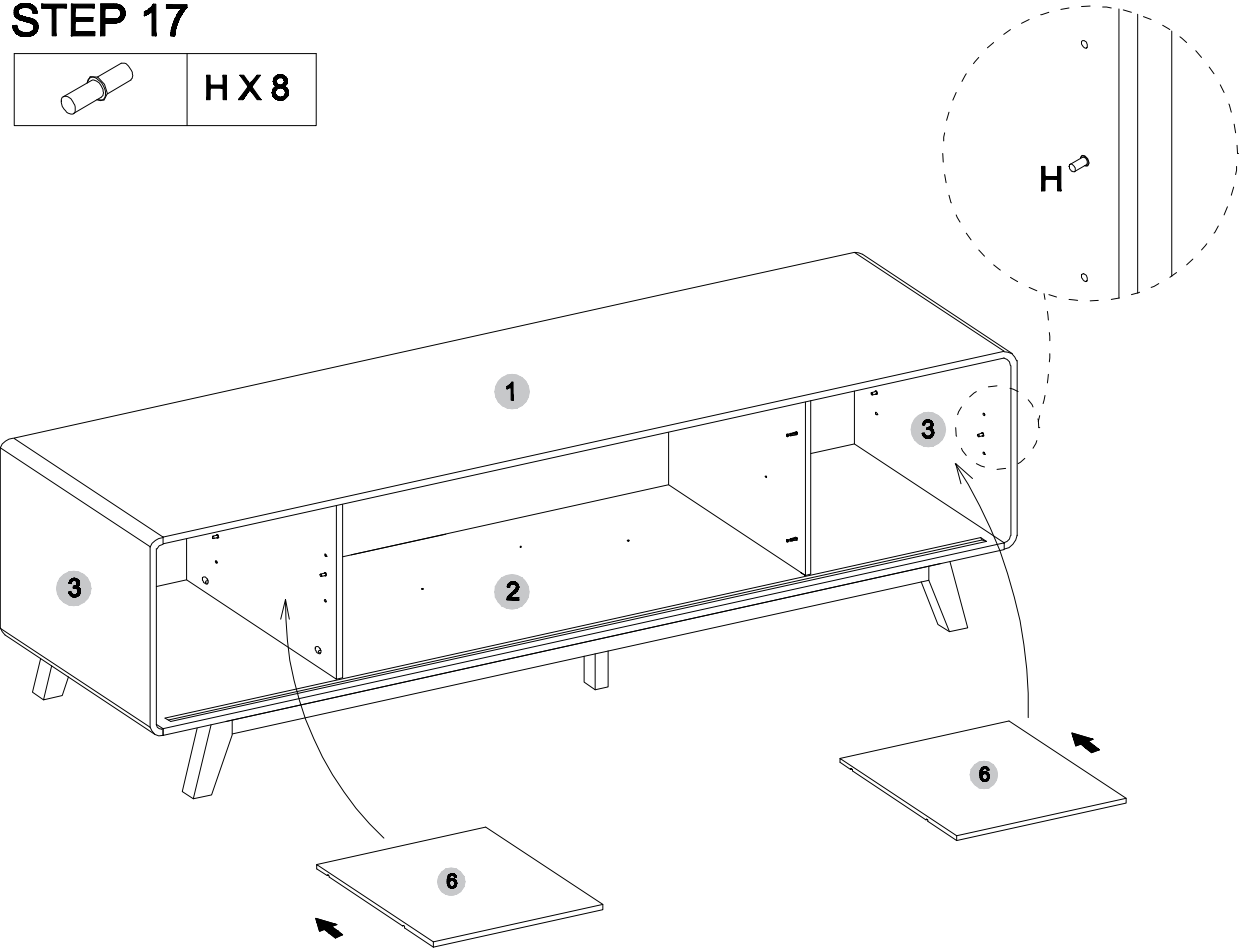


 
 
STEP 18

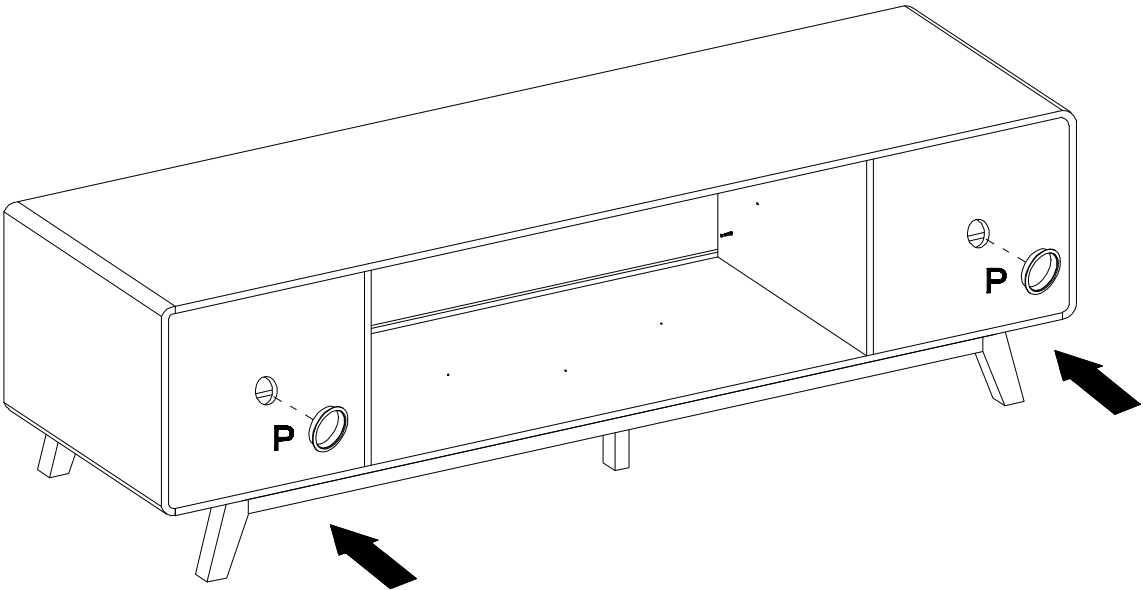

     
STEP 19

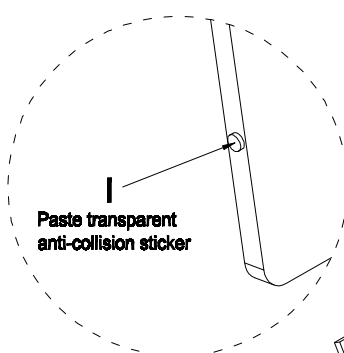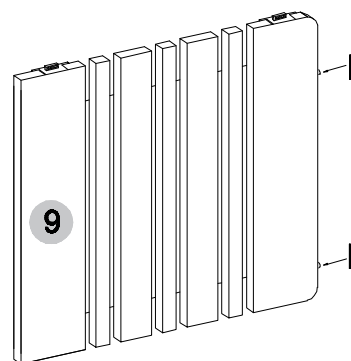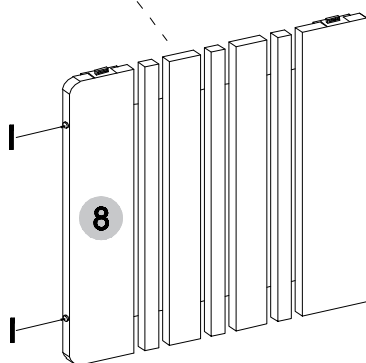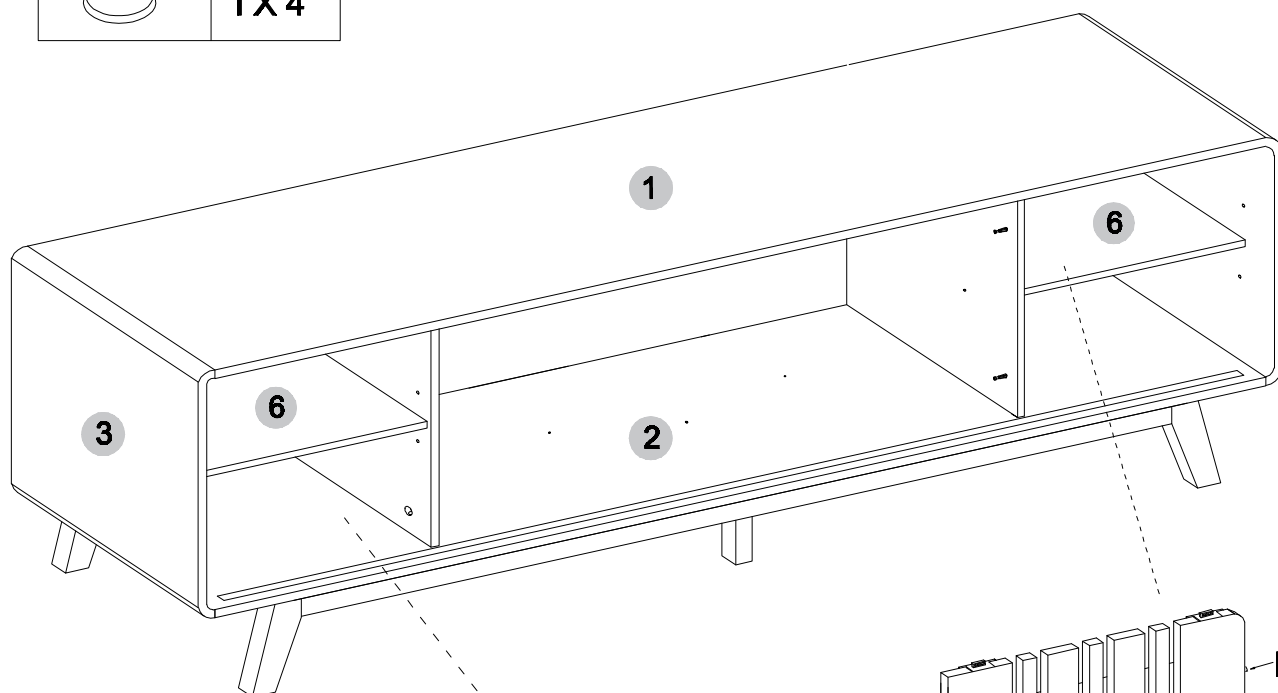

   Before installing the door panel, gently press the pulley bolt to make it level

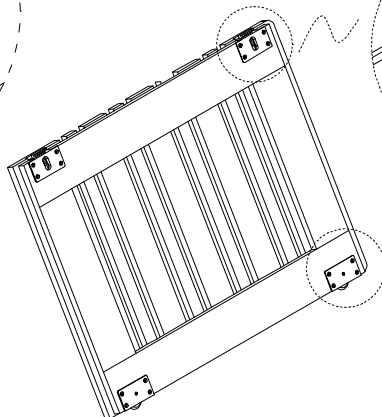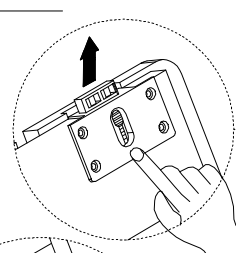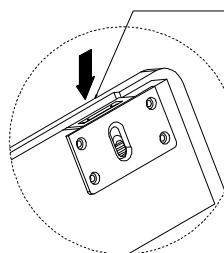


 The height of the lower pulley can be adjusted up and down according to installation requirements

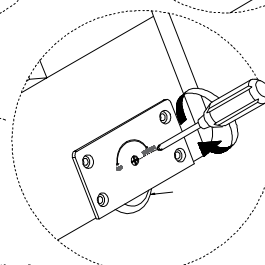

STEP 20


	3X8mm screw x2
---	-------------------

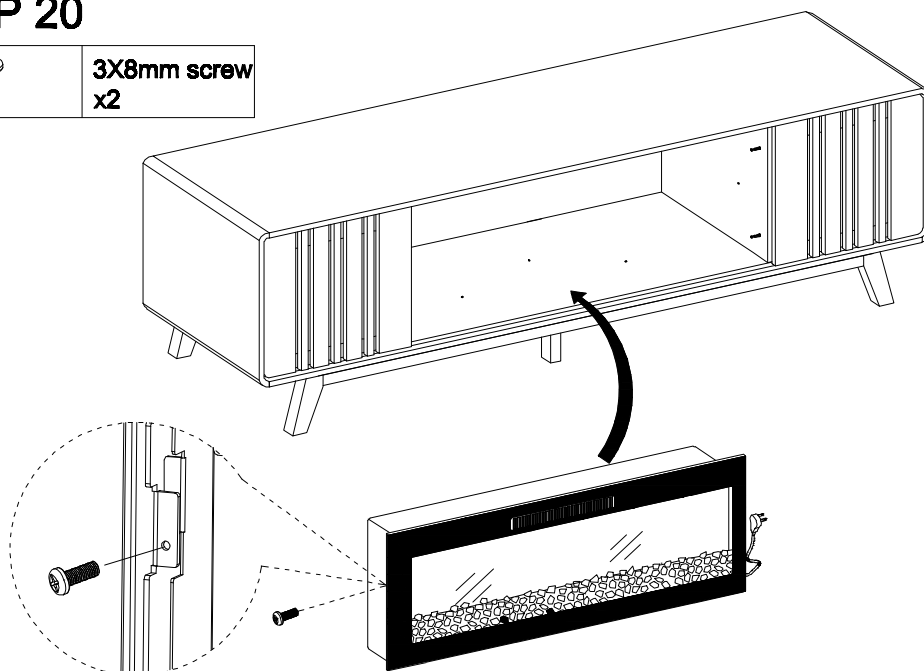 


Take the fireplace out of its carton box and the 4 sets of hardware. Use 3×8mm screws to secure the fireplace's glass panel, then install the fireplace by inserting it from the front of the wood cabinet


STEP 21

	Metal bracket x2		3X8mm screw x2		4X12mm screw x4
---	---------------------	---	-------------------	---	--------------------

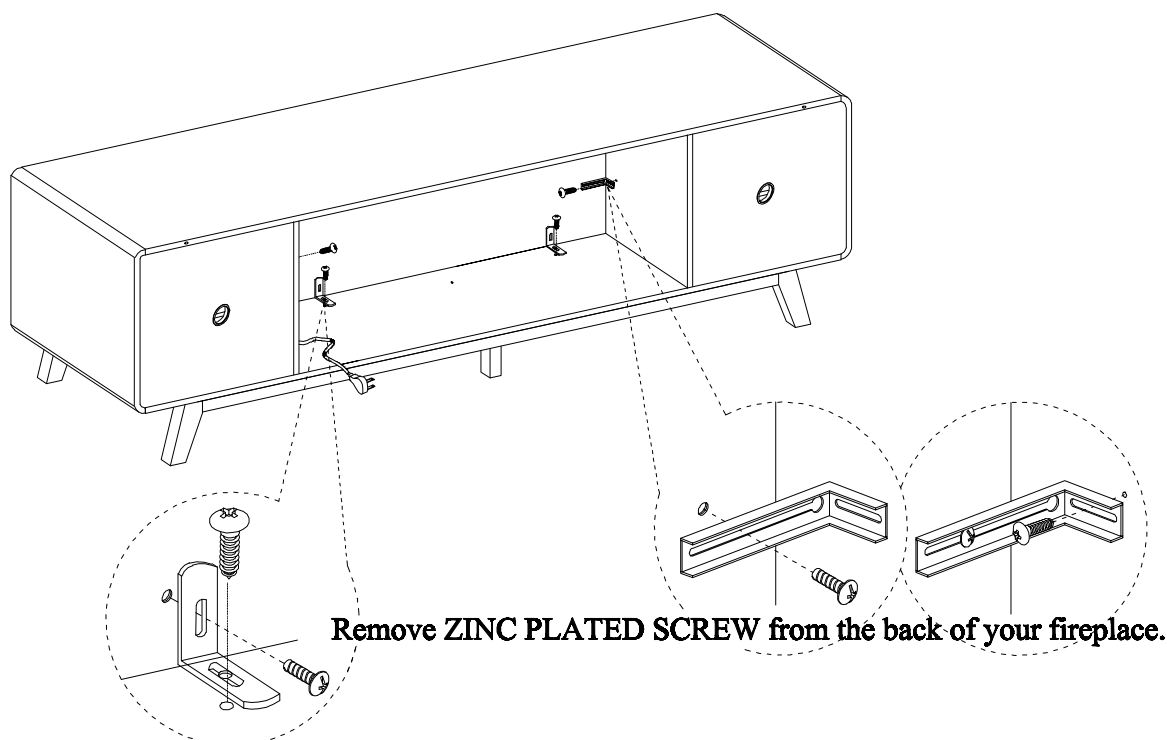 


 
STEP 22

	L x 2		F x 2
---	--------------	---	--------------

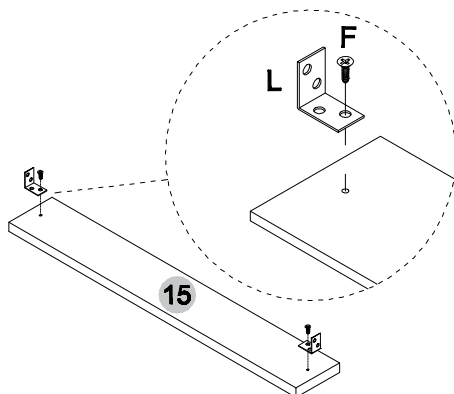 

 STEP 23

	F x 2
---	--------------

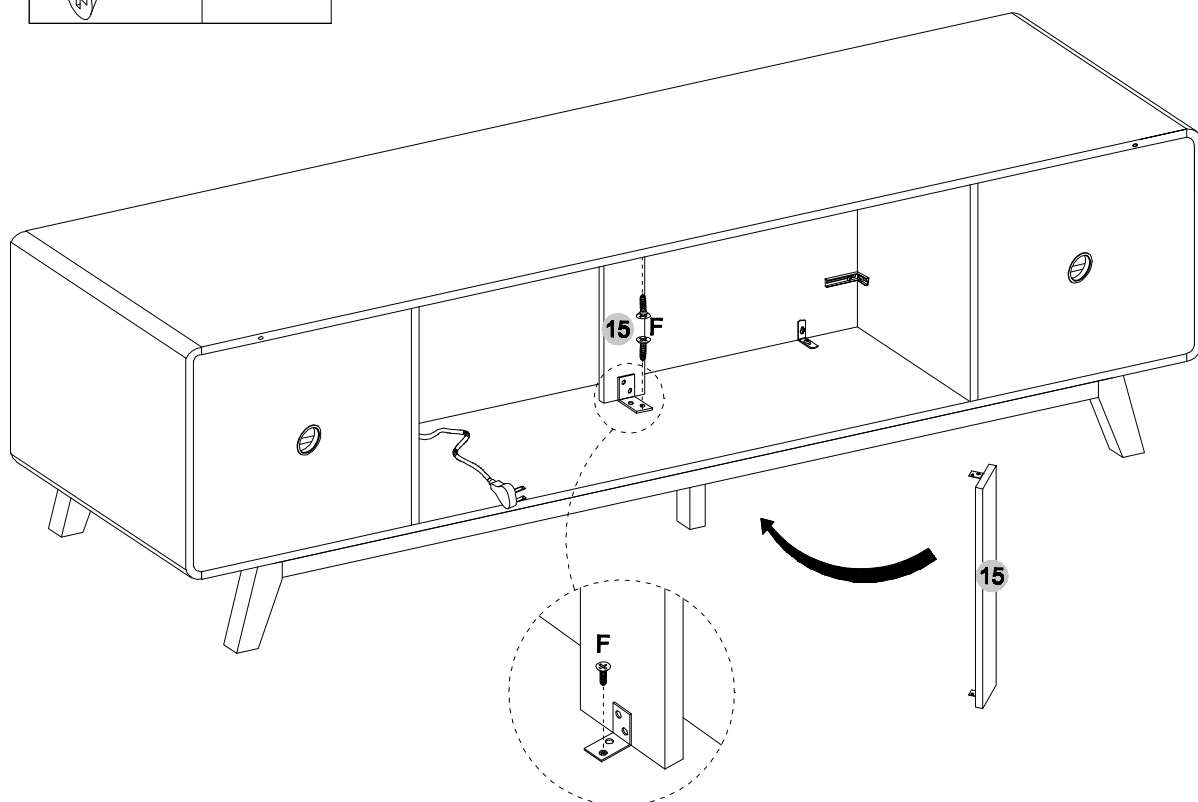 

STEP 24

	S x 2		S x 2		S x 2
---	-------	---	-------	---	-------

 
 
Furniture must be permanently fitted to the wall stud with an Included anti-tipping device to prevent the furniture from tipping over.

Mark the drill position on the wall with a pencil.

Drill a small hole on the marked position.

Insert a wall anchor into the drilled hole.

Fixed the anti-tipping strap to the wall with provided screws.

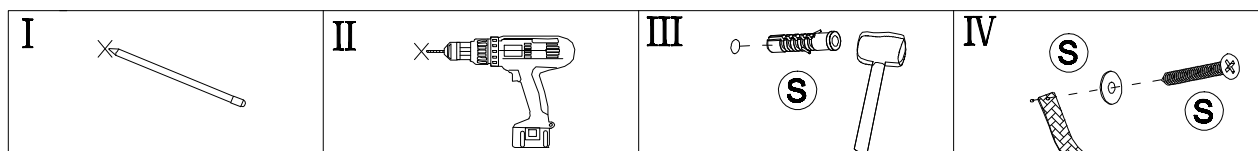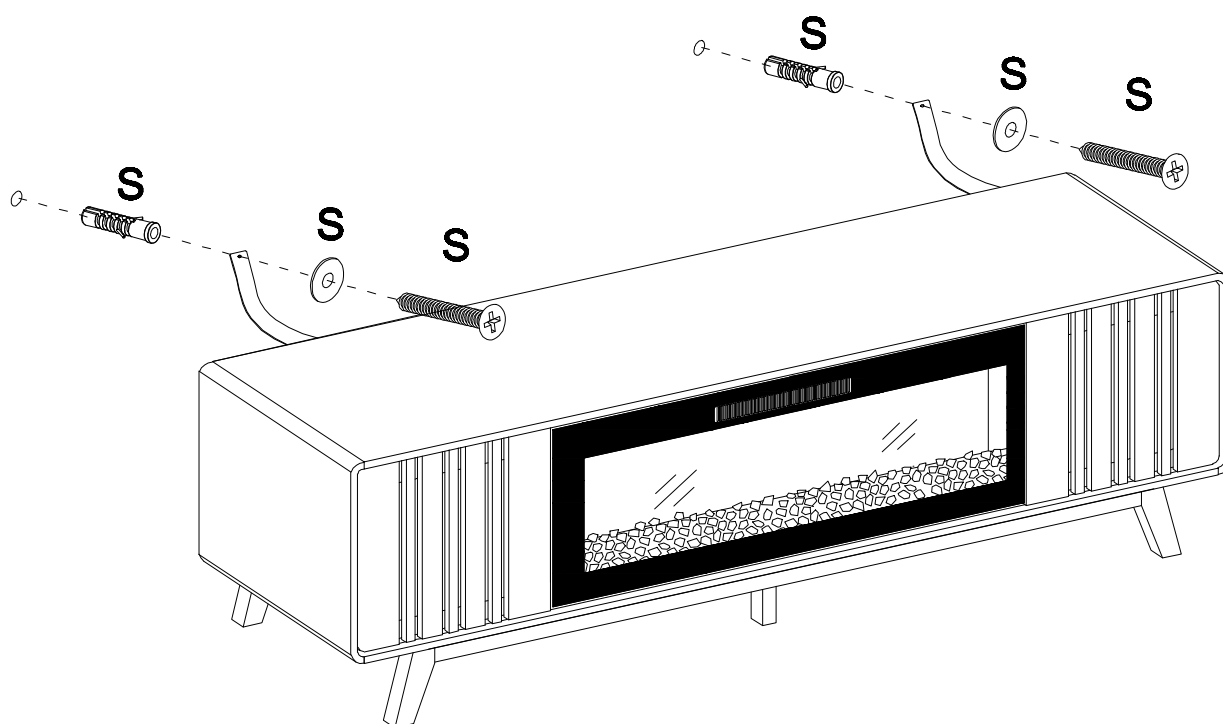

Assembly is complete