



# INSTALLATION INSTRUCTION

## Step 1

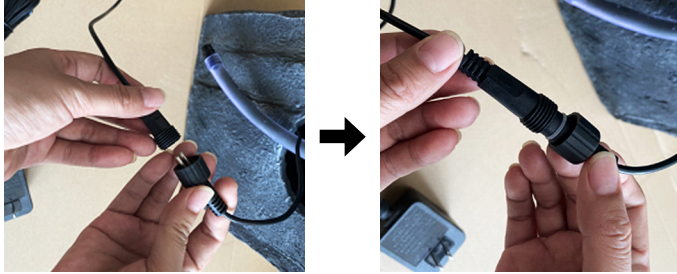


Connect the light wire to the water pump plug.

## Step 2

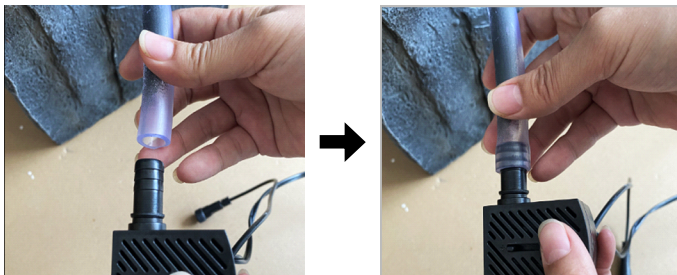

Connect the water pump to the hose on the main body.

## Step 3

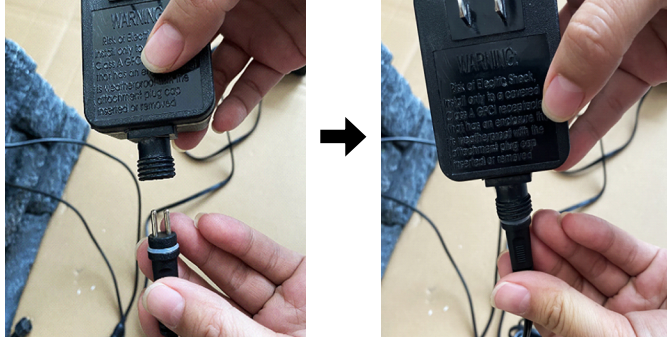

Connect the water pump to the power cord plug and organize the cords into the main body. Add water to submerge the pump before plugging it in.

## Step 4

Installation is complete



If you have any questions, please contact customer service!

If all the accessories are assembled, the power is connected but no water is coming out, or if it has been running for some time, but the water fountain fails to flow smoothly after disconnecting the power, it might be that there is air accumulation inside the water pipe blocking the flow. The following solutions can be tried:

Unplug the power, remove the upper water pipe of the water pump, let the air trapped in the water pipe be expelled, then reconnect the water pipe and plug in the power again