 


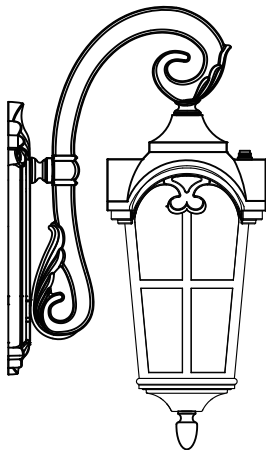

Outdoor Wall Light

SKU: HOWL06J

[Instruction Manual]



Thank you for your purchase.
Please contact us if you have any questions.
We will get back to you within 24 hours.
Email: support@dewenwils.com
Please attach your Order ID so that
we can serve you better.

Warning:

Risk of fire. Min 75°C supply conductors. Consult a qualified electrician to ensure correct installation. Before installation, please turn off the main power of the circuit breaker to prevent possible electric shock.

Installation Instructions

FIG.1. Turn the wall switch to the "OFF" position.

Depending on which type of fuse box in your home:

FIG.2. Either turn the main (Master) switch to the "OFF" position to cut off the power supply of the entire home, or turn off the individual switch that supplies power to where the fixture will be installed.

OR

FIG.3. Either turn the main (Master) switch to the "OFF" position to cut off the power supply of the entire home, or unscrew the fuse that supplies power to where the fixture will be installed.

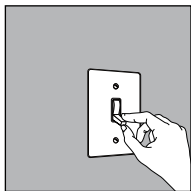


FIG.1 WALL SWITCH

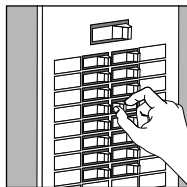


FIG.2 BREAKER PANEL


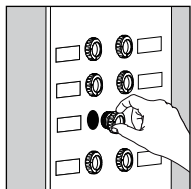 


FIG.3 FUSE BOX

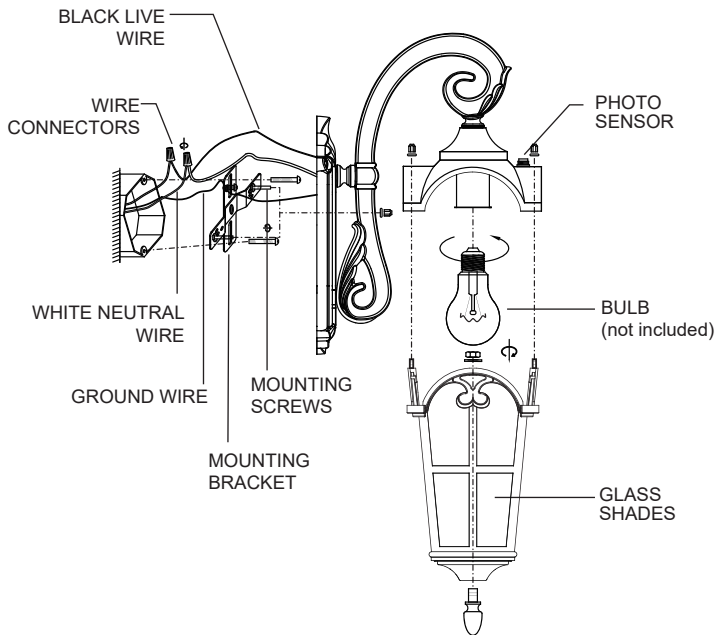

Cleaning: Before cleaning your fixture, turn off the switch or power source.
Wipe the fixture with a soft and damp cloth.

Tips:

The Light turns on automatically at dusk and off at dawn.

Please Note:

- (1) The lights will turn on immediately when being installed first time.
- (2) The sensor detecting time is 30-60S.

Specifications

- Input Voltage: 120VAC 60Hz
- Max.load Power: Incandescent Bulb 60W
- Socket Type: Standard Medium E26

One Year Limited Warranty

DEWENWILS warrants this product to be free from defects in material and workmanship for a period of one year from the date of purchase.

Warranty is void if damage is caused by misuse or improper installation.

Email: support@dewenwils.com.

Our dedicated customer service team will get back to you within 24 hours.

