Summit Stand

Assembly Guide

PARTS LIST

- A One (1) Upper Right Arm
- B One (1) Upper Left Item
- C Two (2) Lower Arms
- D Two (2) Back Leas
- E One (1) Base Center Piece
- F Two (2) Front Legs
- G Nine (9) Triagle Handled Bolts
- H One (1) Wing Nut
- I One (1) S Hook








OTHER HAMMAKA PRODUCTS GREAT FOR THE HAMMAKA SUMMIT STAND

Hammaka Cradle Chair



Hammaka Hammock Chair

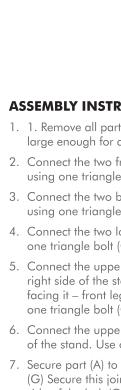


Maximum weight capacity 250 lbs.

ASSEMBLY INSTRUCTIONS

- 1. 1. Remove all parts from carton and place in an area large enough for assembly.
- 2. Connect the two front legs (F) to the base center piece (E) using one triangle bolt (G) to secure each leg.
- 3. Connect the two back legs (D) to the base center piece (E) using one triangle bolt (G) to secure each leg.
- 4. Connect the two lower arms (C) to the two back legs (D) using one triangle bolt (G) to secure each arm.
- 5. Connect the upper right arm (A) to the lower arm (C) that is on the right side of the stand when you are standing in front of the stand facing it – front legs closest towards you, back legs farther away. Use one triangle bolt (G) to secure part (A) to Part (C).
- 6. Connect the upper left arm (B) to lower arm (C) that is on the left side of the stand. Use one triangle bolt (G) to secure part (B) to part (C).
- 7. Secure part (A) to part (B) at the top of the stand using one triangle bolt (G) Secure this joint together by twisting the wing nut (H) onto the other side of the bolt (G) very tightly
- 8. Hang the S Hook (I) from the hole at the top of the stand.
- 9. Double check all connections to make sure they are secure.

Make sure all of the above pieces are included prior to assembling your summit stand. If anything is missing, please contact Hammaka at info@kingspond.com.

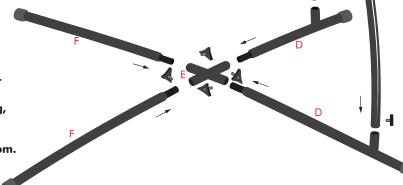

CAUTION! DO NOT JUMP OR BOUNCE IN THE HAMMAKA SUMMIT STAND; DOING SO MAY CAUSE SERIOUS INJURY OR DEATH!

The Hammaka Summit Stand's maximum weight capacity is 250 lbs. Do not exceed maximum weight capacity. Inspect hooks, and hardware before each use for rust or loosening that makes this product unsafe to use. If the functionality of the hardware has been compromised in any way do not use this product as doing so may cause serious injury or death. It may be necessary to tighten the hardware each time before using the product due to hot or cold weather conditions. Inspect the overall condition of this product before each use. Children should not use the Summit Stand without adult supervision.

WARRANTY AND CARE INSTRUCTIONS. One year warranty.

For maximum life of this product Hammaka recommends putting the item indoors when you are located in extreme weather conditions. Check all connections to make sure they are secure each time before and periodically while using the product. Check that the hardware has not rusted. Hammaka recommends using a rust inhibitor available at your local hardware store to prolong the life of the hardware when leaving it outdoors.

Clean with mild soap and warm water, scrubbing when necessary.

©2014 Hammaka • www.hammaka.com • Made in China