

IMPORTANT SAFETY INSTRUCTIONS

- These instructions are provided for your safety. It is important that they are read carefully and completely before installing the Pendent light.
- **THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH APPLICABLE INSTALLATION CODES BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HARZARDS INVOLVED.**
- We strongly recommend that an authorized and certified electrician install all direct wire fixtures.
- This fixture has been rated from 3x 40watt Max E12 standard bulb(not included).To avoid the risk of fire, do not exceed the recommended wattage.
- The light fixture is meant for indoor use. DRY LOCATION ONLY . It must be connected only to 3-wire. Single-phase electrical systems (provided with Ground wire or equivalent protection system).
- Keep it away from children.

WARNING:

- Turn-off electricity supply at main circuit panel before installing. Do not connect electricity supply until your ceiling light is fully assembled and installed.
- To reduce the risk of fire, electrical shock, or personal injury, always turn off the chandelier and allow it to cool . Prior to replacing light bulb. Do not touch bulb when fixture is turned on or look directly at light bulb.
- Keep flammable materials away from light bulb.

PRE-ASSEMBLY:

- Remove all parts and hardware from box along with plastic protective packaging. Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- For your safety and convenience, assembly by two people is recommended

TO ASSEMBLY:

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.


1. Carefully unpack all parts and hardware and lay out on a clear workspace.
- 2.Fasten the Fixture A (N) and Fixture B (O) on the fixture(Q) from both side with screws (M)
- 3.Screw the Connect Tube (K) to the fixture (Q) and tight.
- 4.Lock the Quick Link(J) to the top loop of Connect Tube (K)
5. Lock the Chain(I) to the bottom loop of the Canopy(G)
6. Gently pull the wiring from the outlet box and allow wires to hang.
7. Carefully inspect the fixture’s wires. The NEUTRAL FIXTURE WIRE is marked with ‘N’. The Hot FIXTURE WIRE is marked ‘L’. The unmarked GREEN wire is GROUND WIRE.
8. Attach the GROUND WIRE from the fixture to the GROUND JUNCTION BOX WIRE from the outlet (usually green or bare wire). Fasten each together with a plastic wire connector (A) and wrap the connection with electrical tape. Be sure that no wire strands are exposed. If your outlet box DOES NOT have a GROUND WIRE, be sure to insert the Green Ground Screw (D) into the mounting Bar (B) facing DOWN. Wrap the fixture’s GROUND WIRE around the ground screw. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME IS PROPERLY GROUNDED.
9. Connect the NEUTRAL FIXTURE WIRE to the NEUTRAL JUNCTION BOX WIRE (white). Fasten each together with a wire connector (A) and wrap the connection with electrical tape. Be sure no wire strands are exposed.
10. Connect the HOT FIXTURE WIRE to The HOT JUNCTION BOX WIRE (black). Fasten each together with a wire connector (A). Be sure no wire strands are exposed. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
11. Gently tuck the wire connection neatly into the ceiling junction box.
12. Move the canopy (E) up to the ceiling, and affix it with the ring knob on the chain. Ensure that it is the chain and not the power cord that is supporting the fixture’s weight.
13. Install the bulb (Bulbs not included).

PARTS ENCLOSED:

- (A)Wire Connetors
- (B)Mounting Bar
- (C)Mounting Screw
- (D)Green Ground Screw
- (E)Electrical tape
- (F)Screw
- (G)Canopy
- (H)Ball Nut
- (I)Chain (2)
- (J)Quick Link
- (K)Connect Tube (2)
- (L)Short Screw (4)
- (M)Long Screw (8)
- (N)Wood Frame A (2)
- (O)Wood Frame B (2)
- (P)Bulb (5)
- (Q)Fixture

TOOLS REQUIRED:

- **Philips screwdriver**
- **Electrical tape**
- **Wire cutters**

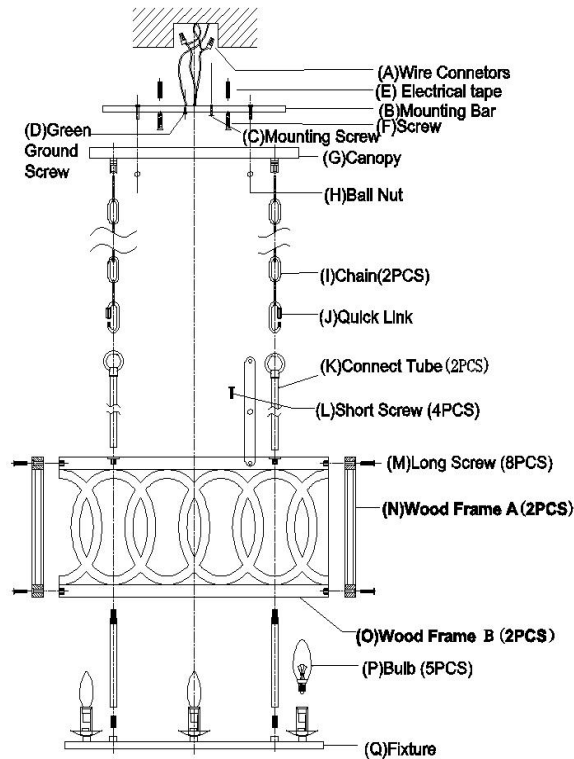

CARE INSTRUCTIONS:

1. Make sure that power is turned off and bulb has cooled before handling.
- 2.Wipe clean with a dry cloth/mid soapy solution. Do not use corrosive cleaners.
- 3.The cable/cord of the chandelier cannot be replaced. If the cable is damaged, do not use the light.