

Assembly Instruction Sheet for Model 422606

Package Contents

Part	Description	Quantity
A	Center Ceiling Canopy	1 pc.
B	Lamp Socket	10 pc.
C	Swag Canopy	10 pc.

STEP 1

Remove the sealing nut from cord grip on Center Ceiling Canopy(A).
Feed the cord from Lamp Socket(B) through Swag Canopy(C), sealing nut and Ceiling Canopy(A). Lock the sealing nut to stabilize the cord.

STEP 2

Assemble the other Lamp Socket(B) with Ceiling Canopy(A) according to STEP 1.

STEP 3

Twist the wires from the cords of same color as one strand.
Twist the other wires from the cords of same color as one strand.

STEP 4

Insert the plastic expansion anchors into the pre-drilled holes for Center Ceiling Canopy(A) on ceiling.

STEP 5

Remove the mounting bracket from Center Ceiling Canopy(A). Feed supply wires through the bracket. Screw the bracket to the expansion anchors.

STEP 6

Hold the fixture close to ceiling.
Connect one Supply Wire to one of the two wire strands from the Fixture.
Connect the other Supply Wire to the other wire strand from the Fixture.

STEP 7

Fix the Ceiling Canopy(A) to the mounting bracket.

STEP 8

Determine the hanging points for Swag Canopies(C). Nail the Swag Canopies(C) to ceiling.

STEP 9

Adjust lamp height according to your preference. Insert your bulb to Lamp Socket(B).

Your fixture is now assembled and ready to use.