



User's Guide

DOUBLE BURNER

Table of Contents

I.	Important Safety Information.....	1-2
II.	Product Specifications.....	2
III.	How to Use	2
	› Power Invariance Technology	3
	› Using the Temperature Setting.....	3
	› Using the Timer Function.....	3
	› Built-in Safety Shut Off.....	3
	› Turning Off Unit	3
IV.	Compatible Cookware.....	4
V.	Cleaning and Maintenance.....	4
VI.	Troubleshooting Error Codes.....	5

Thank you for purchasing the True Induction double burner unit. Please read the entire instruction manual prior to using your unit. If you have any questions regarding the True Induction cooktop please visit TrueInduction.com or call: 1-877-862-7049.



I. Important Safety Information

When using electrical appliances, basic safety precautions should always be followed. For the True Induction cooker, even with built-in safety features, it is essential to heed all precautions:

- When the unit is on, do not touch outside the control panel as the surface may contain residual heat.
- To protect against electric shock, do not immerse cord plugs or cooker in water (or other liquid substances).
- When using any electric appliance used around children, close supervision is strongly suggested.
- Do not operate any appliance with a damaged cord or plug, after a malfunction or if it has been damaged in any manner. Read the seller's guidelines for warranty repairs and returns.
- Do not cook on a broken or damaged cooktop as spillovers may penetrate the surface and create a risk of electric shock.
- To avoid potential injury, do not use accessory attachments which aren't recommended by the manufacturer.
- Do not allow the cook top sides or bottom to be exposed to weathering or elements.
- Do not let the cord dangle over the edge of the table or counter. Keep the cord away from hot surfaces.
- Do not place cooktop on or near: hot gas, electric burner or heated oven.
- To prevent accidents and achieve optimal fan ventilation, allow for sufficient space around the cooking area.
- Items with a magnetic field such as: radios, televisions, credit cards, cassette tapes etc., can affect the unit.
- The power cord provided has been sized accordingly, however, with caution and care extension cords may be used.
 - a. The marked electrical rating should be at least as great as the electrical rating of the appliance.
 - b. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.
- Do not use with empty pans/pots.
- Do not place metallic objects such as knives, forks, spoons, lids, cans or aluminum foil on the cooktop.
- To prevent accidents and achieve optimal ventilation, allow for sufficient space around the cooking area.



I. Important Safety Information (Cont.)

- This appliance has a polarize plug (one blade is wider than the other). To reduce the risk of electric shock, the plug will fit on the outlet only one way. If the prongs do not fit fully, reverse the plug. If it still does not fit, contact the seller for warranty support; do not attempt to modify the plug in anyway.
- To properly turn off unit push Power button.
- It is important to be aware that the unit's surface will remain hot for a short period of time after use.
- Allow to cool before performing any maintenance or repairs.
- Clean cooktop with caution – do not clean while unit is still hot, some cleaners produce steam or fumes if applied to a heated surface.
- Do not use cooktop for any other use then directed by the manufacturer.

II. Power Specifications

Power: 1800 Watts

Voltage: 120v/ 60 Hz

Temperature Range: 150 °F - 450 °F (exact temperature settings)

Level Selection: Select settings 1 through 10

Max Time: Set timer up to 150 minutes

Material: Glass-ceramic top

Double Burner Unit Measurements: 23.5" width x 14" length x 2.5" height

III. How To Use

- Plug the power plug into a standard outlet.
- The Power button will light up and the unit will sound to indicate on.
- The device will remain in standby mode, awaiting user direction.
- Place ferromagnetic cookware (with water, oil or food already inside) on the center of the glass-ceramic top center.
- Now press the Power button on the control panel, this will turn the cooktop on. The power display will blink and sound another indicator.
- Press the Heat function key once. The pre-set power level "5" is the default selection as the device turns on.
- Using the +/- keys you can change the settings at any time, ranging from 1 – 10. This is considered to be the HEAT function.



True Induction's Power Invariance Technology:

The maximum power of an individual burner level is at setting 10. But, when operating both burners their *combined total* is level 10, meaning that when operating the two burners at the same time they'll self adjust levels accordingly:

When you increase the power of one side, the power output of the other side will reduce automatically (i.e., one side is at 6, the other burner automatically reduces power to level 4 creating a total of max 10 setting).

If one side of the double burner is using the HEAT function and the other side uses the TEMP settings, the maximum HEAT setting is "5."

Using the Temperature Setting:

- After the unit is turned on, you can opt to use the TEMP setting. To do this, press the function key labeled TEMP one time. The preset temperature is 270 degrees Fahrenheit.
- Using the +/- keys you can change the temperature settings at any time. Settings range from 150-450 degrees Fahrenheit. (Exact temperatures: 150, 180, 210, 240, 270, 300, 330, 360, 390, 420 and 450 F).

Using the Timer Function:

- After selecting the HEAT or TEMP mode, press the TIMER button once. The display will show the number "0." Using the +/- keys you can select the operating time in 5-minute intervals (up to max 150 min.) and reducing 1 minute.
- The display will count down the duration in minutes. Once the time is up, the unit sounds and automatically goes into standby mode. To continue cooking, press the Power button and Heat button to restart.
- During the timer operation, you can change the timer duration at any time with the arrow keys. The device's built-in memory maintains the HEAT or TEMP setting previously entered.
- You can also change the HEAT or TEMP settings without affecting the current timer setting.

Built-in Safety Shut Off:

- The True Induction cooktop is designed to automatically shut off after 150 minutes of use. This built-in auto-shut off is a safety feature.
- This function occurs for both the HEAT and TEMP settings. The panel displays EE code and sounds indicating this auto-off setting.
- In the event your food requires further cooking, the unit can easily be turned back on and re-set to the desired setting.

Turning Off Unit:

- When you are finished cooking, simply press the Power button to turn off the machine.
- Upon completion of cooking, the fan may remain running until unit is cool.




IV. Compatible Cookware

Induction requires pots and pans that are made of ferrous (meaning magnetic) materials. Check your cookware's retail box for the induction symbol. To tell if your current cookware is compatible with the induction technology, grab a magnet and see if it holds. If your magnet stays then your cookware is ready to be used on the True Induction double burner induction portable cooktop!

Optimal cookware has a flat bottom and a diameter of 4.5" - 10" inches. Round, flat bottom pans give the best results. Pans with warped or curved bottoms will not heat evenly. For wok cooking, use a flat-bottom wok. Do not use a wok with a support ring.

The following are **not** compatible: heat-resistant glass, ceramic, copper, aluminum pan/pots, round-bottomed cookware, or cookware with a base less than 4.5 inches.

Optimally the cookware will have this induction image on the retail box:

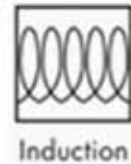

V. Cleaning and Maintenance

Please follow these directions along with important safety steps for cleaning advised at the beginning of the manual:

- Before cleaning always switch OFF the device and wait for it to be completely cool. Clean the unit after each use to remove food residues.
- Wipe off the glass-ceramic plate and the plastic surface with a slightly damp cloth (mico-fiber works best). Dishwashing soap may be used when necessary.
- Make sure that no water seeps into the device. Never use abrasive cleaners (i.e. metal pads) or oil-based liquids.
- A vacuum cleaner attachment may be used to suck up dirt from the air intake and exhaust vent.
- Never run the cooktop under water.

Troubleshooting Error Codes

If the display shows an error code, please reference this sheet for a potential solution:

Error Code:	Cause and Potential Solution:
E1	Voltage is under 95V
E2	Voltage is over 145V
E3	The unit may be damaged, contact the seller for support.
E4	The unit may be damaged, contact the seller for support.
E5	The unit may be damaged, contact the seller for support.
E6	The cooking temperature is over 450 degrees Fahrenheit in the TEMP mode. After 3 minutes in standby the unit will switch off and can then be restarted.
E7	The ventilation area is blocked and heat cannot blow out of the machine smoothly. This can cause the internal device to over-heat. Please keep a minimum distance of 2 to 4 inches from the unit to walls or other barriers. To fix the error code, turn off the power, remove plug from outlet and allow the unit to cool fully. Allowing for plenty of ventilation space, plug unit back into outlet and restart.
EE	The built-in safety function indicates that the unit has been on for 150 minutes. The induction cooker will display "EE," make an alert sound and then go into standby mode. Simply press the ON/OFF button to restart and resume cooking.
Unit is in standby mode but displays no error code on panel, making an alert sound.	The cookware you are using doesn't have ferromagnetic qualities or the bottom of the pot is too small. After suitable cookware is used on the True Induction cooktop, the device will automatically restart.