

PORCH SWING

Assembly Manual



Warnings and Cautions

Please retain this instruction for future usage and read carefully before assembly.

Make sure you have all the parts & hardware as the item list shows.

2 adults or more are recommended to install your swing.

Do not discard any of the packaging until you have checked that you have all the parts and pack of fittings.

Check all bolts for tightness before use, and periodically check and tighten bolts to ensure your swing works properly.

Some parts might have sharp edges/corners. Please follow basic safety precautions to reduce the risk of hurts.

*It is essential to place the swing on level ground and not less than **6 feet** from any obstruction such as fences, garages, the house, overhanging branches, laundry lines or electrical wires.*

CHOKE HAZARD

THIS ITEM CONTAINS SMALL PARTS WHICH CAN BE SWALLOWED BY CHILDREN.

 
PLEASE KEEP IT AWAY FROM CHILDREN UNDER 3 YEARS OLD AND PETS DURING INSTALLATION.


CHECK LIST

A × 2 


B × 2 


C × 1 

C1 × 2 

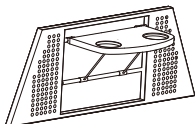D × 2 

 F × 1 

G × 1 

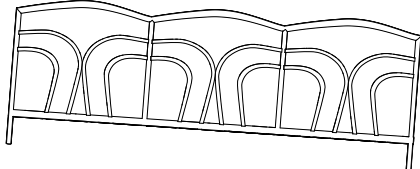
H × 1 

E1 × 2 
(shorter)


E2 × 2 
(longer)

I × 2 

J × 1

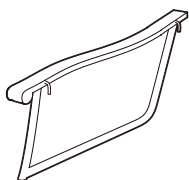

J1 × 1

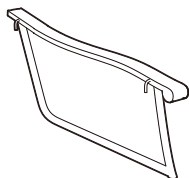

K × 8



L × 1



M × 4
(M8×100)



N × 4
(M6×90)



 
O × 8
(M6×30)



P × 4
(M6×45)




PP × 4
(M8×45)



CC × 1



T × 3

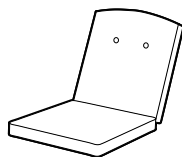

W1 × 4
(M6)



W2 × 4
(M8)



 
X1 × 4
(M6)



X2 × 4
(M8)



Y × 2




Z1 × 4
(M6)




Z2 × 4
(M8)





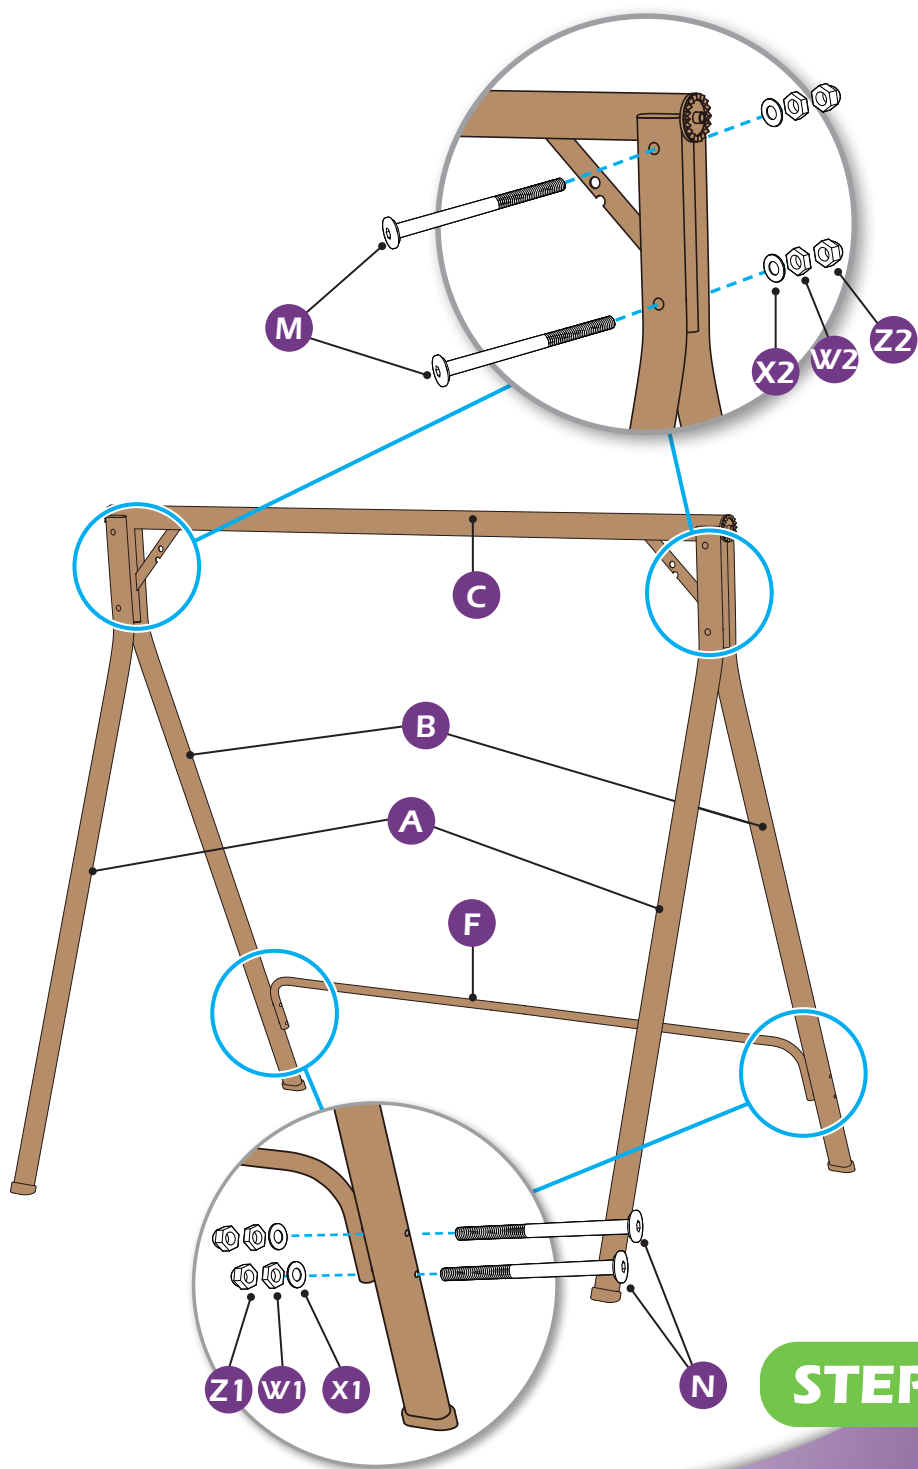


STEP 1

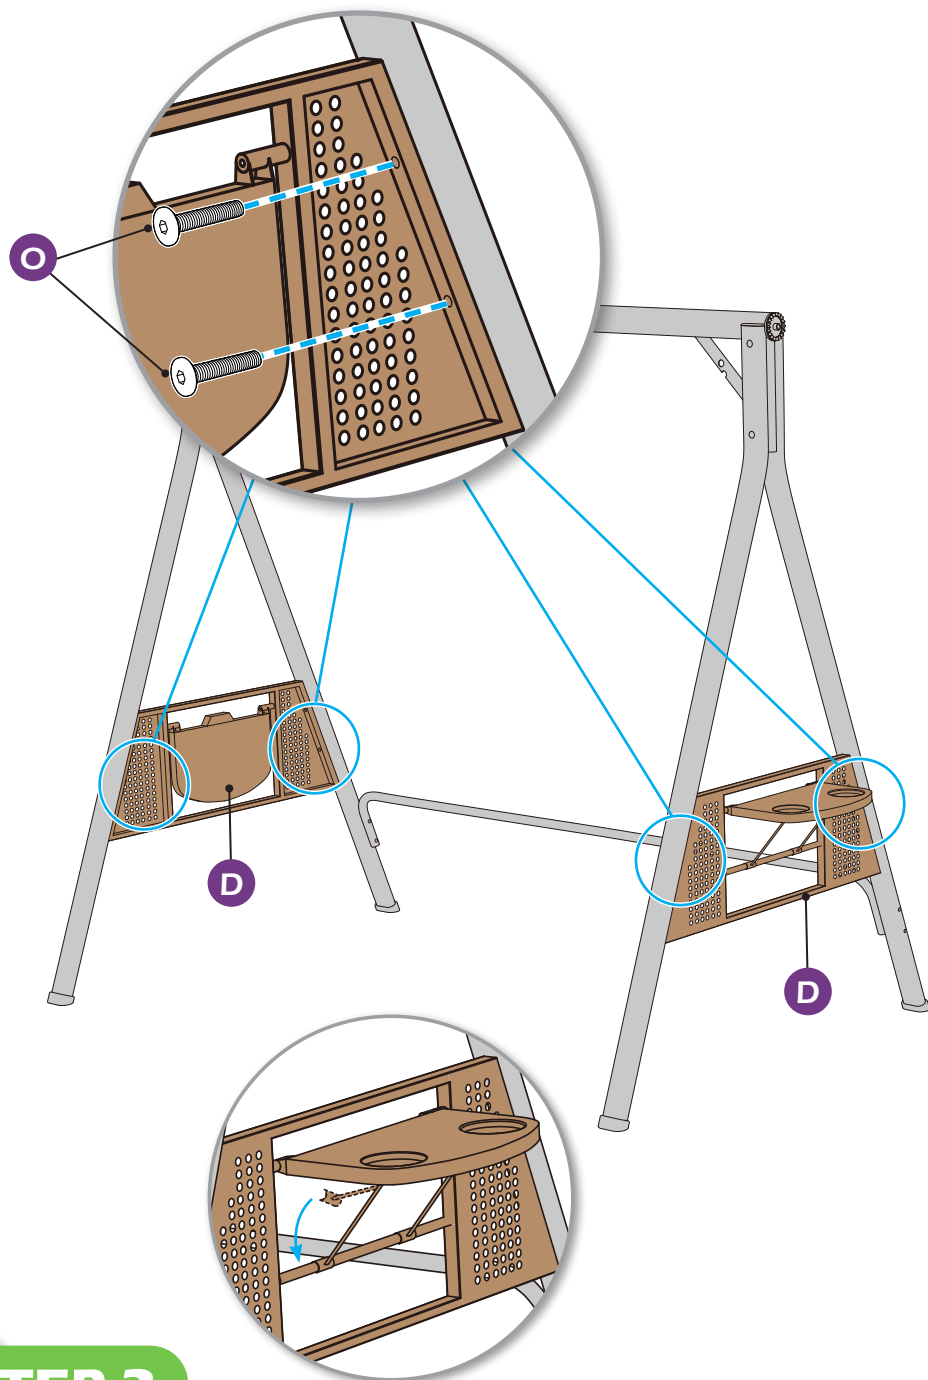



STEP 2

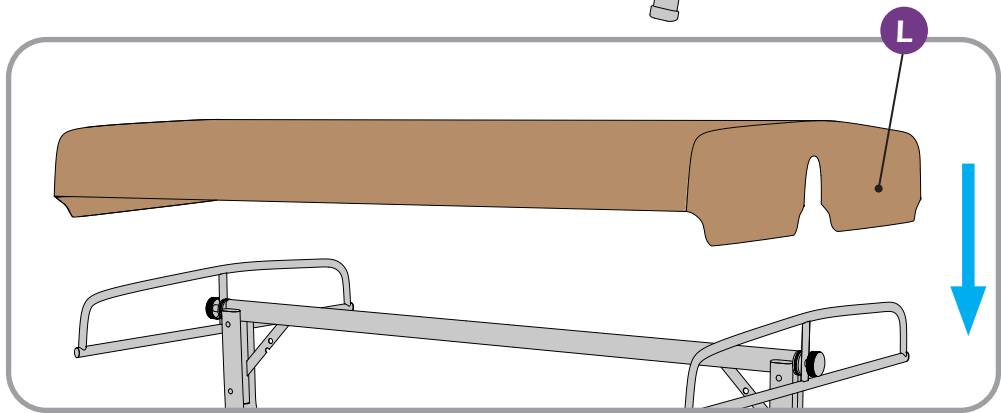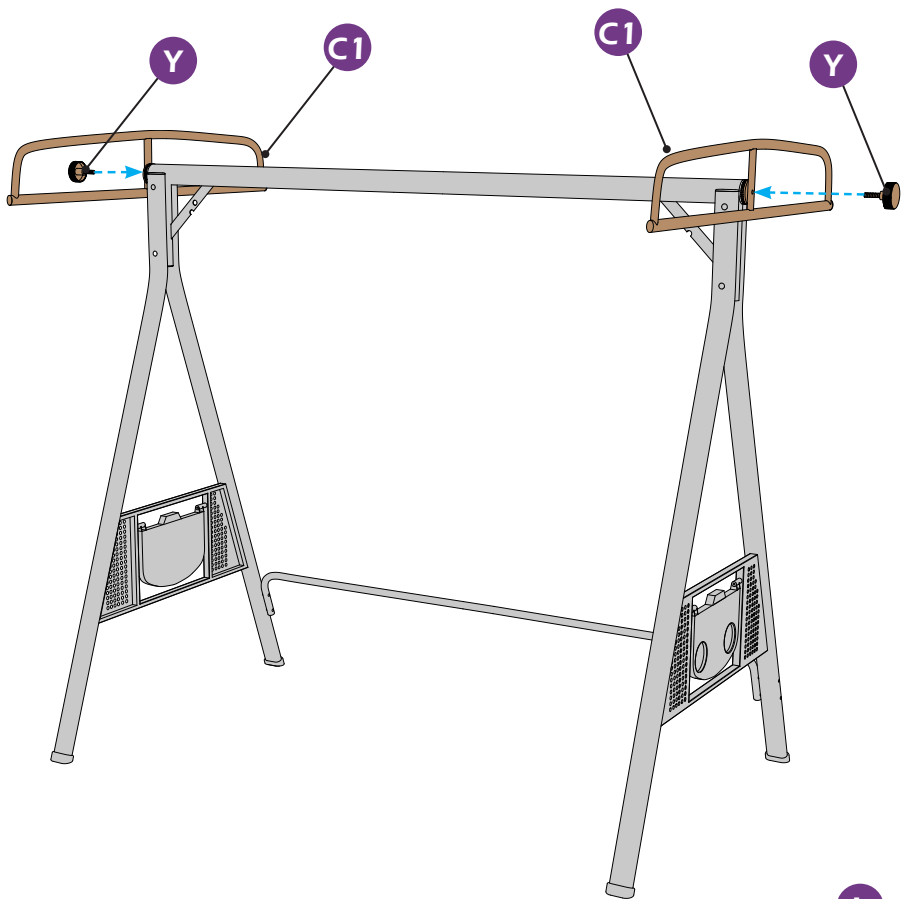

STEP 3


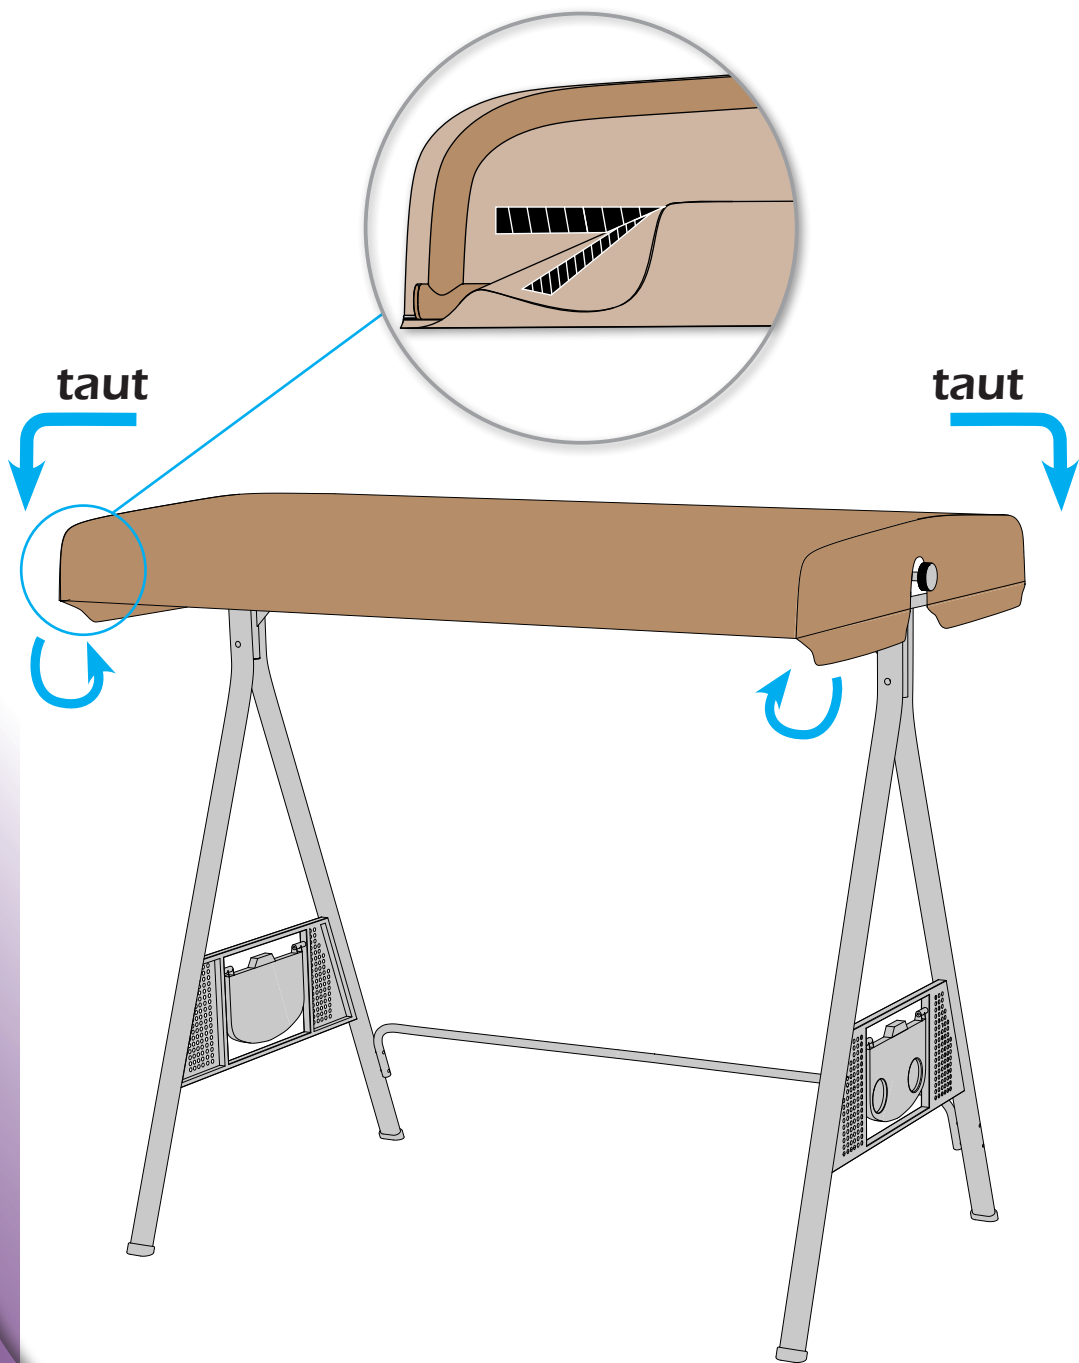


STEP 3

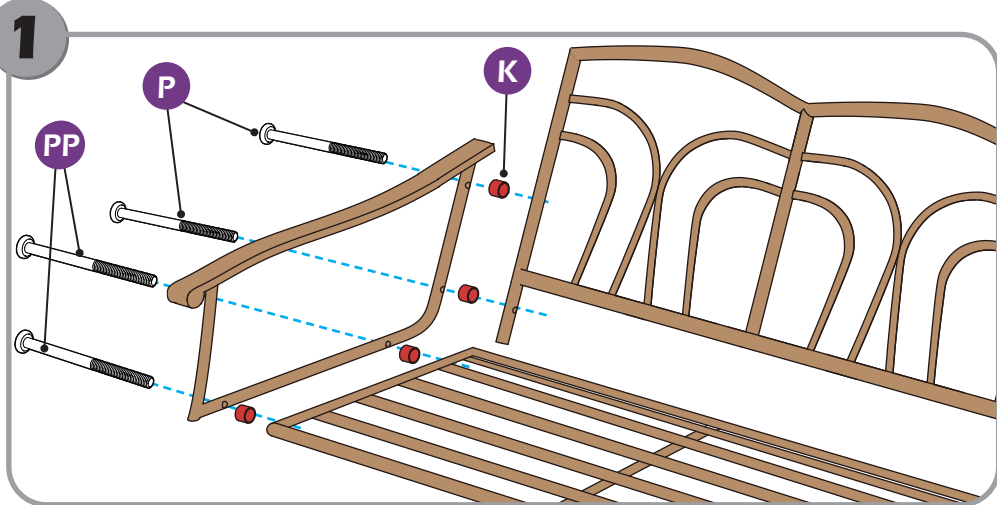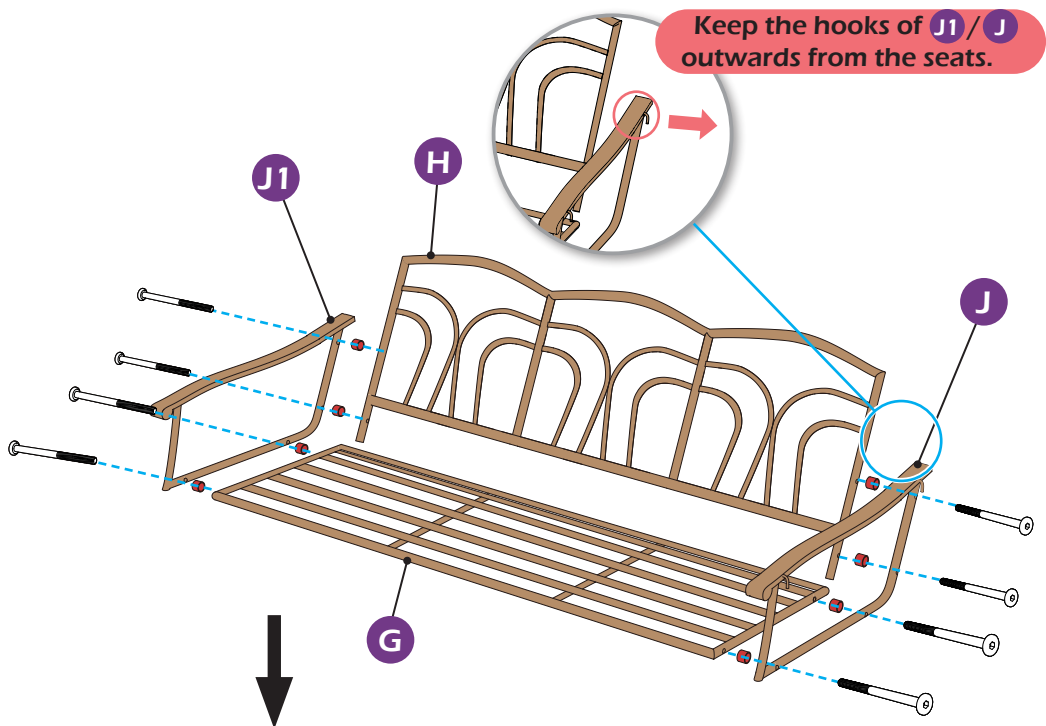


STEP 4

2

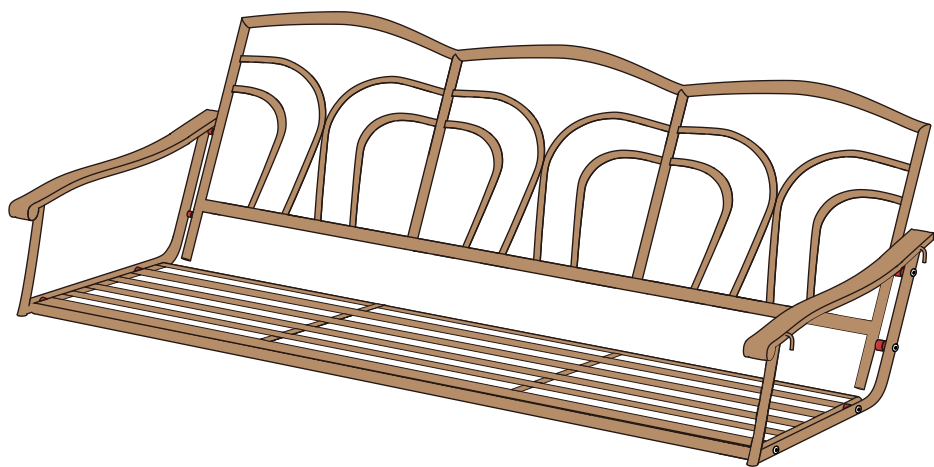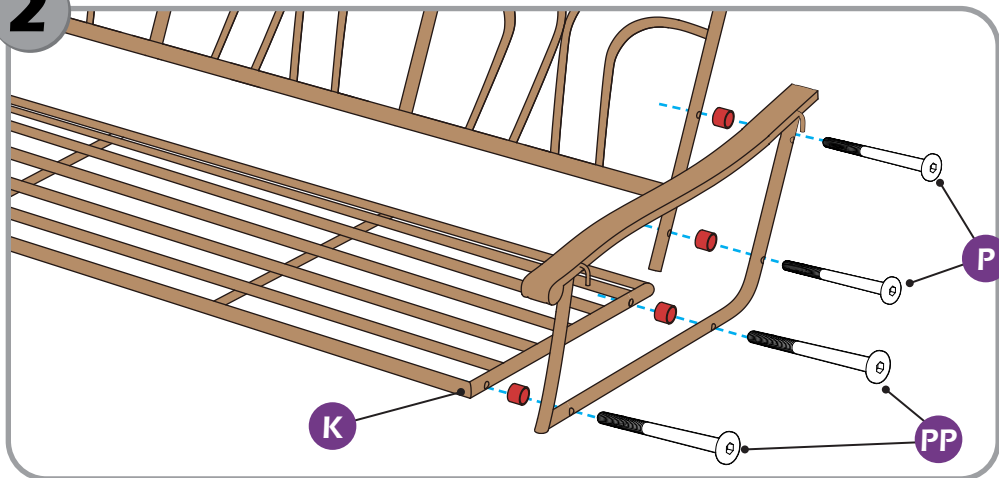

STEP 5


10

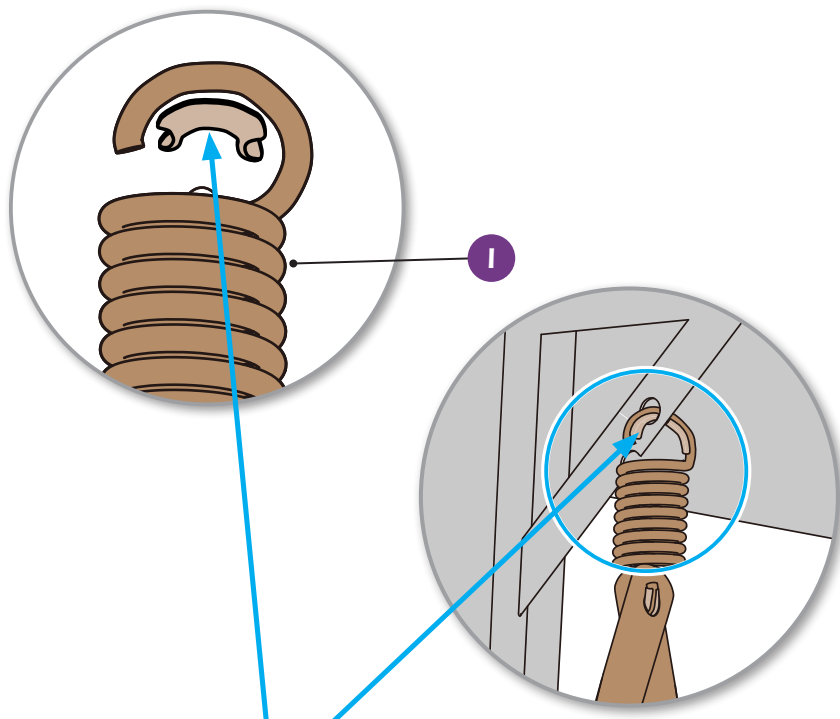


Please don't remove the additional material for reducing noise.



STEP 6

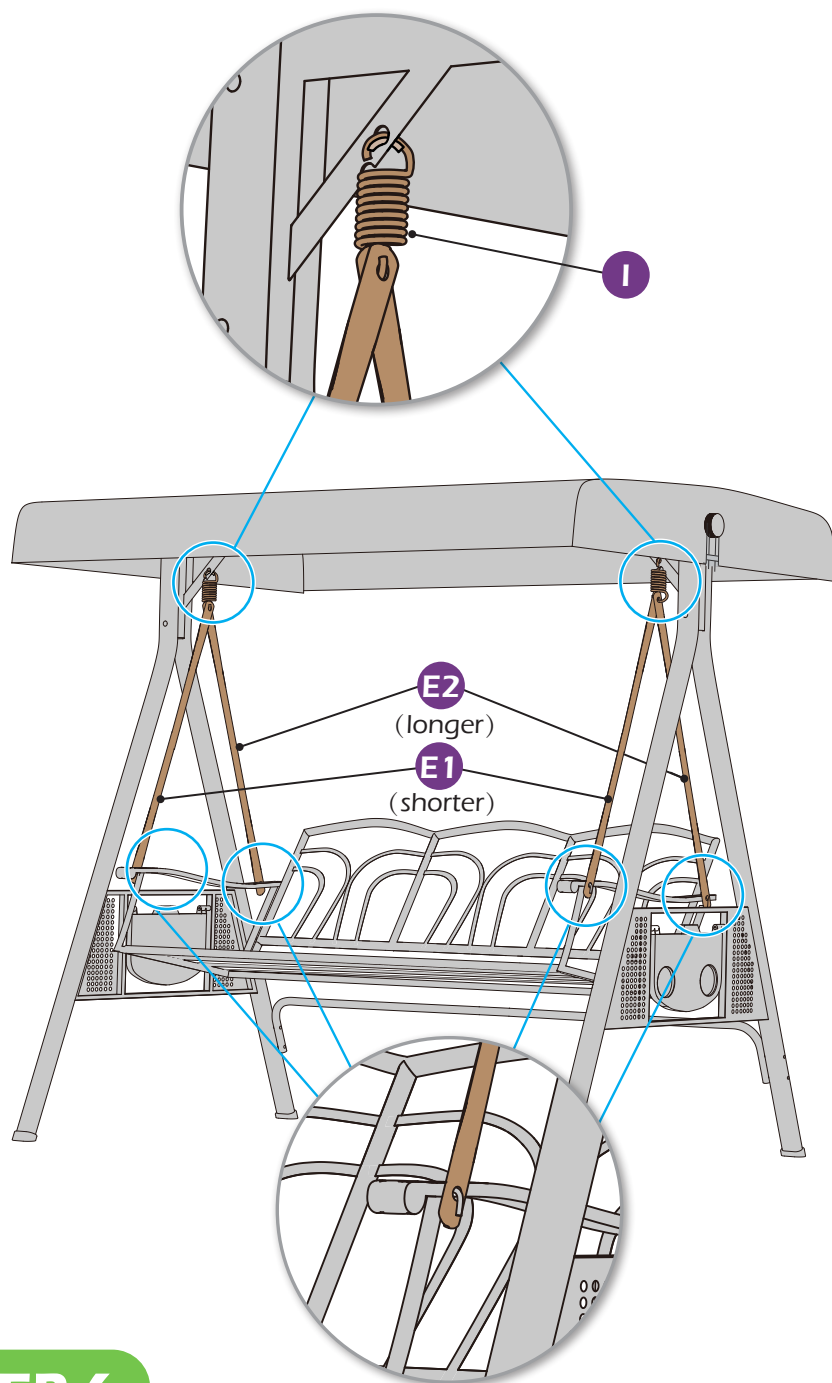

STEP 6

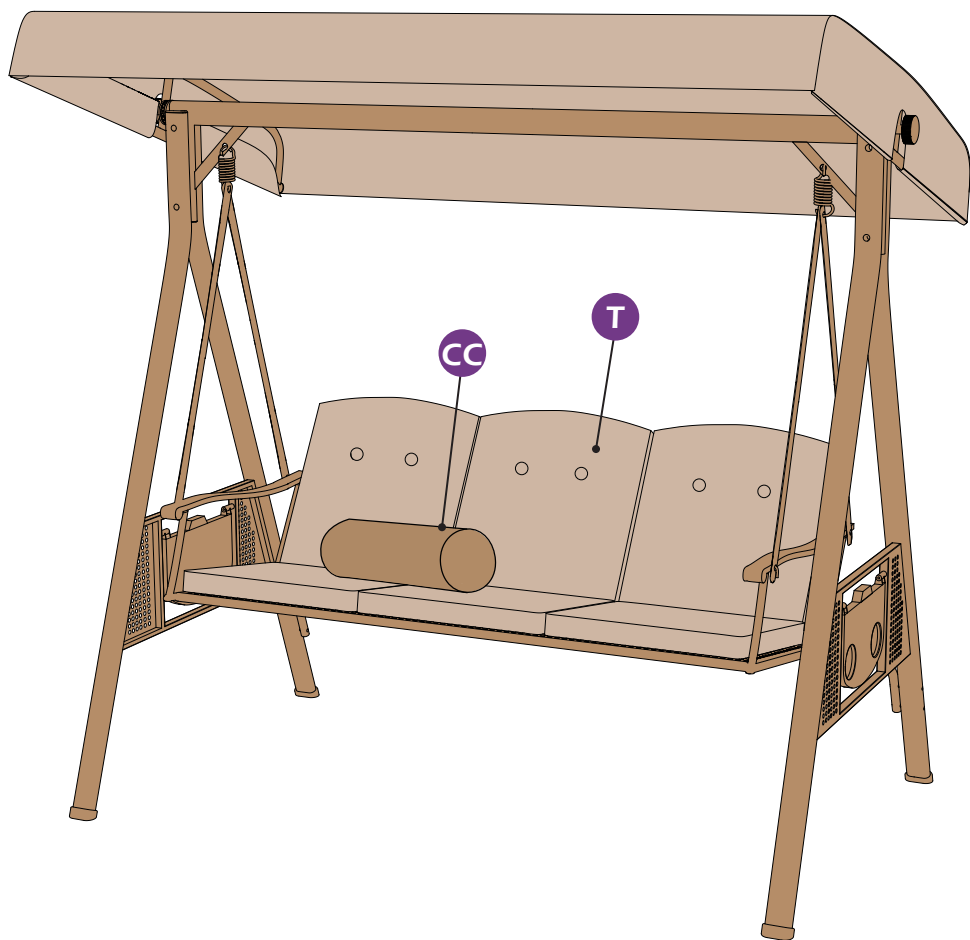

STEP 7

Warranty

Frames

Frames constructions are warranted to be free from defects in material and workmanship for 1 year from the item purchased. Damage to frame from negligence won't be covered by this warranty.

Cushions & Canopy

Cushions & canopy are warranted to be free from defects in material and workmanship for 1 year from the item purchased. Damage from exposure to chemicals (including but not only oils, spills, fluids) won't be covered by this warranty.

Bolts & Nuts

Bolts and nuts are warranted to be free from defects in material and workmanship for 1 year from the item purchased. Damage from exposure to chemicals (including not only oils, spills, fluids) won't be covered by this warranty.

Warranty Limitation

This warranty is for the original purchase order only. (Order number required). This warranty is non-transferable. This is responsible for the free replacement part including shipping charges for the 1 year warranty.

Warranty Exclusion

This warranty does not cover products subject to negligence, abuse usage, and inappropriate installation. We reserves the right to explain warranty exclusions. When the replacement item is applied, the 1 year warranty automatically expires. Please feel free to contact us to apply for the warranty.