

FC-50

User Manual for Square Towel steamer



Thank you for purchasing this product!

- Please read the entire instruction manual carefully before using the product. Take note of any warnings included in this manual.
- Always keep this instruction manual handy and if you give the device to another person, hand over the manual as it is an essential part of the product.
- Some components of the product may differ from the image that appears in catalogues, websites, brochures, etc.
- In order to enhance the product, the manufacturer reserves the right to modify its features and/or components without prior notice.



 



CORRECT USE OF THE DEVICE

- This product is designed for beauty salon professionals and should not be used for other purposes.
- Please note that any misuse of this device will result in the loss of the warranty.
- Do not modify the device without authorization.
- We are not responsible for any material or personal damage caused by misuse of our products.
- When moving this product, please support the bottom of the product with both hands, do not only lift the steamer handle, cover lid or power cord.
- Steam will come out when the product is working. Do not put your face or hand close to the steam port to avoid burns. Objects that are afraid of steam should not be placed above them; Do not cover the steam outlet with rags or similar objects to avoid causing accidents or product failure.
- When the product is working, the temperature of the cover lid is high. Do not touch it to avoid burns.
- If the product is dry burned without water, please unplug the power immediately and wait for cooling before operating. At this time, do not touch the heat transfer plate with your hand to avoid scalding. This product has the function of dry burning protection, dry burning will cause water stains on the heating piece, this is a normal physical phenomenon, if necessary, please use vinegar soaking cleaning.
- When adding water, please note that no corrosive chemicals are allowed except clean water. The amount of water added should be at the highest water level (MAX). Too little or too much water may fail or cause danger.
- Always keep the power plug dry, do not plug the power plug with wet hands to prevent electric shock
- After the first use and each use, check the equipment and power cables for damage.
- Unplug your device before you begin cleaning or performing any type of maintenance.
- Do not use near or on the surface of flammable and explosive items to avoid failure and danger.
- Do not move the product when it is powered on.
- Do not use alcohol or other chemicals to clean the steamer, and do not put items containing alcohol or other chemicals to disinfect, otherwise it will cause cracking of the steamer.
- Do not use this product outdoors or in places that may be affected by wet or inclement weather.
- If there is a problem with the power cord, unplug the device immediately and notify the dealer or professional technician.
- Place the power cord properly to avoid tripping, and make sure it is plugged into a grounded outlet.


SAFETY TIPS

- Keep the equipment and accessories out of reach of children.
- Be sure to plug the device into the correctly installed outlet. The local power supply voltage must comply with the technical specifications of the device.
- The power outlet must be easy to use so that the device can be unplugged quickly at any time.
- Pull out the plug, not the cord.
- Do not tamper with any electrical components or open/repair any components of the equipment, only your dealer or professional technicians can repair the equipment.
- Do not turn on the device if the device or power cable is obviously damaged!

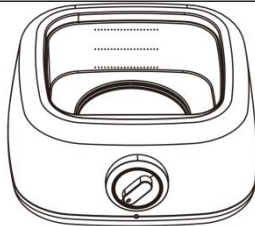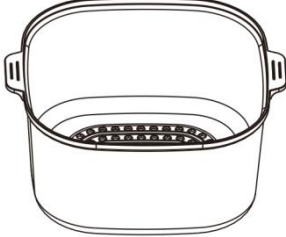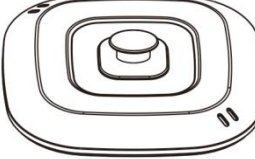Packing detail


Item	Picture	QTY
Steamer base		1 pcs
Steamer basket		1pcs
Upper cover		1pcs
User manual		1pcs
Towel clip		1pcs
Power cord		1 pcs

Parts details

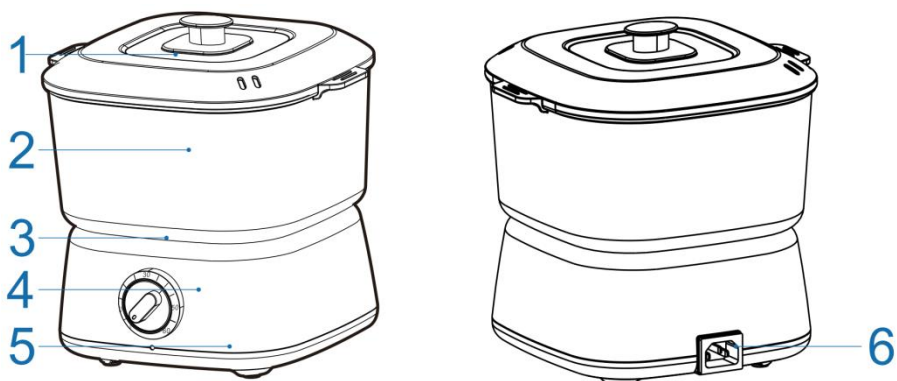


1. Upper cover 2. Steamer basket 3. Steamer base
 4. Knob 5. Heating indicator light 6. Power Supply socket

User Method

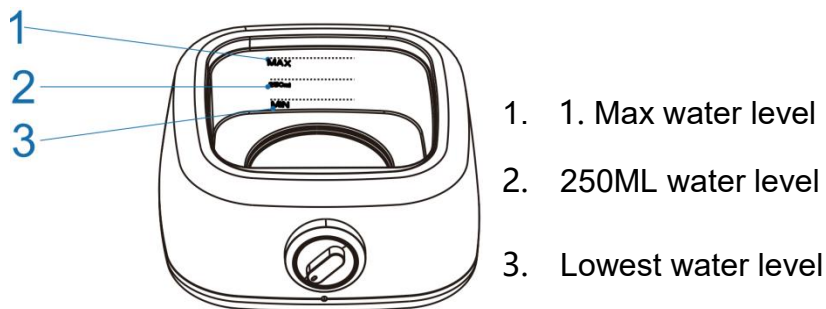

1. First plug in the power cord to turn on the power supply, and add the right amount of water in the steamer. There are three water levels in the steamer (as shown in the figure), which are MAX maximum water level, 250ml water level and MIN minimum water level. The water must reach the lowest water level to work normally. When the water reaches the highest water level, it can be used for about 1 hour at most. If the working time is more than 1 hour, please replenish the water in time.
2. Put the items in order into the steamer case and then cover the lid.
3. Connected to the power supply, twist the knob to set the required time, then the heating indicator light is on and you can hear the "beep" sound (the sound of timer working), indicating that the electric steamer has already begun to work.

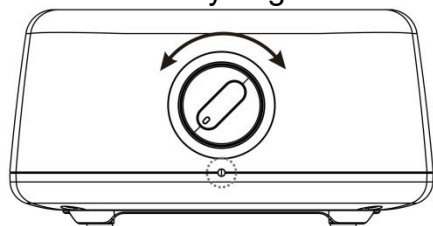

4. When the working time is over, the heating indicator is off.

Specification

Item	Square Towel steamer
Function	High Temperature Sterilizer
Working Voltage	AC 100-120V ~ \ AC 220-240V ~
Working Frequency	50/60Hz
Rated Power	450W
Dimension(L*W*H)	22x20X22.4CM
N.W	0.9Kg