


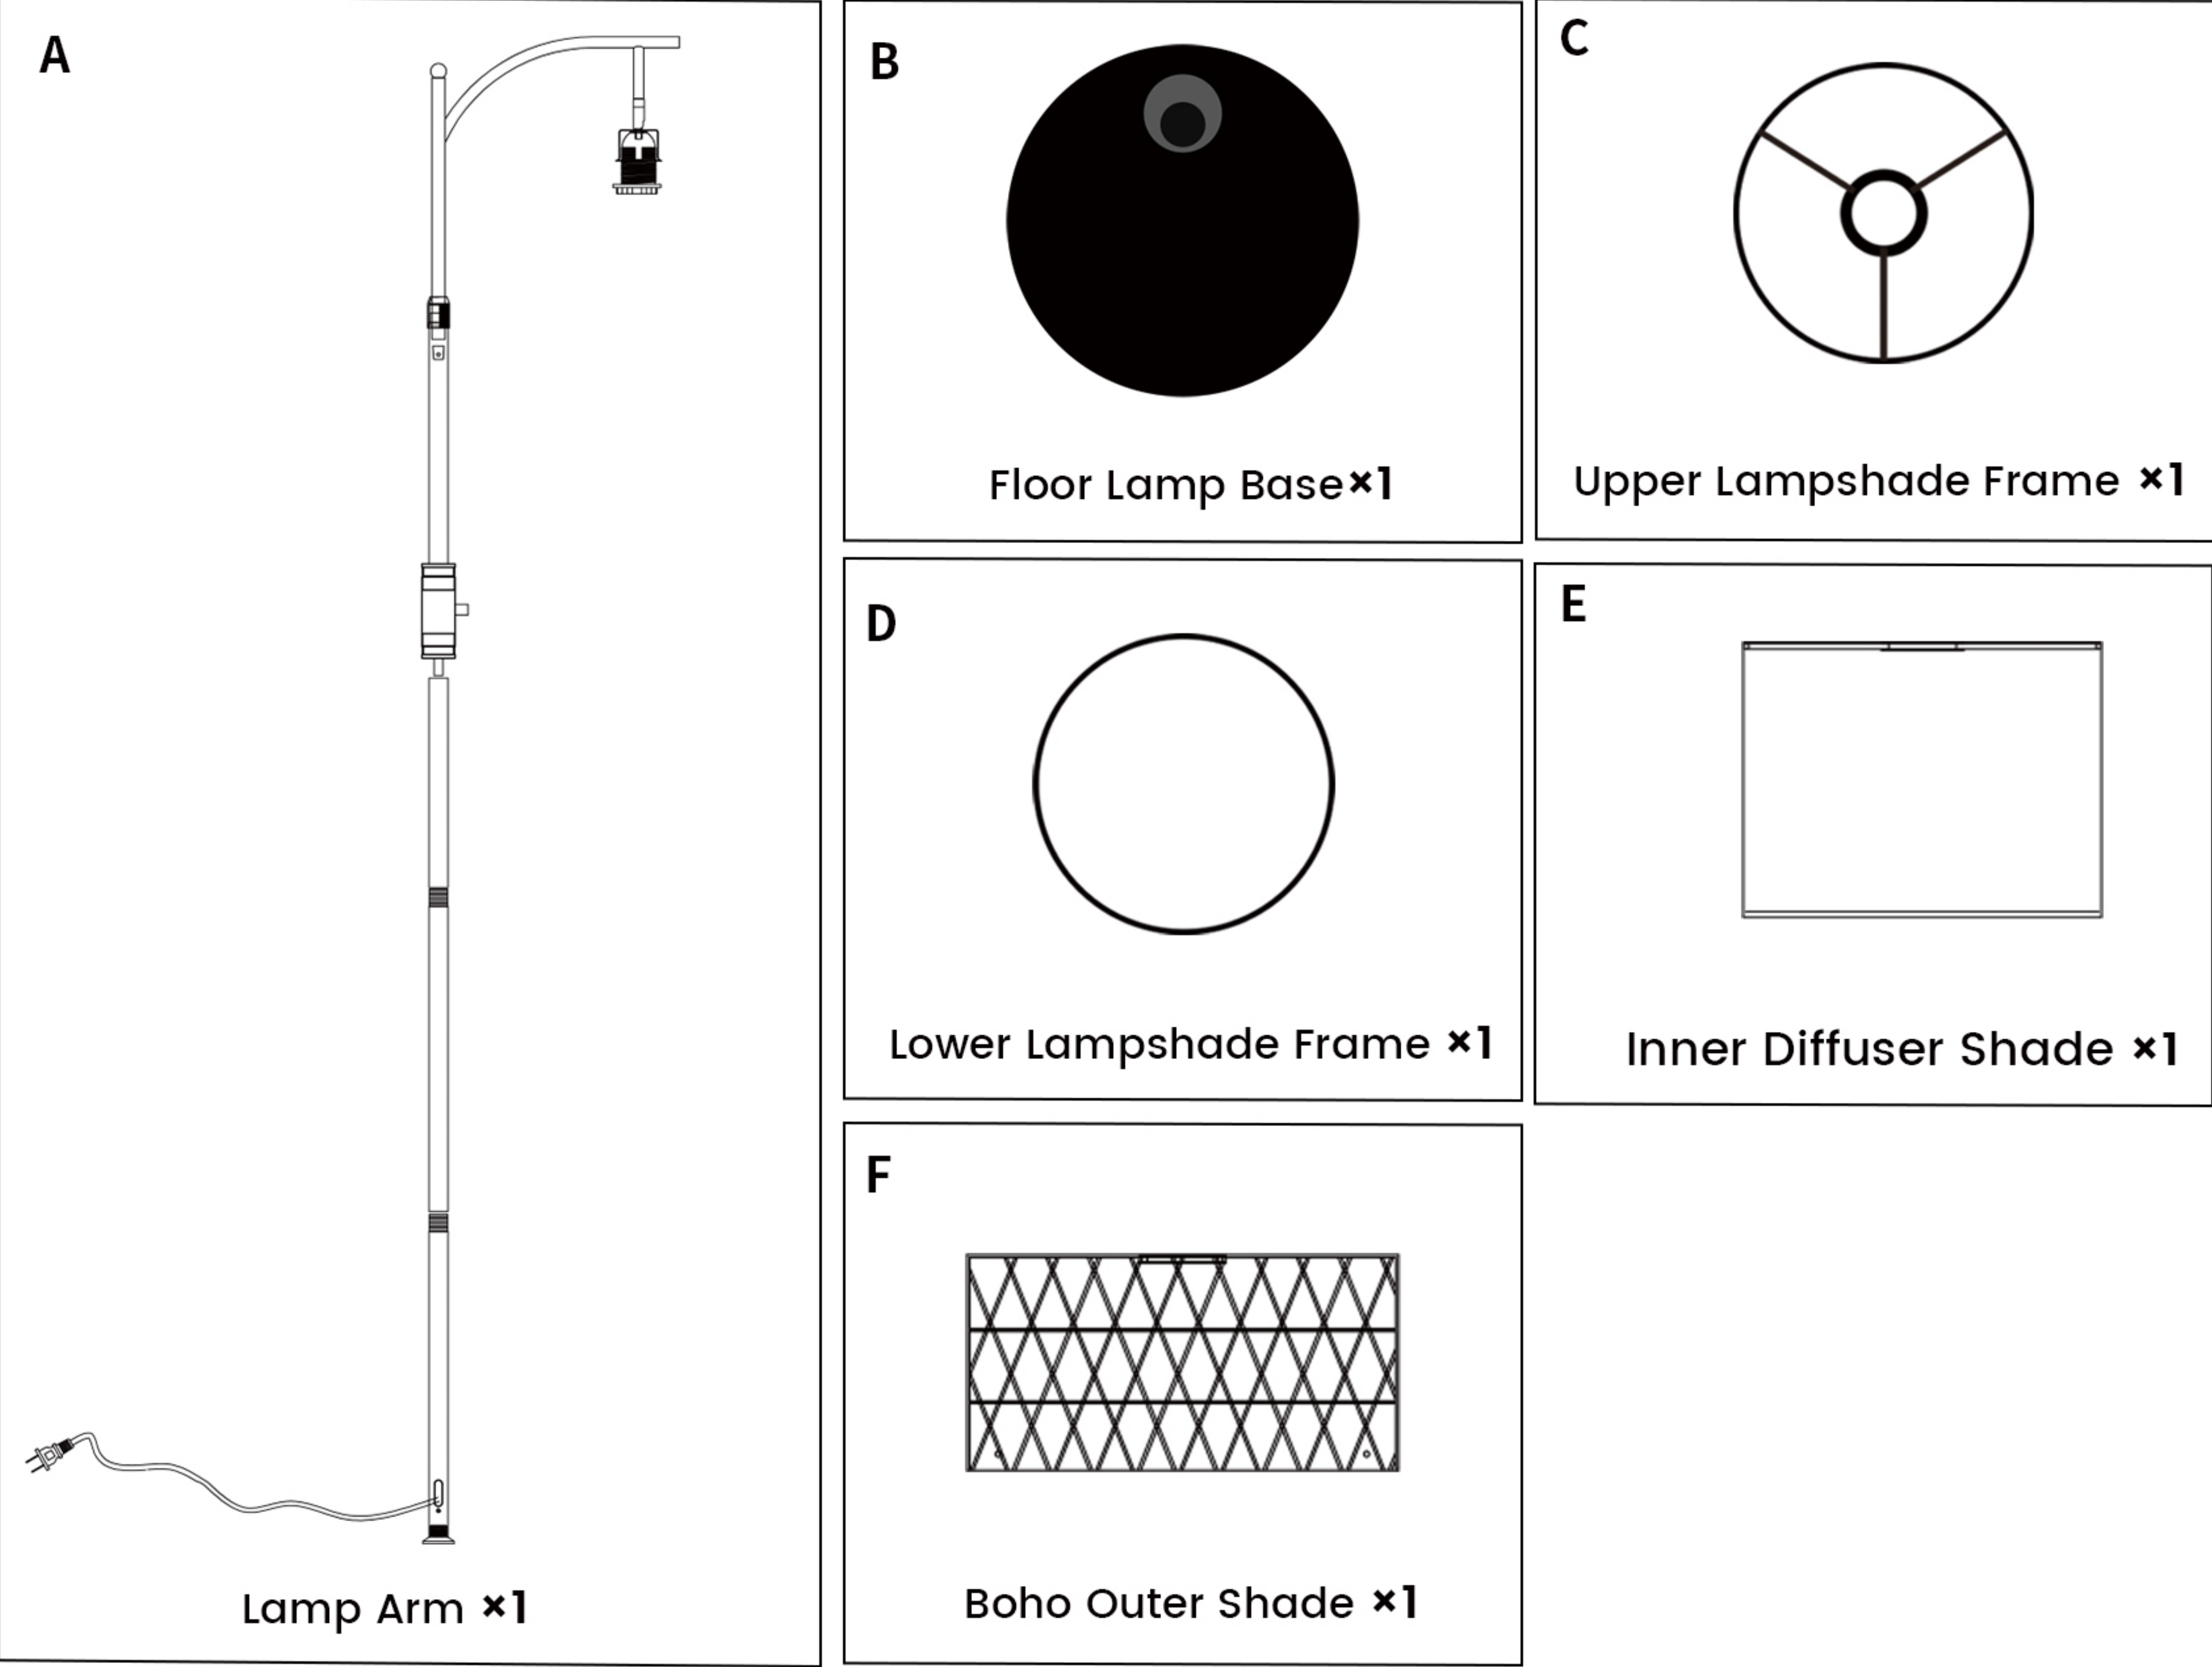

WARNING & SAFETY INSTRUCTIONS

Electrical Safety

Use only with 100–120V, 50/60Hz power supply. Do not modify the plug. Before installing or replacing the bulb, ensure the lamp is UNPLUGGED from the power outlet. Do not use a bulb that exceeds the maximum wattage indicated on the lamp socket.

Installation & Use

For INDOOR USE ONLY. Do not install or use outdoors. Assemble and handle with care to avoid scratching the surface or damaging the wires. Ensure the lamp is placed on a stable, level surface to prevent tipping. Keep away from heat sources, flammable materials, and corrosive chemicals.

Maintenance

Clean only with a dry, soft cloth. Do not immerse in water or use liquid cleaners. Regularly check the power cord and plug for any damage. If damaged, discontinue use immediately. If the lamp emits unusual noise, odor, overheats, or shows any signs of smoke, DISCONNECT IMMEDIATELY and contact customer service.

