


Double Egg Chair with Footrest

Installation Instructions

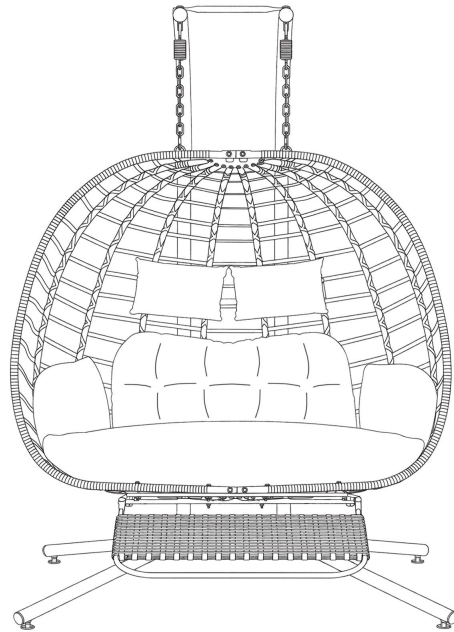



**EASY
ASSEMBLY**

Assemble in
25 minutes
or less




Scan to get a quick assembly guide,
dedicated support, plusmember
access to exclusive perks
& extended warranty.

Parts List

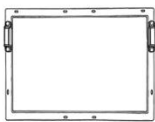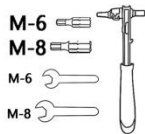Chair Components																															
	A-left		A-right		B		4		D		1		E		1																
																															
	F		1		G		1		H		1		I		1		J		1												
	 reinforcement								 height adjuster																						
	K		6		L		2		M		4		N		2		O		2												
									Notice: Please check the accessories before installation, if there is any problem,feel free to contact us!																						
	P		2		Q		2																								
Accessories & Tools	 M-6 M-8 M-6 M-8																														
	R		2		S		1		M-8,60mm				2		M-8,20mm				4		M-6,40mm				4		M-6,50mm				8


Step 1:


Screw the 4 height adjusters (M) into the ends of the 4 support legs (C).

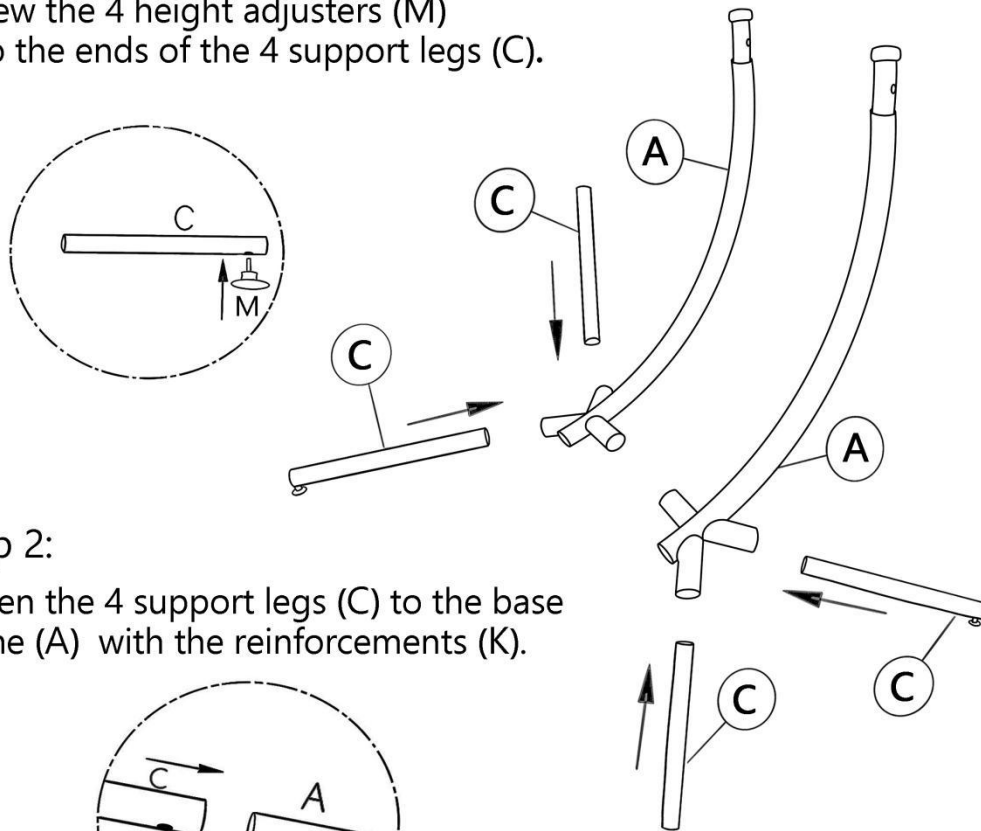

Step 2:

Fasten the 4 support legs (C) to the base frame (A) with the reinforcements (K).

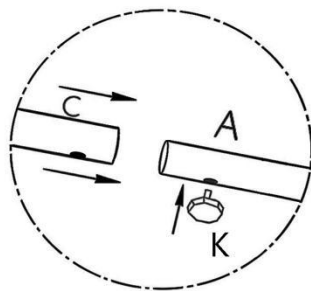

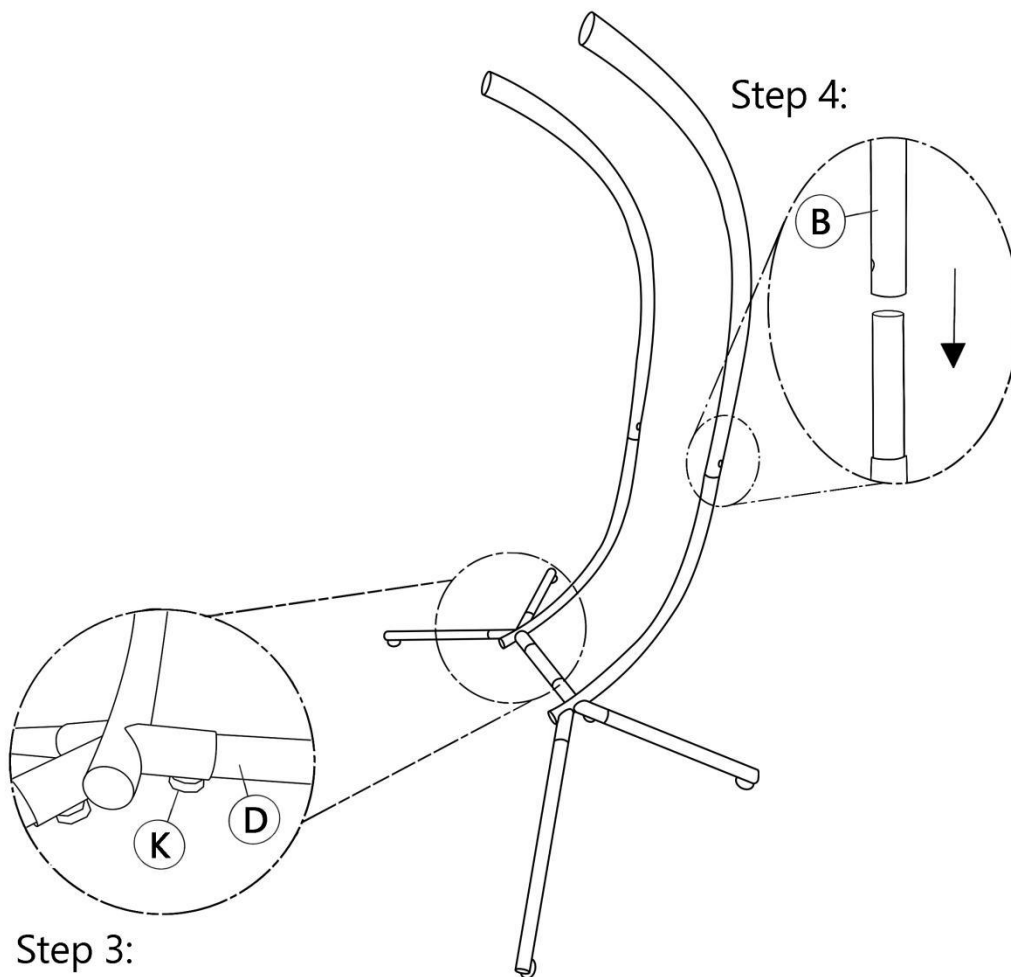


Step 3:

Use part (K) to secure part (D)
to the chair frame (A).

Step 5:


Use 2 screws (M-8,60mm)
to secure part (B&E).

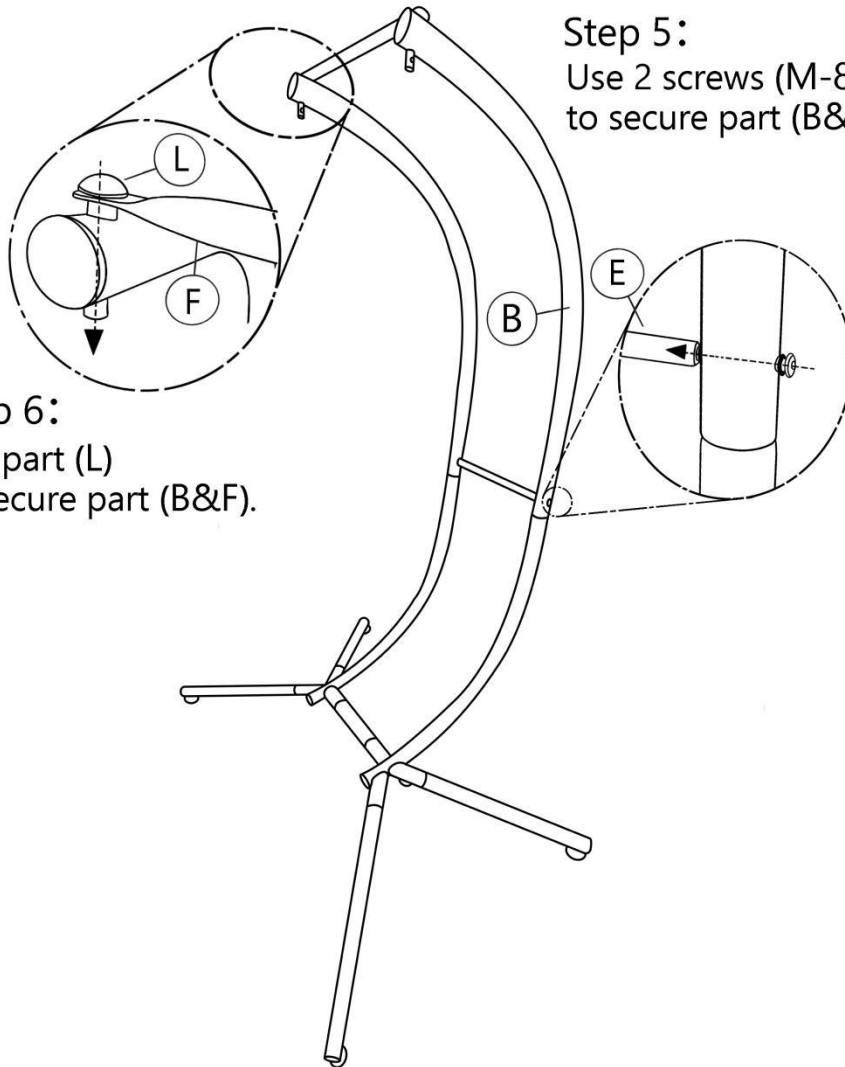


Step 6:

Use part (L)
to secure part (B&F).

Step 7: Simply flip the chair base (H) over.

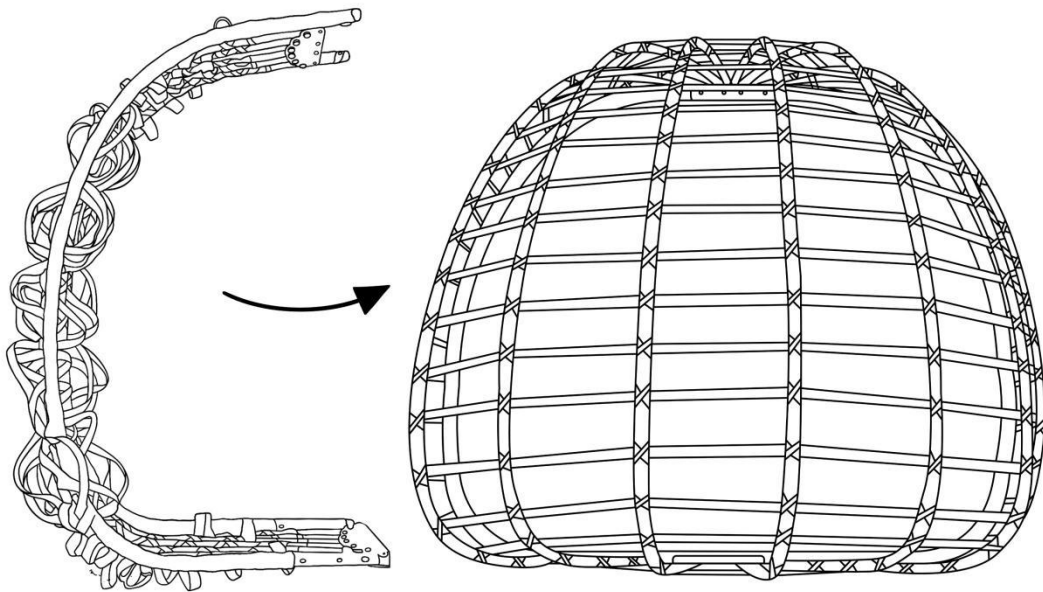

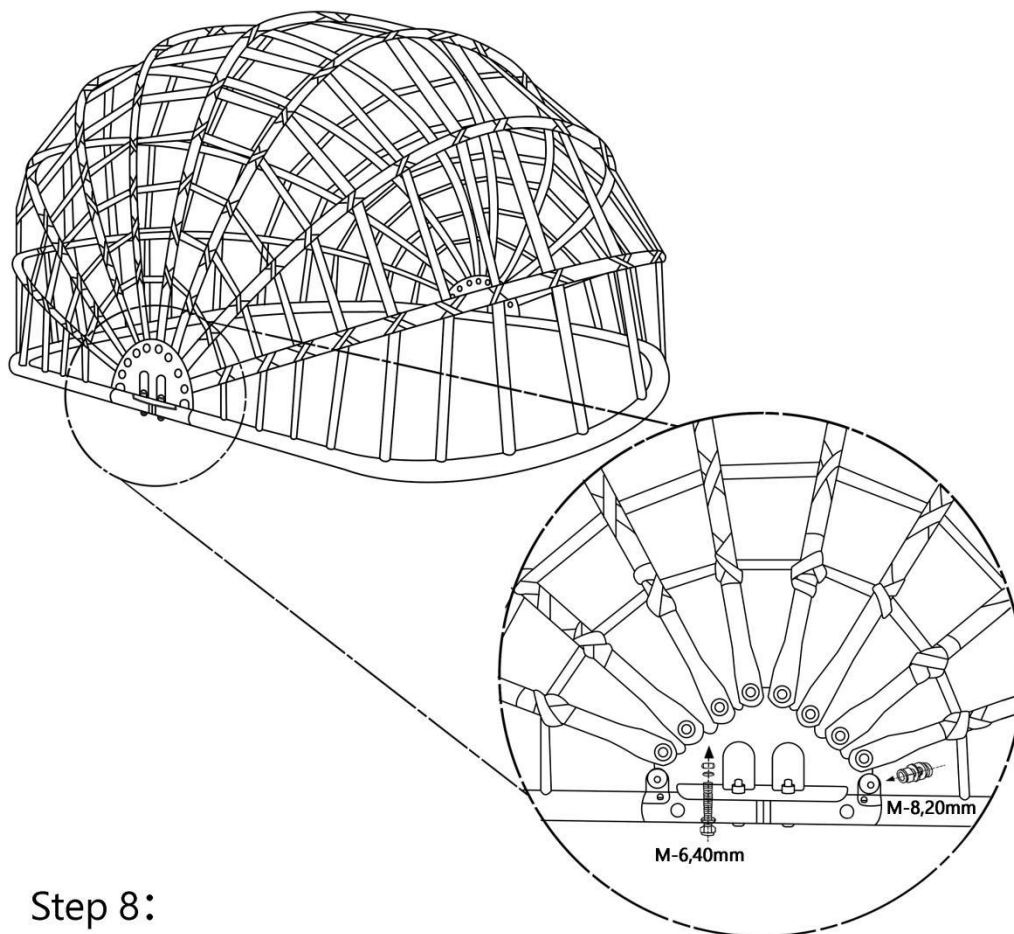

Step 8:



Assemble the seat of the chair as shown.

Installation of 2 (M-8,20mm), 2 (M-6,40mm)

Step 9:


Installation of 2 (M-8,20mm)

2 (M-6,40mm)

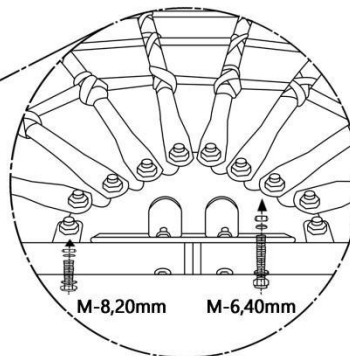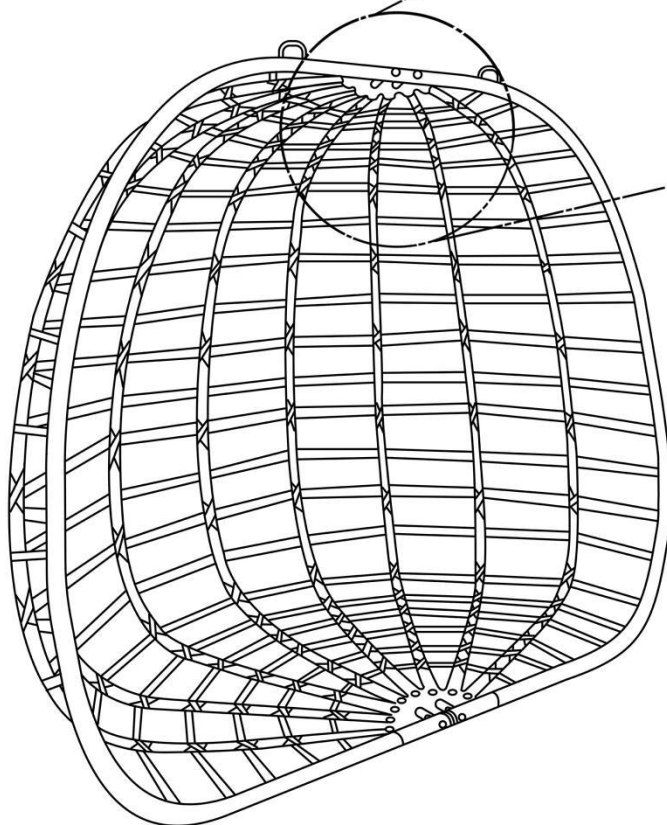


Step 10:

Insert part (J) into part (I) and fix it with the reinforcements (Q).

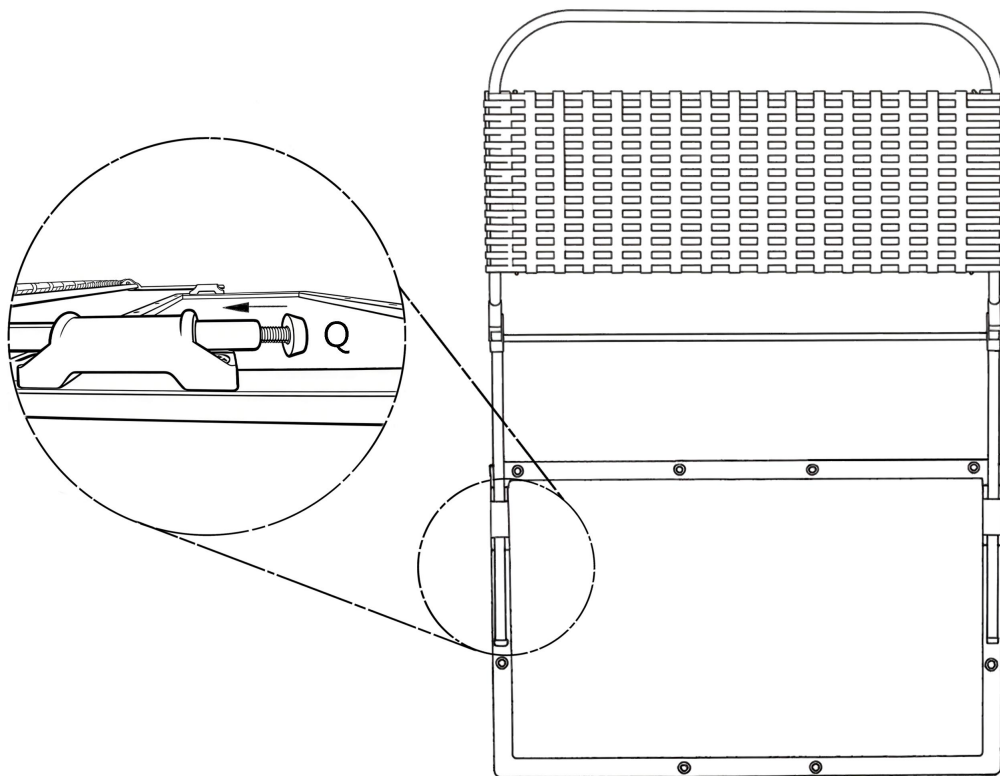

Step 11:

Fasten parts (I) to base chair (H) with 8 screws (M-6,50mm).

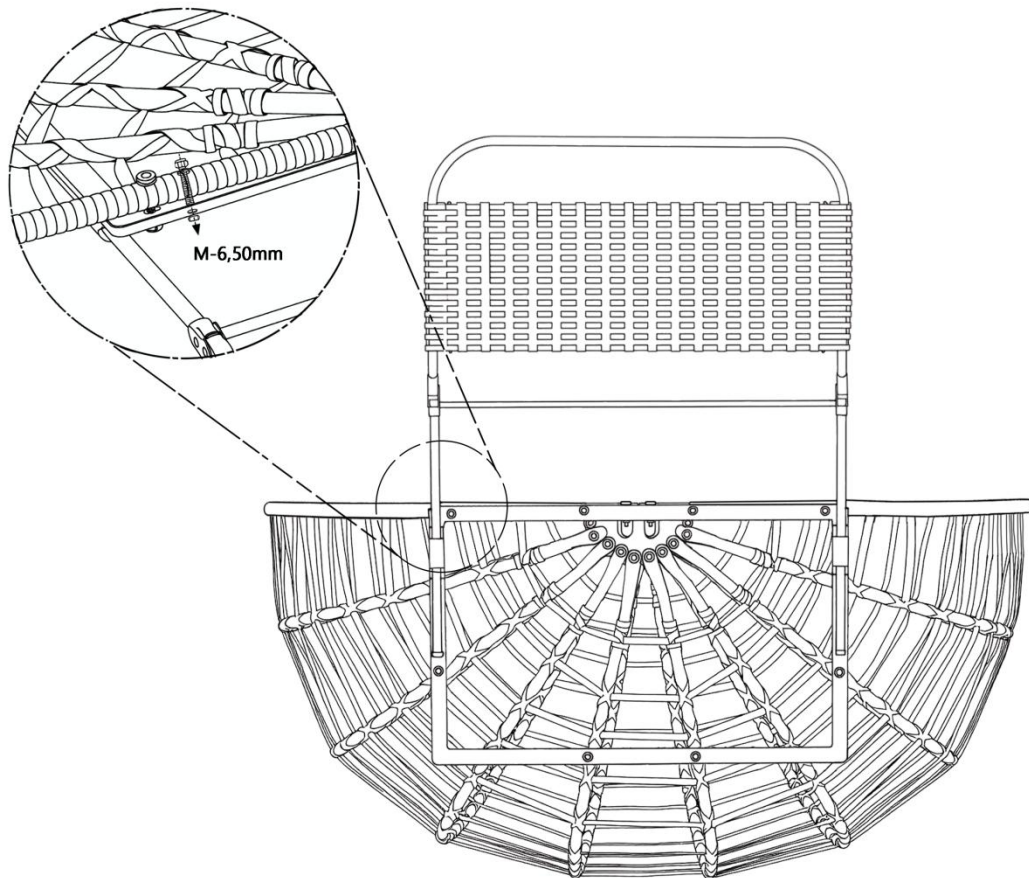




Step 12:

Connect the part (N&O&P&H) together in sequence.


Tighten the part (P).

Place part (G) on the chair.

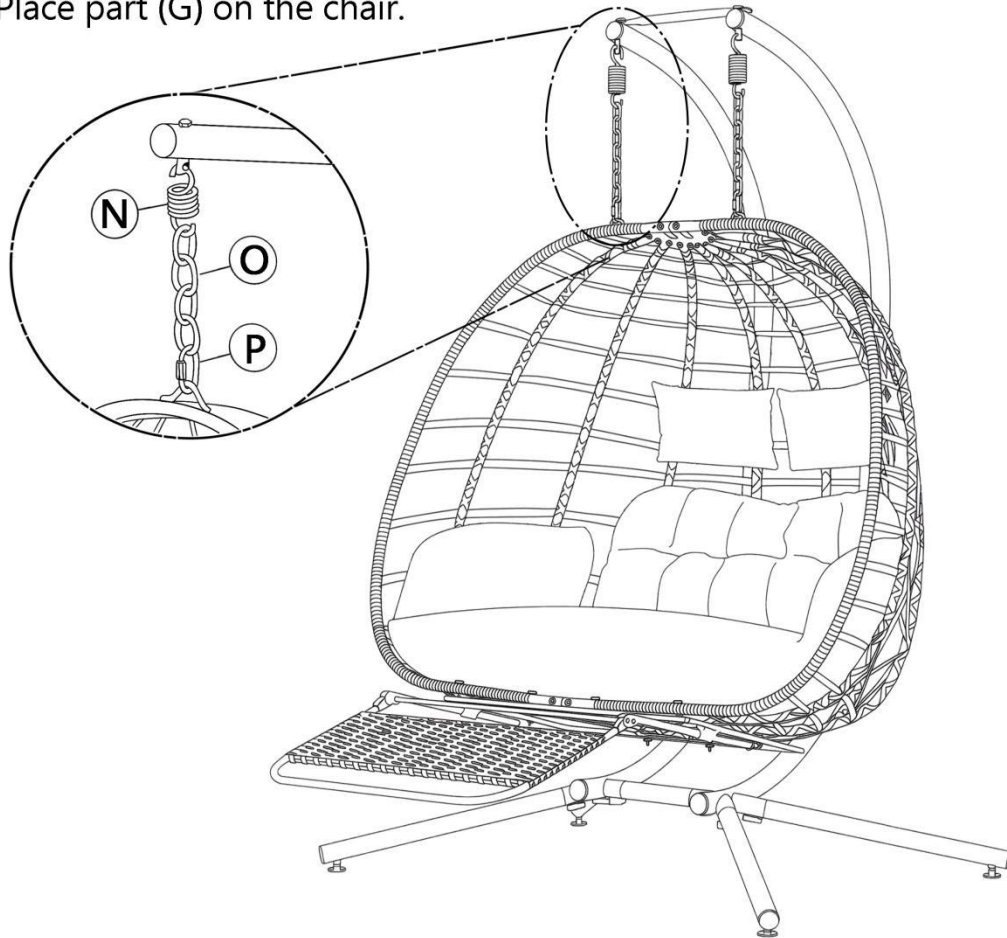

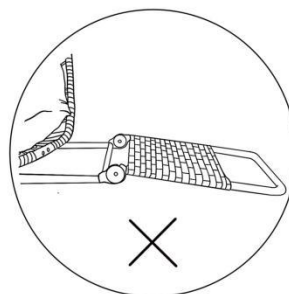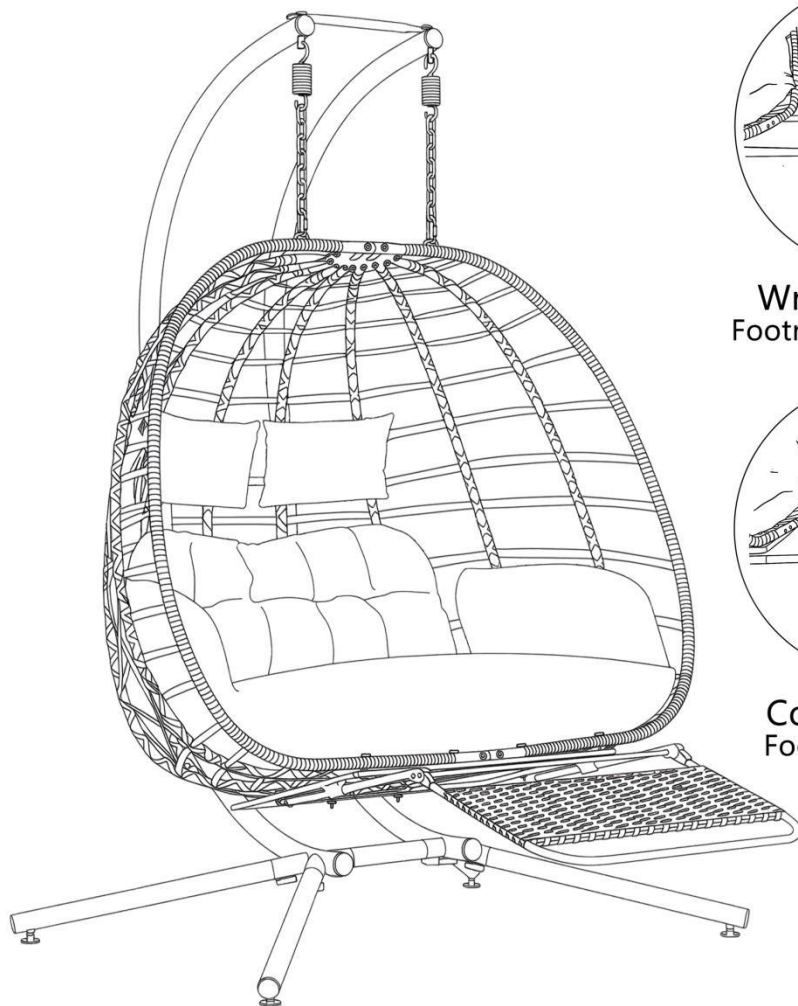


Wrong version
Footrests facing down

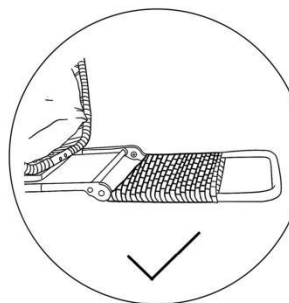


Correct version
Footrests facing up

How to Reset the Footrest?

Lift the footrest to the highest gear to unlock it, then press it downward to reset it to the default 4-speed position.

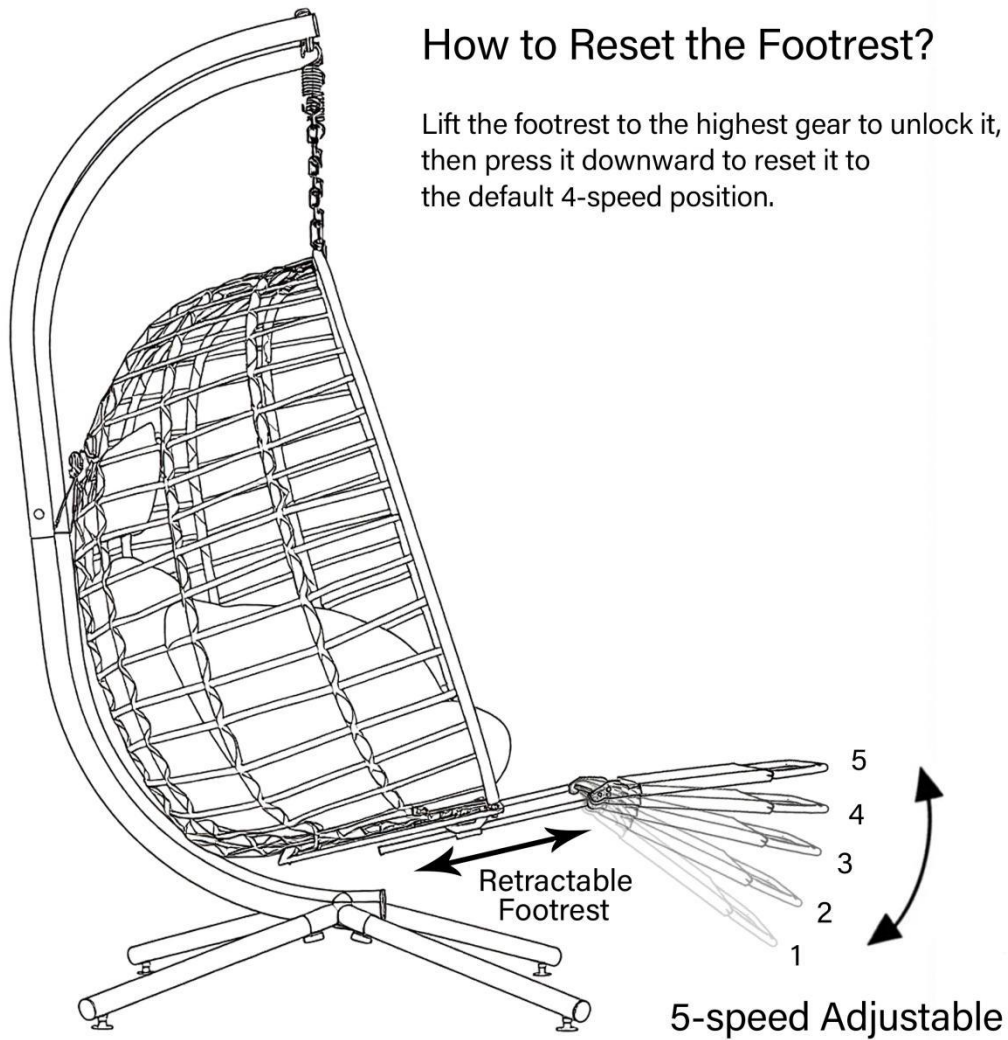

Double Egg Chair with Footrest

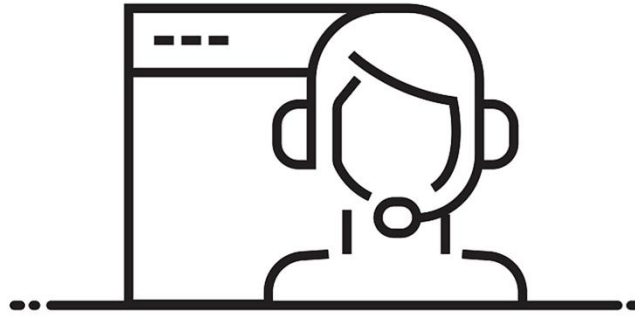

ONLINE SUPPORT

Please read the installation guide carefully before installation
If you have any questions during the installation process
you can contact us and we will provide you a detailed guidance

Online Support: outdoorservice@kannelfurniture.com