


Ax1 	Bx1 	Cx1 	Dx4 
Ex4  M6x40MM	Fx8 	Gx4 	Hx4 
Ix2  M6x45MM	Jx2  M6x50MM	Kx1 	Lx1 
Mx1 			


SPARE (Ersatzteile)

Ex1  M6x40MM	Gx1 	Ix1  M6x45MM	
Fx1 	Hx1 		

STEP 1

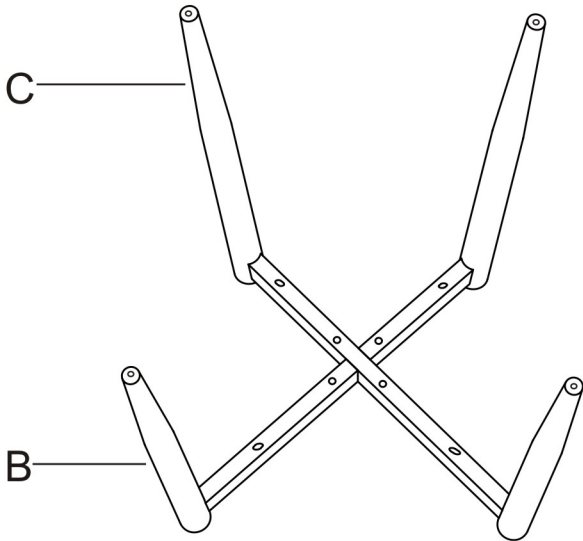

STEP 3

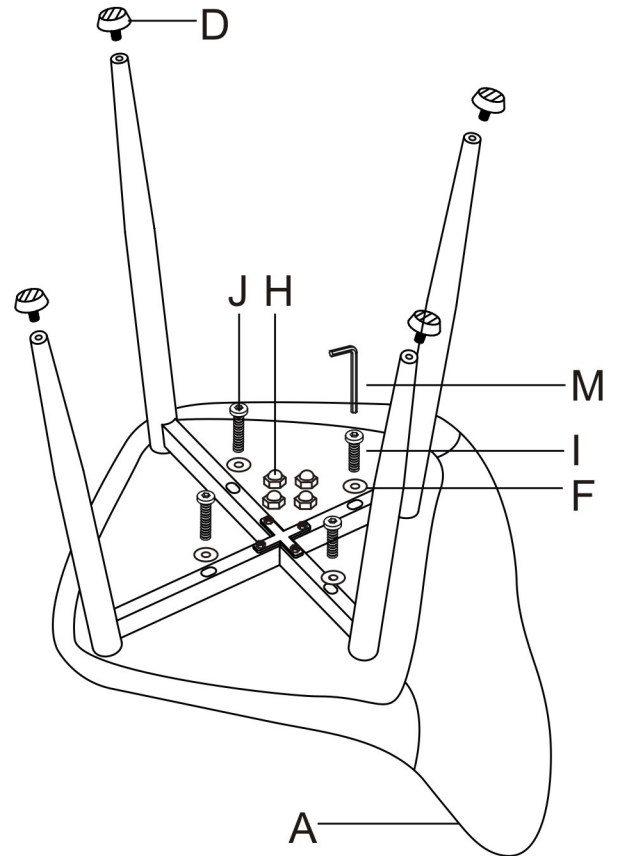

STEP 2

