
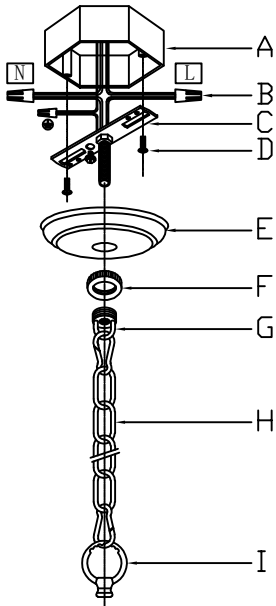
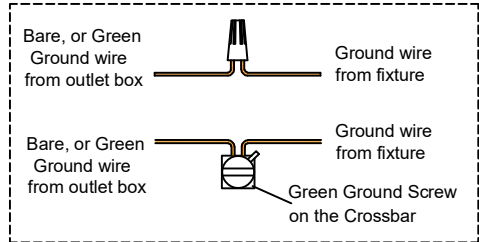



Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.
Estimated Assembly Time: 20-30 minutes
Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

⚠Warnings and Cautions
Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

Wire Connections
Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

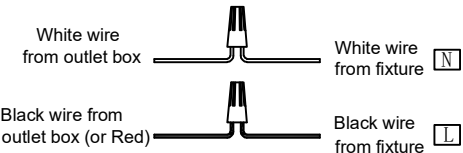

 Light Bulb




E26


A. Outlet Box	D. Crossbar Screws	G. Canopy Loop
B. Junction Caps	E. Ceiling Canopy	H. Chain
C. Crossbar	F. Canopy Loop Nut	I. Loop

 Buckle is used to connect the chain and loop or adjust the length of chain.


Assembly Instruction Sheet # RS1807

Light Bulb:E26 light:E26*12
(Rated 110-130V/60Hz, bulb 60W maximum.)

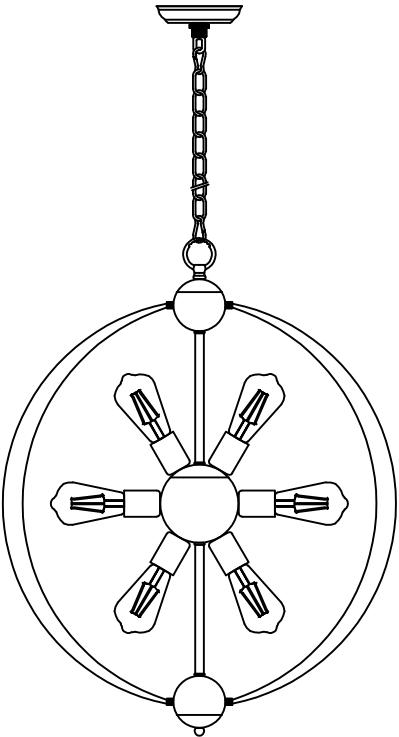

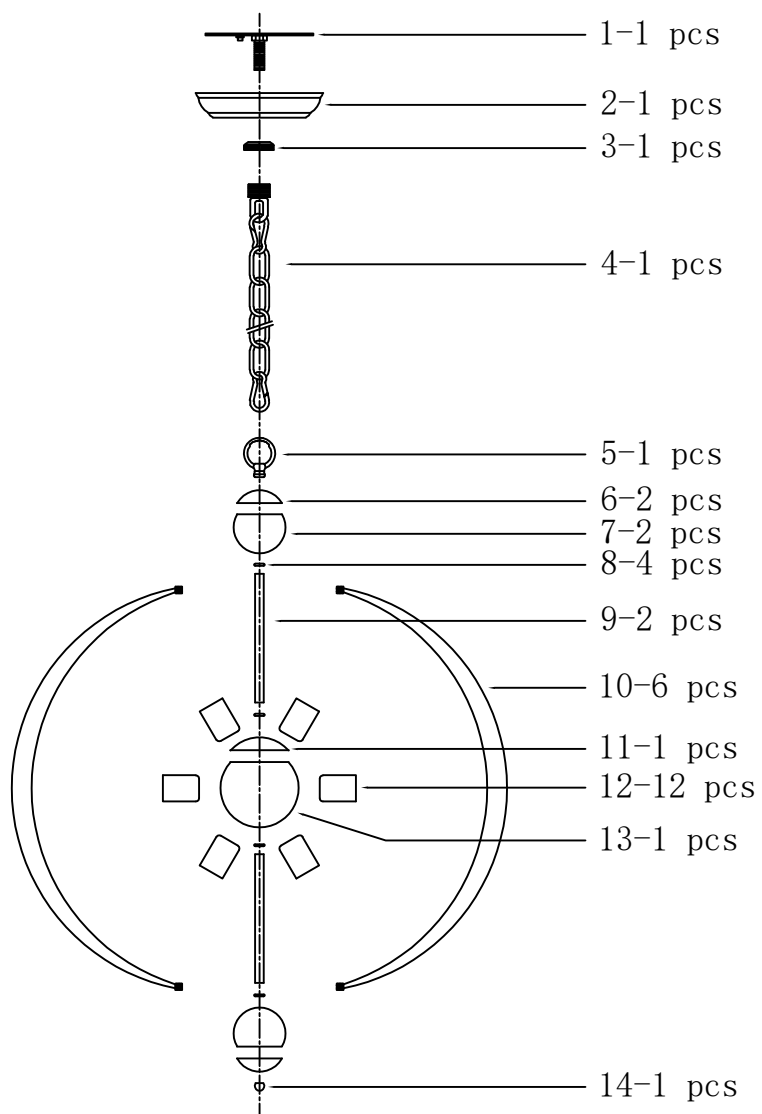

(3)

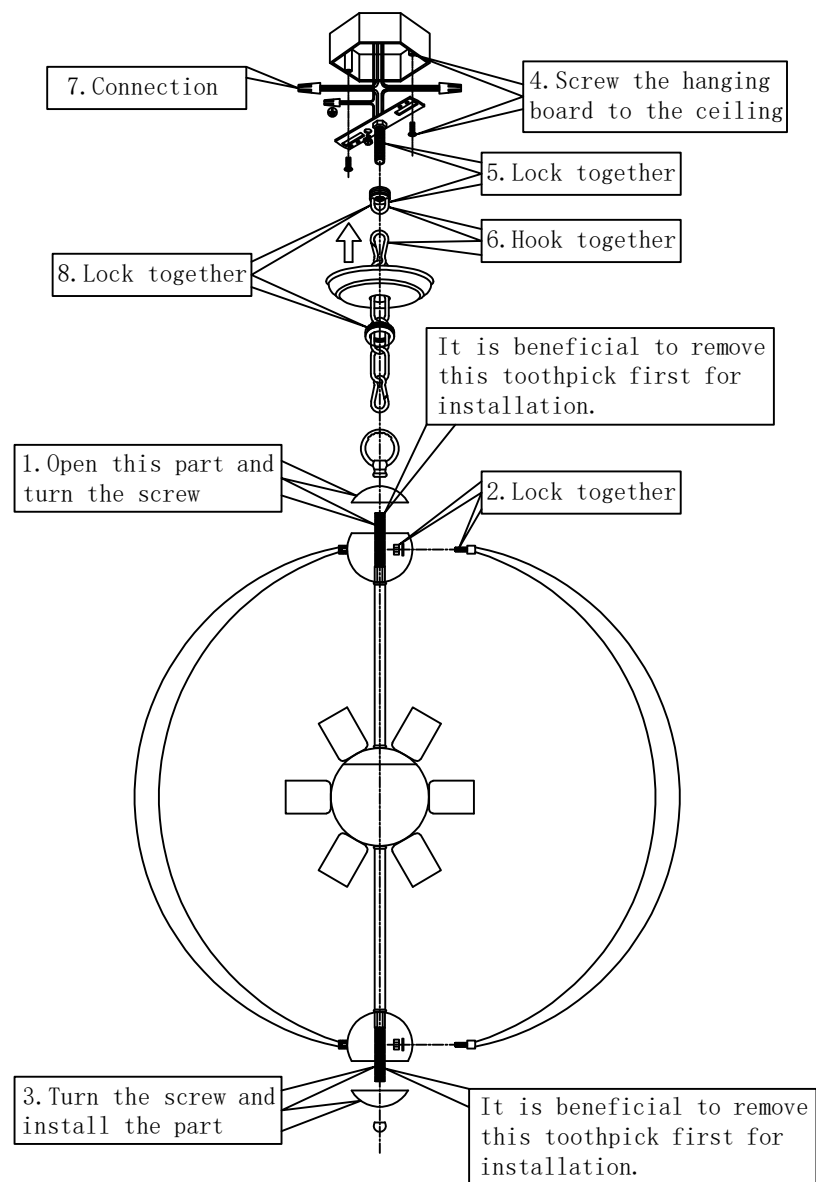

(4)