 


Instruction Manual

Multifunctional Cabinet

SHX-DGNG10840-X-0-S

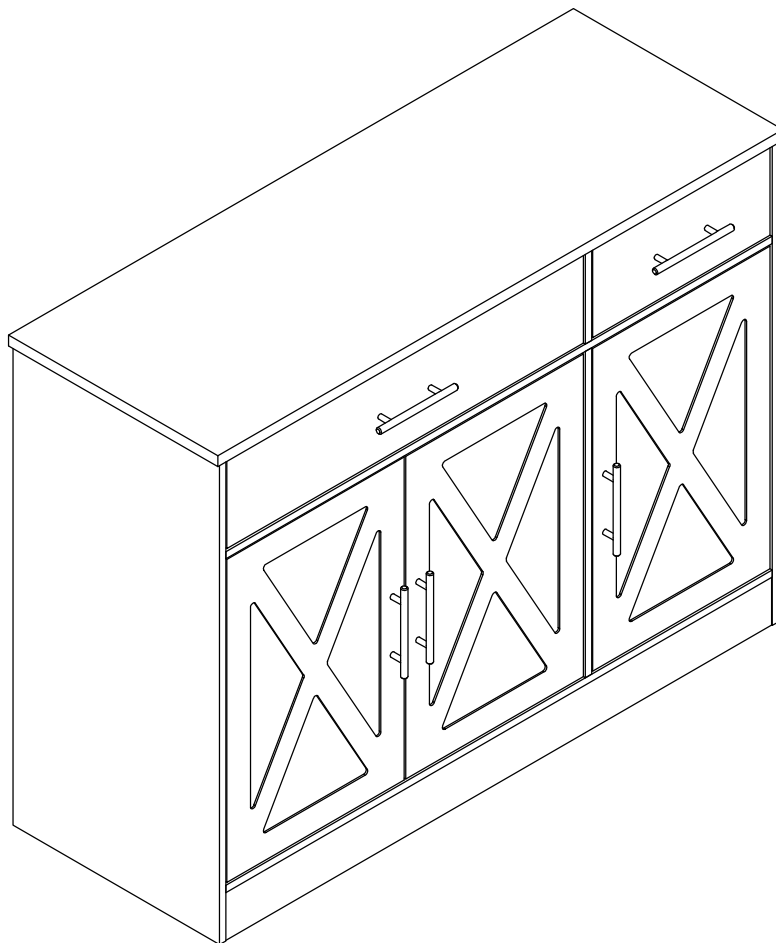

Thank you for shopping with us!

If any part is missing, broken upon receipt or you need any help from us.

For the FASTEST SOLUTION, please FIRSTLY CONTACT US at our
after-sales email:

CSsince1987@hotmail. com!

Notes:

1. ASSEMBLY PREPARATION AND TIPS FOR ASSEMBLY

- 1). Remove all packaging materials, staples and packing straps from the carton.
- 2). Refer to Parts List and Hardware List, and ensure parts and hardware are correct before assembly.
Contact customer service for missing parts.
- 3). Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent scratch and damage to parts.
- 4). Allow ample room for assembly and assemble the product near where the product will be placed.
- 5). During assembly, do not over-tighten any fittings as this may cause damage.
- 6). Always place the product on a flat, level surface.

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
2. CARE AND MAINTENANCE

- 1). KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
- 2). Wipe clean with a soft, dry cloth; avoid the use of harsh chemicals or household cleaners as they may damage the exterior finish of the furniture.
- 3). Hardware may loosen over time. Periodically, check that all connections are tight; re-tighten as necessary.









3. TIPS TO PROTECT & CARE FOR YOUR FURNITURE

- 1). Avoid placing your furniture in direct sunlight, as sunlight causes fading.
- 2). Use a protective pad when writing on the furniture surface.
- 3). Use cutting boards and trivets for food preparation in order to avoid damaging the top for the unit.


PART LIST

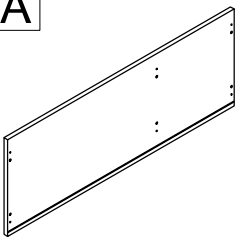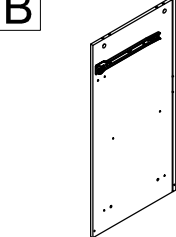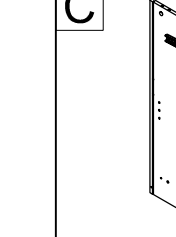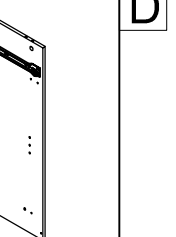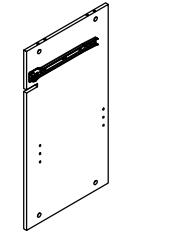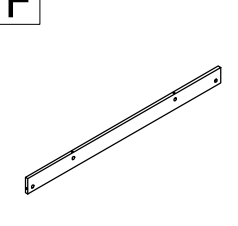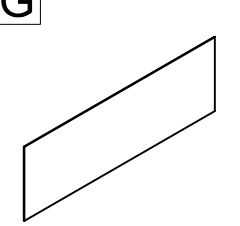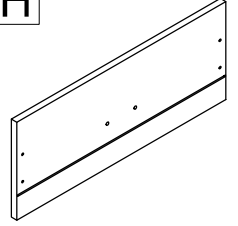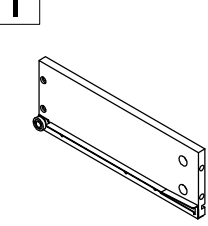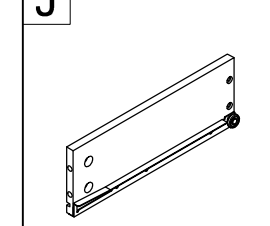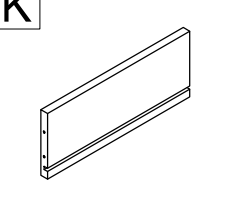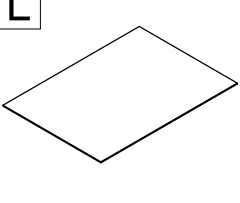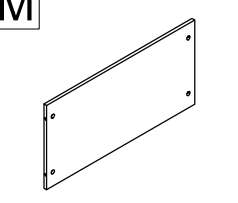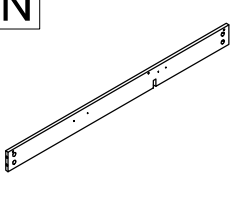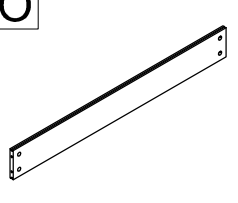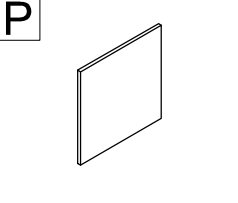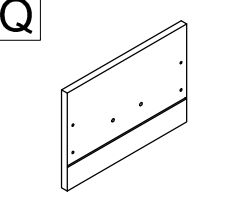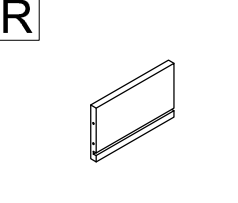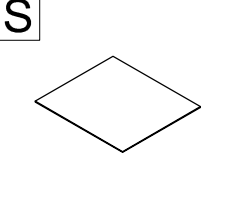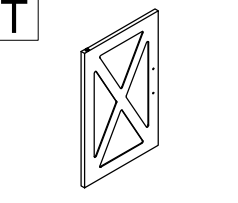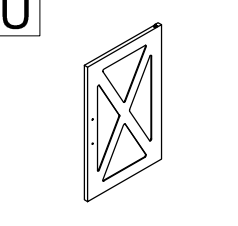A 	B 	C 	D 	E 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Partition Panel 1 PC	Bottom Panel 1 PC
F 	G 	H 	I 	J 
Foot Board 2 PCS	Back Panel 2 PCS	Large Drawer Front Panel 1 PC	Drawer Left Panel 2 PCS	Drawer Right Panel 2 PCS
K 	L 	M 	N 	O 
Large Drawer Back Panel 1 PC	Large Drawer Bottom Panel 1 PC	Fixed Shelf Panel 1 PC	Front Rail 1 PC	Back Rail 1 PC
P 	Q 	R 	S 	T 
Adjustable Shelf 1 PC	Small Drawer Front Panel 1 PC	Small Drawer Back Panel 1 PC	Small Drawer Bottom Panel 1 PC	Left Door 1 PC
U 				
Center / Right Door 2 PCS				

        
HARDWARE LIST
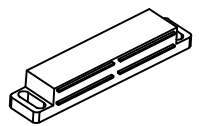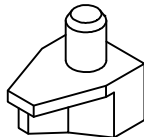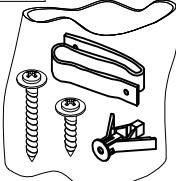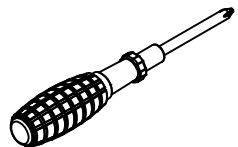
#1  Ø3*12mm Screw 3 PCS (Extra 1)	#2  Ø8*30mm Wood Dowel 12PCS (Extra 4)	#3  Ø3*30mm Screw 8PCS (Extra 2)	#4  Ø6*35mm Cam-bolt 40PCS (Extra 4)	#5  Ø15*9mm Cam-lock 40PCS(Extra 4)
#6  150*32*Ø12mm Handle 5 PCS	#7  M4*20mm Round Head Bolt 10 PCS (Extra 2)	#8  14*10mm Back Bracket 8 PCS (Extra 2)	#9  Ø3.5*14mm Screw 12 PCS (Extra 2)	#10  70*17*13mm Double Door Magnet 1 PC
#11  45*17*12mm Single Door Magnet 1 PC	#12  16*11*Ø5mm Shelf Holder 4 PCS (Extra 1)	#13  30*22*1mm Door Small Plate 3 PCS	#14  Safety Strap Kit 2 SET	 Phillips Screwdriver 1 PC

 ASSEMBLY OVERVIEW

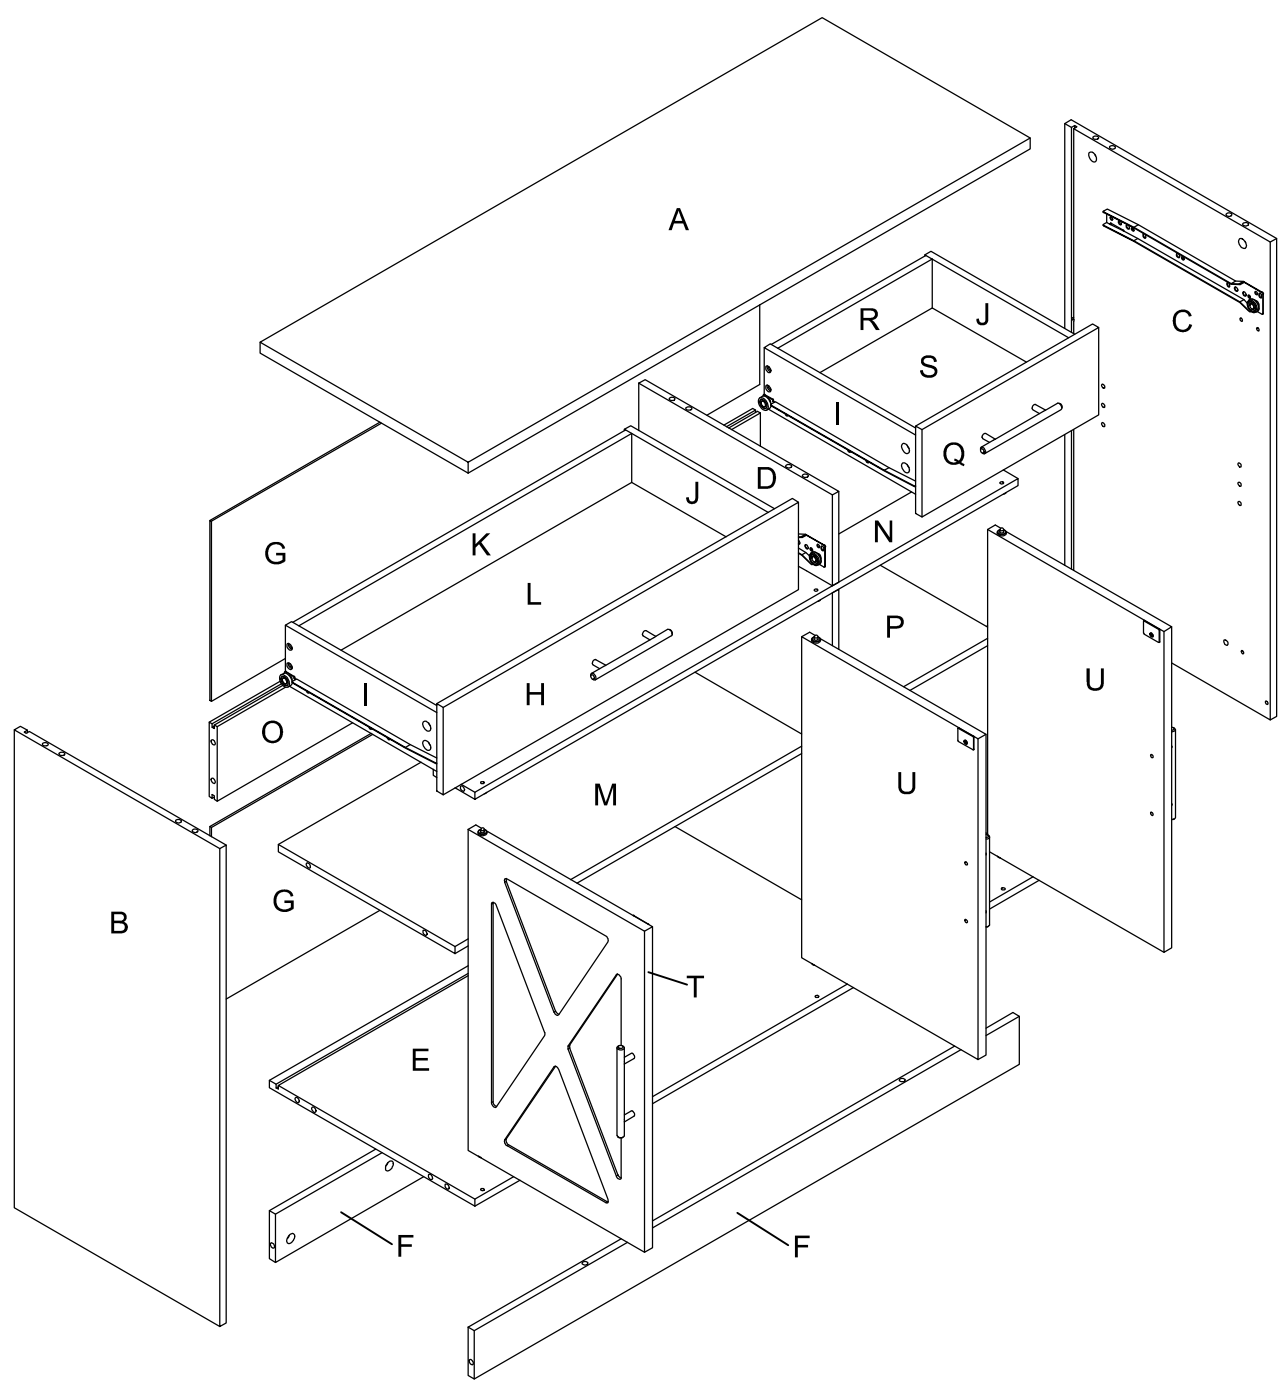

 Instructions For Fastening CAM-BOLT and CAM-LOCK




CAM-BOLT




CAM-LOCK

 
Tools Required




INSERTING AND TIGHTENING CAM-BOLT

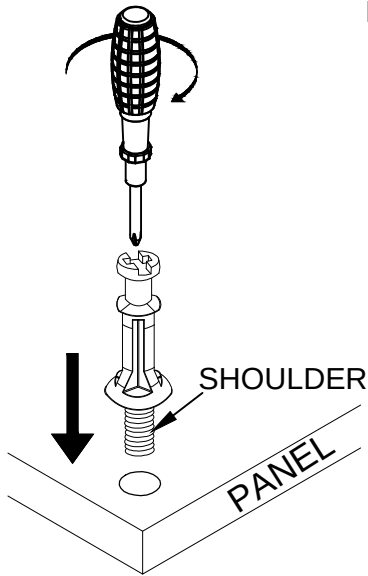 

 Place Cam-bolt on pre-drilled hole and screw in vertically

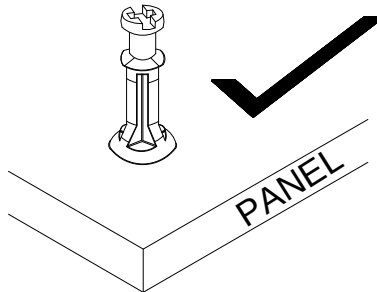

 
Shoulder is flushed (on the same level) with the panel.

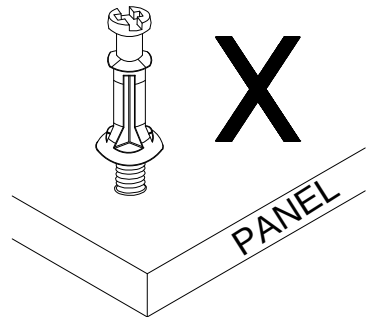


Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

 
INSERTING CAM-LOCK

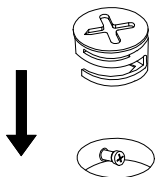

 Insert Cam-lock with arrow align to Cam-bolt head




CORRECT

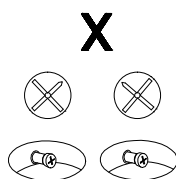 

WRONG



Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

 TIGHTENING CAM-LOCK














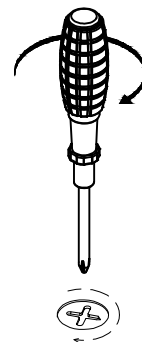


Use a Flat-head Screwdriver to turn Camlock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.

  
Step 1.

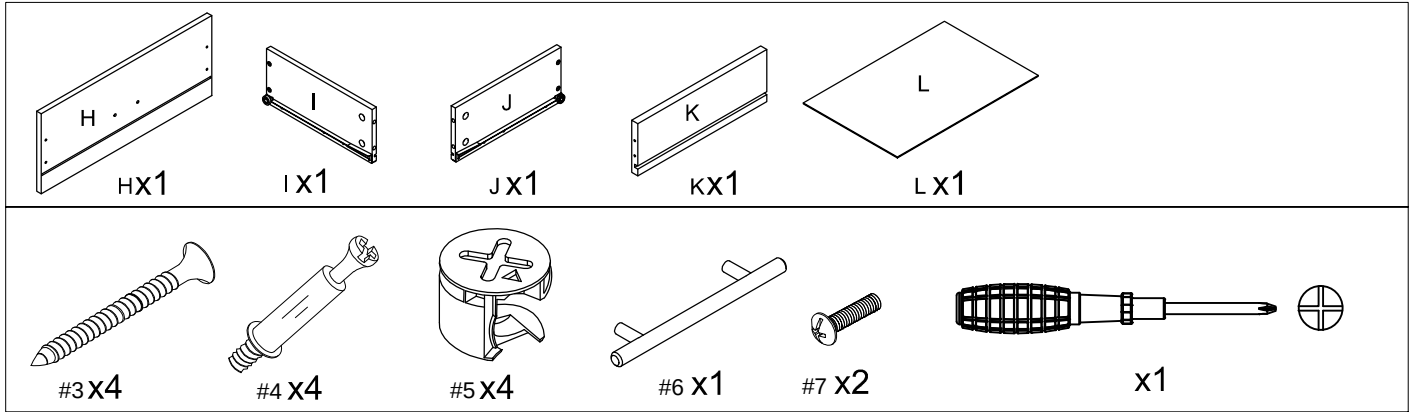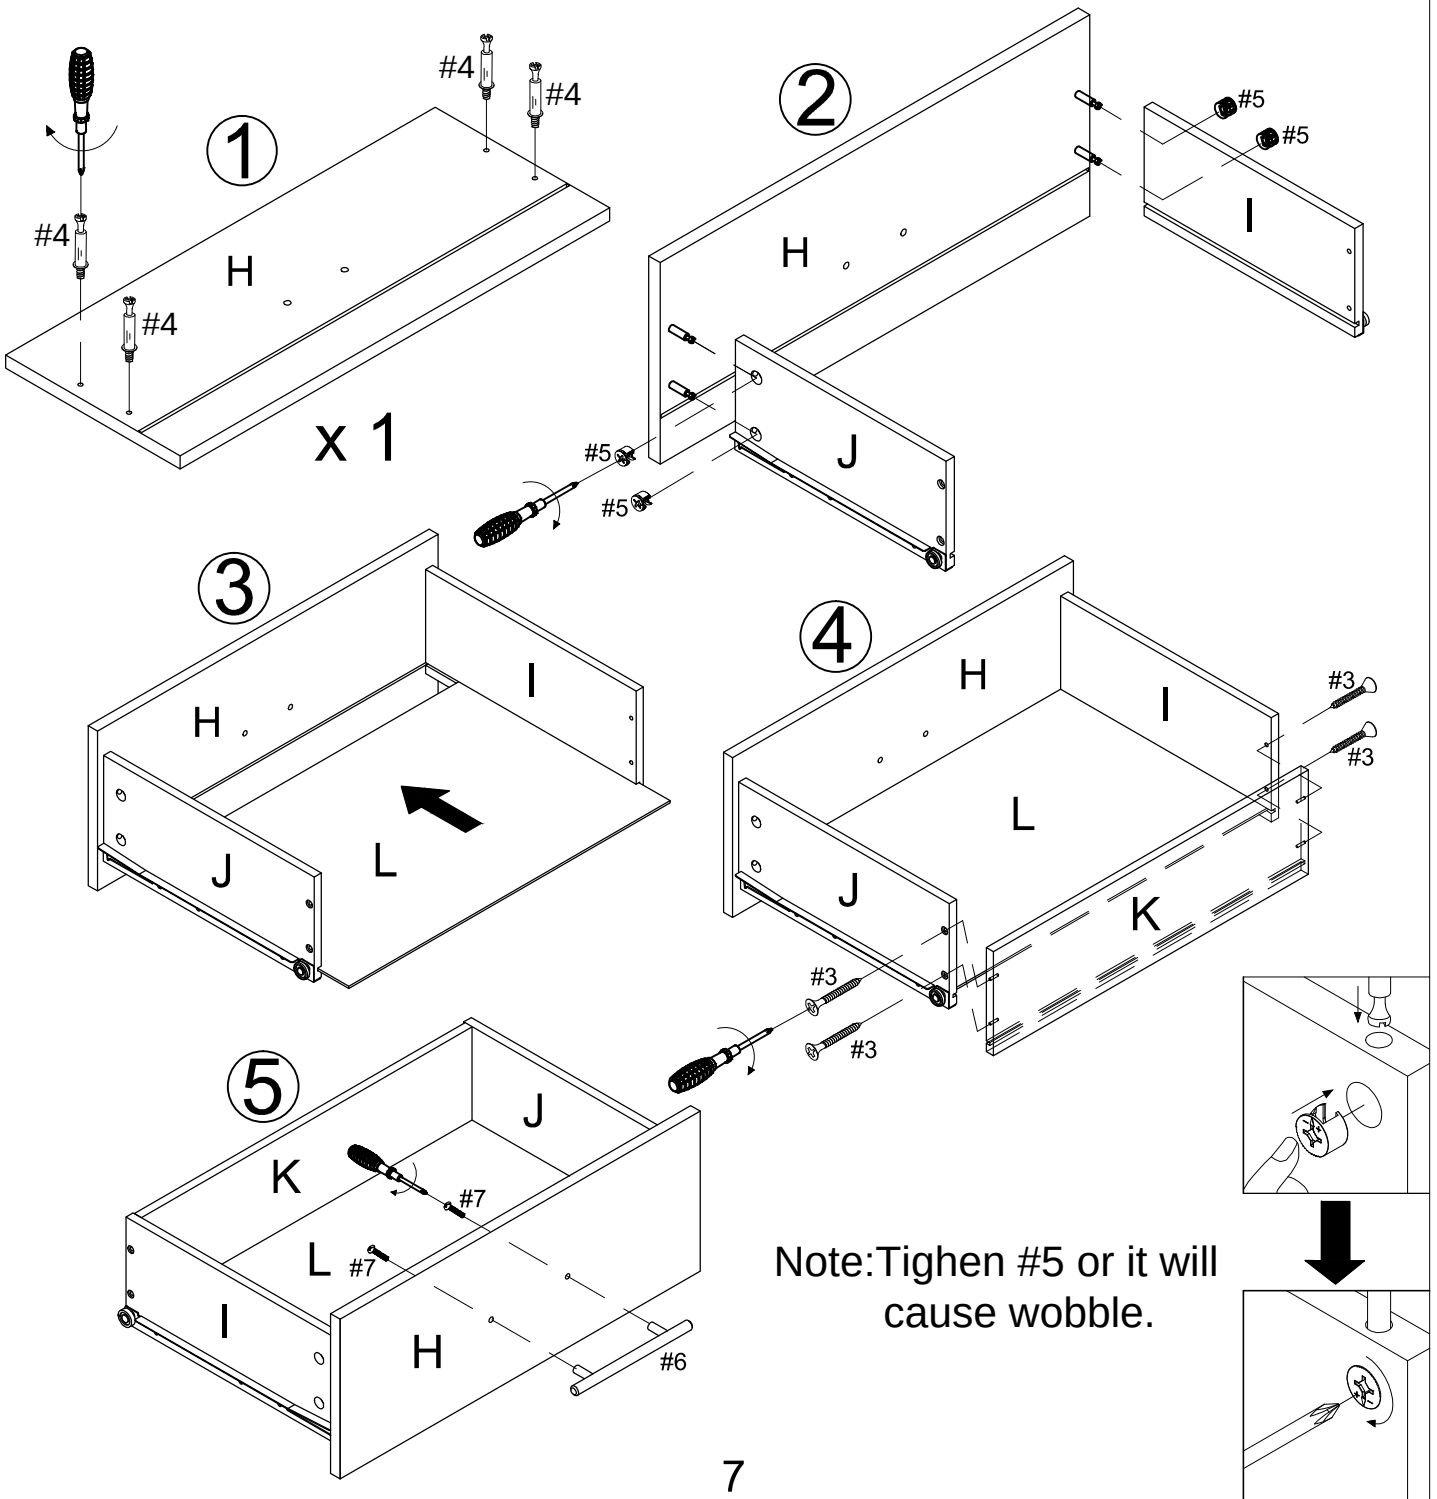

             
 
Step 2.

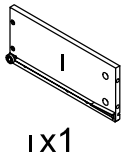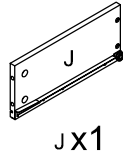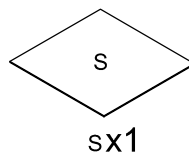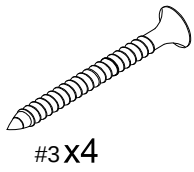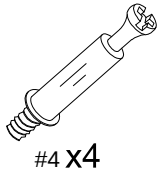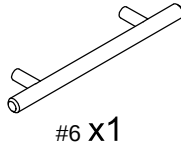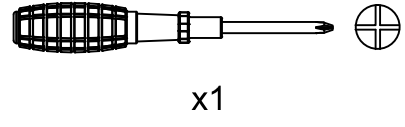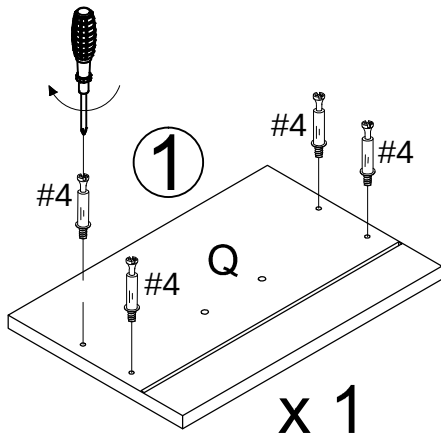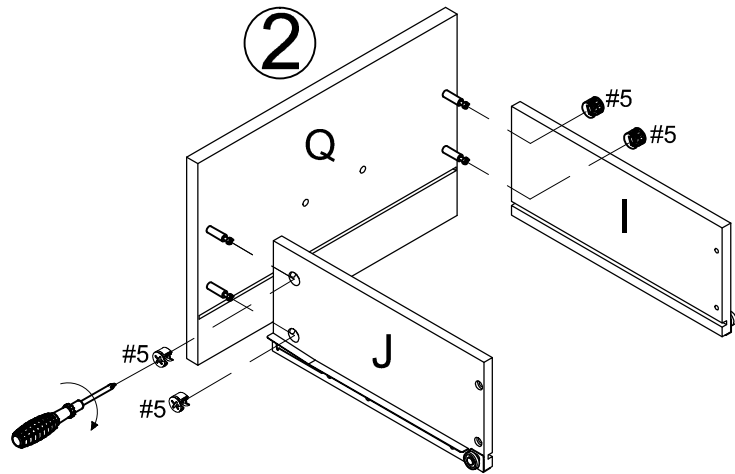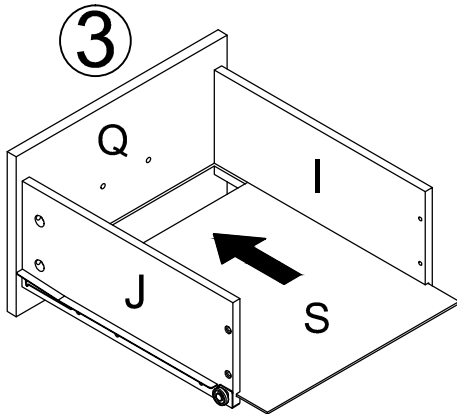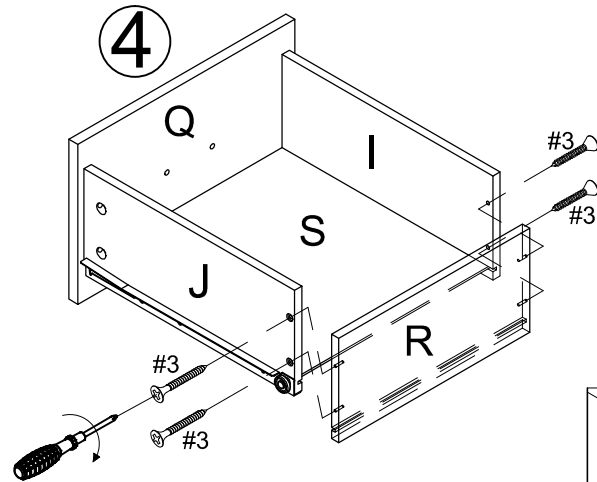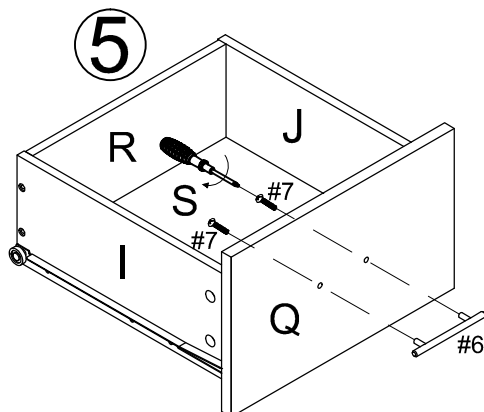

 
Note: Tighten #5 or it will cause wobble.

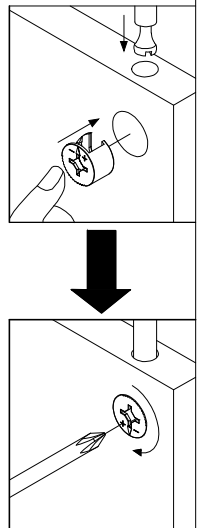

  
Step 3.

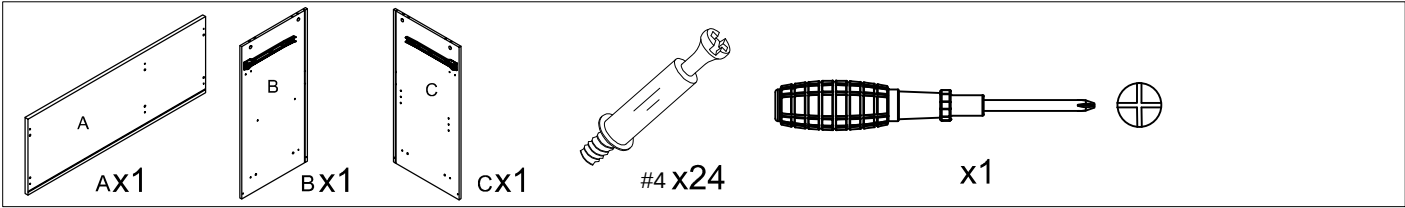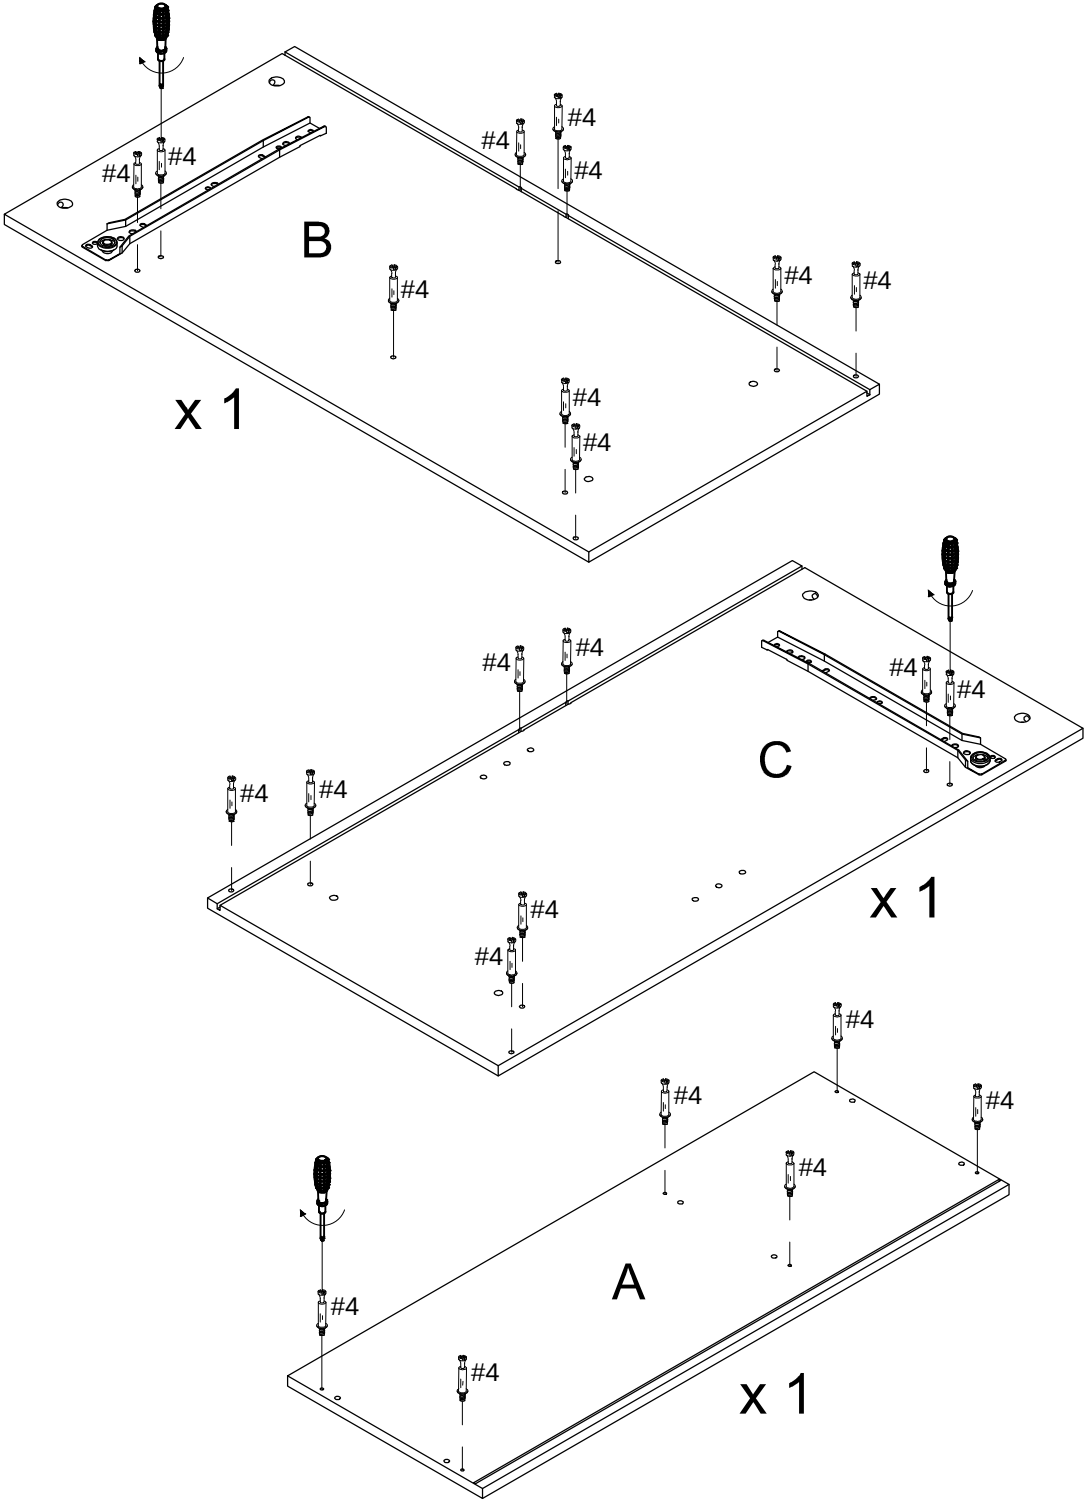

 
Step 4.

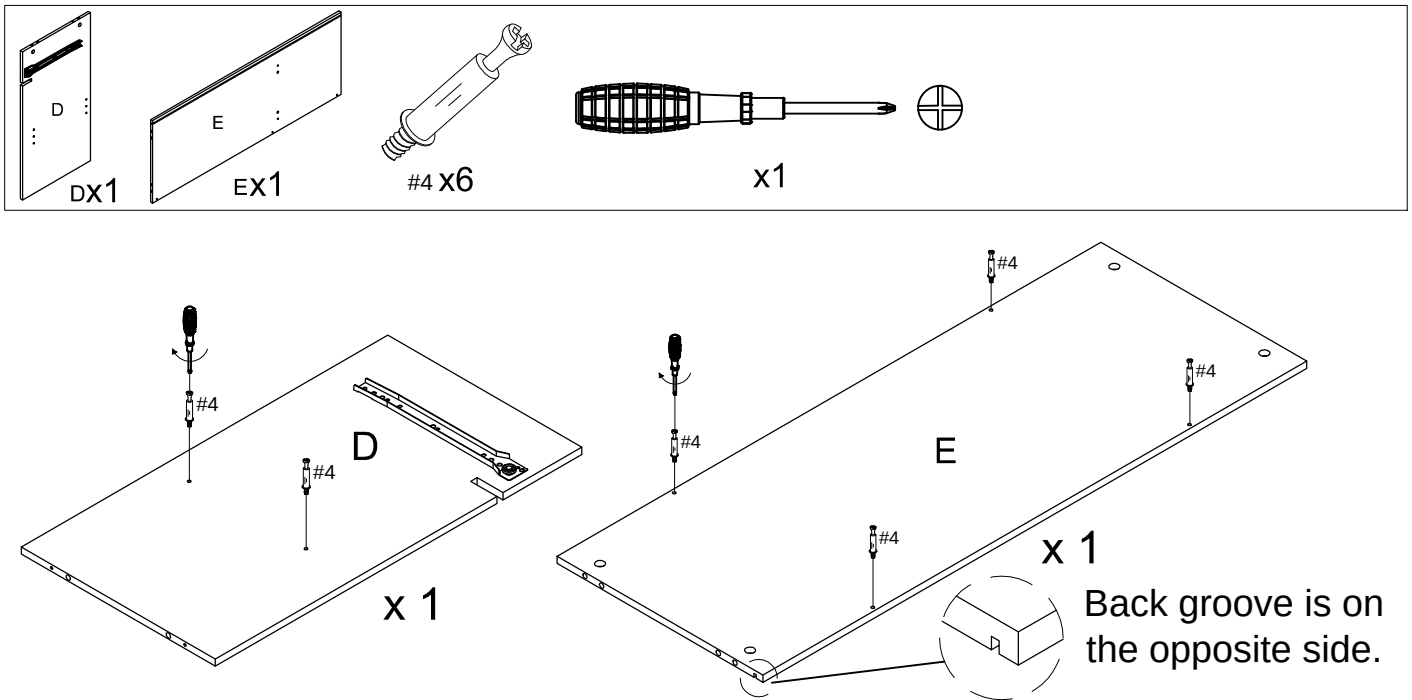

 Step 5.


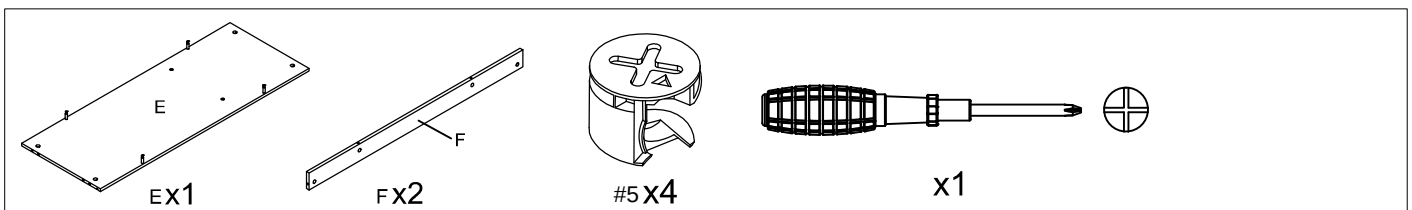


 Note: Fully tighten #5 or it will cause wobble.

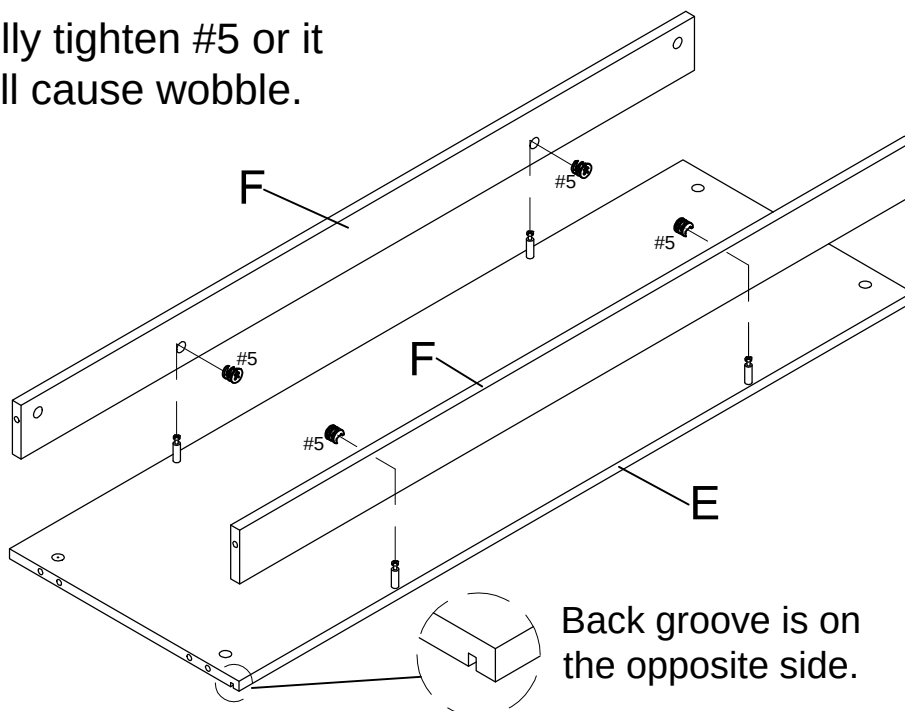


Back groove is on the opposite side.

  
Step 6.

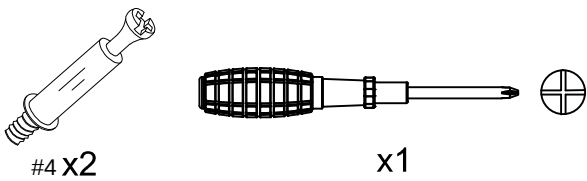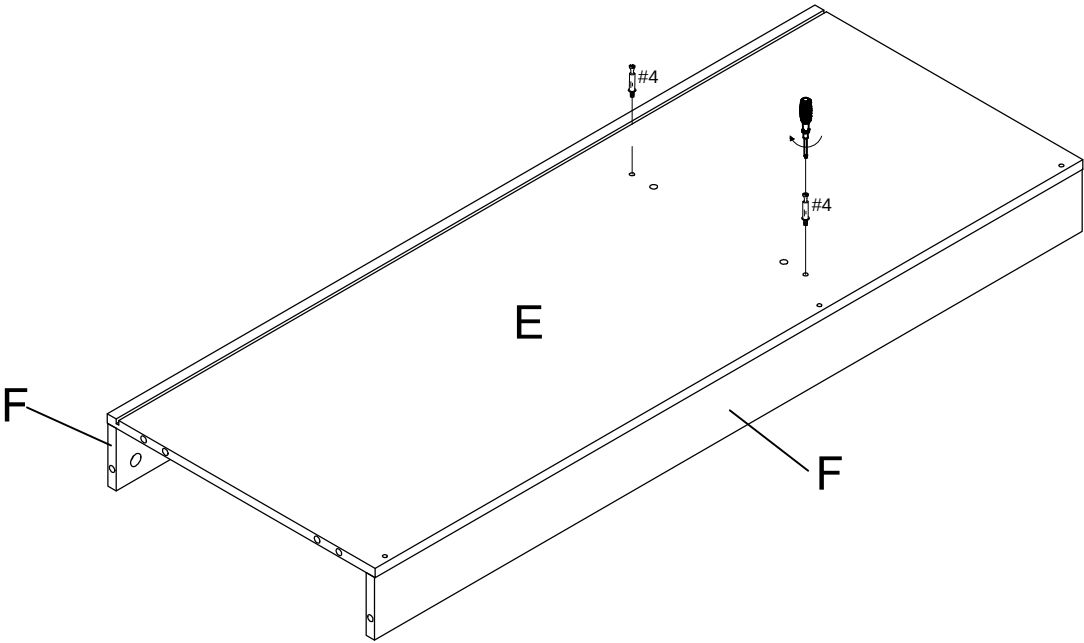


 
Step 7.

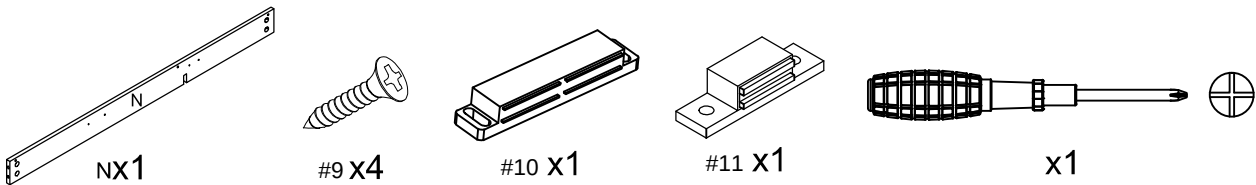


 
The magnet faces the smaller holes side.

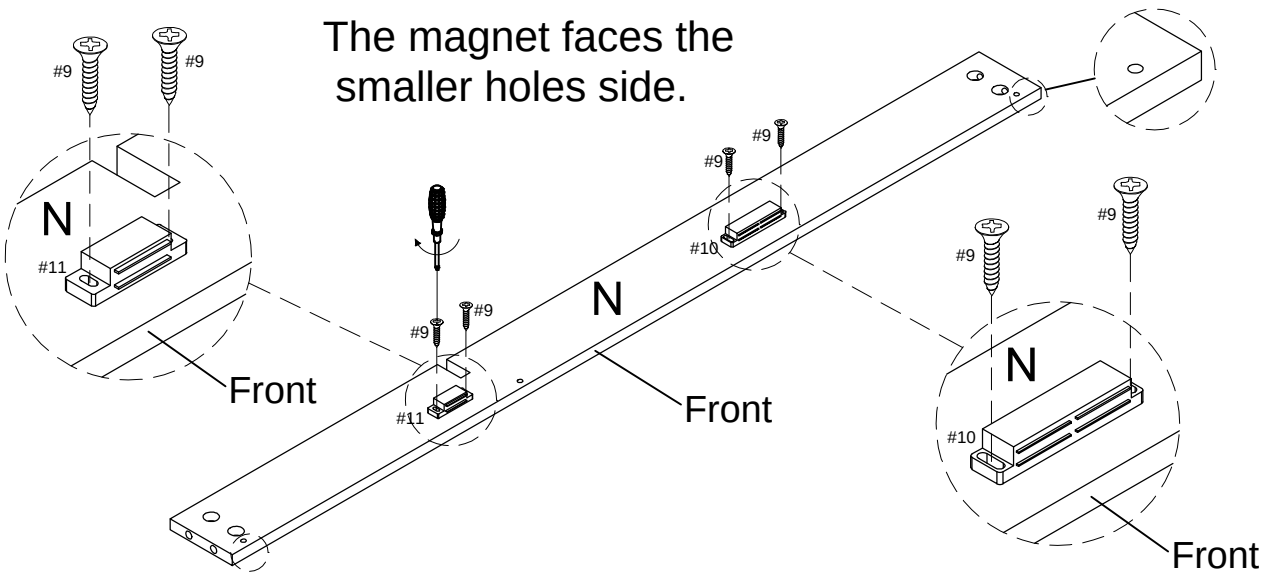

  
Step 8.

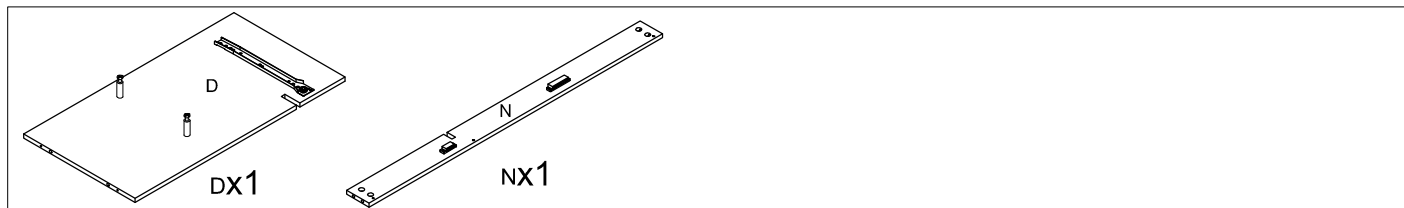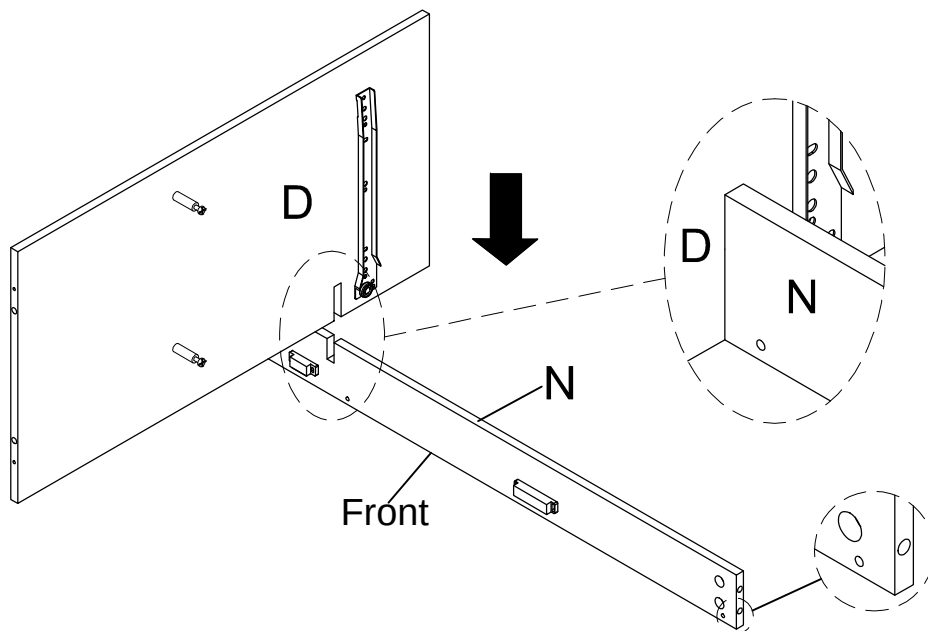

 
 
Step 9.

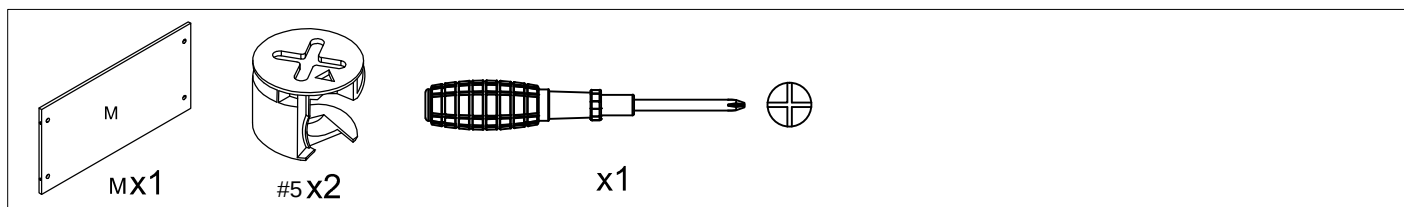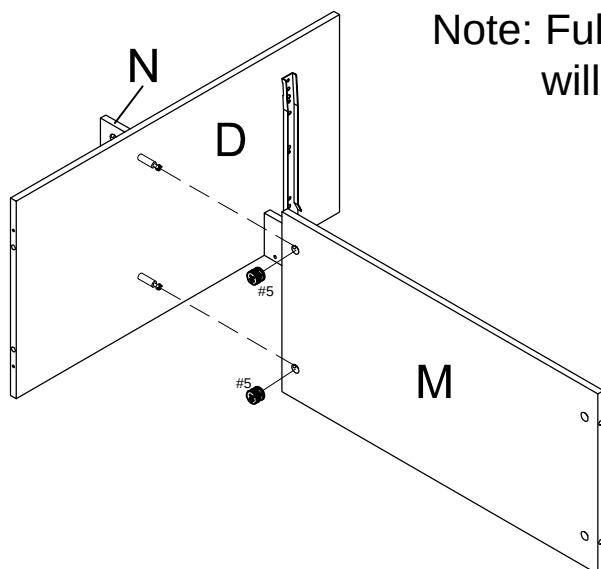

 
Note: Fully tighten #5 or it will cause wobble.

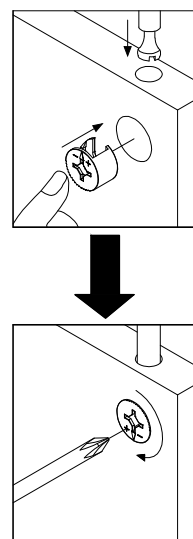

  
Step 10.

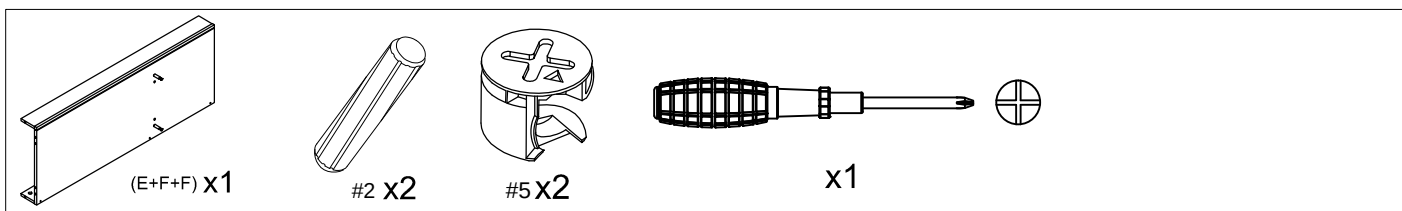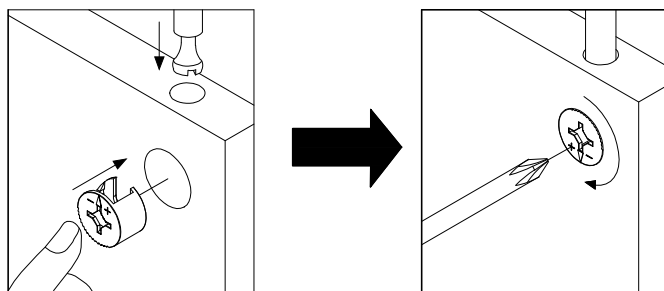


 
Note: Fully tighten #5 or it will cause wobble.

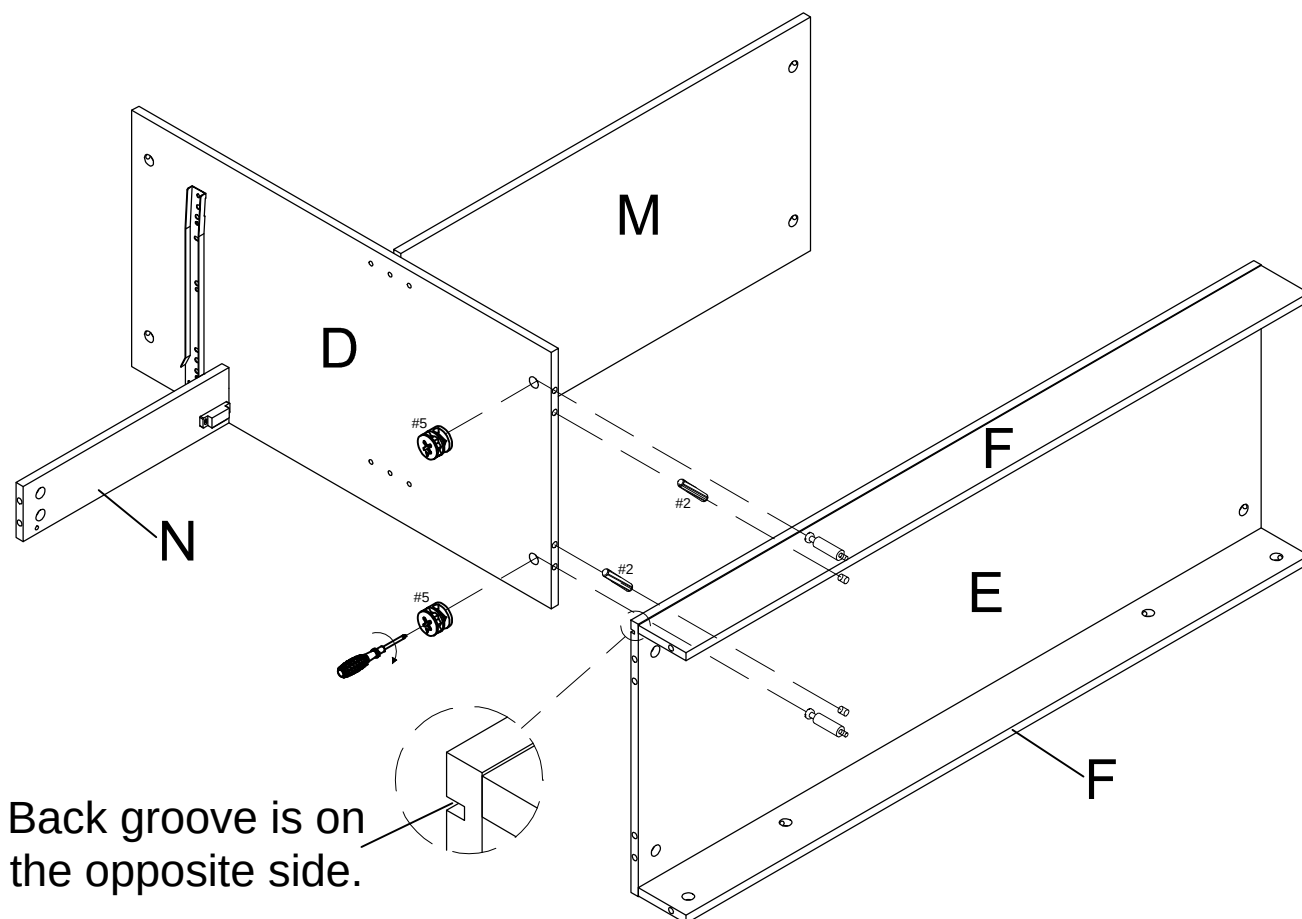

 
Step 11.

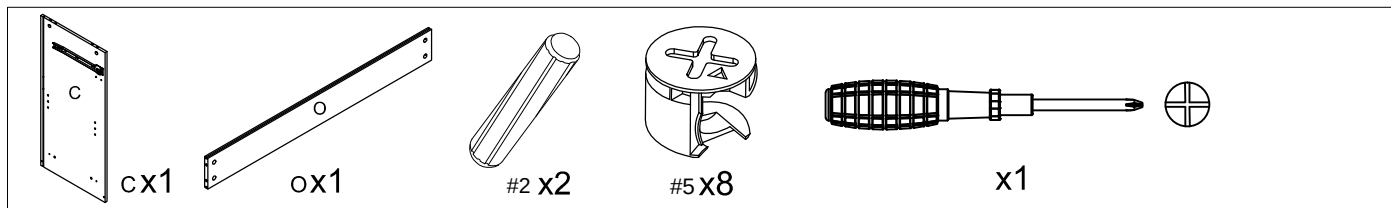

 
 
Note: Fully tighten #5 or it will cause wobble.

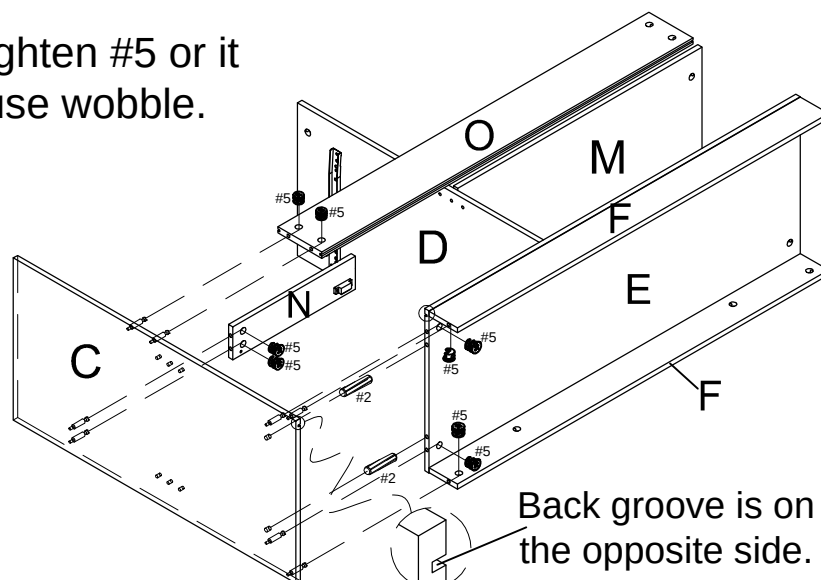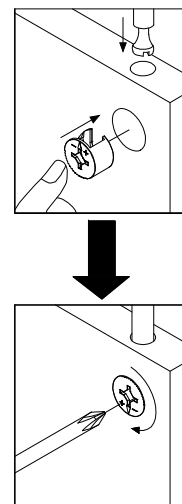

 Step 12.

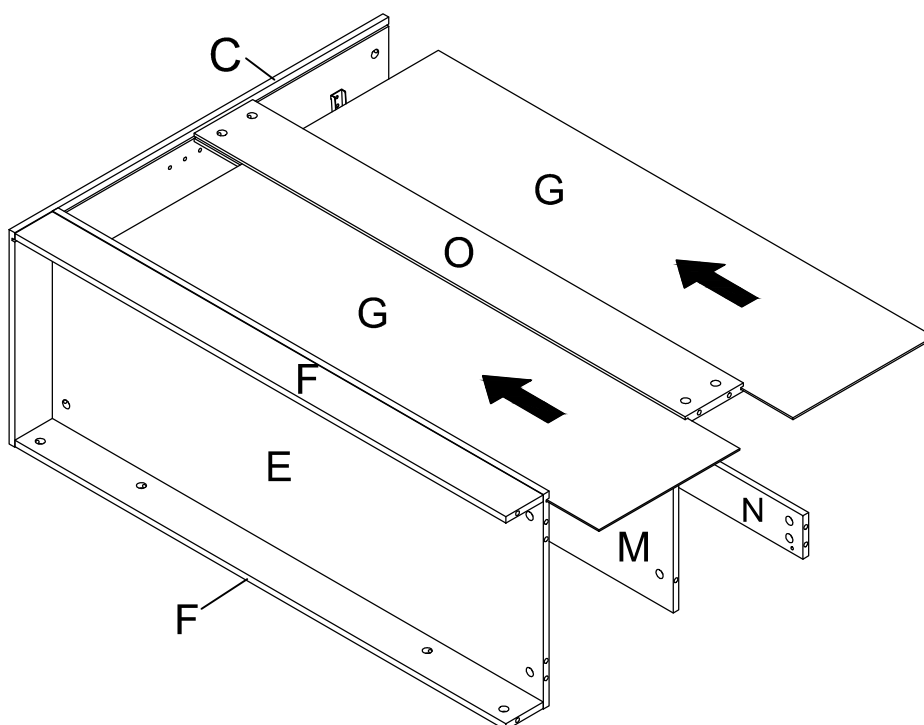


  Step 13.

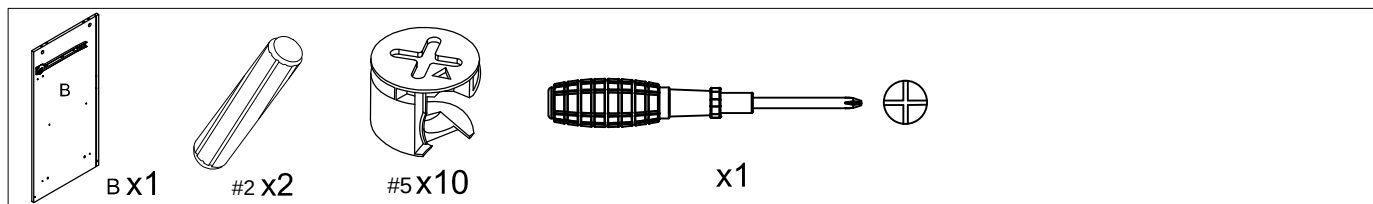
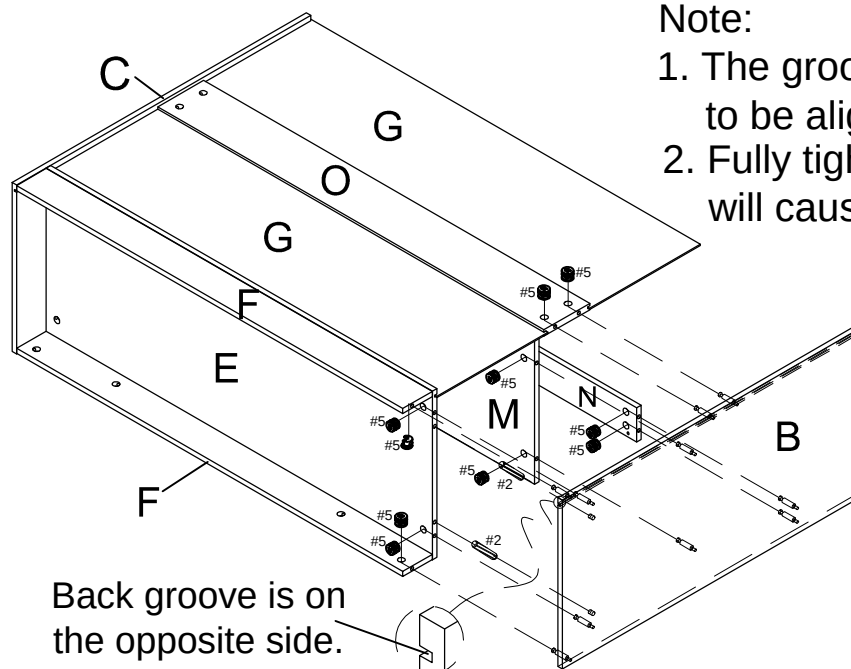


Note:

 1. The groove on B needs to be aligned with G.
2. Fully tighten #5 or it will cause wobble.

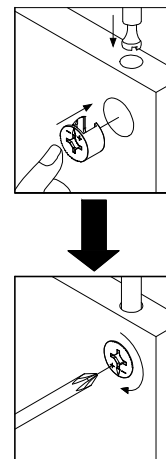


  Step 14.

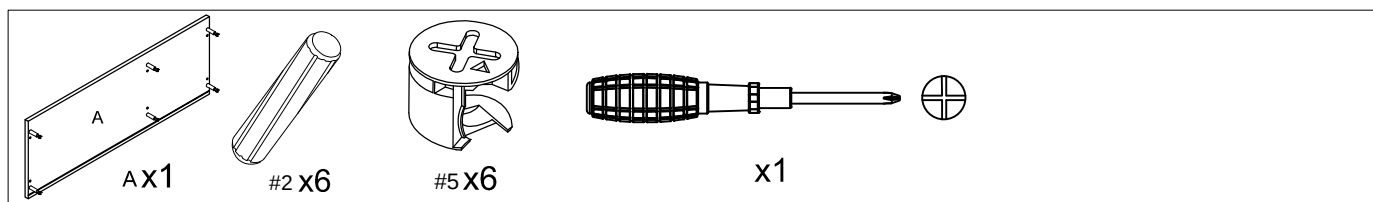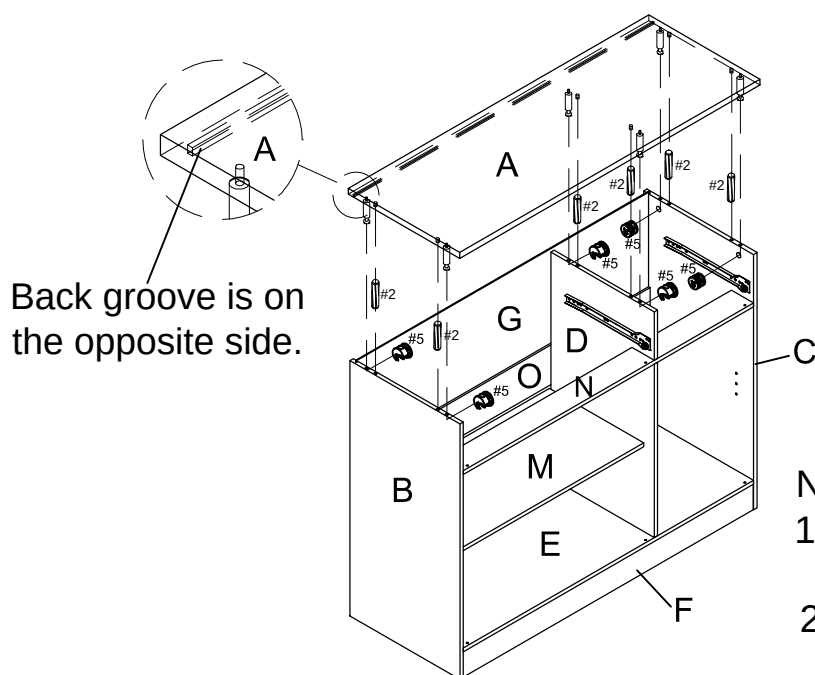


Note:

 
1. The groove on A needs to be aligned with G.
2. Fully tighten #5 or it will cause wobble.

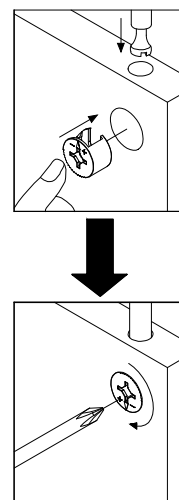

 
Step 15.

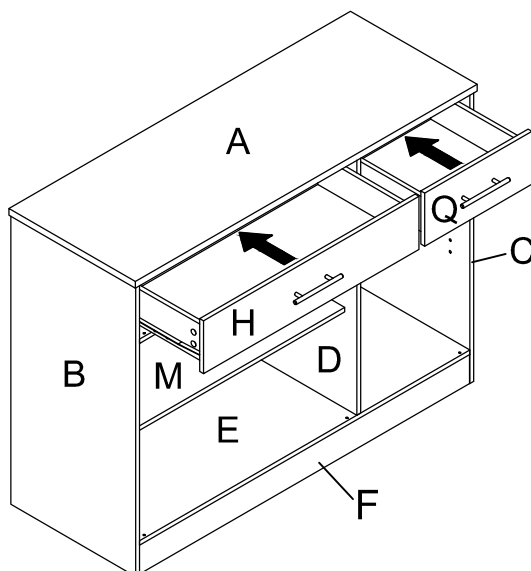



 
Step 16.

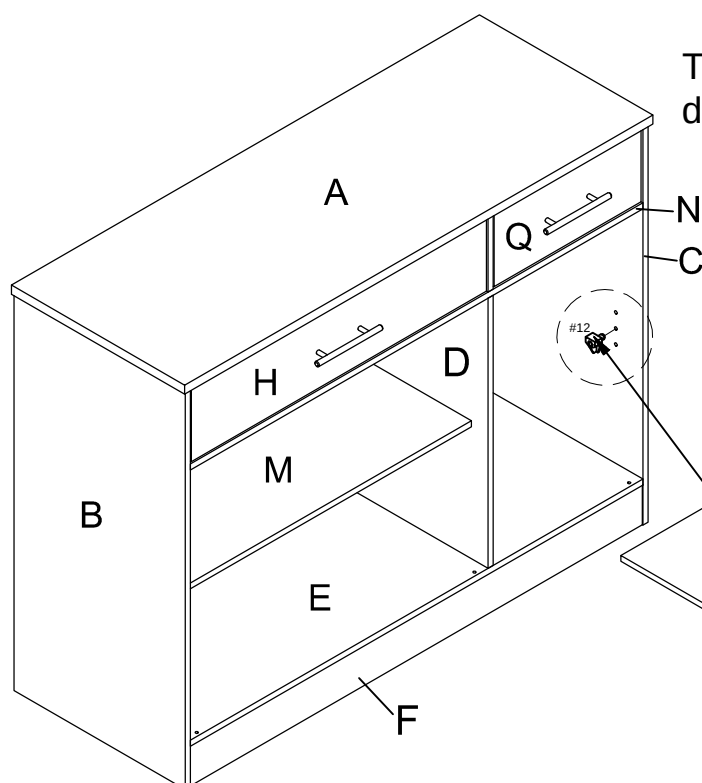


 
The shelf can be adjusted up and down with three heights.

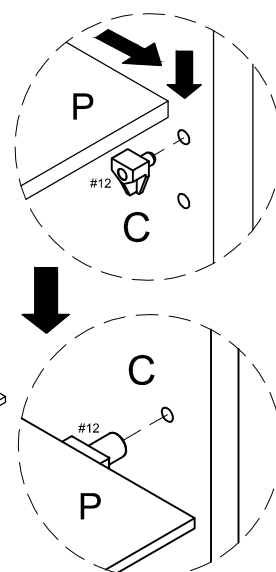

  
 
Step 17.


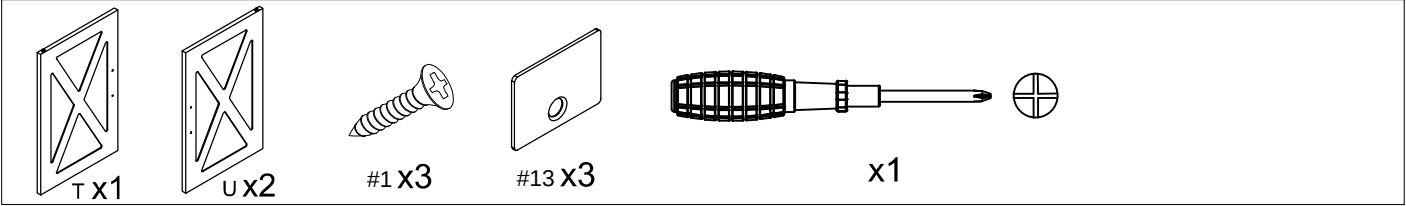
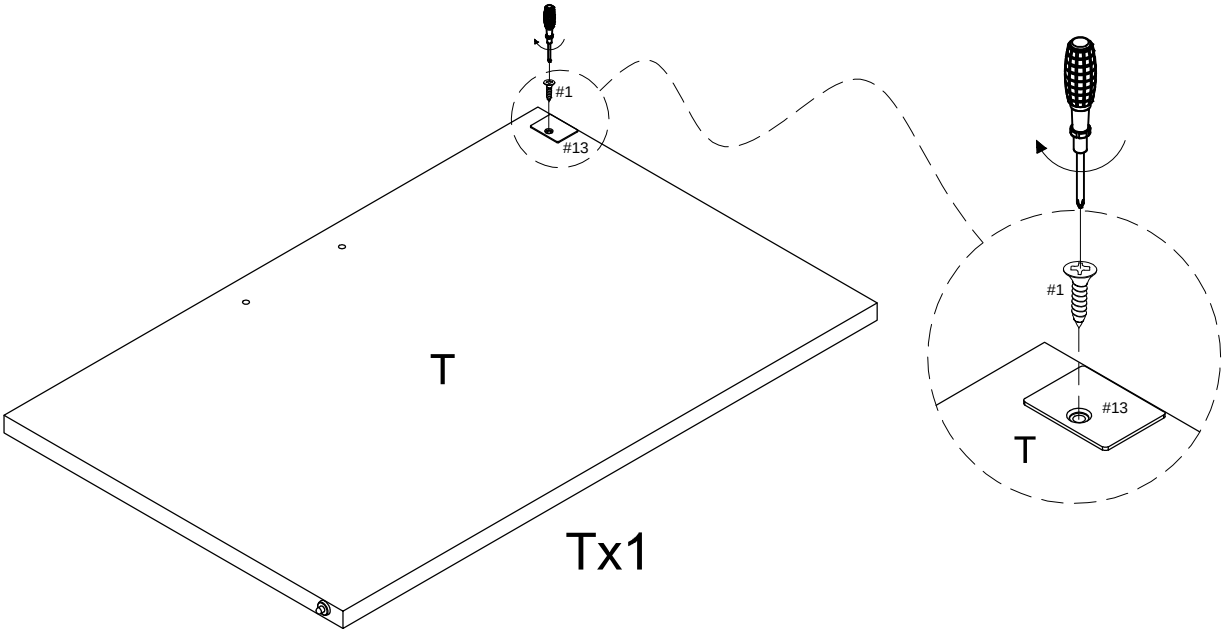
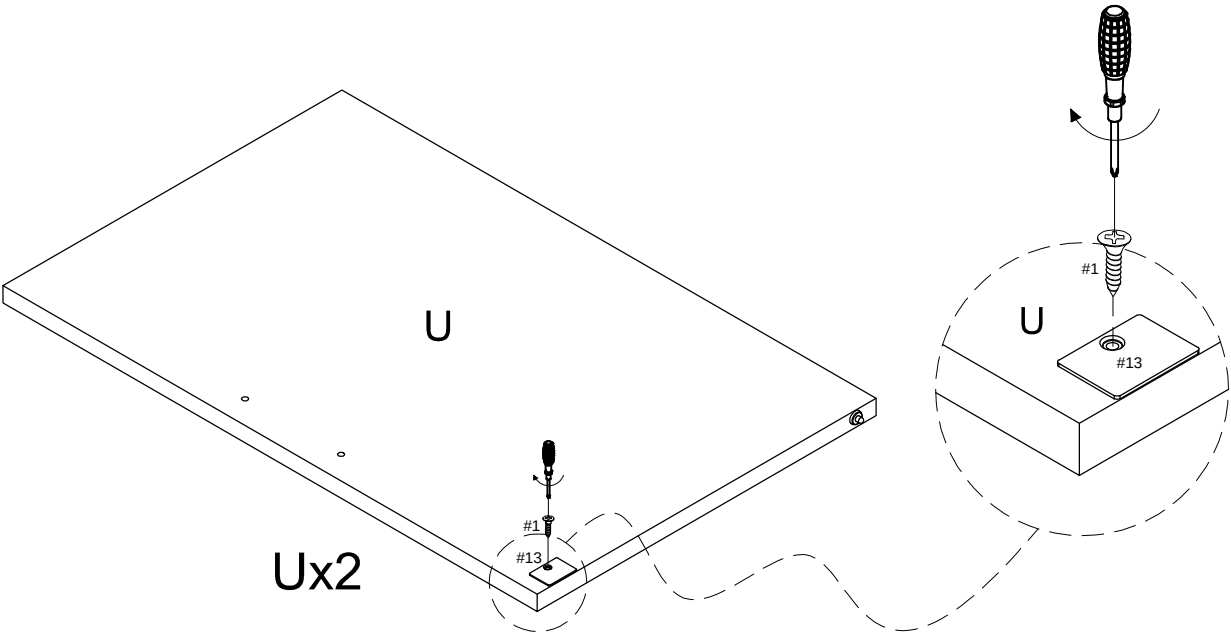


  
Step 18.

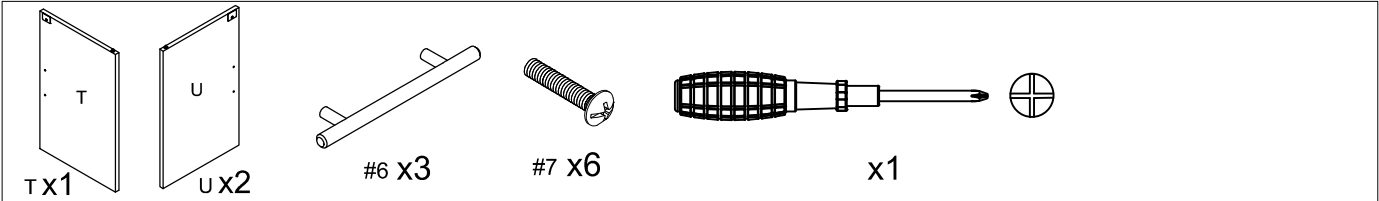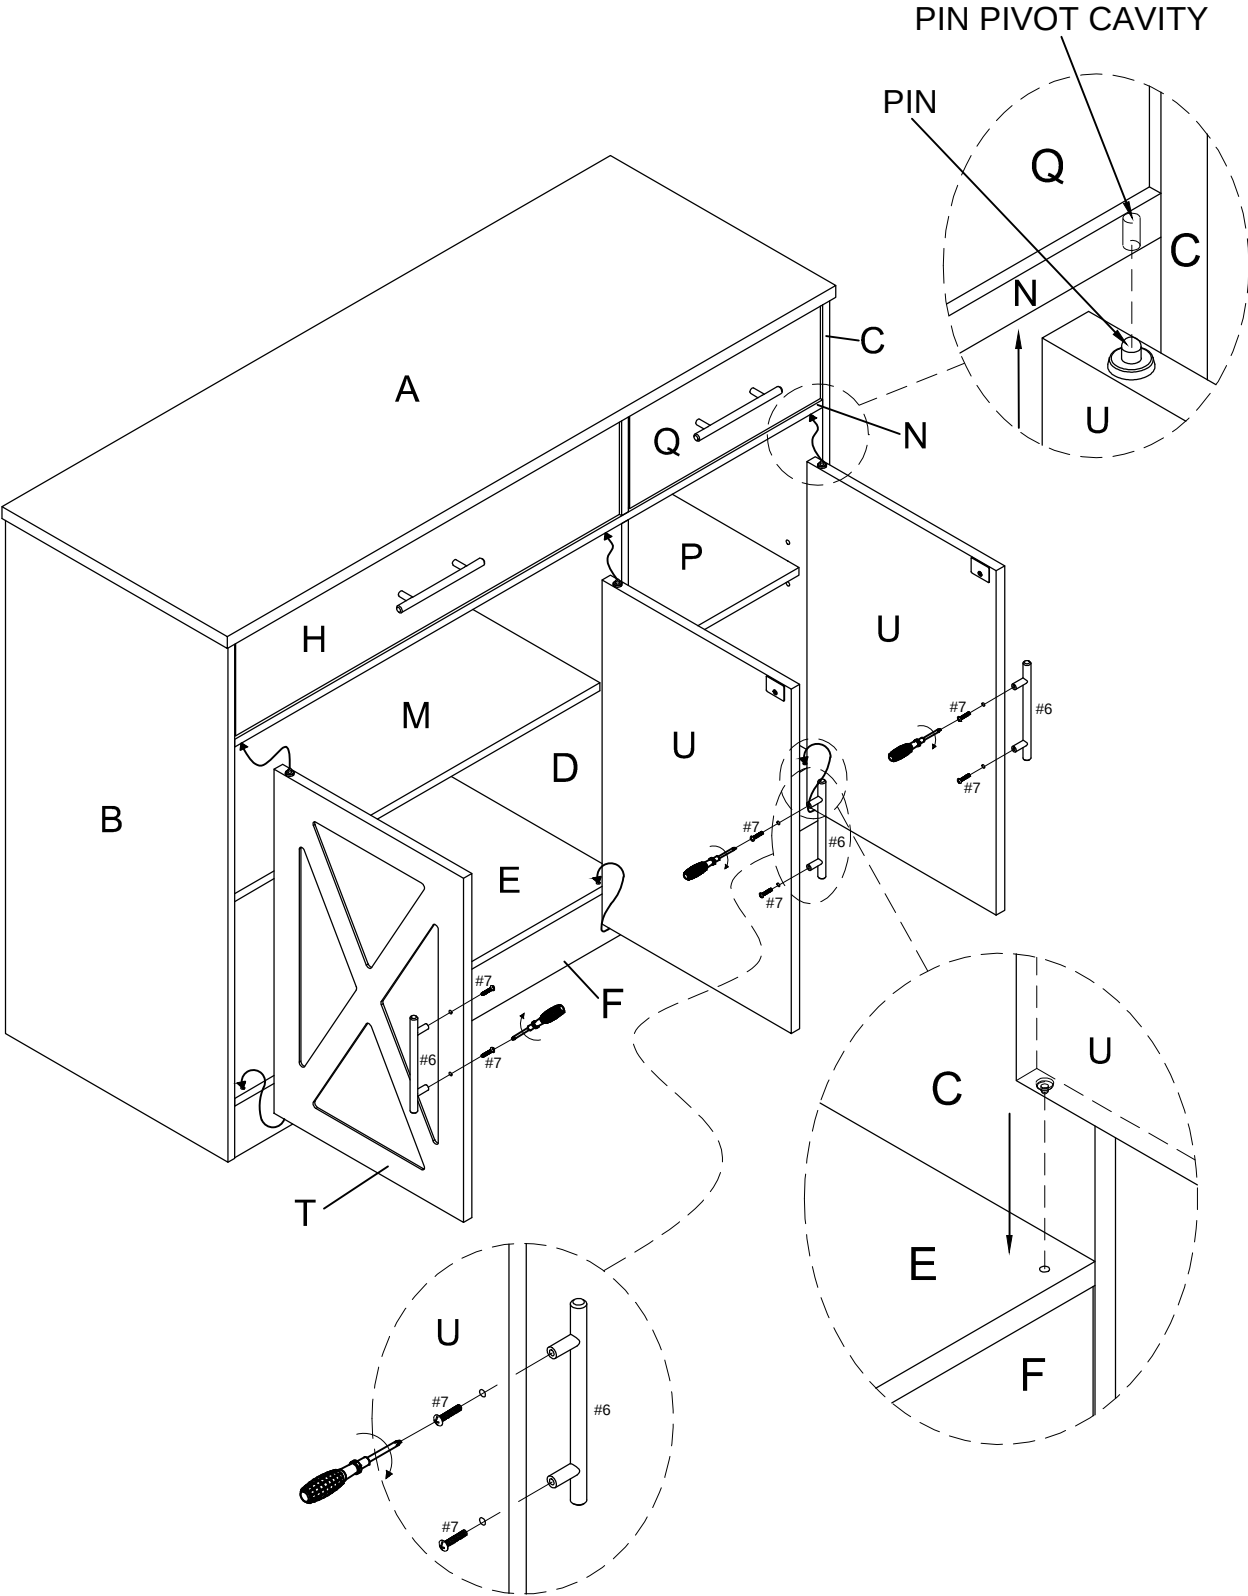

      Step 19.

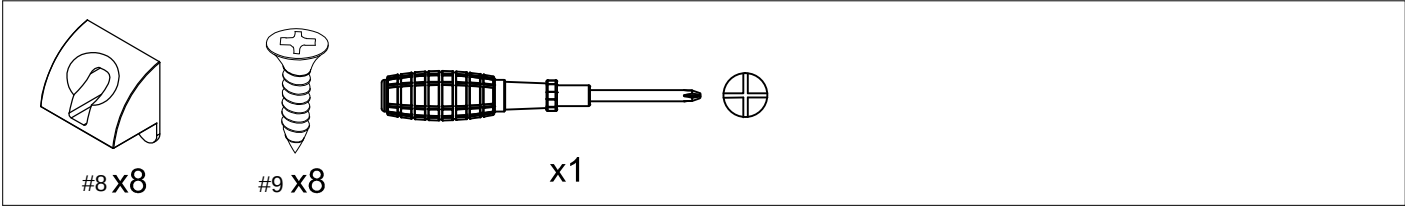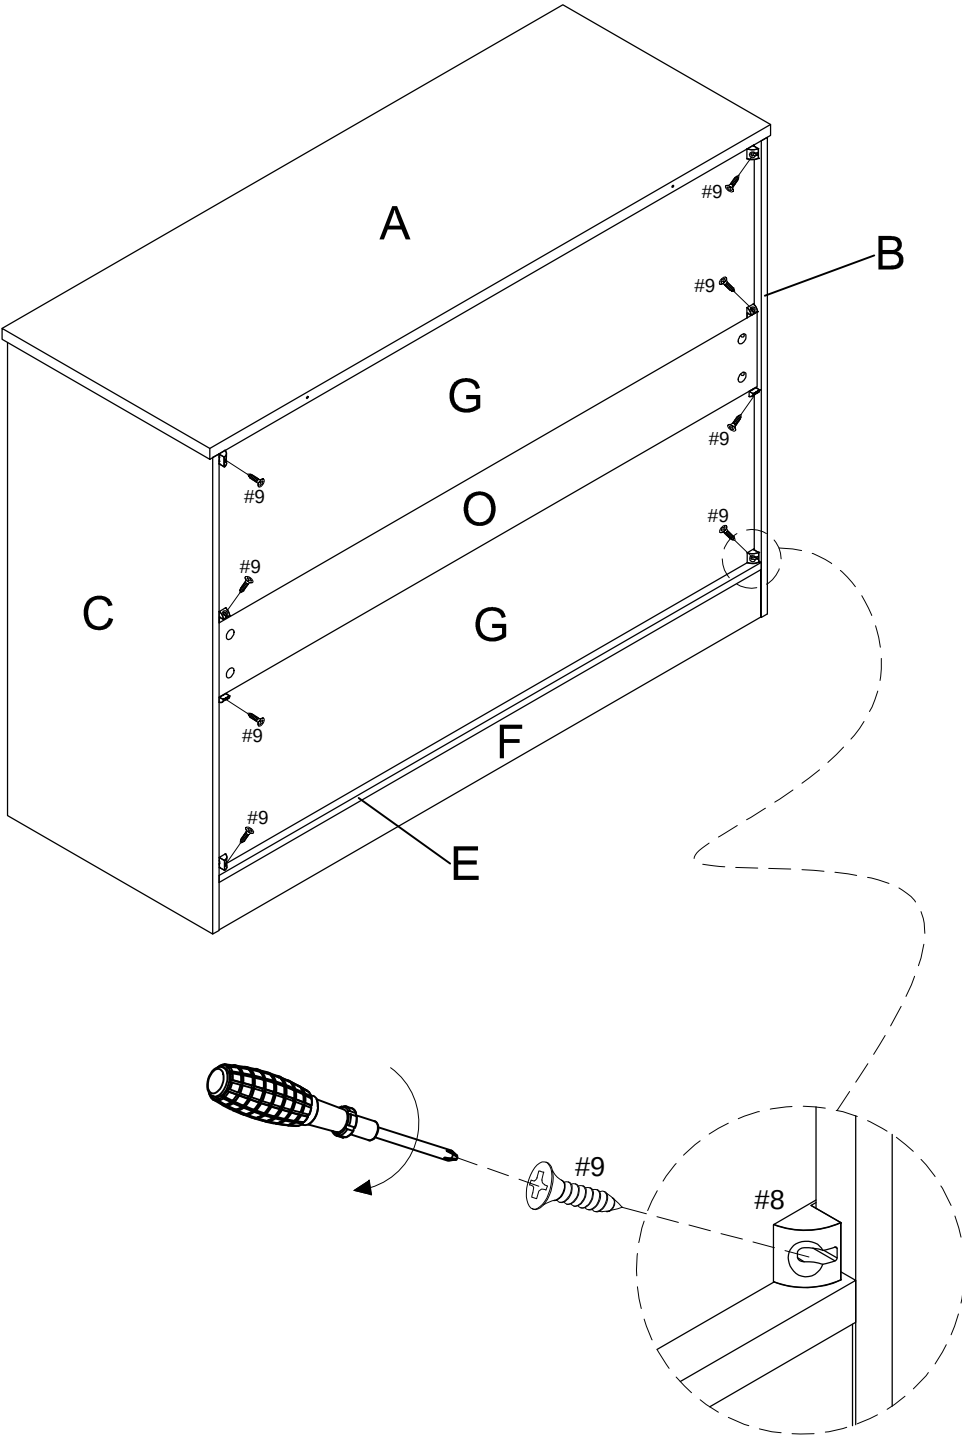
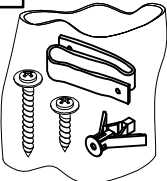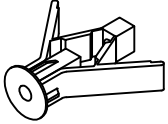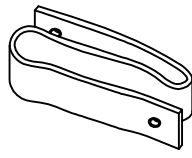
#14	A	B	C	D
				
Safety Strap Kit	Wall Anchor	Short Screw	Long Screw	Safety Wall Strap
2 SET	2 PCS	2 PCS	2 PCS	2 PCS

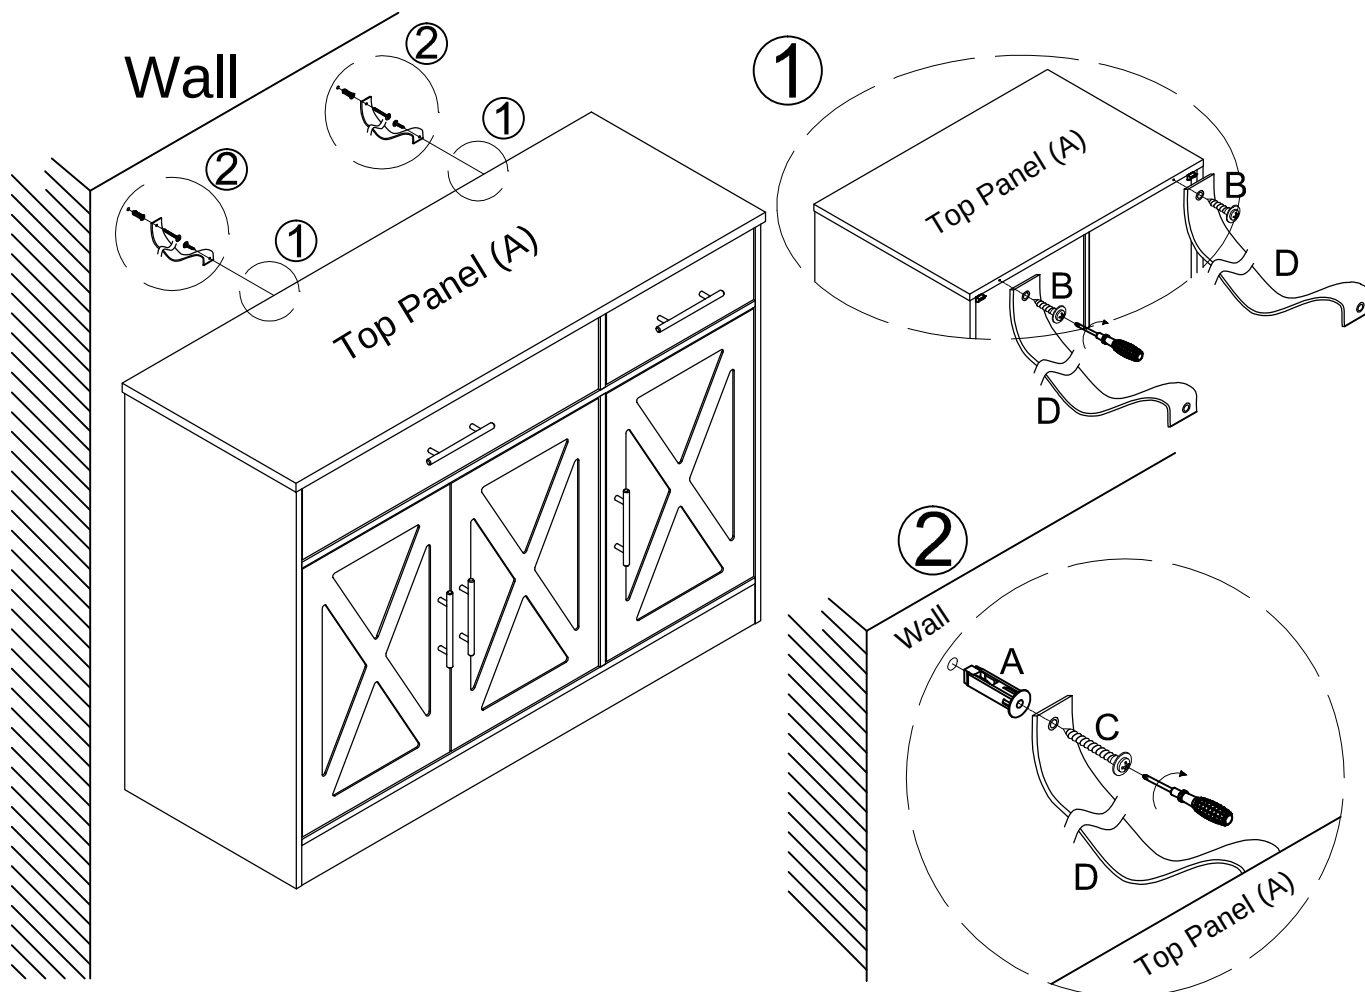 

SAFETY WALL STRAP INSTALLATION

Install the safety strap to prevent tip-over which can cause damage and/or injury.

1. Insert Short Screw (B) and Safety Strap (D) to screw onto the Back edge of Top Panel (A). Use a Phillips screwdriver to drive (B).
2. At the location where you want to secure the unit, drill a hole to fit Wall Anchor (A) snugly. The drilled hole has to level with safety strap on the back edge of (A).
3. Next, fit Wall Anchor (A) into the drilled hole.
4. Insert Long Screw (C) and Safety Strap (D) to screw into Wall Anchor (A). Use a Phillips screwdriver to drive (C).

The assembly of the buffet unit is complete.

Warning:

Seller is responsible for the product-related issues occurred upon receipt, but will not be responsible for the personal injury, property damage or loss resulting from the incorrect assembly, improper use, inadequate maintenance or neglect of this product.