

# TABLE OF CONTENTS

<b>IMPORTANT SAFEGUARDS</b>	<b>02</b>
<b>KNOW YOUR TOASTER</b>	<b>04</b>
<b>OPERATION</b>	<b>06</b>
<b>FOR THE FIRST USE</b>	<b>08</b>
<b>USING YOUR TOASTER</b>	<b>09</b>
<b>CAUTION</b>	<b>10</b>
<b>CLEANING AND MAINTENANCE</b>	<b>11</b>

# IMPORTANT SAFEGUARDS

**When using electrical appliance. Basic safety precautions should always be followed including the following:**

- Read all instructions.
- Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
- **Do not** touch hot surface. Use handles or knobs only.
- To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or other liquid.
- Close supervision is necessary when it is used by or near children.
- Unplug unit from outlet when not in use and before cleaning.
- **Do not** operate any appliance with a damaged cord or plug, or in abnormal state. If its main cord is damaged, it must be replaced by the manufacturer, the nearest service agent or a qualified person.
- **Do not** let the cord hang over edge of table or counter, or touch hot surface.
- **Do not** place on or near a hot gas or electric burner, or in a heated oven.
- **Do not** use the appliance for other than its intended use.
- Oversize food, metal foil packages or utensils must not be inserted in the toaster as they may cause fire or electric shock.
- Bread may burn, so toasters must not be used near or below curtains and other combustible materials, and must be watched.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- **Don't** attempt to dislodge food when toaster is in operation
- Be sure to take the bread out carefully after toasting so as to avoid injuries.
- Keep the appliance and its cord out of reach of children less than 8 years.
- **Warning:** if toast of small bread slices less than 85mm length, you must pay attention to the potential risk of burning when taking out the slices.


- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- **Don't** use the appliance outdoors.
- This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments;
  - Farm houses;
  - By clients in hotels, motels and other residential type environments;
  - Bed and breakfast type environments.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

## **For Europe market:**


- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

- Keep the appliance and its cord out of reach of children less than 8 years.
- The surfaces are liable to get hot during use.
- The door or the outer surface may get hot when the appliance is operating.
- The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.
- The Hot surface warning symbol is marked on the appliance means that the appliance may be hot during use.
- Save these instructions.

## KNOW YOUR TOASTER

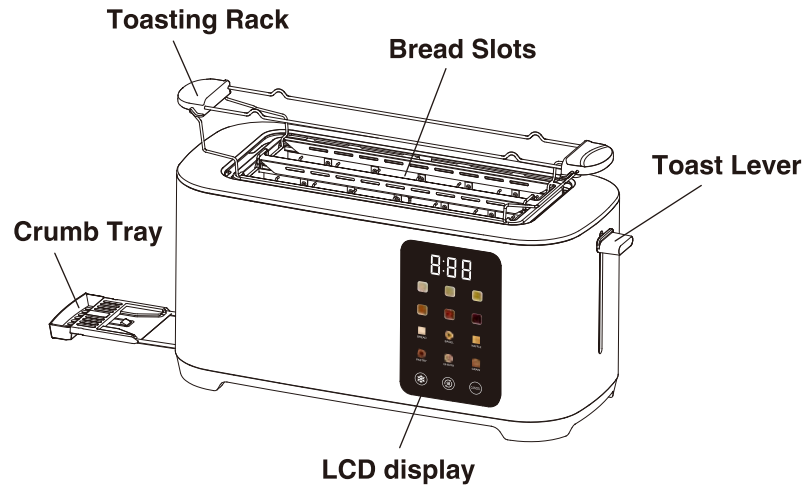

## LCD display

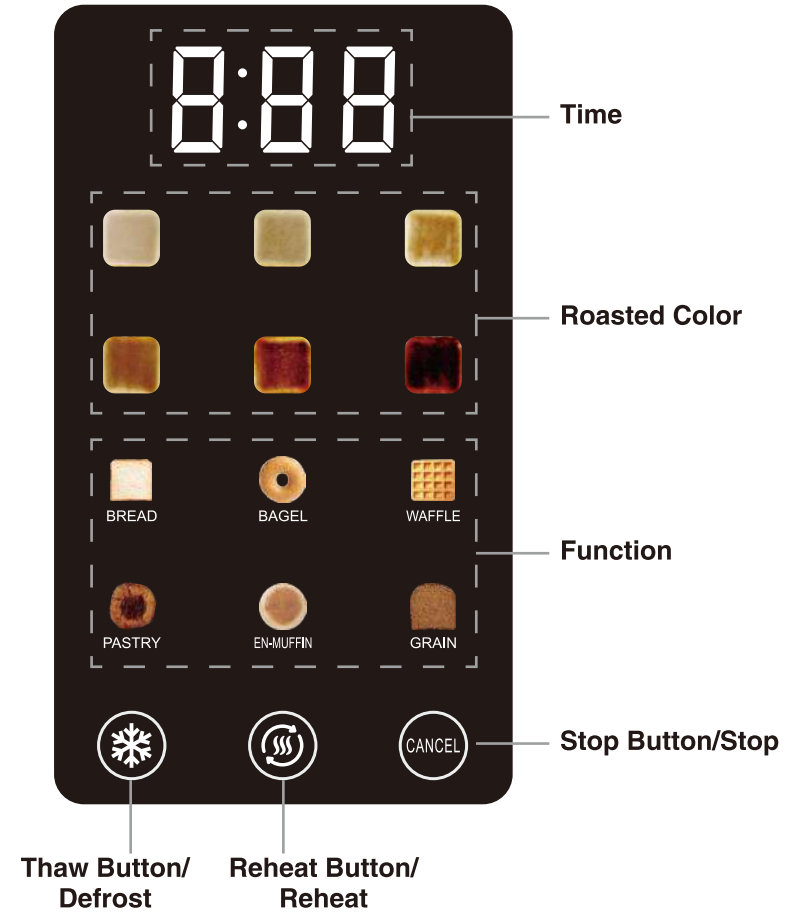

# OPERATION

1. Prepare the toaster as described in chapter “Before first use”.
2. Place the bread slices in the slots in the toasting chamber.
3. Press the toast lever down until it locks into place.


## Warming

- a. Then press the button “Reheat” right away. The indicator lamp on this button lights up.
- b. The bread is warmed without being toasted.
- c. You can interrupt the warming cycle any time by pressing the “Stop” button.
- d. After completion of the warming cycle the bread is automatically ejected and the indicator lamps go out. The appliance shuts off automatically.
- e. Please note that you cannot set the toast darkness when using the warming function.
- f. Please take into account that in heating mode the toasting grade cannot be adjusted. The heating time is independent from the toasting grade adjustment.



## Thawing

- a. Select the desired toast darkness setting.
- b. We recommend the following toast darkness settings:
  - \* Light for bread from the refrigerator or thin frozen bread slices.
  - \* Medium for frozen waffles
  - \* Dark for thicker frozen bread slices and thick toast slices.
- c. Press the toast lever down until it locks into place.
- d. Then press the button “Defrost” right away. The indicator lamp on this button lights up.
- e. The bread is thawed and toasted.
- f. You can interrupt the cycle any time by pressing the “Stop” button.
- g. After completion of the thawing cycle the bread is automatically ejected and the indicator lamps go out. The appliance shuts off automatically.

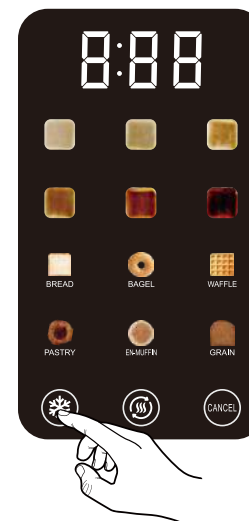

## FOR THE FIRST USE

As there is manufacturing residue or oil remained in the toaster or heat element, usually it will emit the odor for the first use. It is normal and will not occur after several times use, for the first use it is suggested the operation according to the below steps, except without bread, then let the toaster cool down and begin toasting the first slice.

1. Remove all packaging materials and any transport safety devices.
2. Confirm that all accessories mentioned have been supplied.
3. Clean the toaster with a damp cloth.
4. Confirm that all components are properly assembled and the appliance is placed firmly.
5. Make sure that there is enough space between the toaster and the wall or other appliances, as the toaster will become hot during operation.
6. Connect the appliance to the mains supply by means of the lead cable (120 V~,60 Hz).
7. Before using the toaster for the first time, you will have to perform a toasting process without bread. Press the toast levers on both toaster parts down until they latch into place.
8. When the toasting is finished, the toast levers automatically jump up. You may now start toasting bread.

## USING YOUR TOASTER

1. Put bread slice into the bread slot which can be inserted two slices at most every time. Only the regular slice can be placed into the bread slot. The irregular bread can only be toasted on the toast rack.  
NOTE: Make sure the crumb tray is completely positioned in place before using.
2. Plug the power cord into the outlet.
3. Set color control slide key to your desired color. There is 6-position level, the lowest "1" is for light and the highest "6" is for dark. The bread slice can be toasted to goldencolor at the middle position.  
NOTE: 1). Toasting color for one slice is darker than that for two bread slices at the same level. 2). If toasting continuously, toasting color for the latter bread is darker than that for the anterior bread at the same level. 3). Bread on the toast rack can be toasted to golden color at the position of "1".
4. Lower carriage handle down vertically until it is latched in place, the indicator of Cancel will be illuminated, and the appliance will begin toasting at once. NOTE: The carriage handle can only be latched when the appliance is plugged in.
5. Once the bread has been toasted to the preset color, the carriage handle will automatically pop up. Also you can uplift the carriage handle a little to remove the bread readily. NOTE: During toasting, you may also observe the toasting color. If it is satisfactory, you can press the Cancel button to cancel the operation at any time, but never lift carriage handle to cancel toasting.
6. If you want to toast frozen bread, firstly press Defrost button and the indicator of Defrost button will be illuminated, set color control knob to your desired color, and then lower carriage handle down vertically until it is latched in place. In this mode bread will be toasted to your desired color.

7. If you want to warm cold toasted bread, firstly press the Reheat button and the indicator of Reheat button will be illuminated, and then lower carriage handle vertically until it is latched in place. In this mode toasting time is fixed, so long as time runs over, the carriage handle will automatically spring up and end up the reheating process.
8. Grill for heating shaped bread slices, no baking color requirements. Select the maximum 2 gear.

## CAUTION

1. Remove all protective wrappings prior to toasting.
2. If toaster starts to smoke, Press Cancel to stop toasting immediately.
3. Avoid toasting the food with extremely runny ingredients such as butter.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Be sure not to damage the internal mechanism or heating elements when removing bread.
5. The bread slot is only applicable for toasting regular bread slice, like the irregular bread or round bread, you can toast it on the toast rack.
6. In order to achieve uniform color we recommend that you should wait minimum 30s between each toasting so that color control can reset automatically.

## CLEANING AND MAINTENANCE

1. Before cleaning, unplug from the appliance and let the appliance cool down completely.
2. Wipe the outside with soft dry cloth, never use metal polish.
3. Pull out crumb tray at the bottom of toaster and empty it. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
4. When not use or storage, the power cord may be wound under the bottom of toaster.