



Thanks for purchasing this **Photography Backdrop Stand** of our company. Please read this user manual carefully before use and put it in a safe place for future reference.



Please scan the QR code to watch the operation guide

Package List



4 × Crossbars



4 × Steel Clamps




2 × Tripod Stands



1 × Carry Bag

Height & Width Adjustment

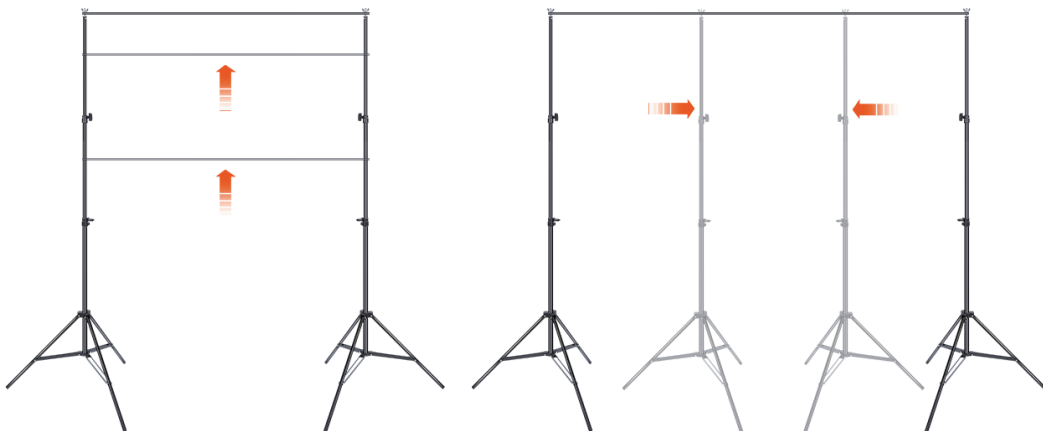

Height Adjustment

The telescopic pole in the tripod stand allows you to extend any height up to 2m/6.5ft

Width Adjustment

Assemble or detach the crossbars to adjust the width: 1.5m/4.92ft--2.24m/7.34ft--3m/10ft



Thanks for purchasing this **Photography Backdrop Stand** of our company. Please read this user manual carefully before use and put it in a safe place for future reference.



Please scan the QR code to watch the operation guide

Package List



4 × Crossbars



4 × Steel Clamps




2 × Tripod Stands



1 × Carry Bag

Height & Width Adjustment

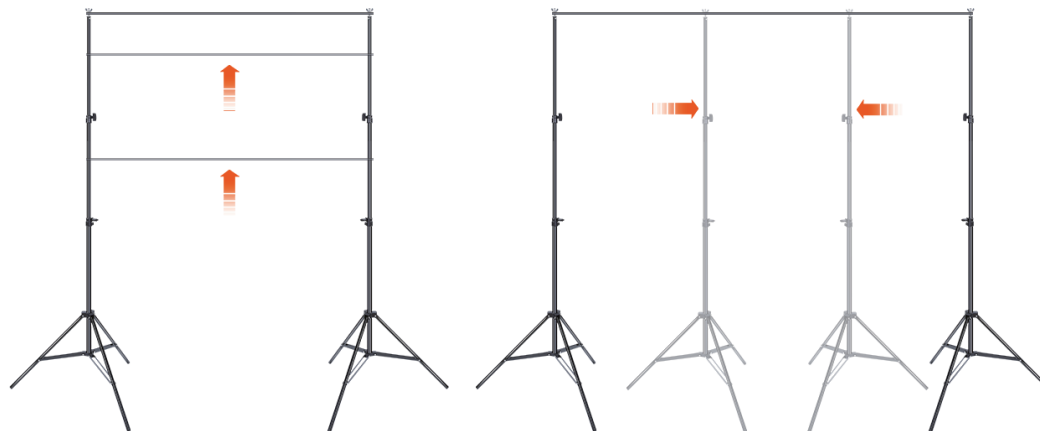

Height Adjustment

The telescopic pole in the tripod stand allows you to extend any height up to 2m/6.5ft

Width Adjustment

Assemble or detach the crossbars to adjust the width: 1.5m/4.92ft--2.24m/7.34ft--3m/10ft

Product Details



Height Adjustment Knob



Angle Fixing Knob



Stable Leg Base



Portable Screws



Heavy-duty Clamps



Thickened Oxford Fabric Carry Bag

Assembly Guide



Open the tripod



Tighten the knob



Adjust its height



Align the spring catch with the insert



Fix the cross bar on the tripod and tighten nuts



Finish all installation

Friendly Reminder

1. This background stand equipment can withstand up to 6.6lbs; please do not overload.
2. Place the tripods on a flat surface to prevent toppling.
3. Keep children or incompetent persons away from the equipment.
4. To make the backdrop stand more stable, ensure the tripod is fully opened to occupy the largest possible position. If the tripod is not open, the stability will drop or even cause it to fall.

Product Details



Height Adjustment Knob



Angle Fixing Knob



Stable Leg Base



Portable Screws



Heavy-duty Clamps



Thickened Oxford Fabric Carry Bag

Assembly Guide



Open the tripod




Tighten the knob




Adjust its height



Align the spring catch with the insert

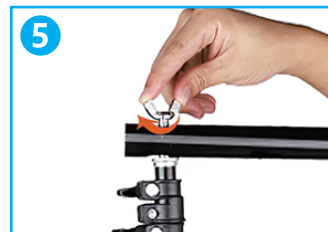

Fix the cross bar on the tripod and tighten nuts

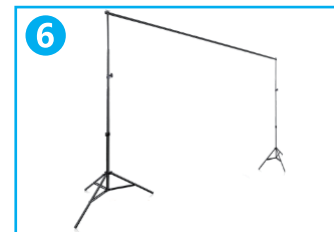

Finish all installation

Friendly Reminder

1. This background stand equipment can withstand up to 6.6lbs; please do not overload.
2. Place the tripods on a flat surface to prevent toppling.
3. Keep children or incompetent persons away from the equipment.
4. To make the backdrop stand more stable, ensure the tripod is fully opened to occupy the largest possible position. If the tripod is not open, the stability will drop or even cause it to fall.