


# MID CENTURY SIDEBOARD BUFFET

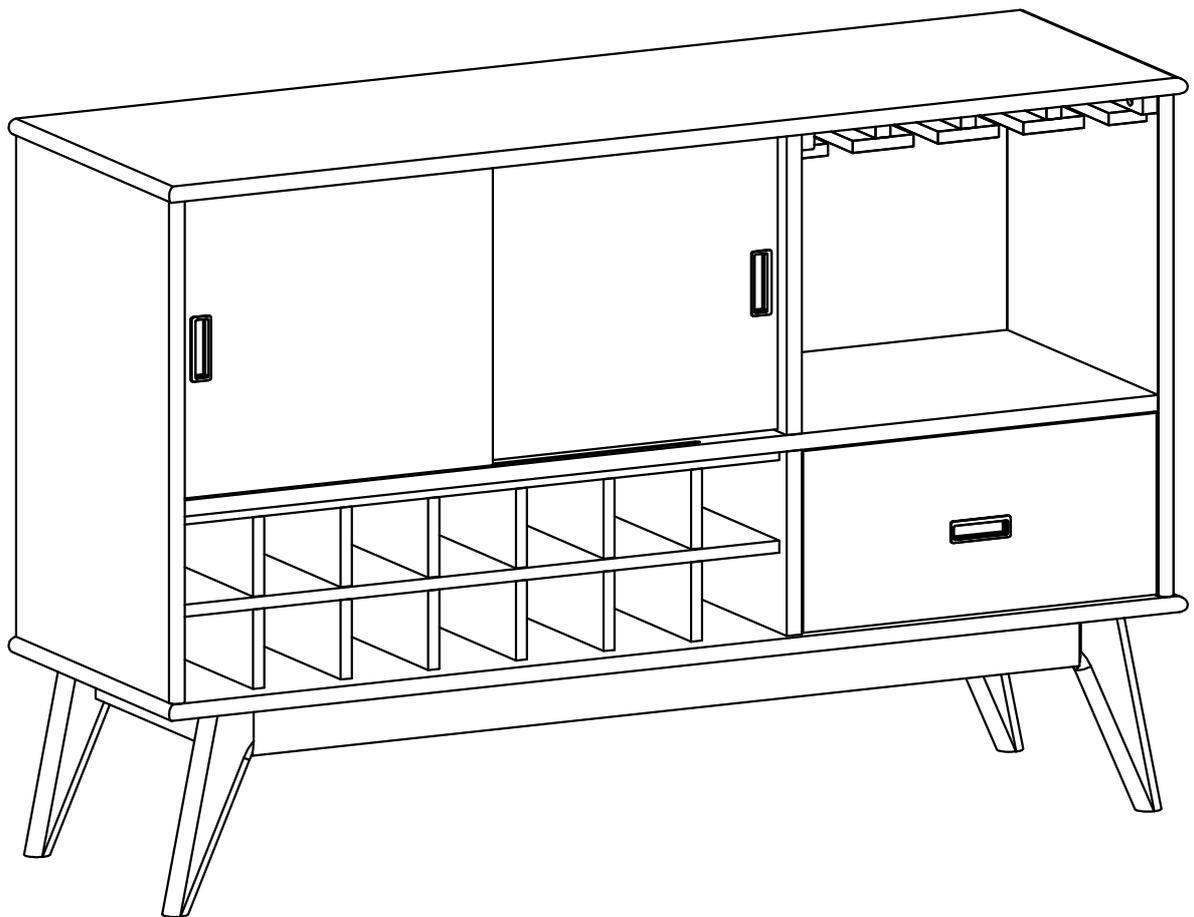



Questions, problems, assembly help, missing parts?

No need to return the product, we will gladly help and ship your replacement parts free of charge  
Please call Customer Service

In order to assist you in a timely manner, please have the following information ready:

Model # \_\_\_\_\_ Part Number or Letter \_\_\_\_\_

Purchased at \_\_\_\_\_ Date of Purchase \_\_\_\_\_

If you wish to return the product, please contact the retailer where the product was purchased.

**IMPORTANT** : Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

## SAFETY INFORMATION

**CAUTION:** Injuries and damage can occur from furniture tip over if product is not properly anchored to the wall. Use the Furniture Anti-Tipping Restraint provided with the product. Consult our assembly instructions for help. If the Furniture Anti-Tipping Restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

**WARNING:** This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

**May require 2 people for ease of assembly.**

**IMPORTANT** : Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

## CARE and MAINTENANCE

Perhaps the greatest environmental damage to wood furniture comes from wide swings in relative humidity (RH) in our homes. Wood absorbs and desorbs water as relative humidity rises and falls, and in doing so it swells and shrinks. Making matters worse, it expands and contracts unequally along different grain directions. As humidity changes, the components of wooden objects are continually pushing and pulling against each other. This pressure often results in parts of furniture no longer fitting together closely or becoming distorted or breaking from their own internal stresses.

The response to relative humidity changes begins with determining the annual average RH for your particular space. Then try to keep the RH in the space where your furniture is as close to that average as possible, generally within about 10% up or down. De-humidify in the summer and humidify in the winter.

Be aware that raising the temperature lowers the humidity and vice versa. Thus, modern heating systems, which can drive down interior RH in the winter, almost invariably cause problems for furniture. To counteract their effect, you can either modify the RH by keeping furniture containing spaces cooler in the winter or most importantly, have a good working humidifier for your home. A humidistat automatically works to balance the humidity in your home so it is constant. Dry indoor air can suck enough moisture from its surroundings to do permanent damage to wood, causing it to crack or split.

Remember, that not all woods are created equal. Two factors that help determine how rapidly a wood will lose moisture are pore size and surface hardness. A piece made from a dense and hard wood will dry less rapidly than pieces made from softer woods.


Furniture that is sealed and lacquered will lose moisture more slowly than an unfinished piece while pieces with veneer finishes are not only stronger, but lose moisture more slowly than other finishes.

### **To help protect your wood furniture, take these steps:**


- Use a humidifier, preferably one with an automatic control system that can sense the humidity level and adjust itself accordingly. Don't over-humidify; that can damage wood by causing it to expand and contract.
- Keep furniture out of direct sunlight, which can cause it to dry out, crack and warp.
- If you can avoid it, don't put furniture near heating vents. If you must, keep the piece 3 to 4 inches away from the wall, giving the heat and air space to circulate.
- Dust with soft dry cloth.
- Do not use liquid or aerosol products.
- To avoid marking, do not place rubber on surface (foot pads, etc.)
- For soil build-up, wipe with damp cloth & dry.
- Do not use abrasive cleaners.

# PRE-ASSEMBLY INFORMATION


## PART DESCRIPTION

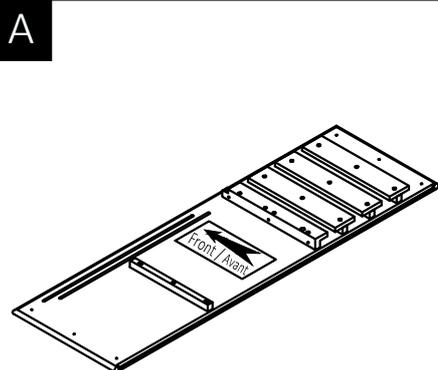


TOP  
QTY 1

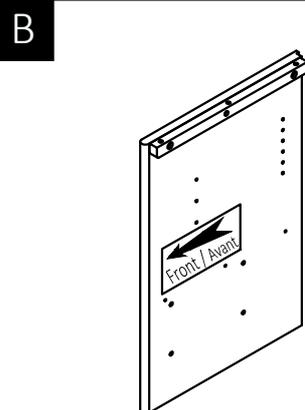


LEFT SIDE  
QTY 1

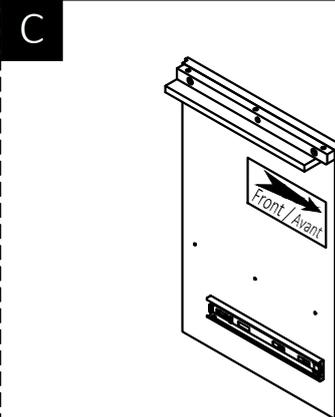


RIGHT SIDE  
QTY 1

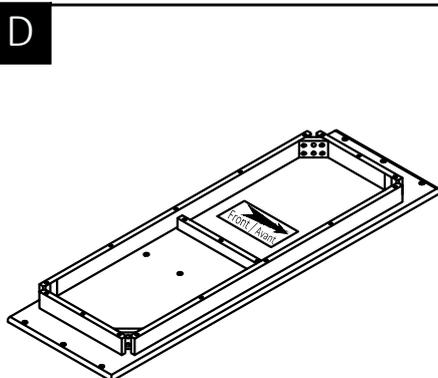


BOTTOM SHELF  
QTY 1

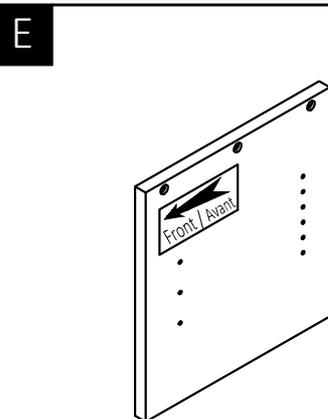


LEFT DIVIDER  
QTY 1

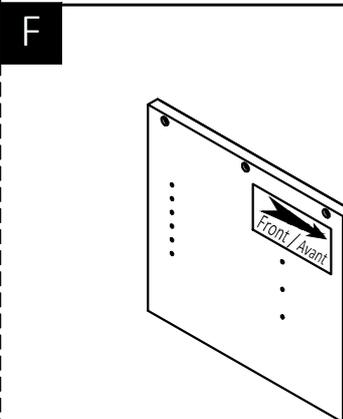


RIGHT DIVIDER  
QTY 1

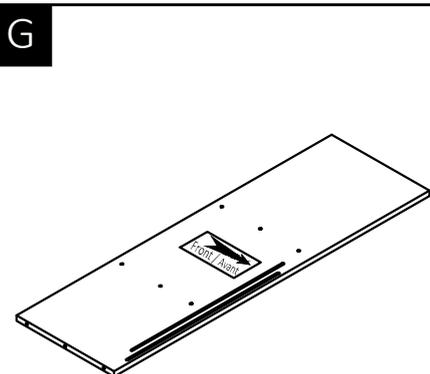

MIDDLE SHELF  
QTY 1

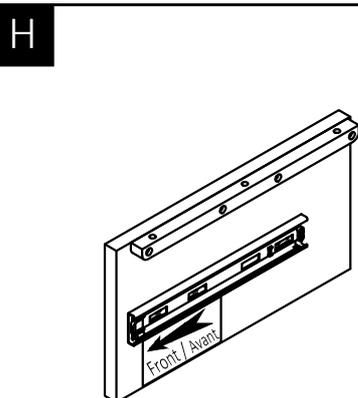

MIDDLE DIVIDER  
QTY 1

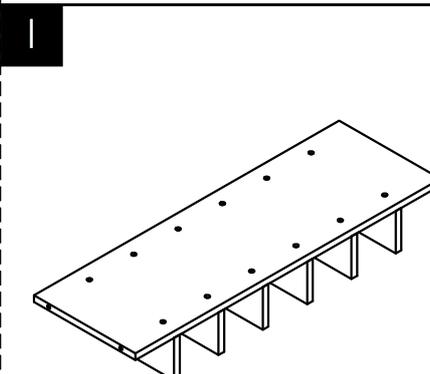


WINE RACK FRAME  
QTY 2

**NEED HELP?** For help with assembly or if you are missing a part,  
Please call customer service.

# PRE-ASSEMBLY INFORMATION


## PART DESCRIPTION

JL

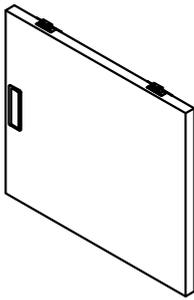


LEFT DOOR  
QTY 1

JR

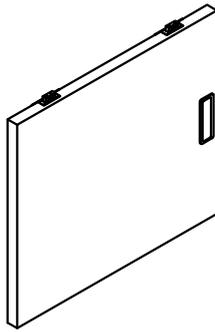


RIGHT DDOR  
QTY 1

K

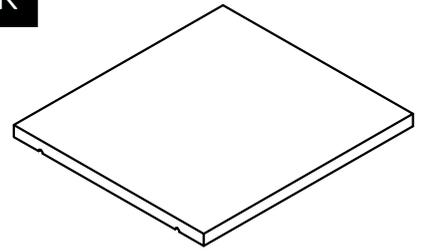


SHELF  
QTY 2

L1

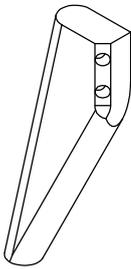


LEG (L&R Same)  
QTY 2

L2

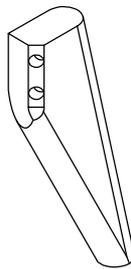

LEG (L&R Same)  
QTY 2


M

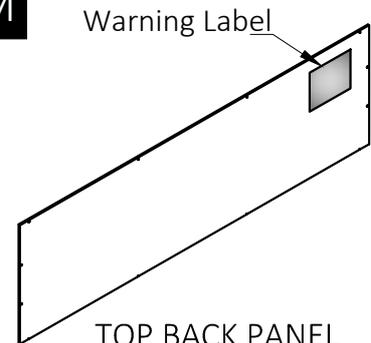

Warning Label


TOP BACK PANEL  
QTY 1

N

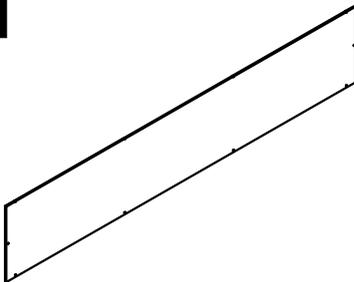


BOTTOM BACK PANEL  
QTY 1

O

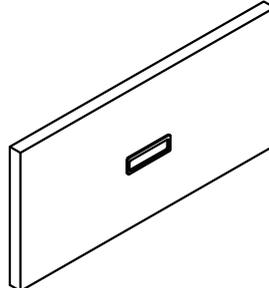


DRAWER FRONT  
QTY 1

PL

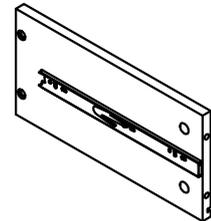


LEFT DRAWER FRONT  
QTY 1

PR

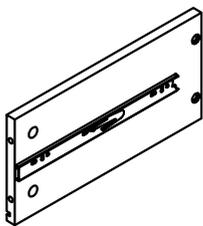


RIGHT DRAWER FONT  
QTY 1

Q

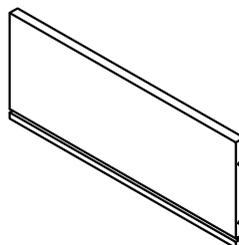

DRAWER BACK  
QTY 1

R

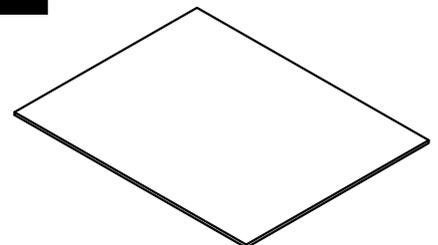


DRAWER BOTTOM  
QTY 1

**NEED HELP?** For help with assembly or if you are missing a part,  
Please call customer service.

# PRE-ASSEMBLY INFORMATION

## HARDWARE DESCRIPTION

1

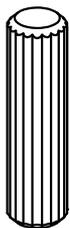

WOOD DOWEL  
Ø8 X 30mm  
QTY 8

2




ALLEN KEY  
QTY 1

3



CAM LOCK PIN  
CAM LOCK  
QTY 7 SETS

4

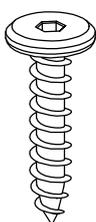


ALLEN KEY SCREW  
M6 X 30mm  
QTY 37

5




ALLEN KEY BOLT  
M8 x 60 mm  
QTY 8

6

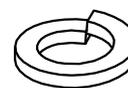

LOCK WASHER  
Ø12 / Ø8 x 1.5 mm  
QTY 8

7

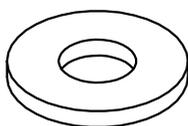


WASHER  
Ø19 / Ø8 x 1 mm  
QTY 8

8




PHILLIPS SCREW ROUND HEAD  
M4 X 15mm  
QTY 21

9

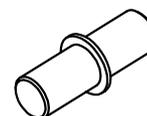


SHELF SUPPORT  
QTY 12

10

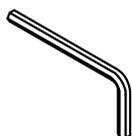


SMALL ALLEN KEY  
QTY 1

11

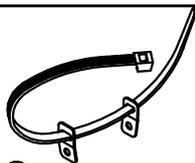

- a. M4 X 25mm - QTY 2  
(1 is extra)
- b. M4 X 15mm - QTY 1
- c. M4 X 25mm - QTY 1


FURNITURE TIP OVER RESTRAINT  
QTY 1 SET

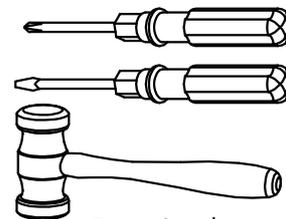

Required -  
Flathead screwdriver  
Phillips screwdriver  
Rubber mallet  
**Not Included**


**NEED HELP?** For help with assembly or if you are missing a part,  
Please call customer service.

# COMPONENTS-KEY DIAGRAM

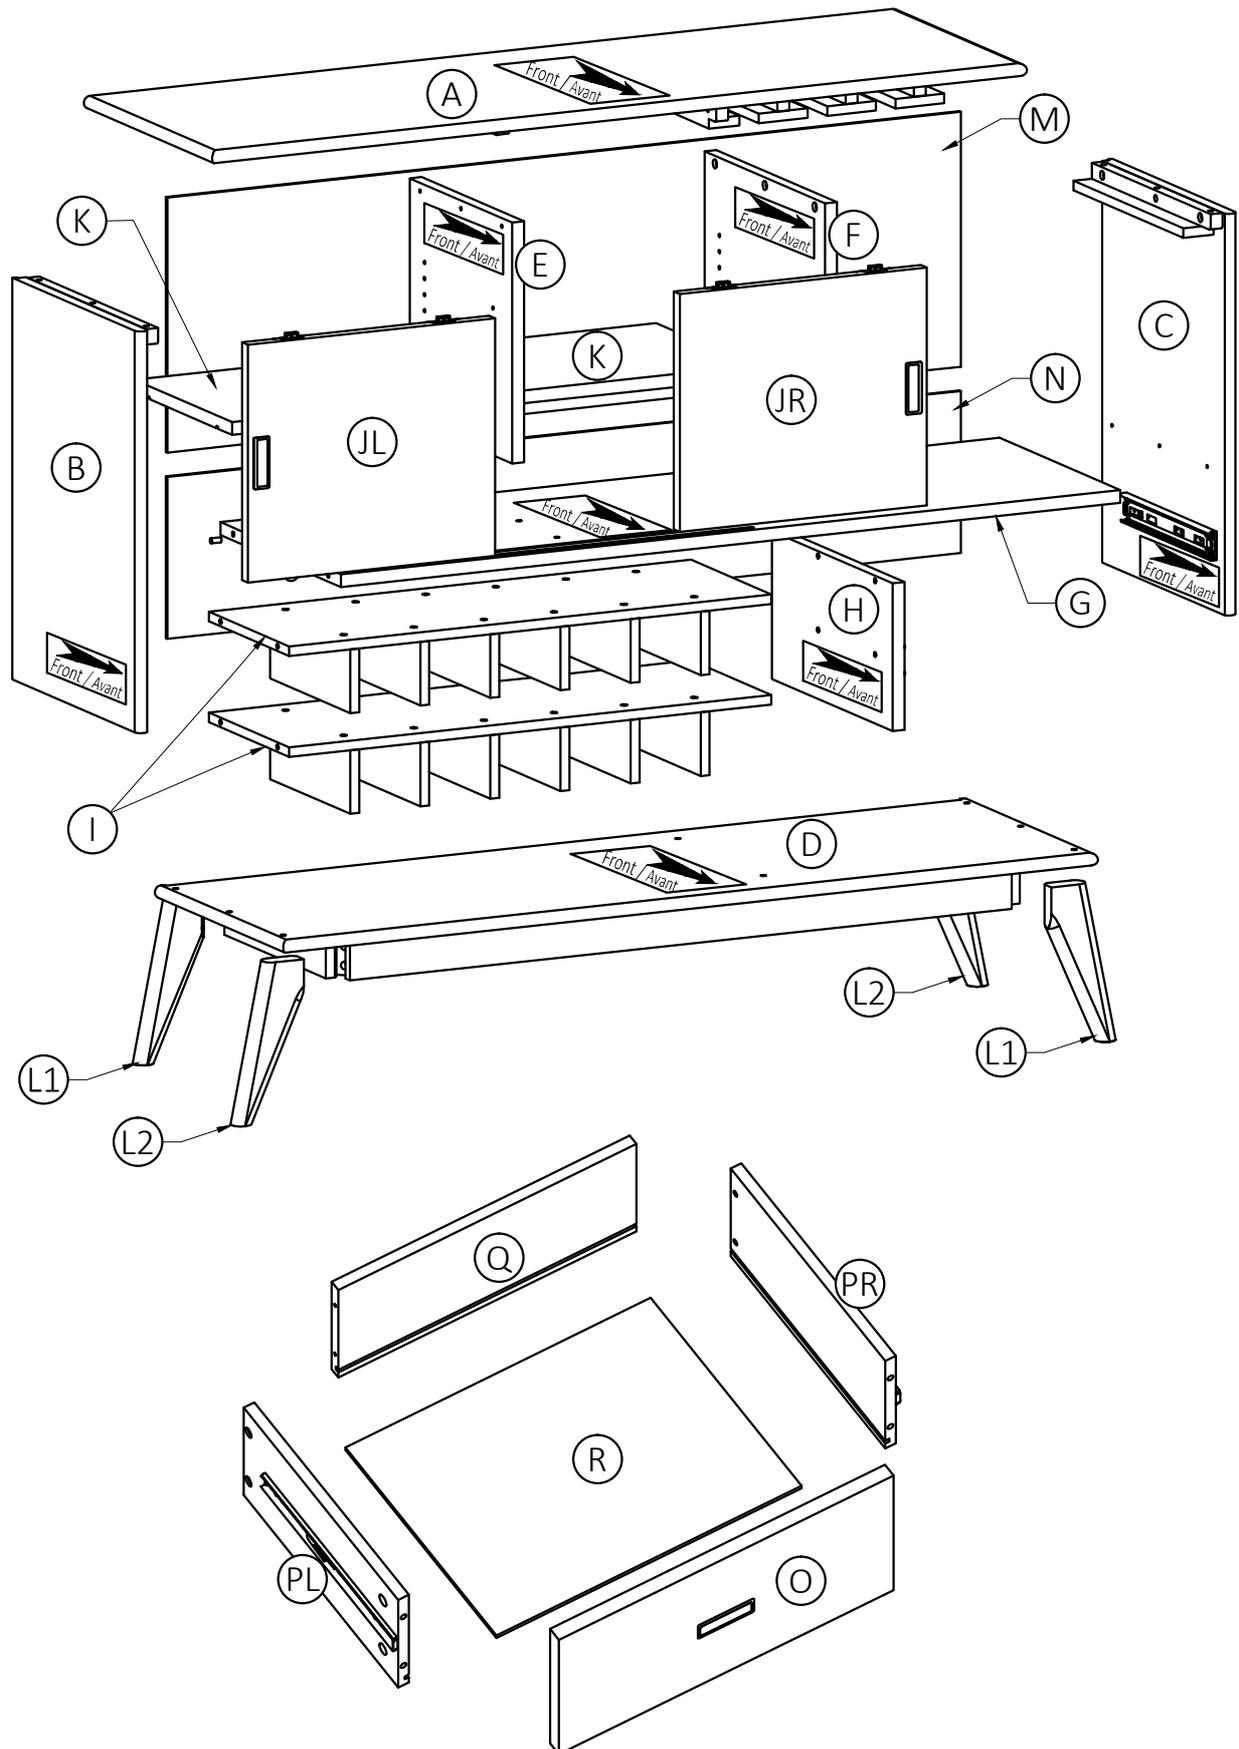


# ASSEMBLY

## STEP-1

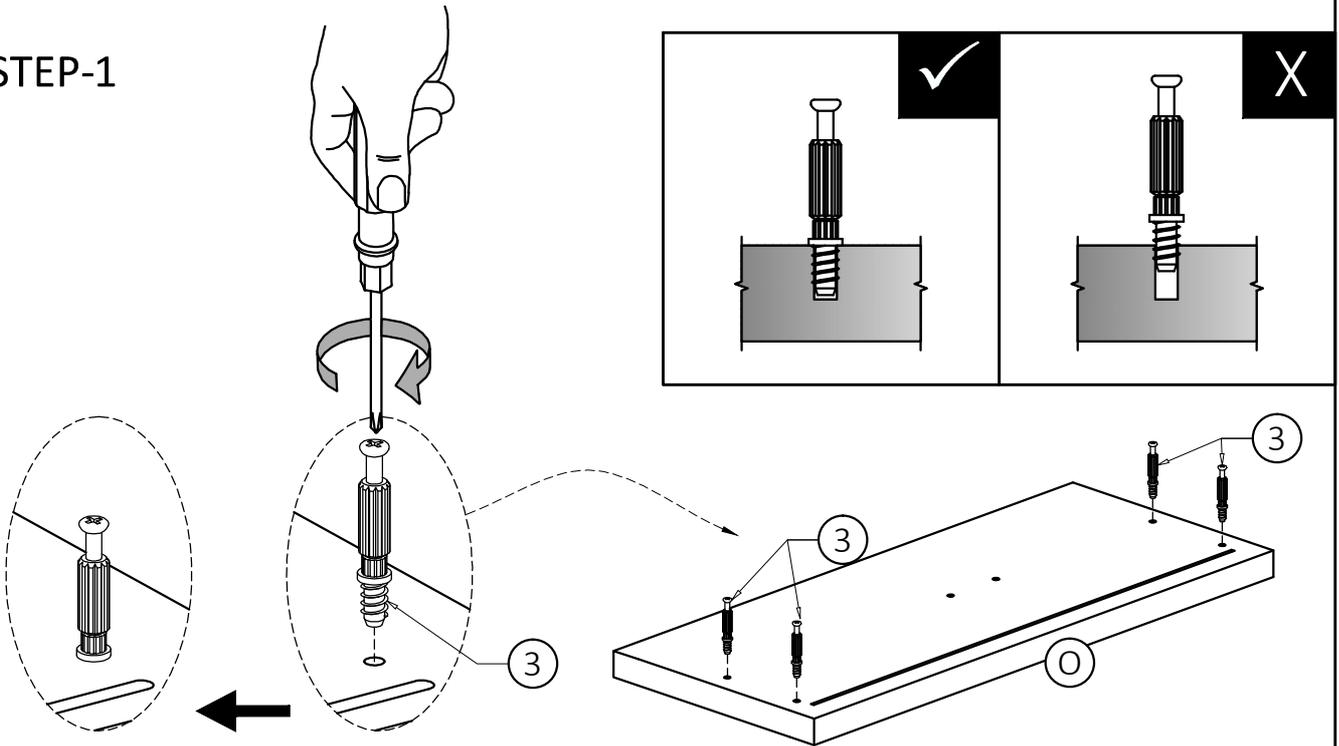

1. Attach four Cam Lock Pins (3) into pre-drilled holes on back of Drawer Front (0).
2. Use Phillips screwdriver to secure Cam Lock Pins. Do not over-tighten.


## STEP-2

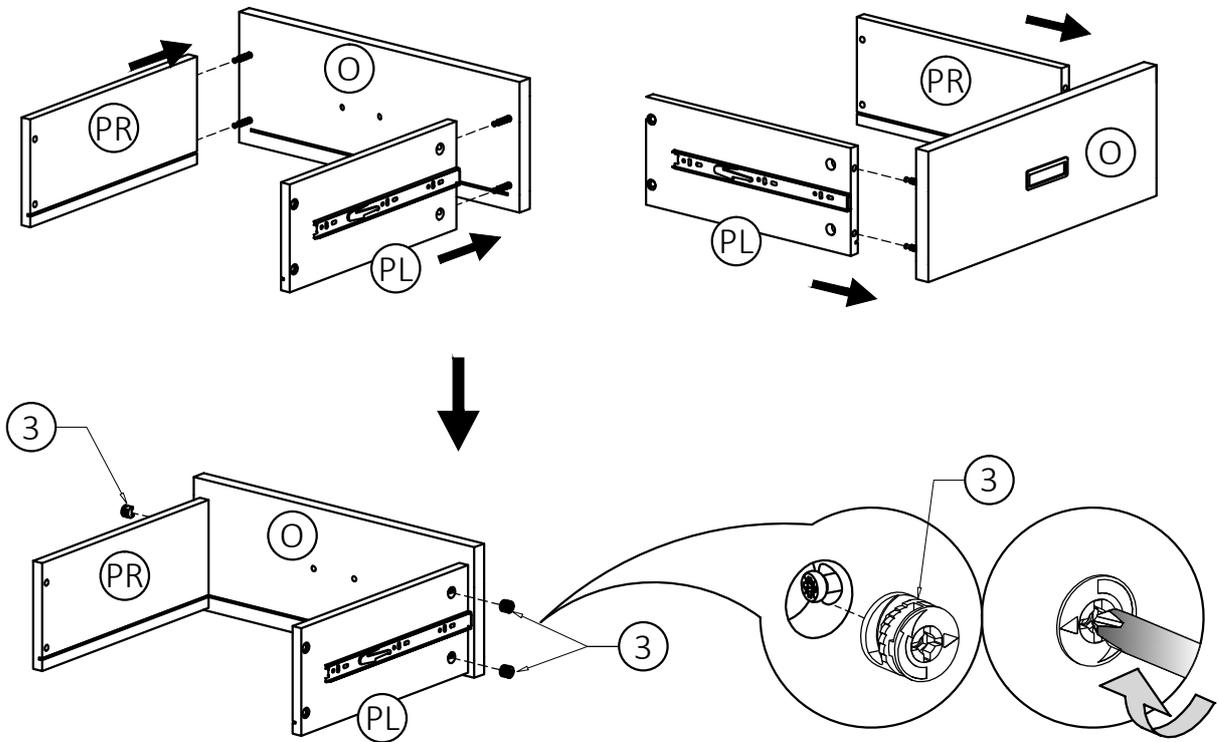

1. Align Cam Lock Pins with guide holes and attach Drawer Sides (PL, PR) to Drawer Front (0).
2. Insert two Cam Locks (3) into guide holes on each Drawer Side (PL, PR).
3. Use Phillips screwdriver to secure Cam Locks. Do not over-tighten.


# ASSEMBLY

## STEP-3

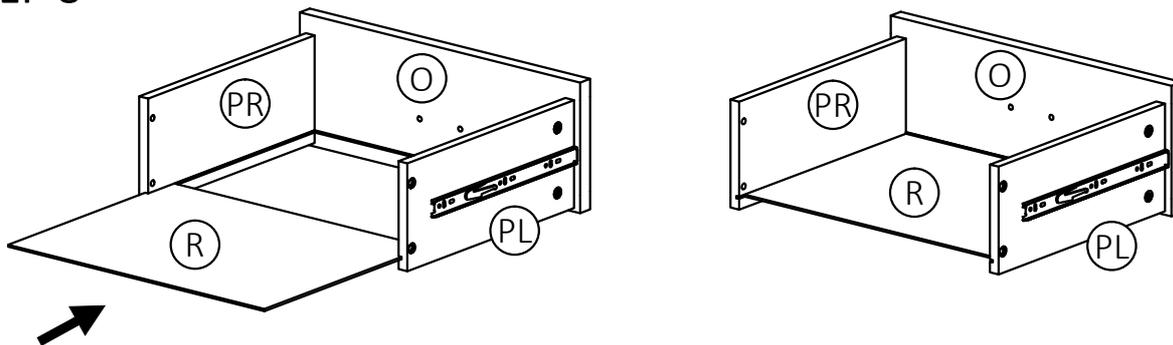


1. Slide Drawer Bottom (R) firmly into slots on Drawer Sides (PL, PR) and Drawer Front (O).

## STEP-4

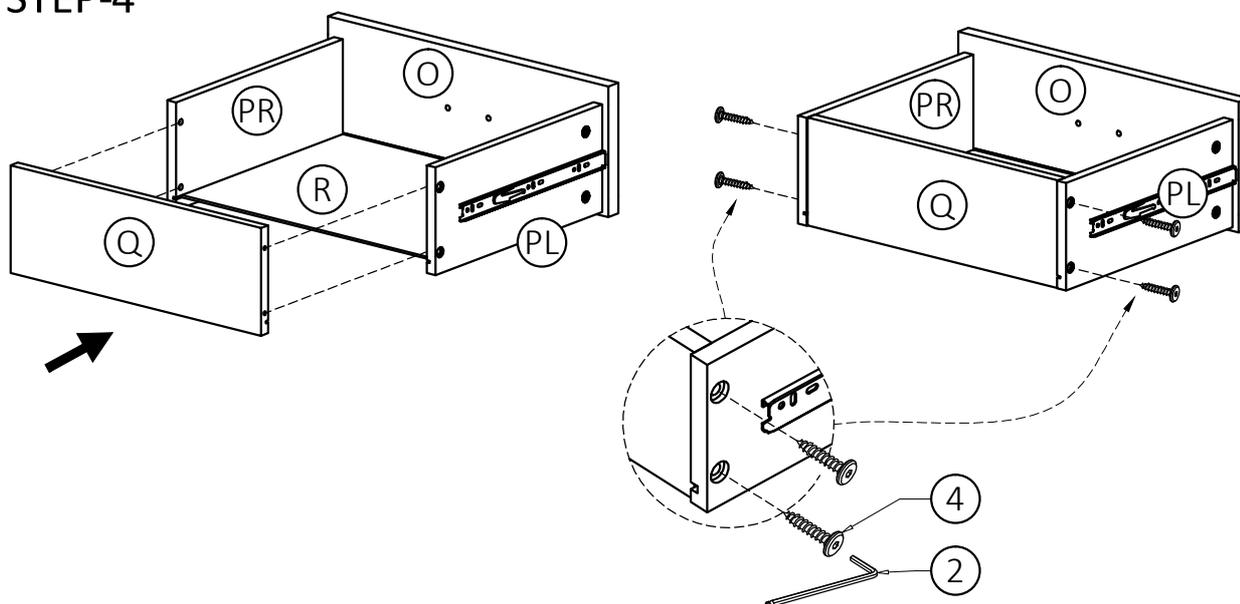


1. Align Drawer Back (Q) with Drawer Bottom (R) and press firmly into slot .
2. Attach Drawer Back using two Allen Key Screws (4) through guide holes on each Drawer Side (PL, PR).
3. Use Allen Key (2) to tighten Screws. Do not over-tighten

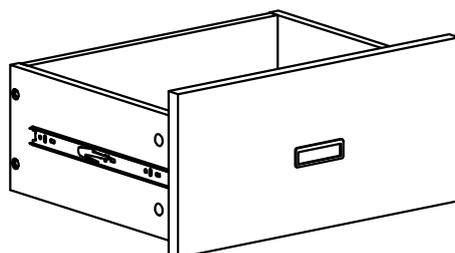

# ASSEMBLY


## STEP-5

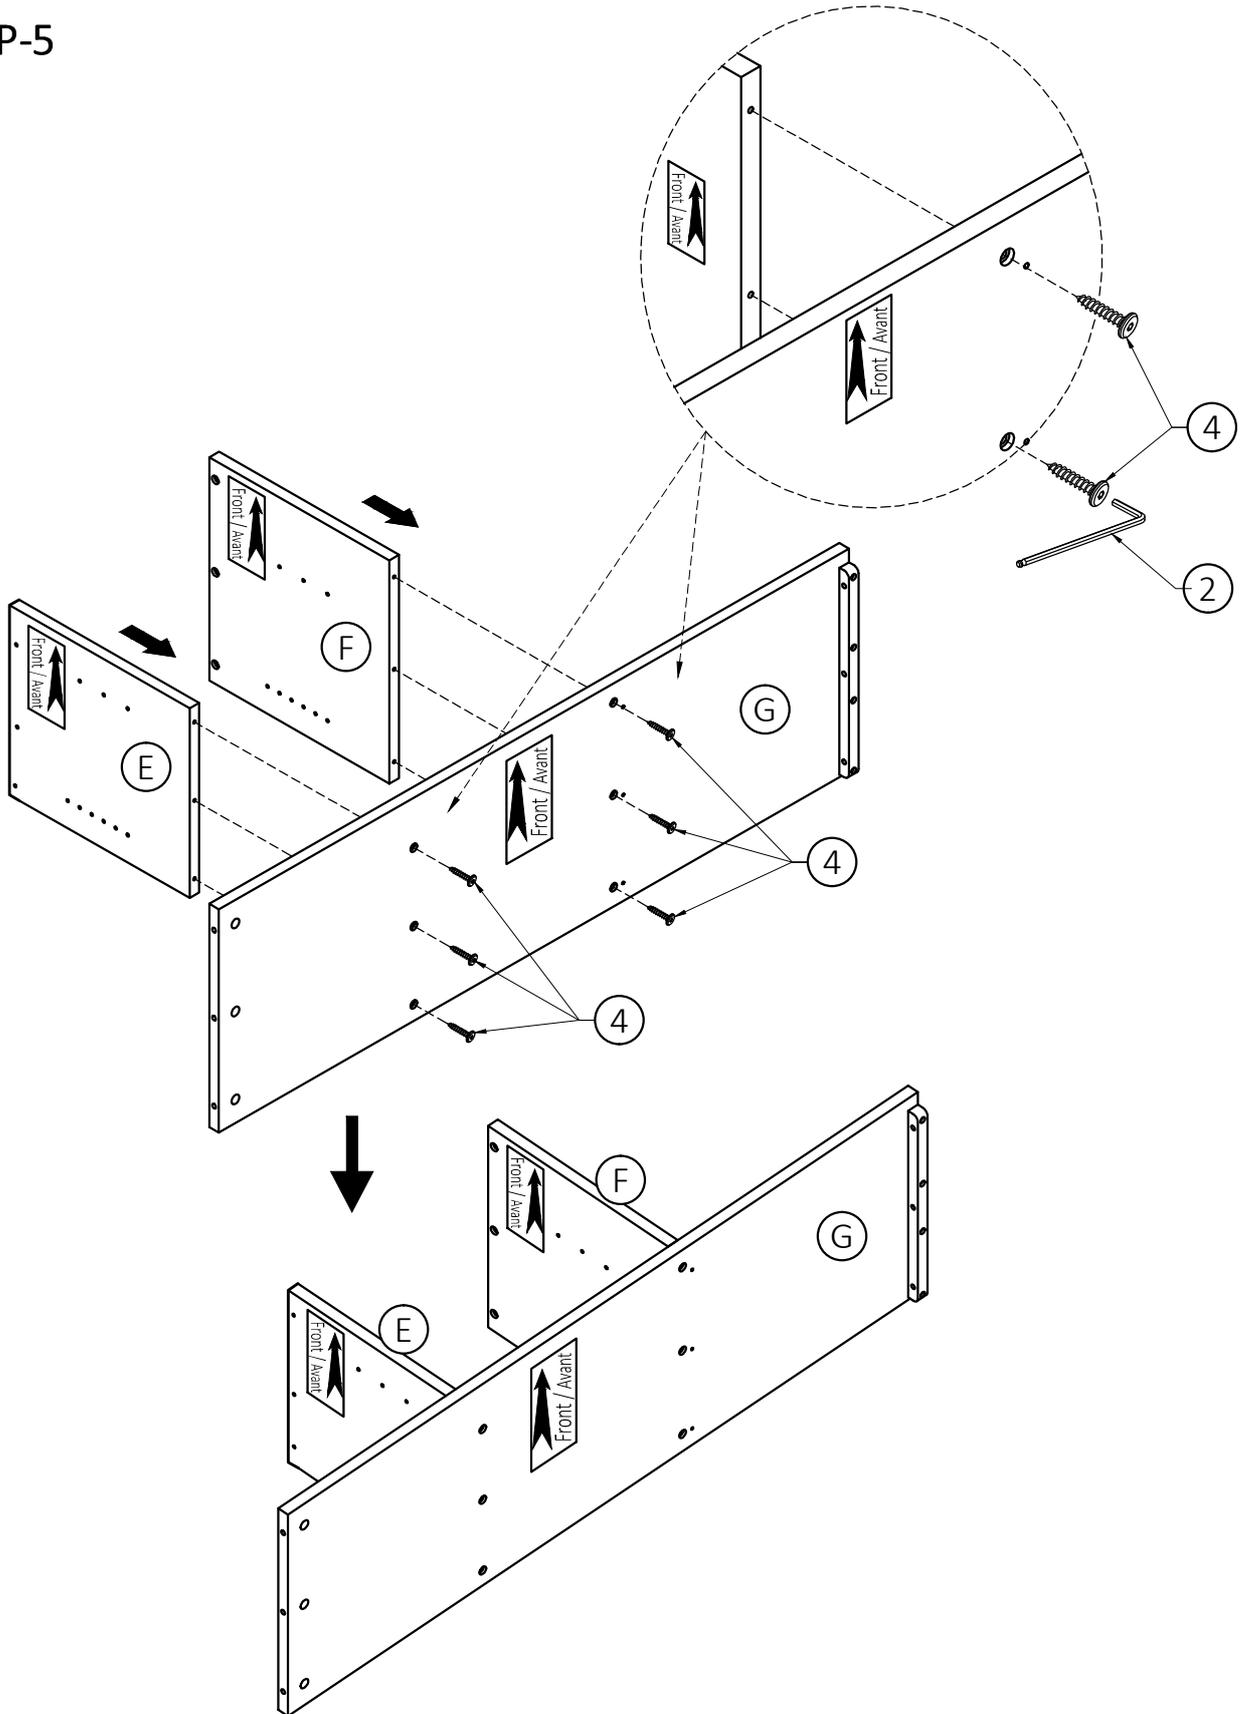

1. Attach Dividers (E), (F) to Middle Shelf (G) using six Allen Key Screws (4) through guide holes to pre-drilled holes of Dividers (E), (F) (three Screws on each Divider).
2. Use Allen Key (2) to tighten screws. Do not over-tighten.


# ASSEMBLY

## STEP-6

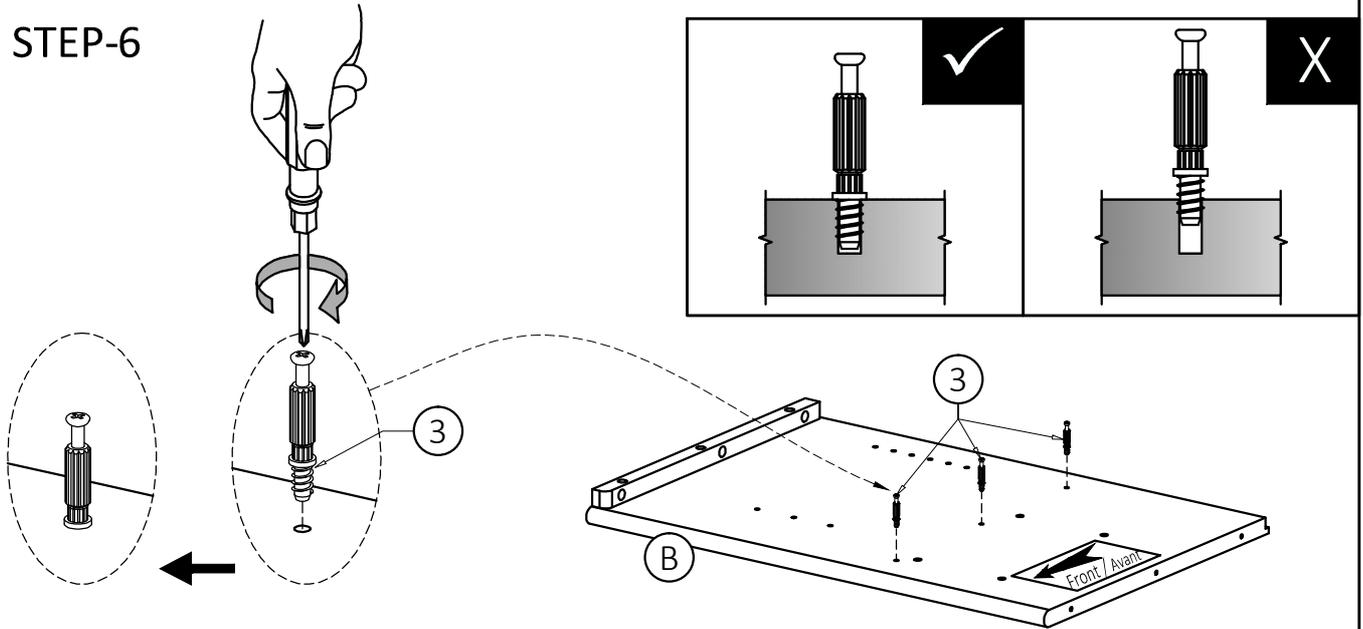

1. Attach three Cam Lock Pins (3) into pre-drilled holes on Left Side (B).
2. Use Phillips screwdriver to secure Cam Lock Pins. Do not over-tighten.

## STEP-7

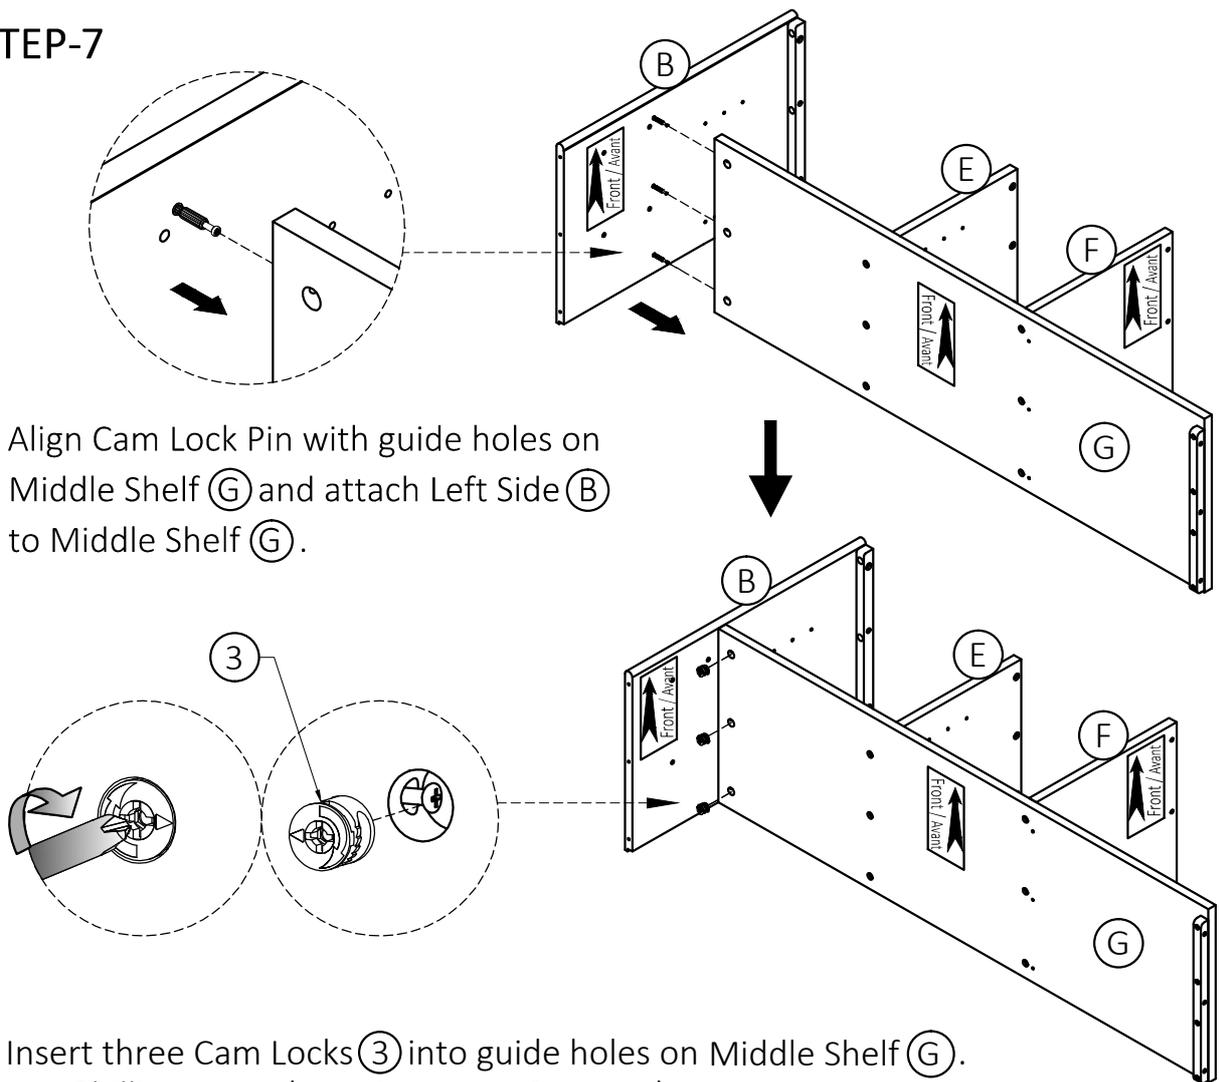


1. Align Cam Lock Pin with guide holes on Middle Shelf (G) and attach Left Side (B) to Middle Shelf (G).

2. Insert three Cam Locks (3) into guide holes on Middle Shelf (G).
3. Use Phillips screwdriver to secure Cam Locks.

# ASSEMBLY


## STEP-8

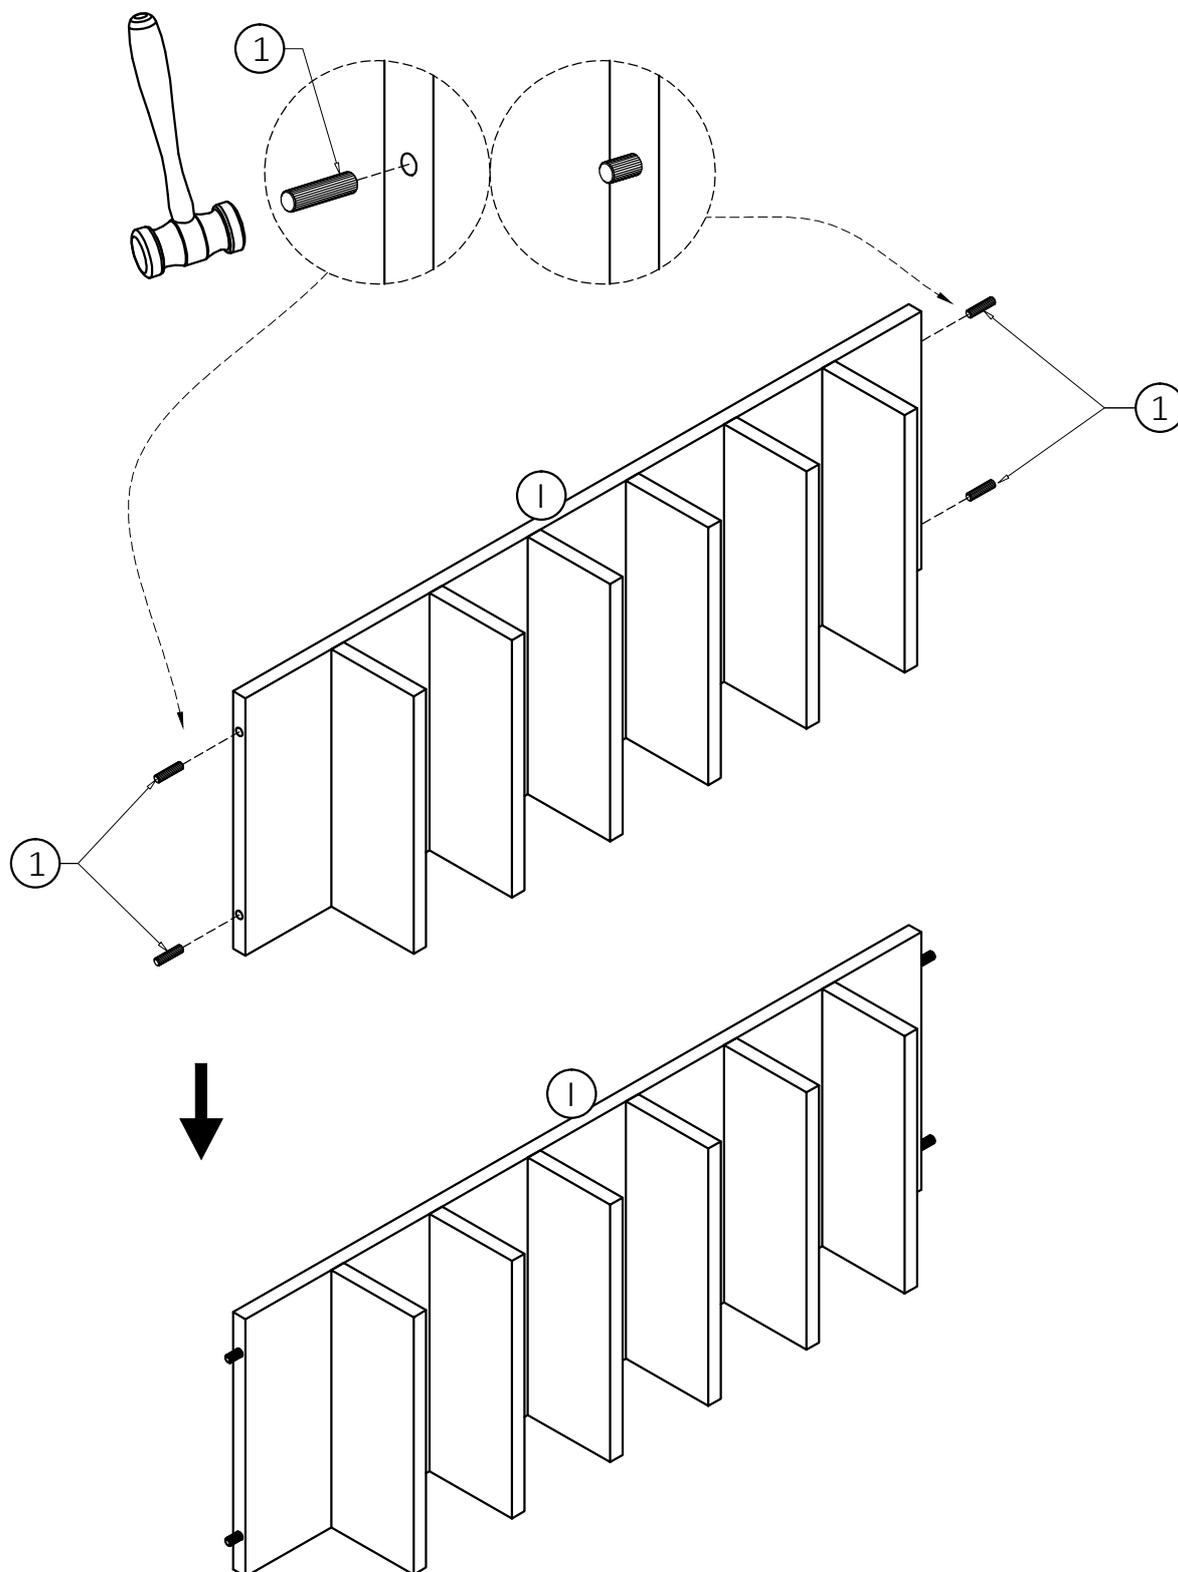


1. Insert four Dowels ① into guide holes on each Wine Rack Frame ①.
2. Use rubber mallet to tap Dowels ① into bottom of holes securely. 1/2 length of Dowels should be exposed.

# ASSEMBLY


## STEP-9

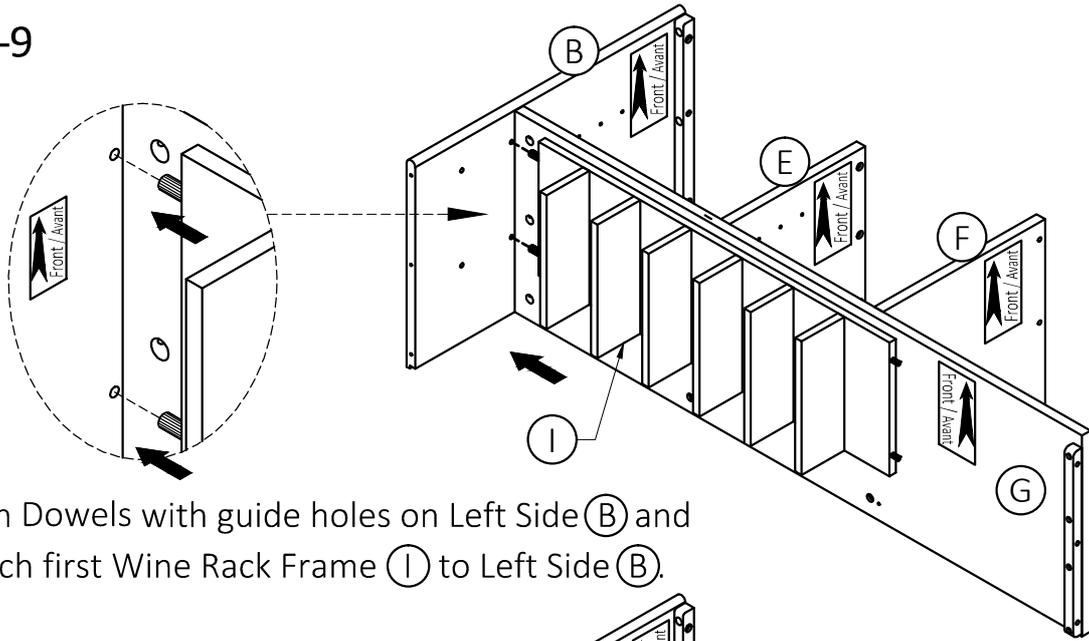

1. Align Dowels with guide holes on Left Side (B) and attach first Wine Rack Frame (I) to Left Side (B).

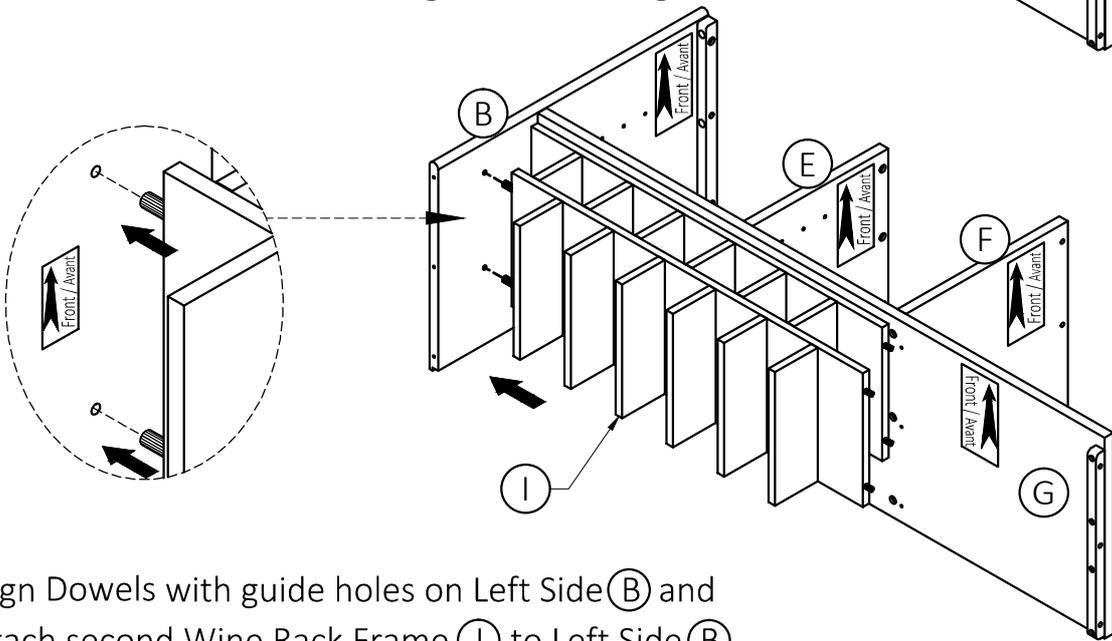


2. Align Dowels with guide holes on Left Side (B) and attach second Wine Rack Frame (I) to Left Side (B).

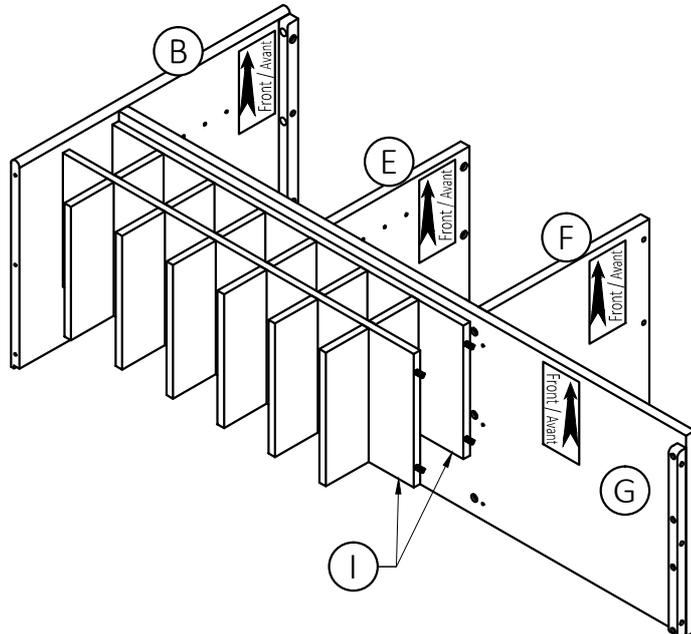


# ASSEMBLY

## STEP-10

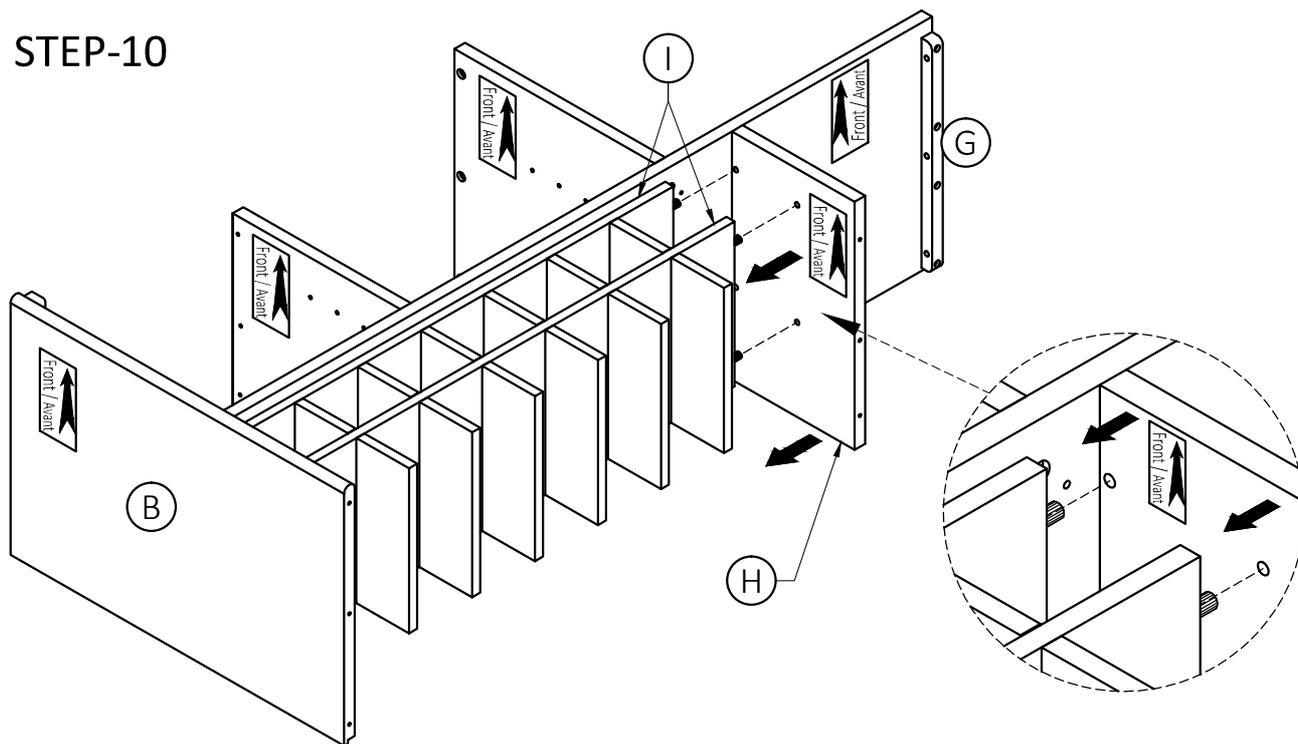


1. Align Dowels with guide holes on Middle Divider (H) and attach Middle Dividers (H) to Wine Rack Frames (I).

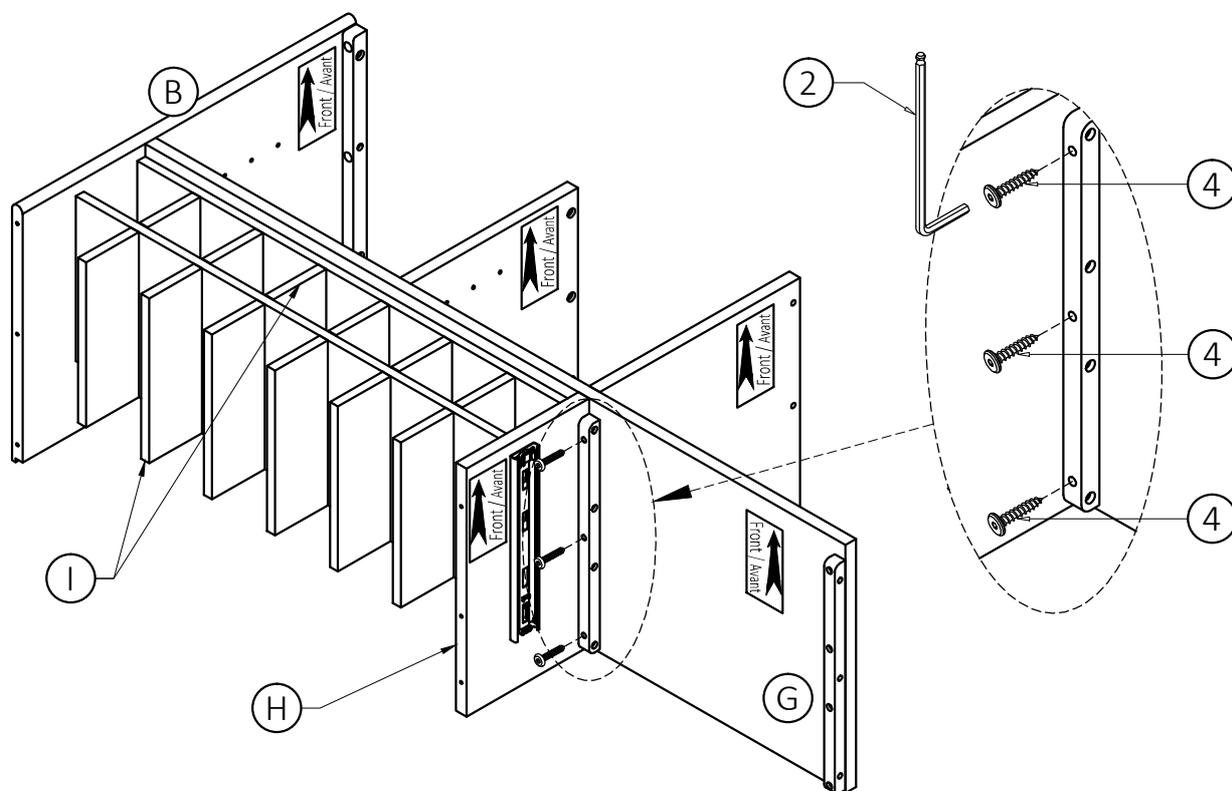

2. Use three Allen Key Screws (4) to attach Middle Divider (H) through guide holes.
3. Use Allen Key (2) to tighten Screws. Do not over-tighten.

# ASSEMBLY


## STEP-11

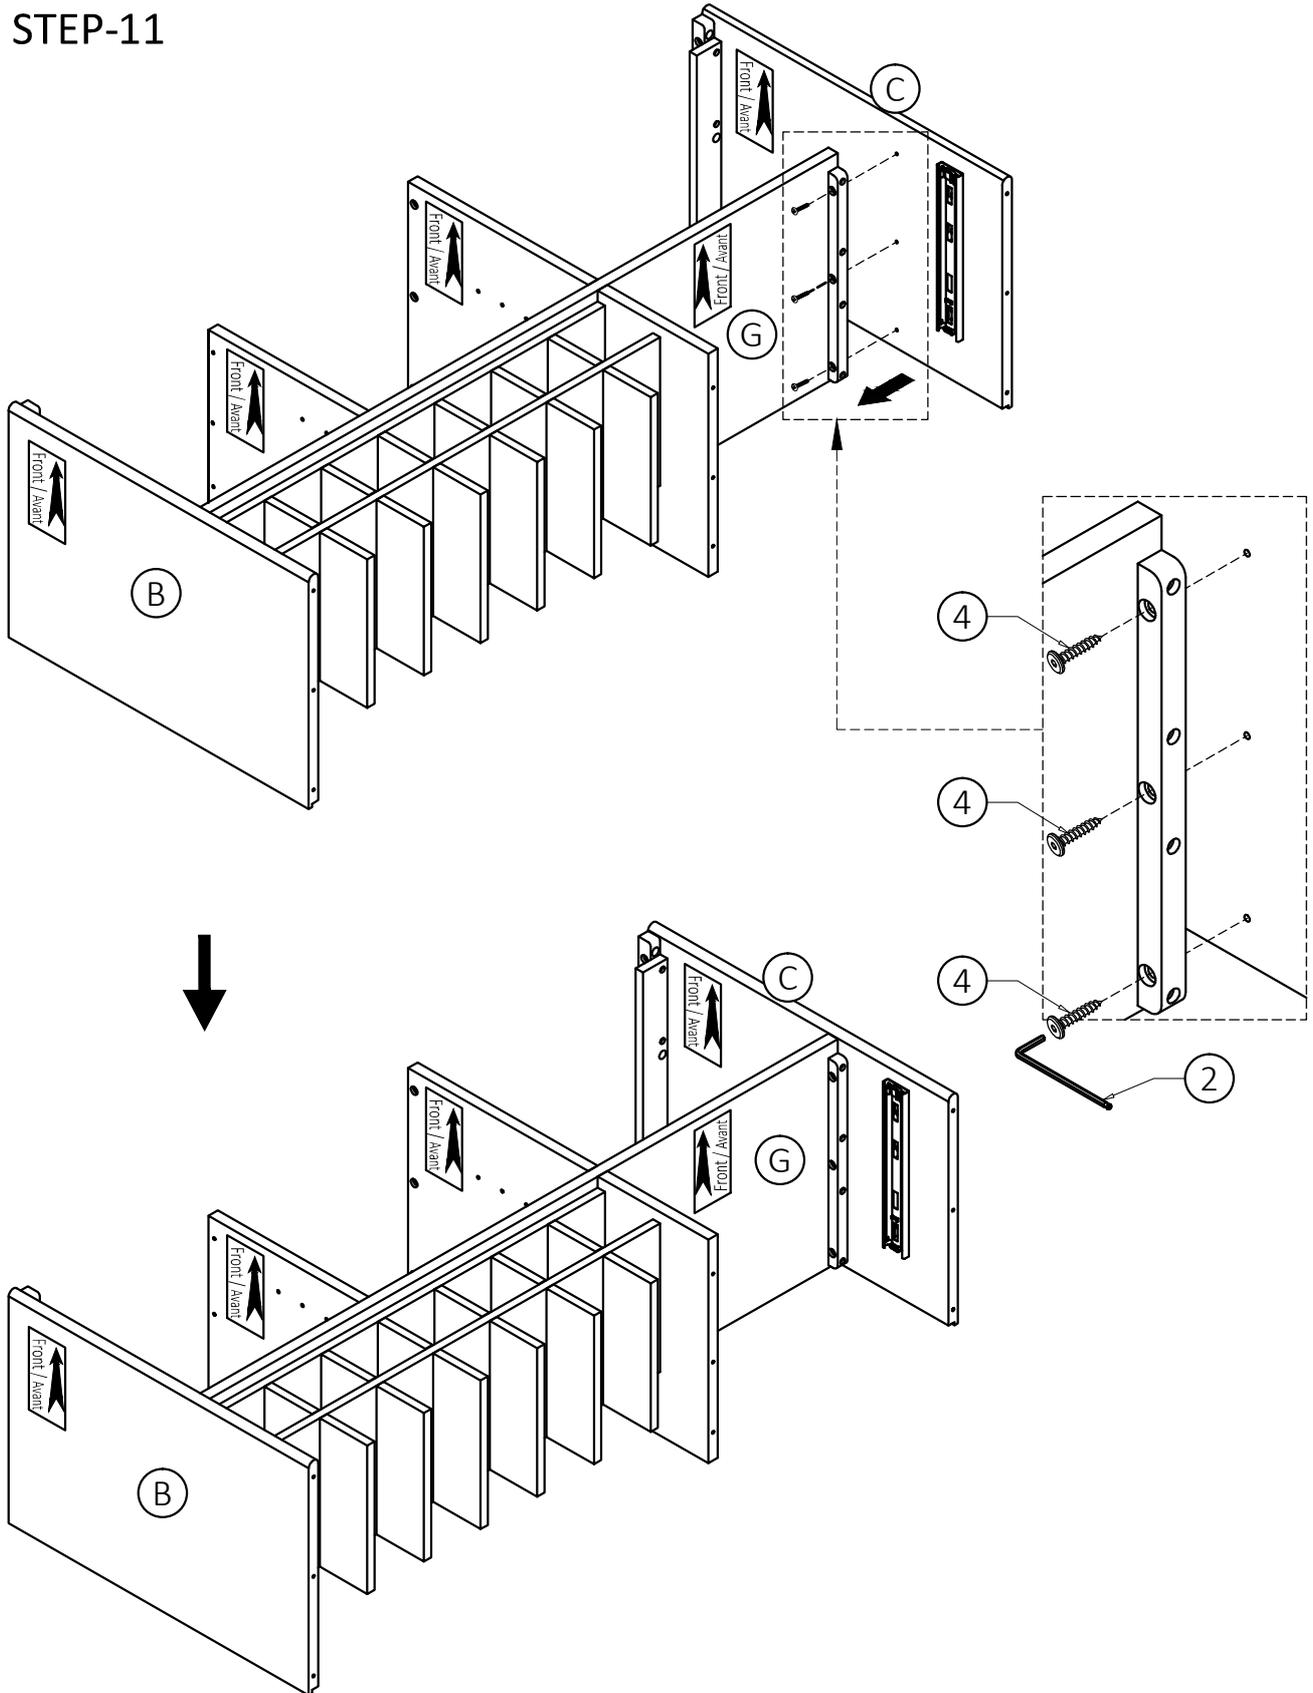

1. Attach Right Side (C) to Middle Shelf (G) using three Allen Key Screws (4) through guide holes to pre-drilled holes of Right Side (C).
2. Use Allen Key (2) to tighten screws. Do not over-tighten.

# ASSEMBLY


## STEP-12

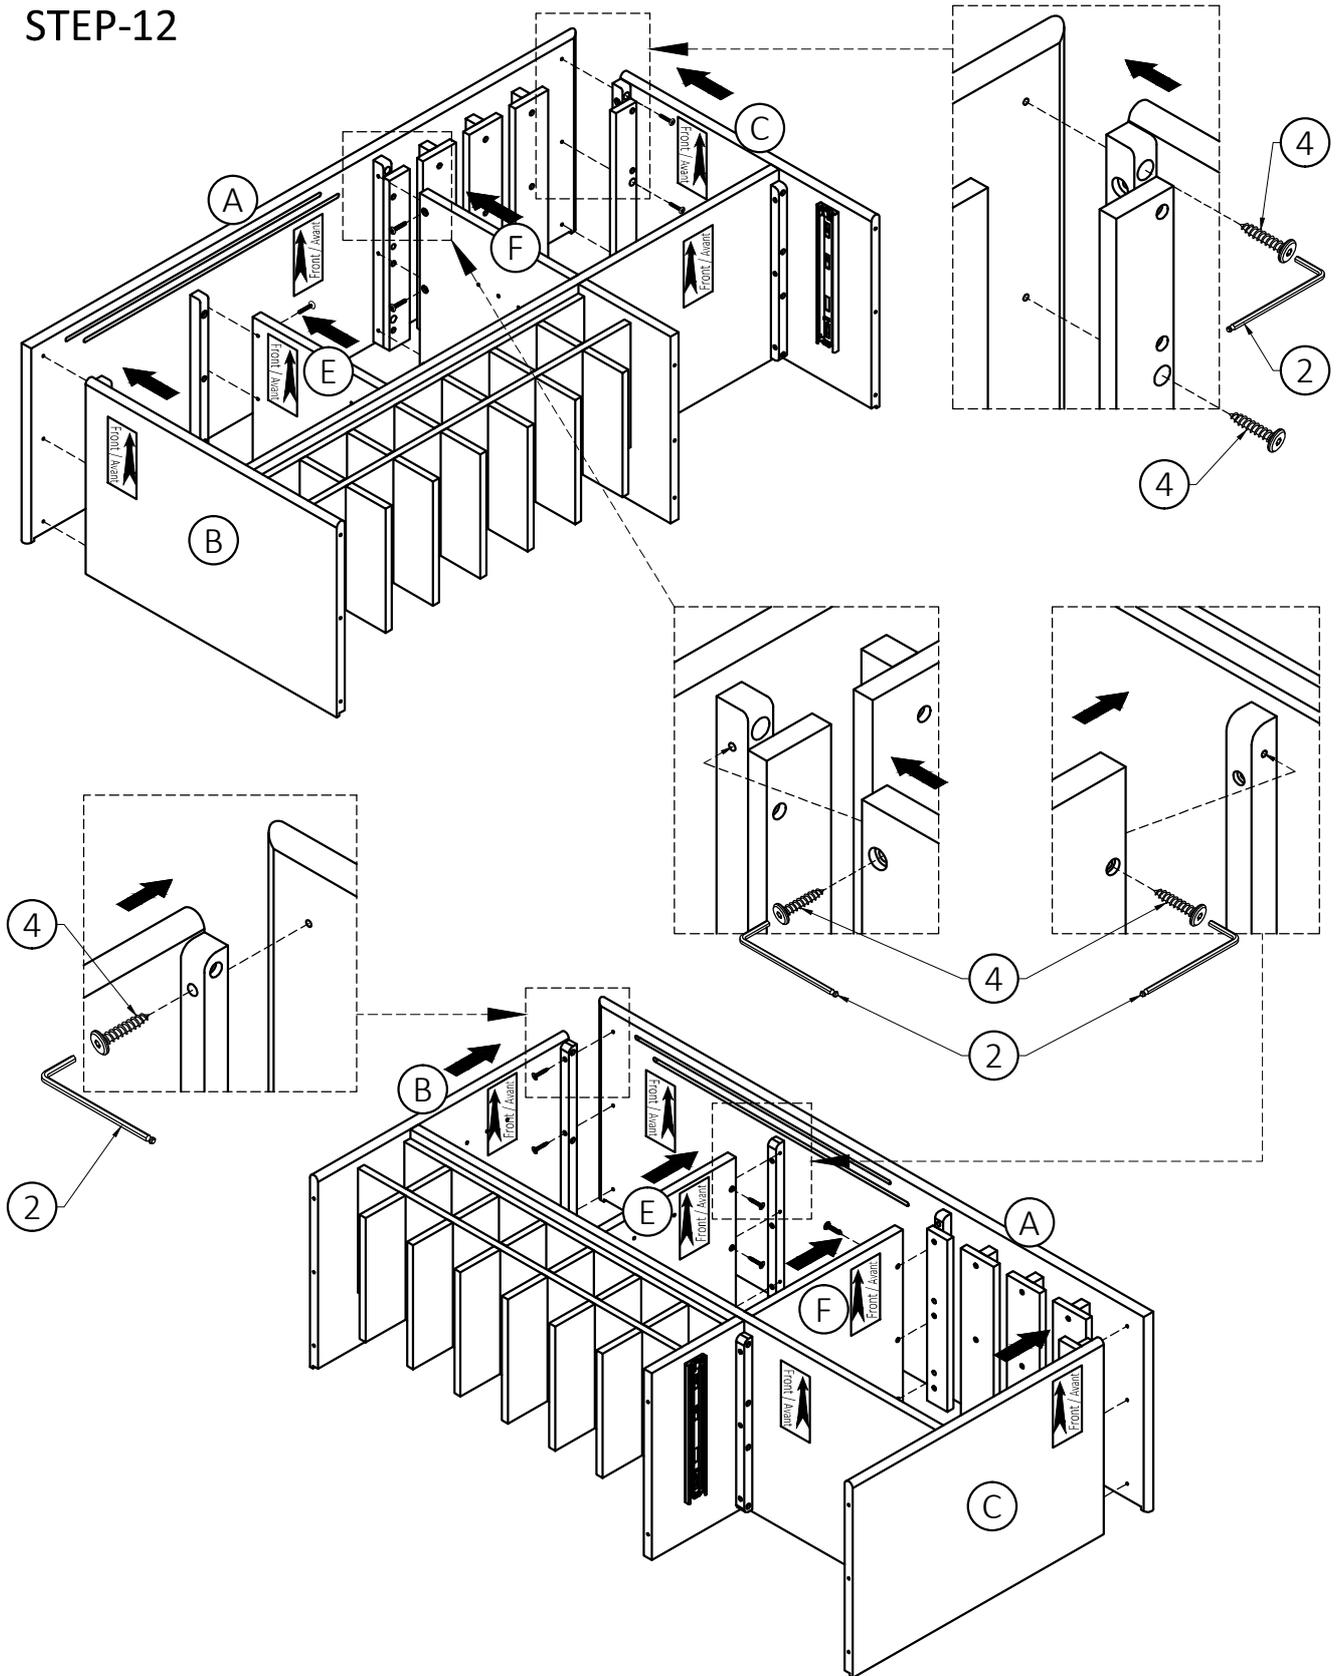

1. Use three Allen Key Screws (4) to attach each part (B), (C), (E), (F) through guide holes to pre-drilled holes of Top (A).
2. Use Allen Key (2) to tighten Screws. Do not over-tighten.

# ASSEMBLY


## STEP-13

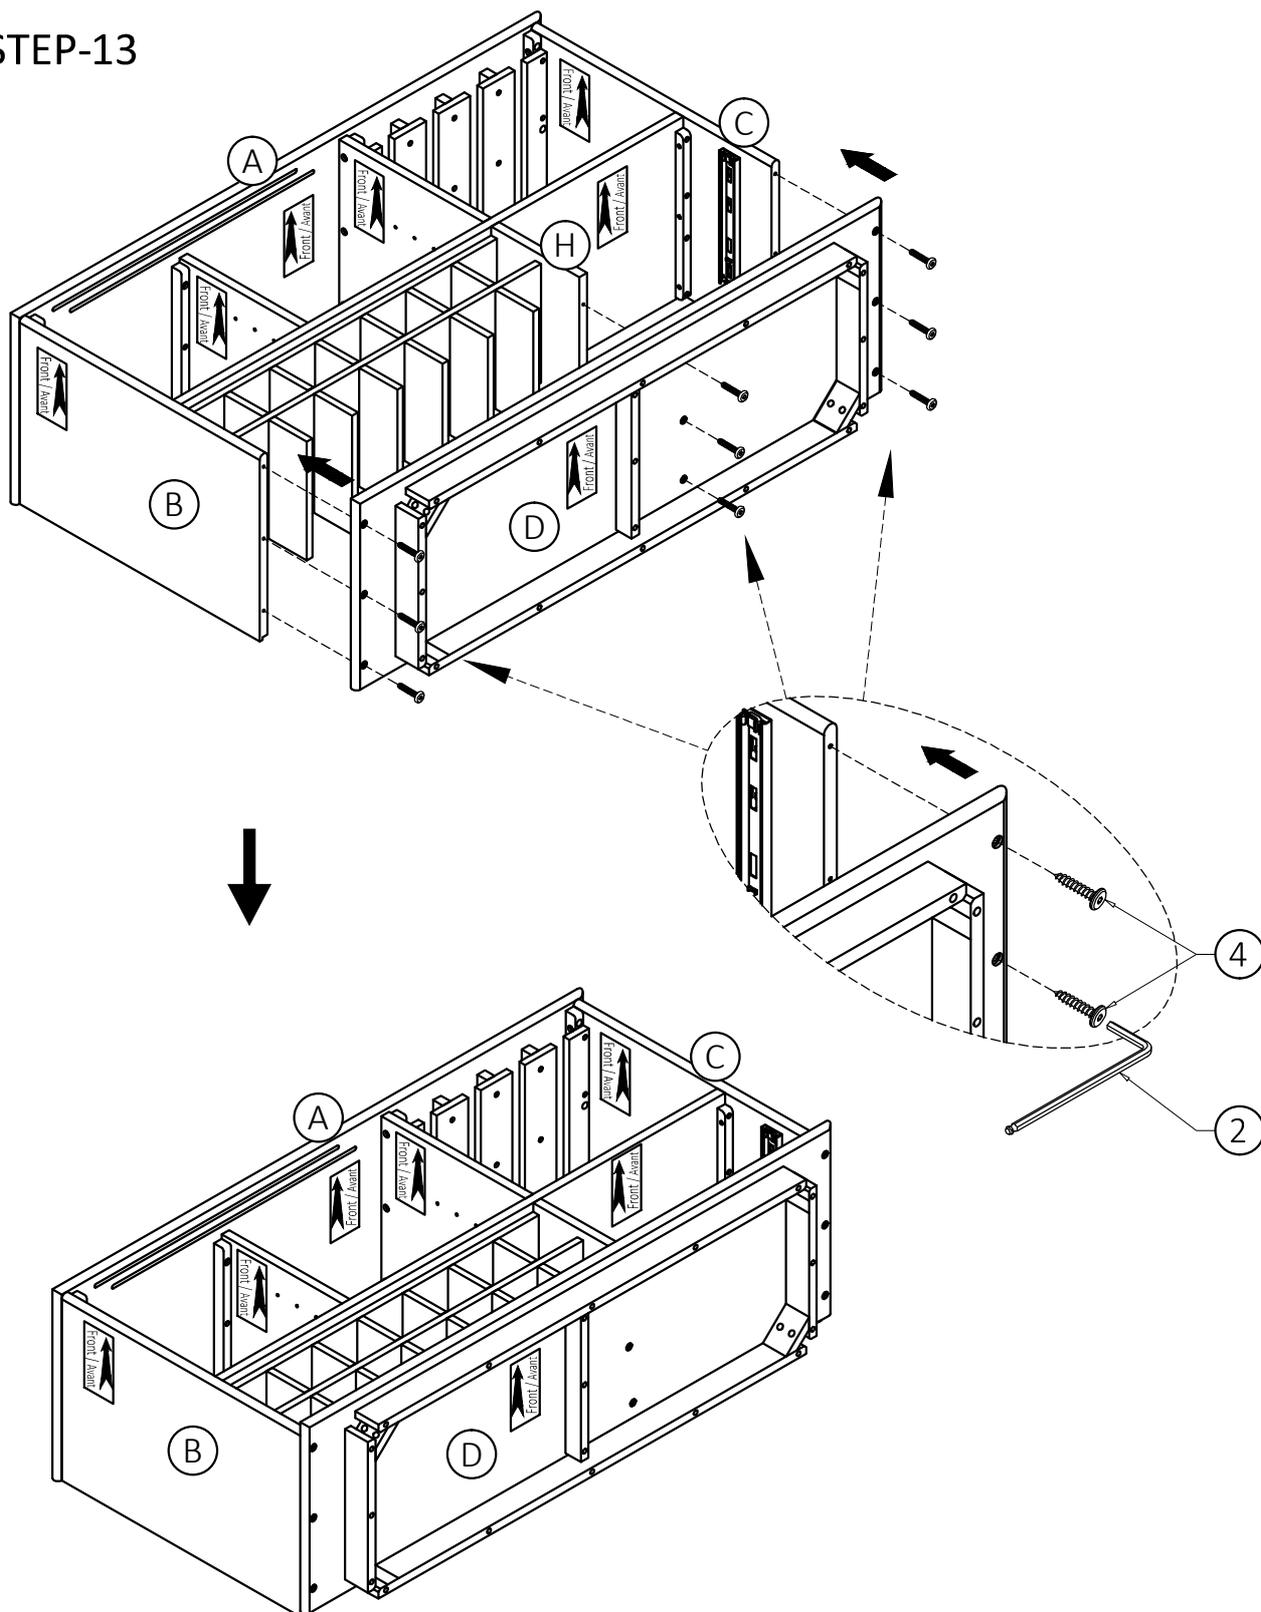

1. Use nine Allen Key Screws (4) to attach Bottom Shelf (D) through guide holes to pre-drilled holes of parts (B), (C), (H).
2. Use Allen Key (2) to tighten Screws. Do not over-tighten.

# ASSEMBLY

## STEP-14

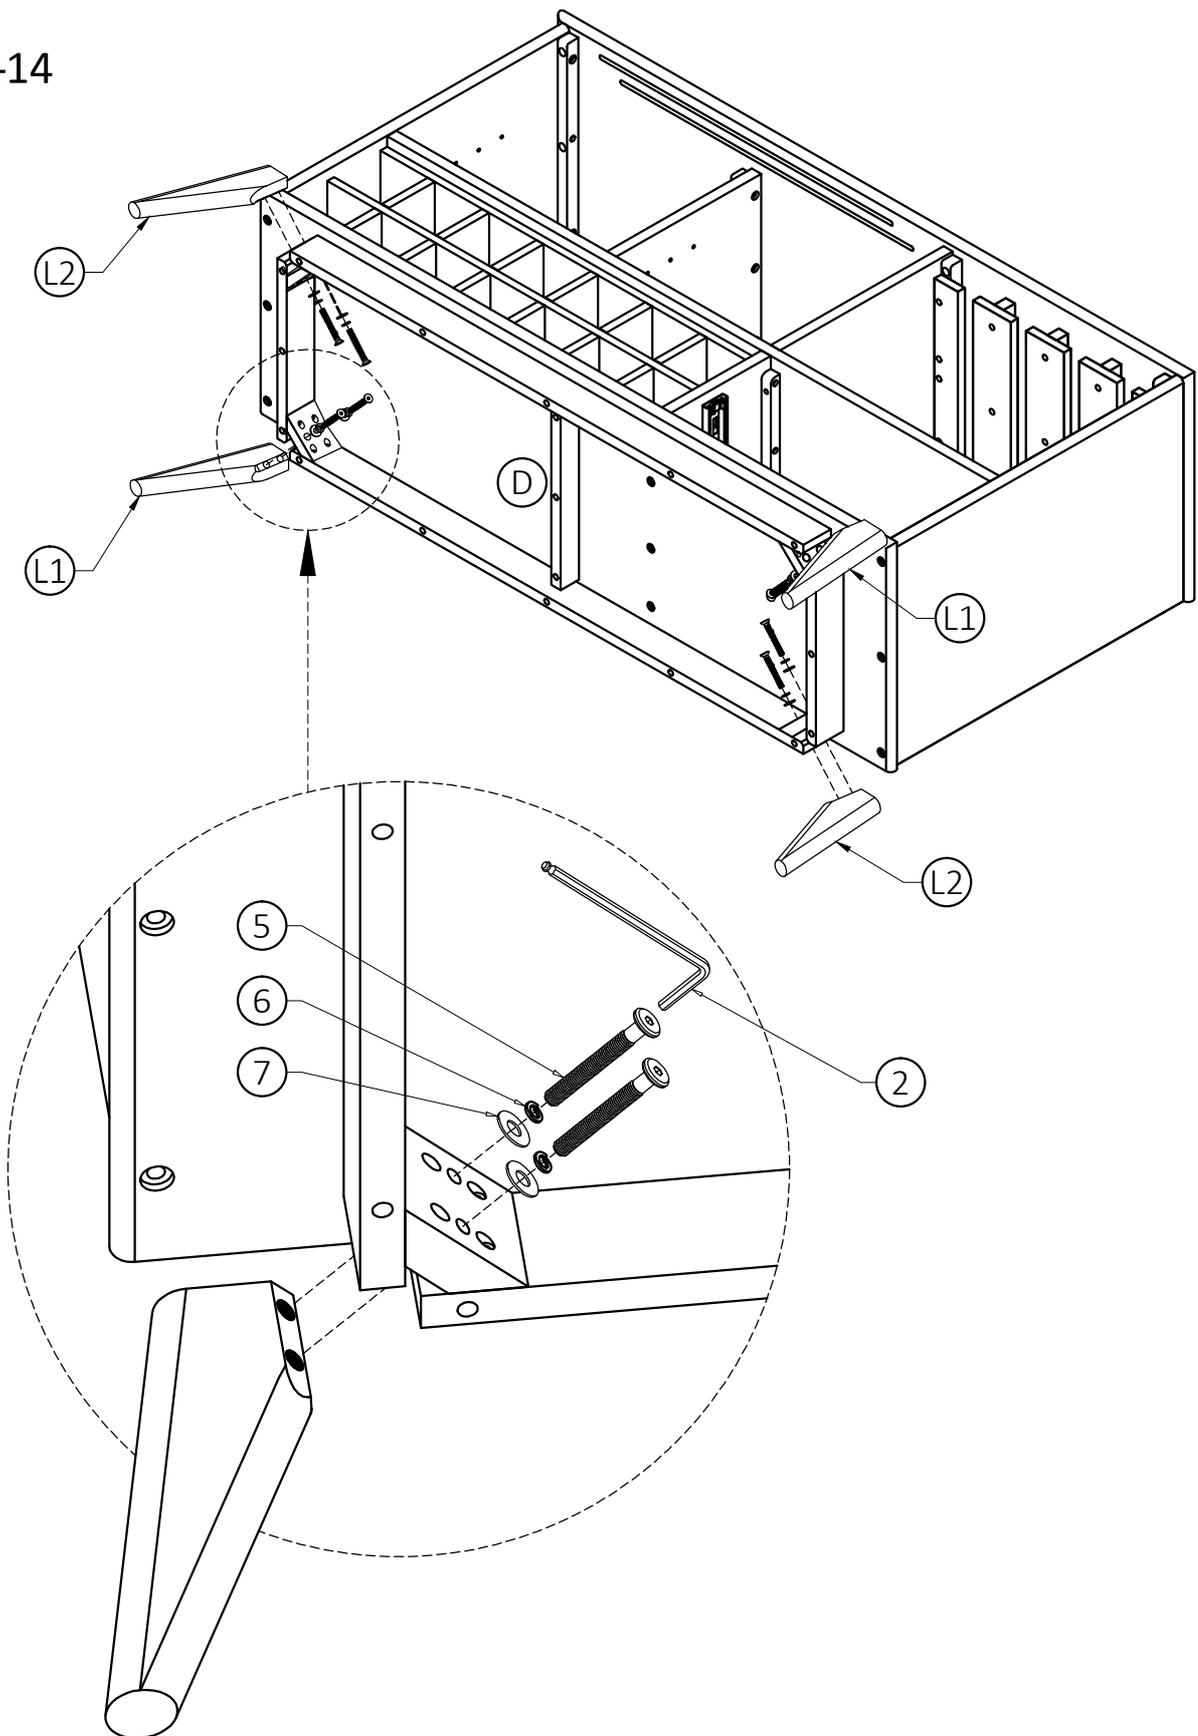


1. Attach Legs (L1), (L2) to Bottom Shelf (D) using eight Allen Key Bolts (5), eight Lock Washers (6) and eight Washers (7) through guide holes.
2. Use Allen Key (2) to tighten Bolts. Do not over-tighten.

# ASSEMBLY

## STEP-15

### Note:


The back of the tv frame does not have pre-drilled holes to attach the back panels.

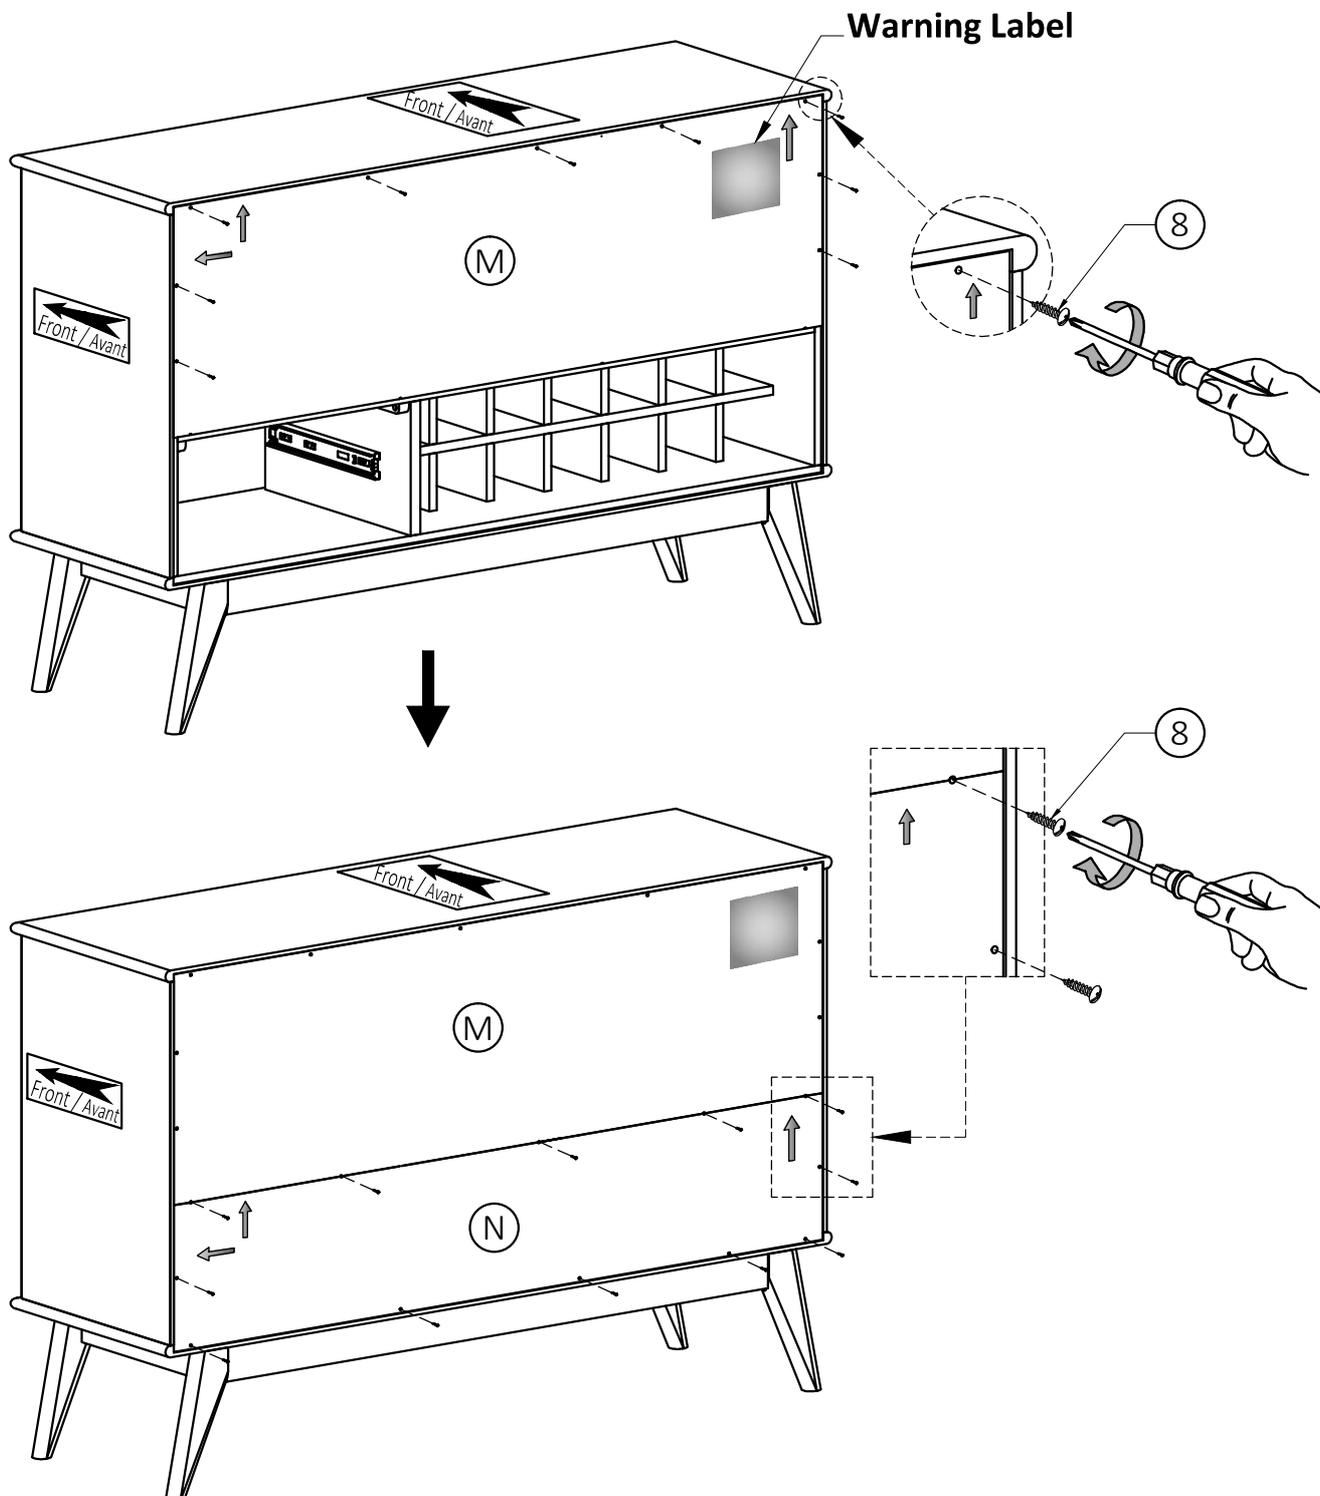

1. Attach the Back Panels (M), (N) to back frame using Phillips Screws Round Head (8) through guide holes from Back Panels.
2. Use Phillips Screwdriver to tighten screws. Do not over-tighten.

# ASSEMBLY


## STEP-16

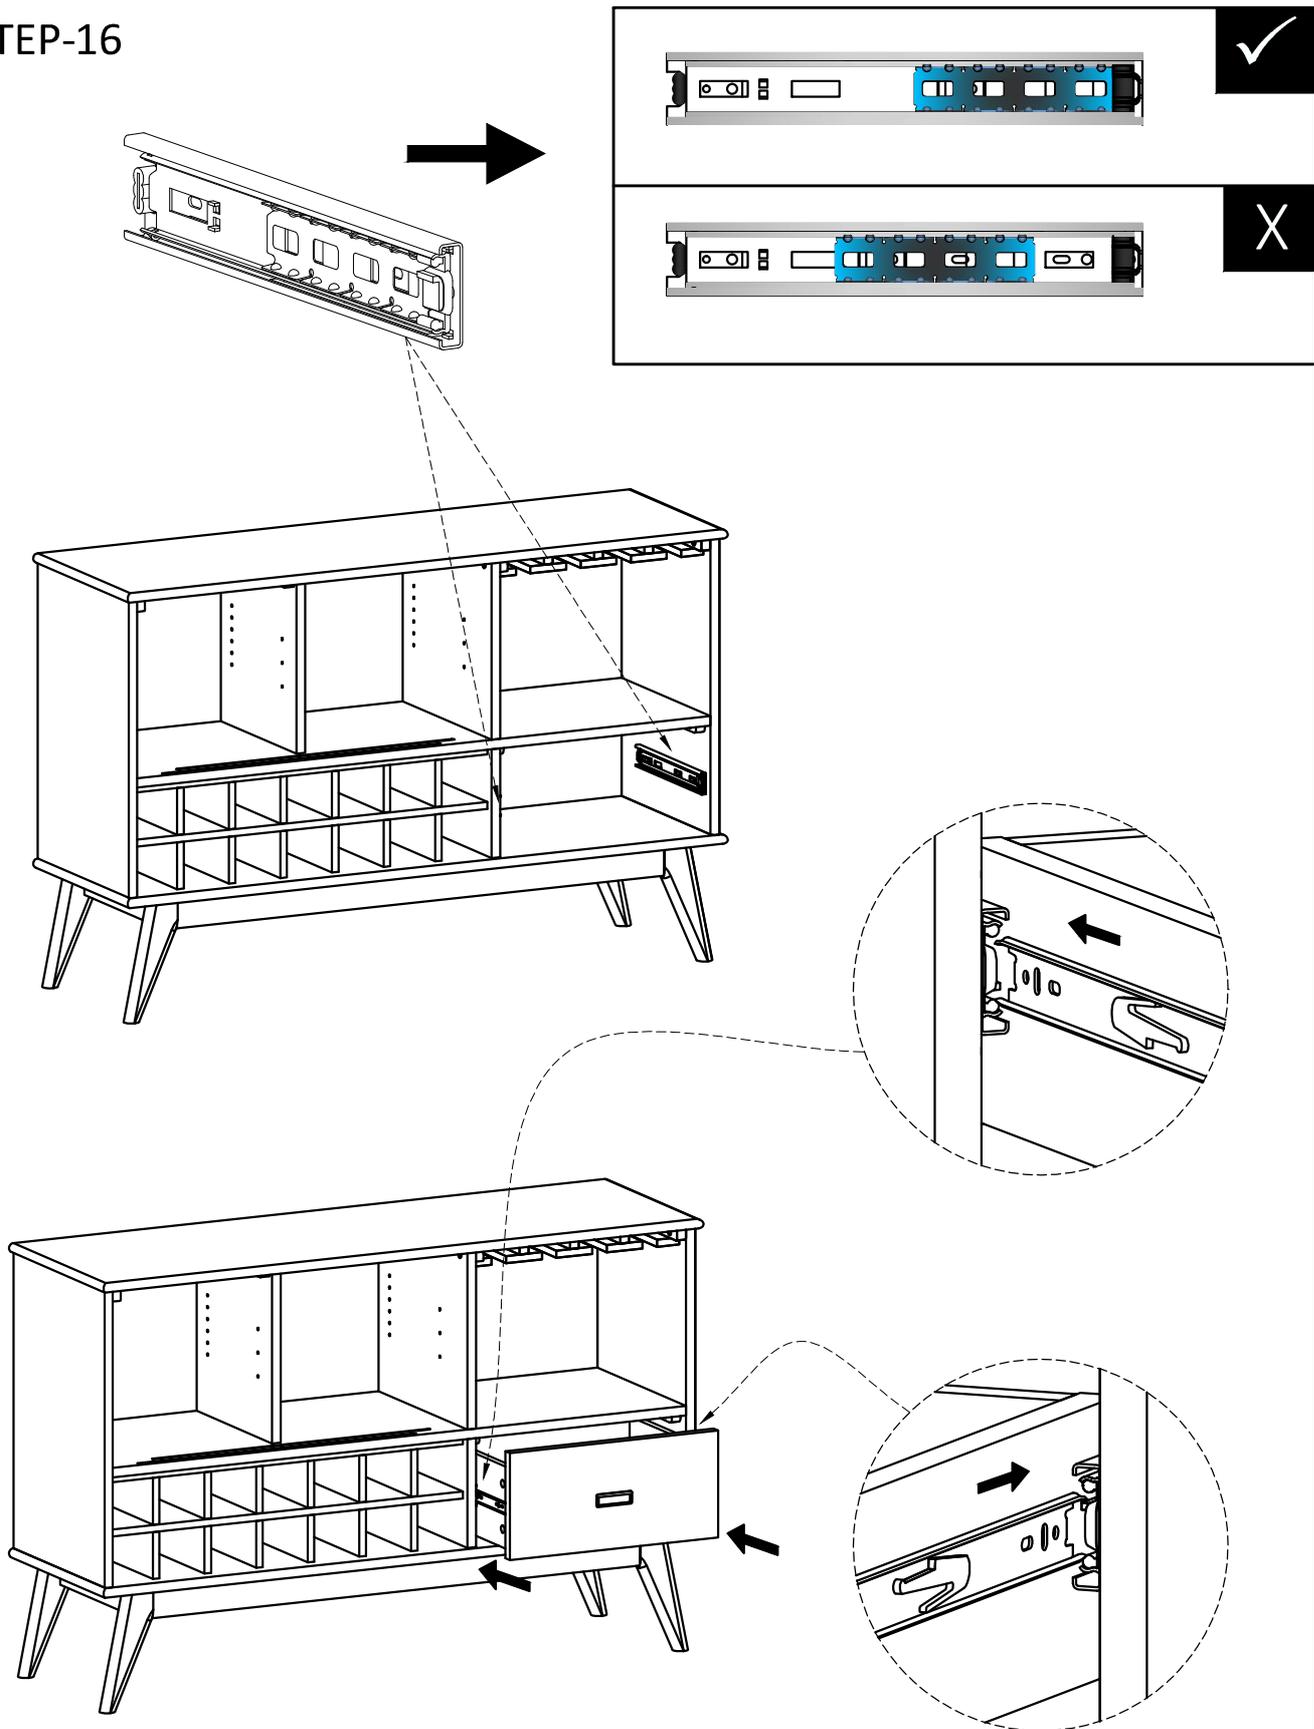

1. Insert assembled drawer into glides on assembled sideboard.

# ASSEMBLY



## STEP-17

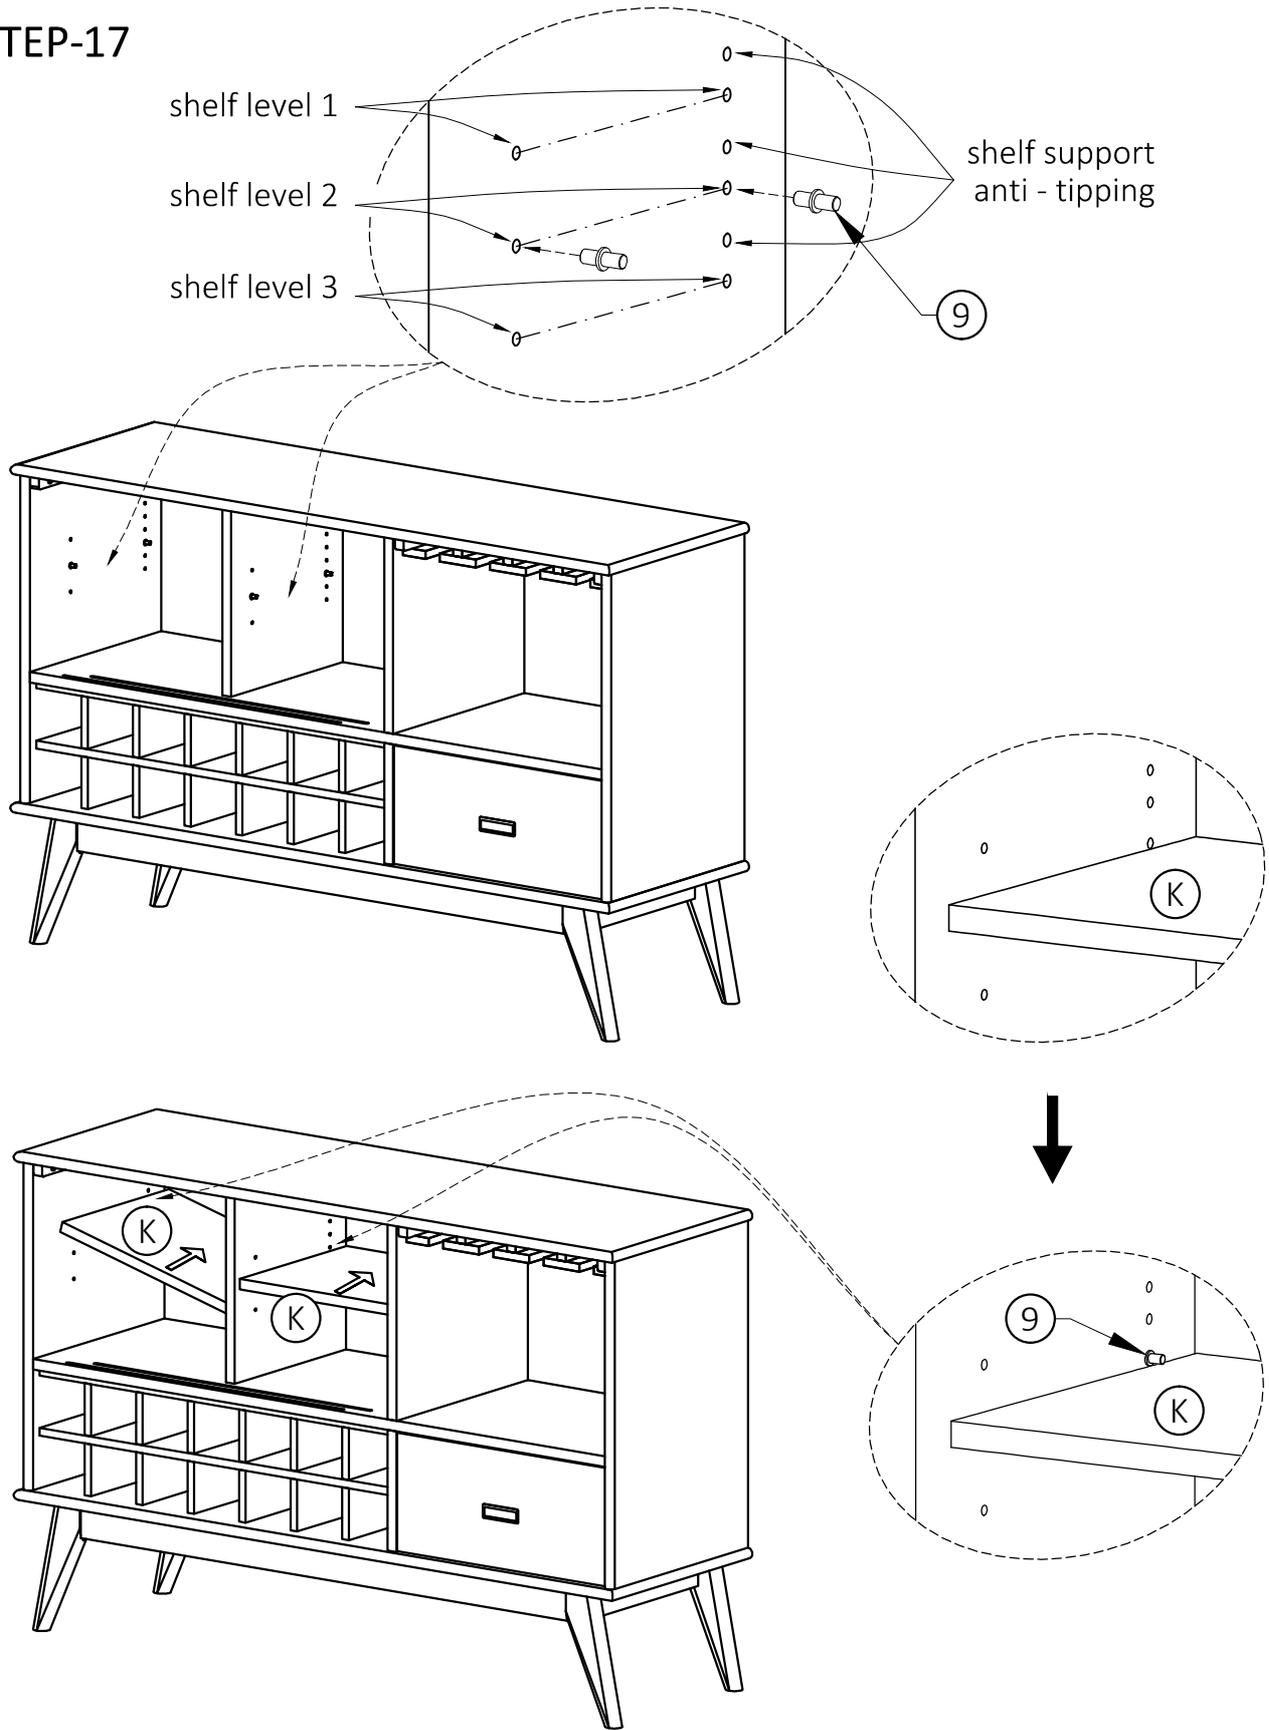

1. Use four Shelf Supports (9) for each Cabinet Shelf (K) in desired location .
2. Two Shelf Supports (9) may be used on back top of each Cabinet Shelf (K) as a tipping restraint.

# ASSEMBLY

## STEP-18

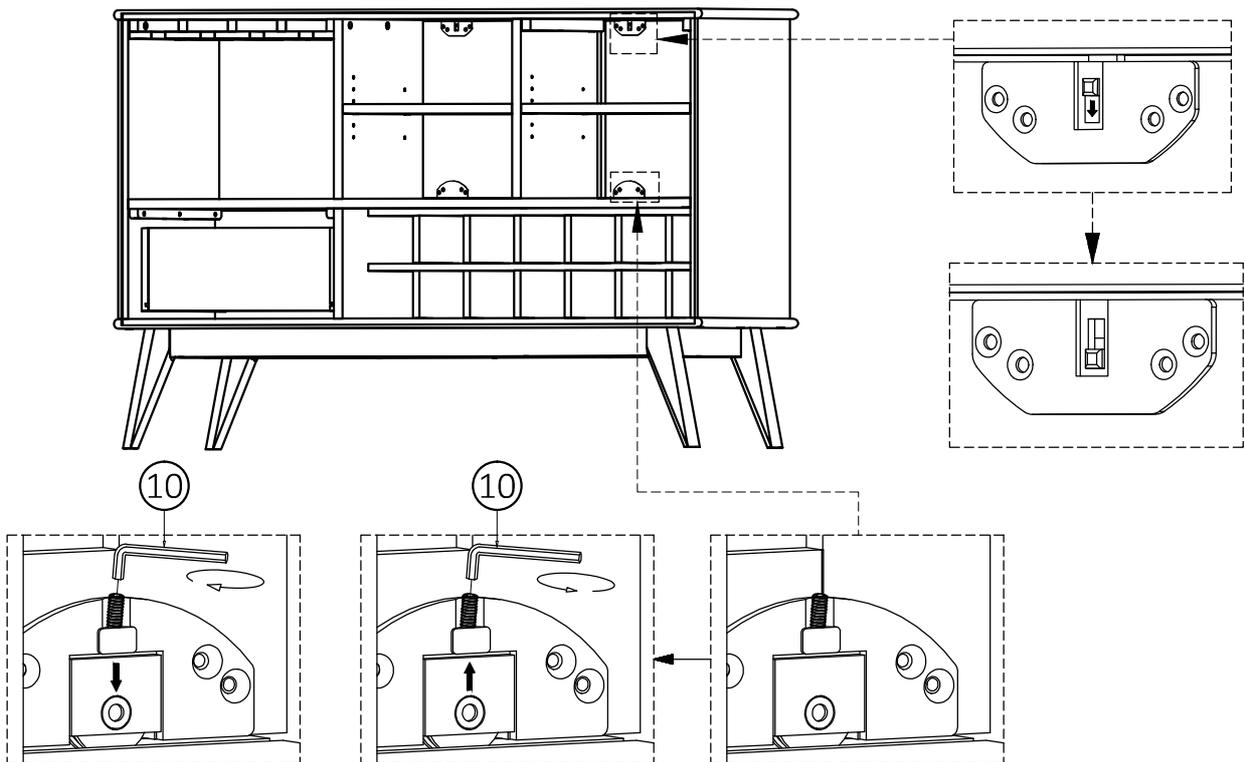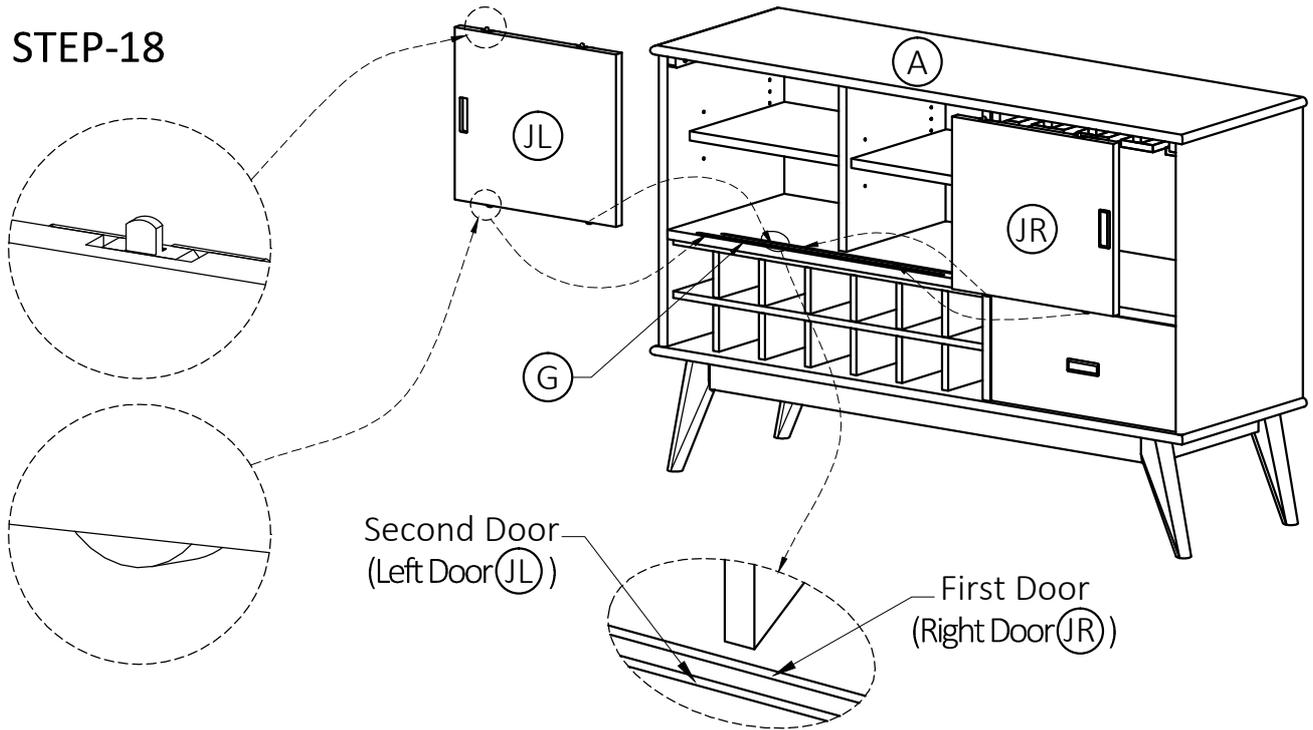


1. Slide the wheels on bottom of each door to the slots on Middle Shelf (G).
2. Pull down the pins on top of each door then place the door to be parallel with the Sideboard side post. Afterward release the pins. The pins will be inserted into the slots underneath of Top (A).
3. To adjust the height of wheels up or down, use the Small Allen key (10) to rotate the bolts on the wheels (Rotating clockwise will adjust the wheels higher, rotating counter clockwise will adjust the wheels lower).

## FURNITURE TIP OVER RESTRAINT ASSEMBLY







### WARNING

Serious or fatal crushing injuries can occur from furniture tip-over.  
If the furniture tip over restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

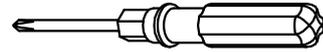

NOTE: The screwdriver is not included in the hardware pack.


### STEP-19

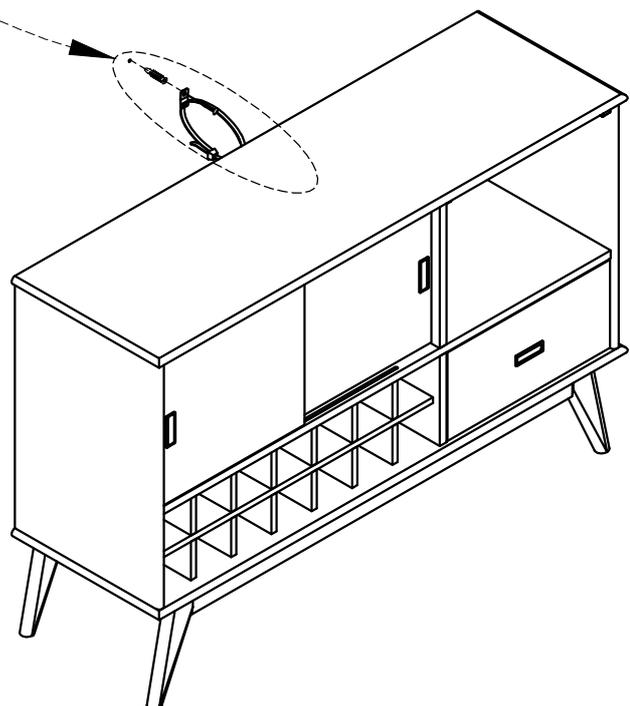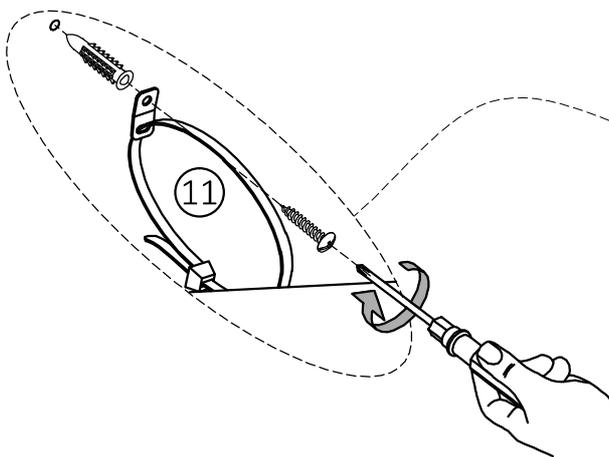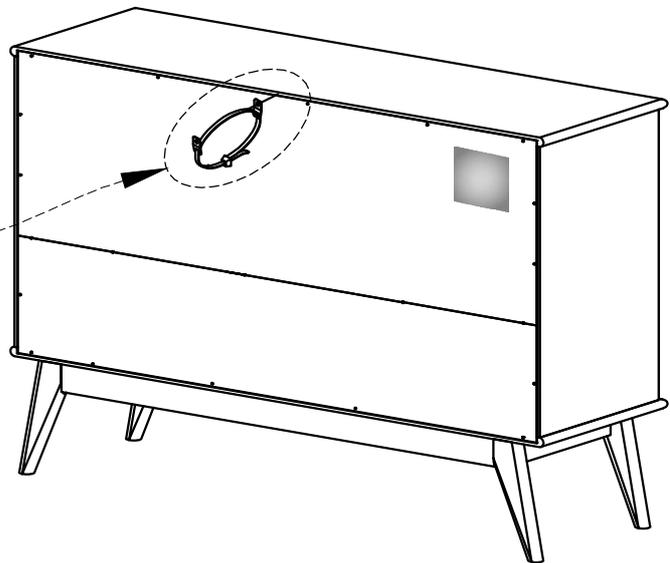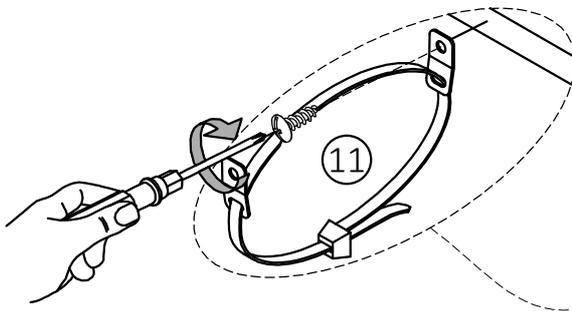


## FURNITURE TIP OVER RESTRAINT ASSEMBLY

### Furniture Tip Over Restraint Instructions:


1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the shorter screw.

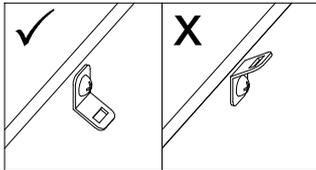

2. Determine where furniture is to be placed and mark location on the wall for mounting bracket screw hole approximately 2 inches **below** the bracket mounted to the furniture.

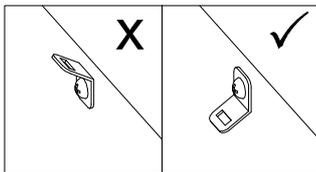

3. Drill a 3/16 inch hole in the wall. Press the plastic anchor into the hole and gently tap until the flange on the anchor is against the wall surface.
4. Position the bracket over the anchor and use the longer screw to securely attach the bracket to the wall.
5. Place the furniture so the back edge is in line with the bracket on the wall.
6. Lace an end of the nylon zip-tie strap down through each bracket. Bring both ends together and slide the smooth side upright through the square-shaped end and pull through to create the "locked" position.
7. Check to make sure the strap is securely laced and locked to the brackets.

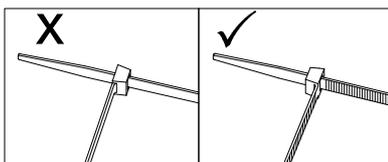

- **DO NOT** put a TV or other heavy objects on top of a chest of drawers or any other furniture not intended for use with a TV
- **DO NOT** place heavy objects in top drawers
- **DO NOT** let children climb or hang on drawers, doors or shelves

## WARRANTY

Thank you for purchasing our product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

In case of any malfunction of your product (failure, missing parts, etc.) please contact us at our toll free service line or by email.

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.