

AQUA TOWER®

IMPORTANT INSTRUCTIONS!!! Please READ CAREFULLY Before Installing:

This Aquarium is Shipped Complete In Two (2) Cartons.
Please check to be sure that you have
received all the following items:

Accessory Package Includes:

Base Unit with Acrylic Retainer Locking Bar(s)
with Bolts & Washers


Header Unit with Plant Decorations

*For CL (Clock Version) Header unit
includes clock movement & battery

Parts:


Undergravel Filter with Lift Tube
Powerhead Filter
Extension Cord
Gravel (loose in box)

Tower Package Includes: Tower Unit (Tank Section)

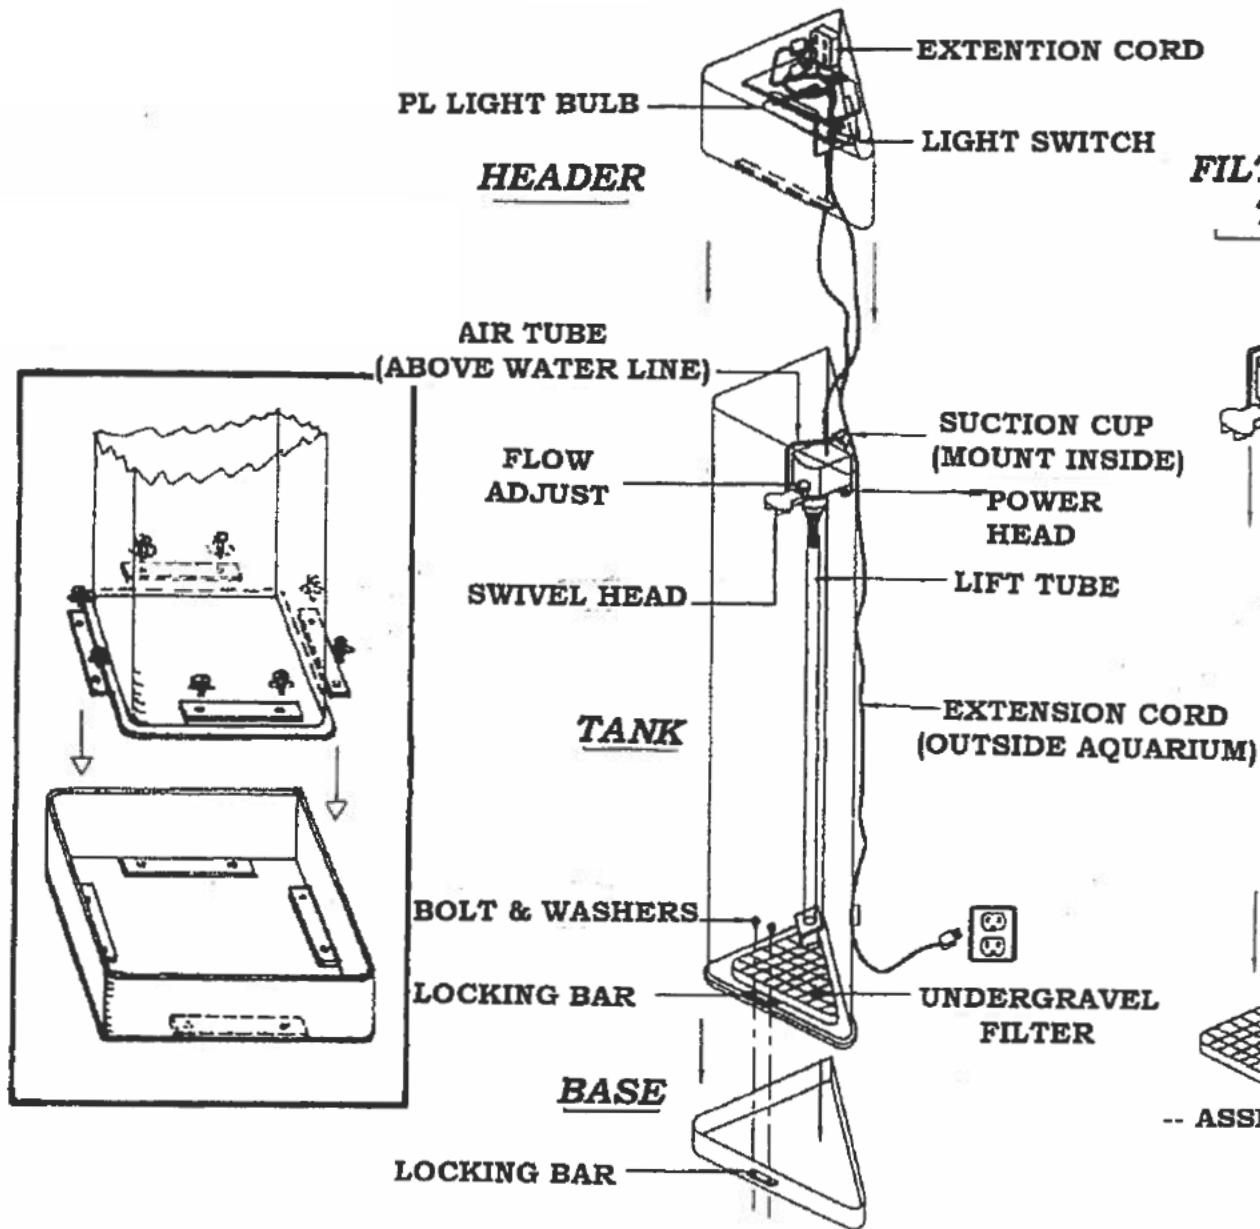


**FILTRATION
T-1200**

**FILTRATION
S-1000**

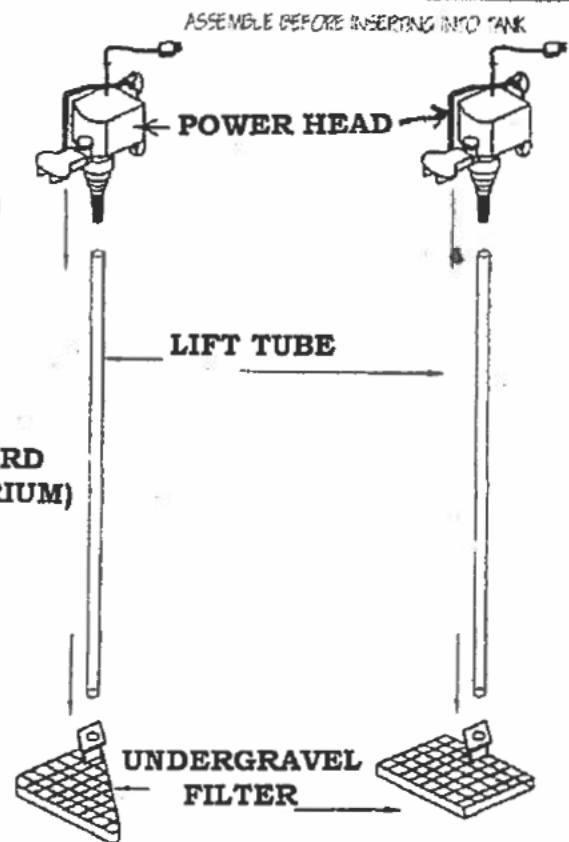

-- ASSEMBLE BEFORE INSERTING INTO TANK --

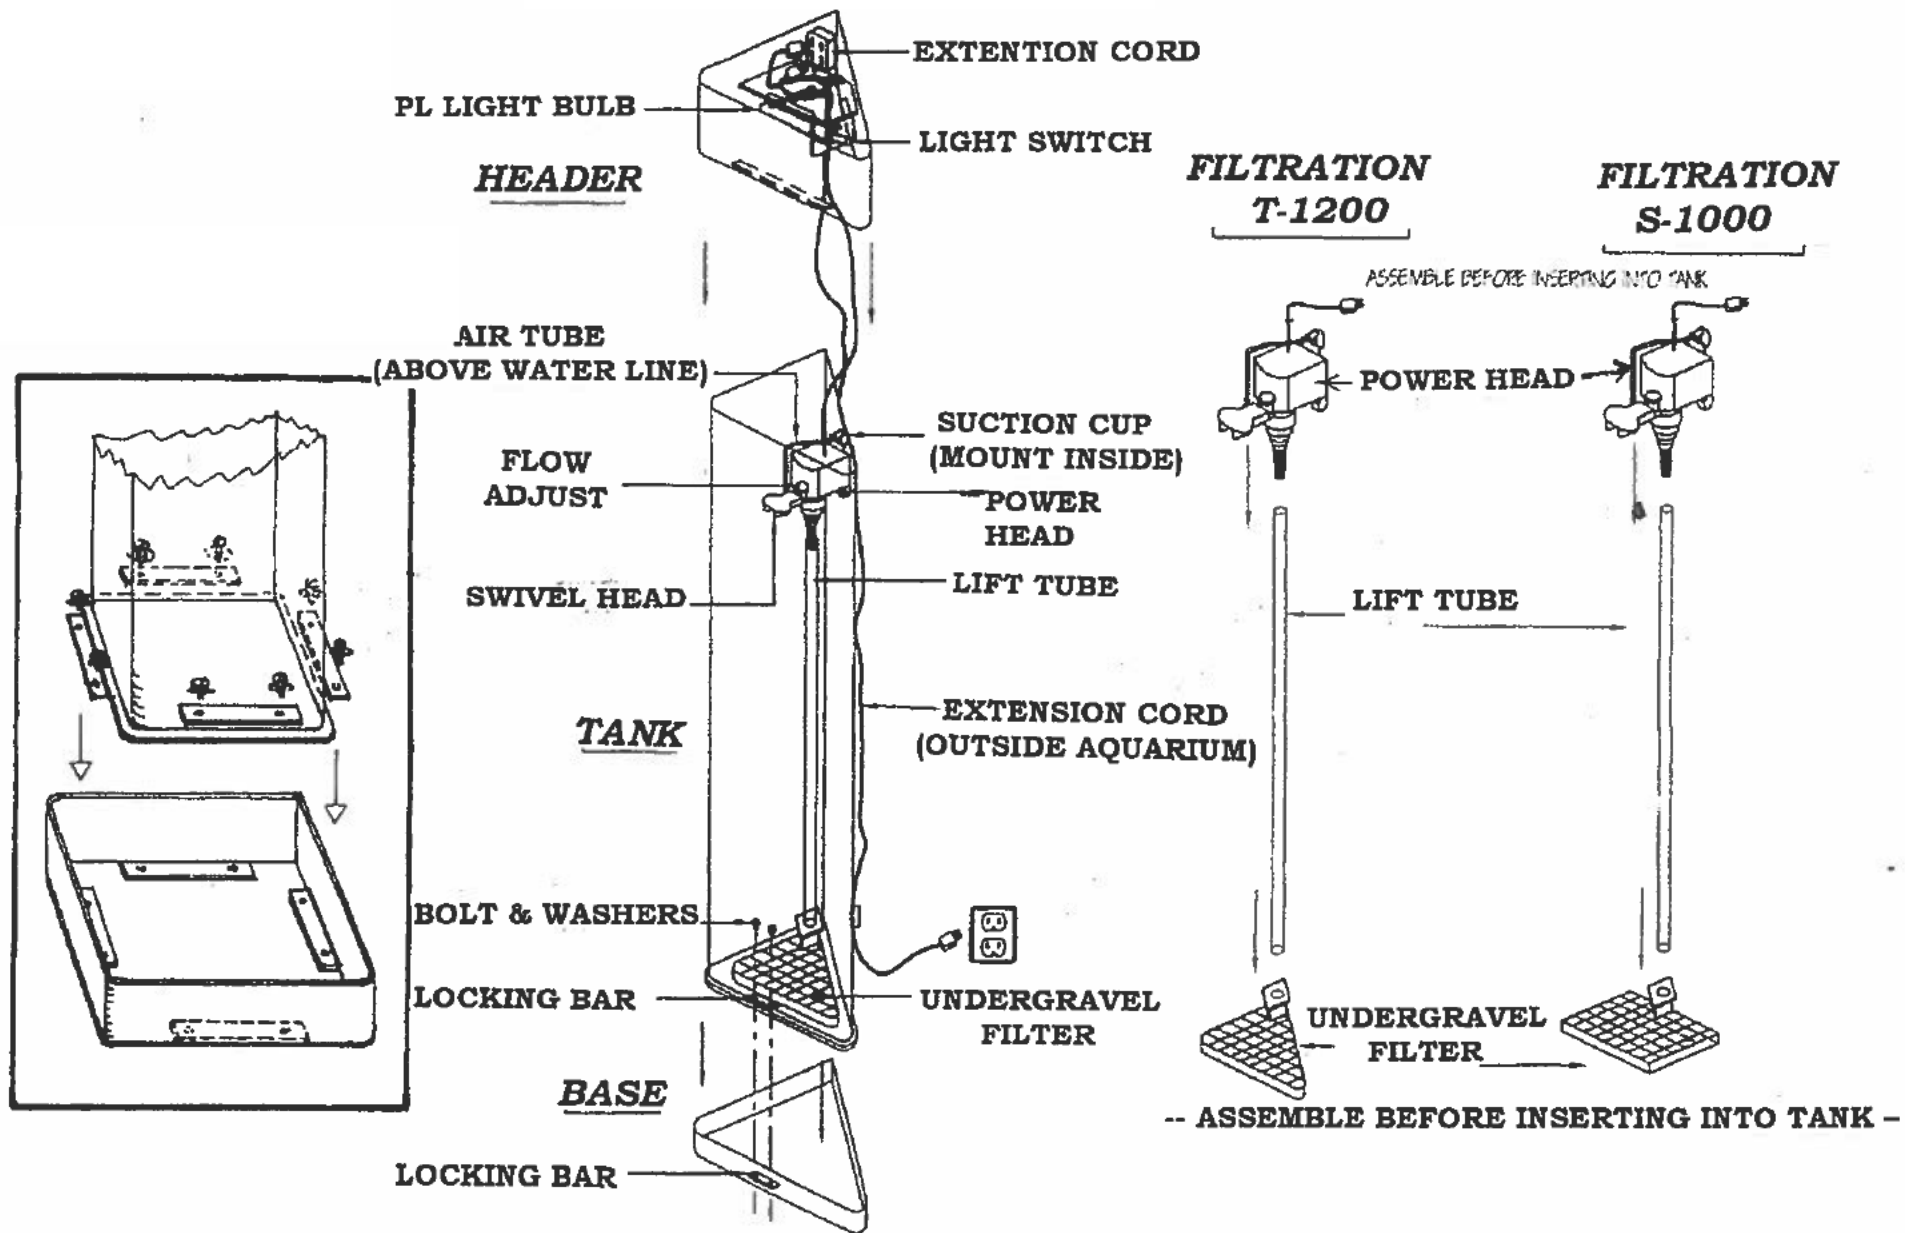

AQUA TOWER ASSEMBLY INSTRUCTIONS

- 1) Unpack all equipment and review with Diagram.
- 2) Attach BASE UNIT to TOWER UNIT. Place the TOWER UNIT bottom within the guide bars on the BASE UNIT. Bolt into place the acrylic retainer (as shown in diagram) using the bolts & washers provided. Additional RETAINER LOCKING BARS, BOLTS and RETAINERS are required for the S-1000 model.
- 3) To assure the stability of the aquarium all LOCKING RETAINER BARS must be installed: Bottom BAR is attached to BASE. Place tank section in aquarium base and "sandwich" Aquarium tank lip between LOCKING BARS. Place loose LOCKING BAR over lip and align with bottom BAR. Place WASHER inside BOLT and screw into LOCKING BARS to join together. Both must be screwed securely!

T-1200: There are Two BOLTS AND WASHERS which go into the RETAINING BARS. Tighten GENTLY!

S-1000: There are Eight BOLTS AND WASHERS which go into the Four RETAINING BARS. All must be screwed in securely to assure the stability of the aquarium.

- 4) Place the aquarium upright and set it on a flat, level surface in the desired location, away from direct sunlight.
- 5) Assemble UNDERGRAVEL FILTER w/Lift Tube and powerhead. (See attached diagram)

- 6) Open and rinse the GRAVEL. Rinsing will remove dust and foreign particles from the GRAVEL. Pour the GRAVEL gently into the aquarium, making sure to cover the FILTER, to a depth of about 3 Inches. Make sure to cover the FILTER, but NOT the STEM.

- 7) Select the correct water temperature.
For goldfish,
use slightly cool tap water (60-70 degrees).
For tropicals,
use room temperature tap water (72-78 degrees)
Fill the Aquarium with water to 2 Inches from top.

- 8) Assemble and Position Artificial Plant Decoration.
Please Note: Plants snap together at various levels, allowing you to extend or shorten their length to suit your personal tastes. Attach PLANT WEIGHTS (not included) to the PLANT base to aid in their settling to the bottom of the tank.

Drop PLANT into aquarium, weighted stem first. The weighted PLANT base will anchor the PLANT on the bottom of the tank. If you desire to hide the base under the GRAVEL, use a broom handle, or similar long stick, to gently push the PLANT base an inch under the surface of GRAVEL.

Assemble the HEADER UNIT:

Your Aqua Tower Timepiece is equipped with a BATTERY movement, which uses 1 AA BATTERY (Not Included). Located inside the HEADER UNIT you will find a slot to insert the BATTERY. Directly above this slot, you will find the inset Time Adjustment Knob, to correctly set the time. On the front side of the header, you should find the Hour and Minute Hands already in place. If these have come loose during shipment, lightly push them in near the center nut until they lock into place.

- 9) Assemble the HEADER UNIT. Insert a 50 watt MAXIMUM bulb into the light socket of the HEADER UNIT. The On/Off switch is located adjoining the socket, inside the HEADER.

- 10) The BASE UNIT now also acts as a Planter Box. You may fill the area outside the TOWER Section with soil and live plants, or you can fill it with excess decorative GRAVEL.

Helpful Hints On Maintaining Your Aqua Tower Aquarium

Place your aquarium away from direct sunlight, as sunlight accelerates the growth of algae. If you do place your AQUA TOWER in direct sun, you will need to clean it more frequently.

You should replace approximately 25% of your water every three weeks. Use fresh, room temperature tap water.

Remember, Fish Need Air Too. Make sure your POWERHEAD is running at all times. Bubbles in the aquarium indicate the POWERHEAD is functioning properly.

Avoid overfeeding your fish. Feed them only once every day or two, and give them only enough FOOD as can be readily consumed. To clean the outside of your aquarium use a soft cloth. Abrasive materials will scratch the acrylic finish. NEVER spray window cleaner near the top of your aquarium since ammonia is toxic to fish.

We Hope You Enjoy Many Years Of Pleasure With Your

AQUA TOWER AQUARIUM

IMPORTANT NOTICE

DEAR CUSTOMER,

WE TAKE EXTRA PRIDE IN OUR MANUFACTURING AND PACKAGING OF THIS PRODUCT AND WISH YOU MANY YEARS OF ENJOYMENT.

IF YOU HAVE ANY QUESTIONS REGARDING THE OPERATION OF THIS MERCHANDISE, PLEASE CONTACT OUR CUSTOMER SERVICE DEPARTMENT BETWEEN 9:30 A.M. - 4:00 P.M. CST WITH ANY QUESTIONS.

DO NOT RETURN MERCHANDISE TO THE STORE UNLESS YOU HAVE CONTACTED OUR SERVICE DEPARTMENT WHO WILL PROVIDE RETURN AUTHORIZATION DETAILS.

SAFETY INSTRUCTIONS & RECOMMENDATIONS

To avoid the possibility of the appliance plug or receptacle getting wet, position the Water Sculpture stand and Water Chamber to one side of a wall mounted receptacle. To prevent water from dripping into a receptacle, a "drip loop" should be arranged by the user for each cord connecting a Water Sculpture to an electrical receptacle. The "drip loop" is that part of the cord below the level of the receptacle or connector if an extension cord is used, to prevent water traveling along the cord and coming in contact with the receptacle. If the plug or receptacle does get wet, **DO NOT** unplug the cord due to the risk of electric shock. Disconnect the fuse or circuit breaker that supplies power to the appliance. Then unplug the cord and examine for presence of water in the receptacle.

NOTE: ALWAYS UNPLUG THE ELECTRICAL CONNECTIONS TO THE WATER CHAMBER WHEN SERVICING THE WATER SCULPTURE!

NEVER USE GLASS CLEANER ON THE ACRYLIC BODY OF THE WATER CHAMBER. WE RECOMMEND USE OF A PLASTIC OR ACRYLIC POLISH CLEANER ONLY.

ANY MODIFICATIONS MADE TO THIS PRODUCT WILL VOID THE WARRANTY AND MANUFACTURER'S LIABILITY.