


ENTERTAINMENT CONSOLE

Assembly Instruction

A. Components :		Qty		B. Hardware :		Qty	
1. 80" Entertainment Console		1x		a. Screw $\varnothing 8 \times 2''$		1 x	
				b. Screw $\varnothing 8 \times 5/8''$		1 x	
				c. Restrain Strap		1 x	
				d. Metal Tabs		2 x	
				e. Plastic Wall Anchor		1 x	

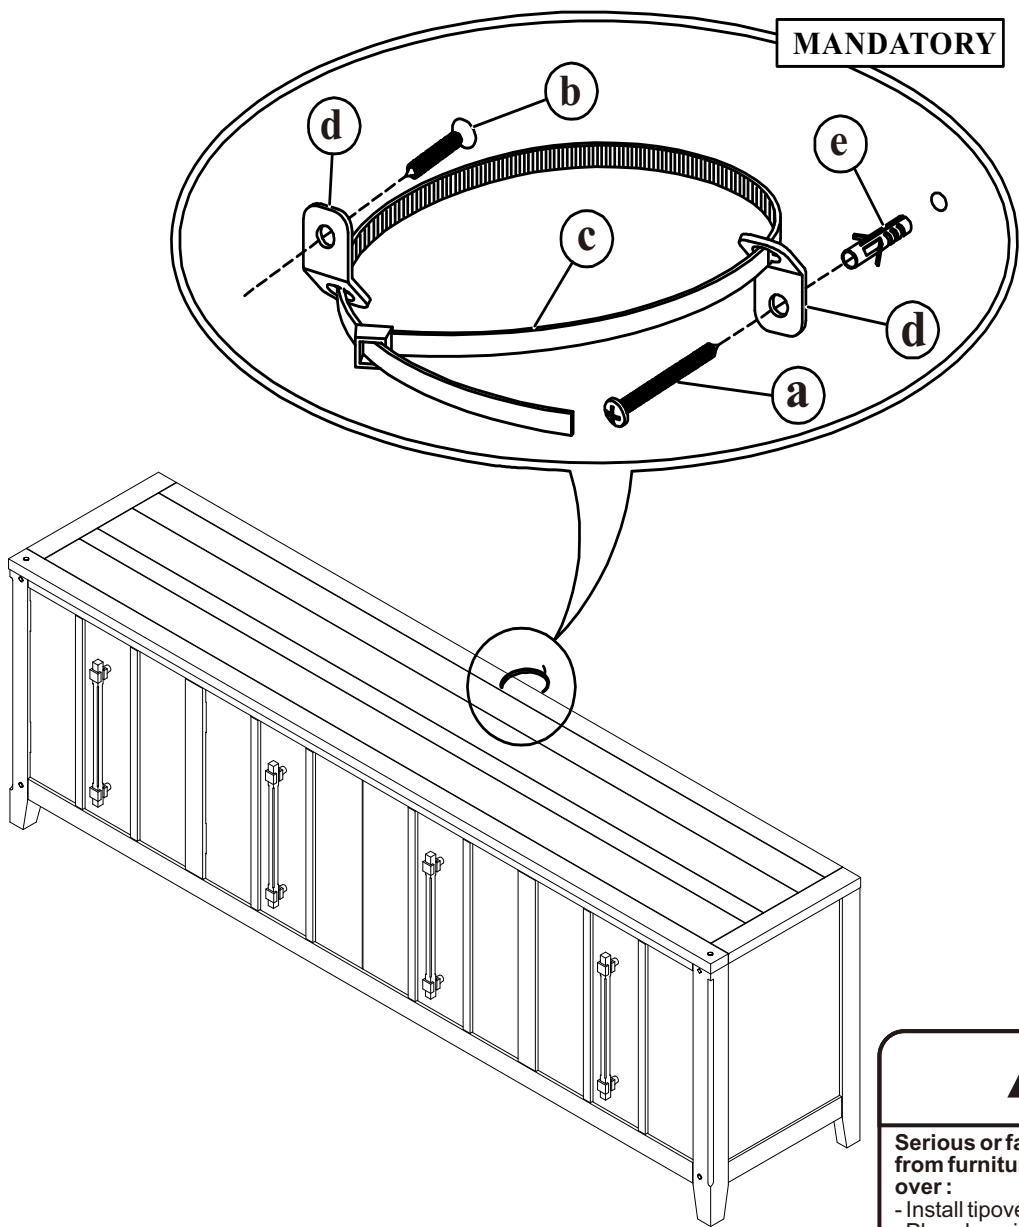

⚠ WARNING

Serious or fatal crushing injuries can occur from furniture tipover. To help prevent tip-over :

- Install tipover restraint provided.
- Place heaviest items in the lowest drawers.
- Unless specifically designed to accommodate, do not set Tv's or other heavy objects on top of this product.
- Never allow children to climb or hang on drawers, doors or shelves.
- Never open more than one drawer at a time.
- (OR)
- Do not defeat or remove the drawer interlock system.

Use of tip over restraints may only reduce, but not eliminate the risk of tip-over.

This is a permanent label. Do not attempt to remove.