

Construction Steps

Installation instruction

1. Tile the tent, drive the ground nails at the four corners of the bottom of the tent, and install the pump.
2. Find the black inflation valve, remove the valve lid and connect to the pump to inflate until the barometer pointer moves to green area.
3. Insert the other ground nails, pull the wind rope and fix it properly.
4. Support the curtain with 2 hallway poles and wind ropes. Please Close the curtains on rainy days.

step1



step2



step3



step4



Precautions

1. Tents provide temporary shelter in the open air and are not suitable for long-term camping.
2. Tents can only withstand moderate weather changes, while extreme weather (such as heavy rain, strong wind, and snowstorms) could completely destroy tents, so please pay attention to the weather to arrange camping activities reasonably.
3. The life of tents is limited. Reasonable use and maintenance can prolong its service life.
4. For a reasonable and enjoyable camping activity, please note the following matters.
 - Please choose a flat camp to set up the tent, keep it on the lee side, away from water and trees, not on the top of the mountain or under the cliff, not in the valley or on the beach, etc.
 - Please set up the tent (both ground nail and wind rope are equipped) according to the instructions to make its appearance full and flat.
 - Avoid sharp objects touching the tent.
 - Keep away from fire.
 - Pay attention to the ventilation inside the tent.
 - After use, dry it in time and store it in a dry state.

Storage Instructions

Store in a completely dry place to prevent mold damage. The tent may be damaged if stored in a humid environment.

If you pack your tent after a rain or when there is dew in the morning, set it up as soon as you get home and wait until it is fully dry before storing it for a long time.

Extra caution must be taken in high humidity climate conditions to prevent mold damage. Mildew can be cleaned with a diluted solution of white vinegar (5 parts water to 1 part white vinegar).

Care Instructions

Clean before storage (including tent poles). Before storing, remove all dirt and other natural debris. Keep tent poles, hooks and other accessories clean.

The best way to clean your tent is with water and a soft brush, then let it air dry. We strongly recommend using a separate ground cloth to prolong the lifespan of the tent floor and help maintain cleanliness.

Keep the zippers clean and occasionally use zipper lubricant.

Inflatable Camping Tent 12.6m²

PXJFG048BG
INSTRUCTION MANUAL