


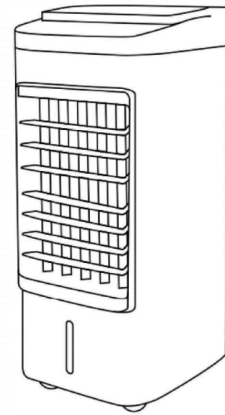

PORTABLE AIR COOLER INSTRUCTION MANUAL



Please read these instructions carefully and keep for future reference

FOR DOMESTIC INDOOR USE ONLY

In order to prevent the risks of a fire, electrical shock, burns and other injuries, it is imperative to observe basic safety measures when using electrical appliances.

Important Safety and General Instructions

Please keep this user manual in a safe place along with your purchase receipt and carton for future reference. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to.

1. Read all instructions before using the Air Cooler.
2. Close supervision is necessary when any appliance is used by or near children.
3. Do NOT use the Air Cooler for other than its intended use.
4. Ensure the appliance does not get wet (water splashes etc). Do not use the appliance with wet hands
5. Before turning on, ensure the electrical voltage and frequency of the circuit corresponds to those indicated on the rating label of the appliance.
6. To protect against the risk of electric shock, do not immerse the motor unit, cord set or plug in water or another liquid, or rinse under a tap.
7. The Air Cooler is not intended to be operated by means of an external timer or any type of separate remote control system.
8. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
9. Before use, always ensure the Air Cooler contains water. After cleaning, the water tank should be emptied.
10. When humidity is high, the Air Cooler should be operated as a normal fan type.
11. Do NOT use an extension cord unless completely necessary with this product. If an extension cord is used please ensure that it has a rating equal or exceeding the rating of this appliance.
12. Do NOT pull or carry by cord, use cord as a handle, close a door on the cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
13. Do NOT bend or damage the power cord.
14. Always unplug the appliance when not in use. To disconnect from the power supply, grip the plug and pull from the power socket. Never pull by the cord. The power plug must be removed from the power socket before cleaning, servicing, maintenance or moving the Air Cooler.
15. Do NOT move or lift the Air Cooler while the power cord is still connected to the wall outlet or still on. Always ensure it is disconnected from power and switched off.
16. Never force the plug into an outlet.
17. To reduce the risk of electrocution, never operate this product with wet hands, submerge under water or spill liquids into the product.
18. Do NOT leave the Air Cooler unattended when in use.
19. Do NOT place the appliance near a hot gas or electric burner.
20. Do NOT cover the appliance whilst in use. If it is covered there is a risk of fire.
21. Improper installation may result in the risk of fire, electric shock and/or injury to persons.
22. If the supply cord or plug is damaged, do not use the appliance. Please return to your place of purchase along with your receipt for a refund or exchange.
23. The manufacturer is not responsible for any eventual damage caused by improper or faulty use.
24. The unit has no user-serviceable parts contained within. Do not attempt to repair, disassemble or modify the appliance.
25. Do not use the device at room temperatures above 40°C.
26. Do not leave the appliance exposed to harsh weather conditions (direct sunlight, rain, etc.).
27. Do NOT place the product in or near an open window as rain may damage the product and cause electrical short-circuiting.
28. Do NOT insert fingers or any other object through the grilles or into any opening of the product.
29. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.
30. Do not operate appliance underneath or near flammable or combustible materials (e.g. curtains). Keep at least 30cm clearance around sides, back, front and top.

Using the Air Cooler Function with Cold Water

- Turn the knob at the back of the unit to unlock the tray. Pull the tray out HALF WAY ONLY. Do not remove the whole tray as it may damage the unit
- Pour cold water into the tray up to MAX level. DO NOT EXCEED THE MAX LEVEL
- Push the tray back into place and lock the knob
- Connect the unit to power
- Press the COLD-ON button on the unit and then select the desired fan speed (Low, Medium or High)
- Cooler will begin to work
- To Turn Off the cooler function, press the COLD-OFF button again and press the OFF button to turn off the fan
- Always ensure the water level is above MIN and below MAX level at all times, failing which it may damage the product and invalidate the product warranty

Using Ice Crystal Box with the Air Cooler

- Fill Ice Crystal Box with water to max level mark and place in the freezer until ice has formed in the bottle, and then remove from the freezer
- Follow the above instructions but add 1x Ice Crystal Box to the water in the tray. This will help to keep the water in the tank cool
- Do not overfill the tray and remember that when putting 1 x Ice Crystal Box in the tray the water level will also rise. Only use 1 Ice Crystal Box at any time


Operating the Fan Function Only

- Plug the air cooler into the mains supply
- Ensure that the COLD button is OFF
- There are 3 speed settings (Low, Medium, High). Select the desired speed setting
- To turn the fan off press the OFF button on the unit
- Using the auto swing function and adjusting the inner vents (optional)
- Inner vents can be manually adjusted by pushing the lever on the right side of the vents up or down to the desired direction of air flow
- To operate the auto swing function simply press the OSC-ON/OFF button and the vent will begin to move left to right automatically
- To turn off the swing function simply press the OSC-ON/OFF button again


How to Remove Water from the Tank

- To remove water from the water tank, open the tray HALF WAY and carry the unit to the sink
- Take care when emptying water to ensure that the cable and plug do not make contact with the water
- Pour the water out slowly and then clean the excess water in the tank with a cloth (if required)

NOTE: Please do not connect the power supply when pouring or adding water!

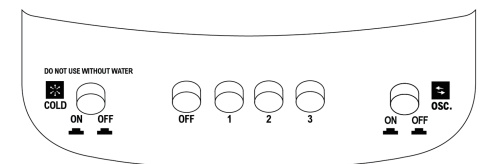

1. PRODUCT MIX

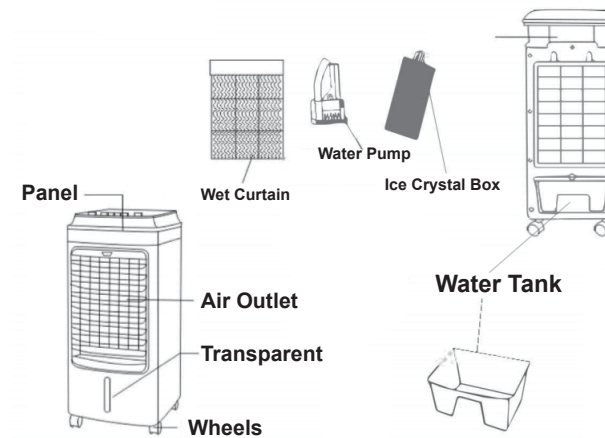

Add water and ice into the tray when using the COLD function. This will keep the water cool.

The pump unit is located inside the tray and will circulate the cold water.

Pour the water out slowly.

2. Operating Instructions

- Please remove all parts from the packaging and read through the manual thoroughly before using for the first time.
- Never exceed the maximum level or use if the water is below the minimum level. There must always be water between these levels when using the cooler function which requires the pump to circulate the cold water in the air cooler.
- Do not move unit when filled with water.

Maintenance and Cleaning

NOTE: Always unplug the Cooler from the electrical outlet and allow it to cool before servicing, relocating, cleaning, or storing it

- Only use a mild detergent to clean unit
- Empty the water tank before long periods of storage
- Store away in a dry and clean environment away from heat sources



Imported by Hirix International Ltd, Unit 2, 390 Victoria Road East, Leicester, LE5 0LG