

## Notes

1. It is necessary to use a three-prong socket with a bottom wire and a leakage protection switch to prevent the danger of electric shock!
2. After loading the water bottle, firstly open the hot water faucet until there is water flowing out, then you can turn on the power;
3. Children should not operate alone without the guidance of adults to avoid scalding;
4. Please turn off the power when not in use for a long time, and open the back of the drain plug to drain the remaining water in the machine;
5. If the faucet does not come out of the water, you can slightly shake the bucket or body to speed up the discharge of gas in the machine;
6. The body of the machine is more than 3.94 inches from the wall. Please do not put it near the valuable home or other appliances, and keep it away from flammable and explosive materials.
7. Please allow the slight color difference caused by the shooting light and the 1-3 cm error due to manual measurement, and make sure you do not mind before ordering.