

SAFETY PRECAUTION:

IMPORTANT: PLEASE READ BEFORE INSTALLATION:

- 1.Before you begin installing the fan, shut power off at the circuit breaker of the fuse box. 2. A CAUTION: Read all instructions and safety information before installing your new fan. Review
- accompanying assembly diagrams.
- 3. Make sure that all electrical connections are in accordance with National Electrical Code, ANSI/NFPA 70 and local codes. Hire a licensed electrician if you are unfamiliar with installing
- 4. Make sure the installation site you choose allows the fan blades to rotate without any obstructions. Allow a minimum clearance of 2.1m (7 feet) from the floor and 18 inches from the tip of the blades to the wall.
- 5. **WARNING:** To reduce the risk of fire, electric shock, or personal injury, mount to outlet box marked "Acceptable for Fan Support of 15.9 kg (35 lbs) or less" and use mounting screws provided
- 6. **△ CAUTION**: To reduce the risk of injury, use only the screws provided with the outlet box in conjunction with the lock washers provided with the fan.
- 7. The outlet box and support structure must be securely mounted and capable of reliably supporting a minimum of 35 pounds. Use only U.L. listed outlet boxes marked "Acceptable for Fan Support of 15.9 kg (35 lbs) or less". 8. After you install the fan, make sure that all mounting components are secured to prevent the fan
- from falling.
- 9.Do not insert anything into the fan blades while the fan is operating.
- 10.To change the direction of the rotation of the blades the fan must be in operation mode.
- 11. All set screws must be checked and retightened where necessary before installation.
- 12. MARNING: To reduce the risk of personal injury, do not bend the blade bracket when installing the brackets, balancing the blades, or cleaning the fan. Do not insert foreign objects in between rotating fan blades.
- 13. A CAUTION: To reduce the risk of electric shock, disconnect the electrical supply circuit to the fan
- 14. After making the wire connections, the wires should be spread apart with the grounded conductor and the equipment-grounding conductor on one side of the outlet box and the ungrounded conductor on the other side of the outlet box.
- 15. The splices after being made should be turned upward and pushed carefully up into the outlet box. Conductor wiring identified as grounded is to be connected to a grounded conductor of power supply. Conductor wiring identified as ungrounded conductor is to be connected to an ungrounded conductor. Conductor wiring identified for equipment grounding is to be connected to an equipmentgrounding conductor.
- 16. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- ▲WARNING: To reduce the risk of fire or electric shock, this fan must be installed with a general use, isolating wall control/switch.
- △WARNING: To reduce the risk of fire or electric shock, do not use this fan with any solid-state
- NOTE: The important safeguards and instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors which cannot be built into this product. These factors must be supplied by the person (s) installing, caring for and operating the unit.
- 17. This product is suitable for use in damp locations.
- ▲ CAUTION: The light source is designed for this specific application and can overheat if serviced by untrained personnel. If any servicing is required, the product should be returned to an authorized service facility for examination or repair.

BEFORE YOU START

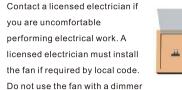

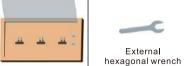



Tools and Materials Required




Step ladder

Product instruction:


switch. Turn off power at breaker.



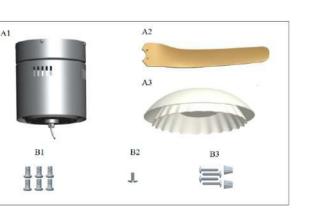


1 Disassemble The Motor Hub:

- 1.1 Take out the motor hub assembly from the packaging box.
- 1.2 Use a screwdriver to loosen the screws and remove the mounting bracket.

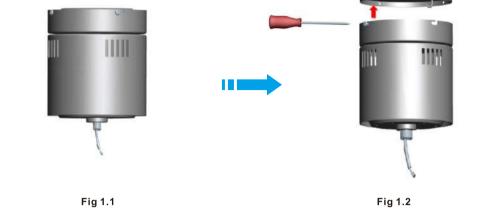

2 Motor installation:

- 2.1 Fasten the mounting bracket to the ceiling.
- 2.2 Hang the motor assembly on the mounting bracket through the screw hole, and use the wiring cap to connect the power cord.
- 2.3 Fasten the motor on the mounting bracket with screws.

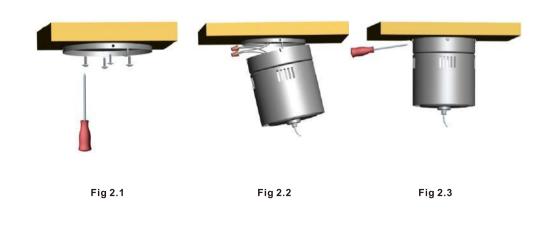

3 Blade Installation:

3.1 Use a screwdriver to fasten the 3 fan blades to the machine head in turn.







Fig 3.1

4 Install The Lamp Panel, Lamp Board And Lamp Shade: 4.1 Take out the lamp panel assembly from the packing box, first pass the power cord of the LED lamp

panel through the middle hole of the lamp panel, and then connect the lamp panel with the motor spindle. (The semi-perforated hole of the main shaft is aligned with the semi-circular hole of the lampshade). 4.2 Use M4*8 screws to fasten the main shaft and the lamp panel, and then plug in the power terminal of the lamp panel. As shown in Fig 4.2.

4.3 Align the holder of the lamp shade with the holder hole of the lamp panel, and rotate the lamp shade in a clockwise direction to lock the lamp shade.

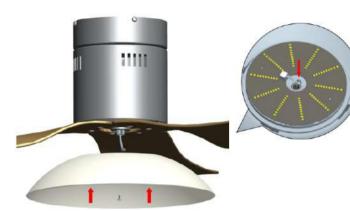


Fig 4.1 Fig 4.2



The Fig 5.1 below is a schematic diagram of the whole machine after installation. At this time, the ceiling fan has been installed. Turn on the power supply of the main switch or the room where the ceiling fan is installed. After power on, observe whether there is a red light flashing at the center of the ceiling fan lampshade. Whether it is powered on.



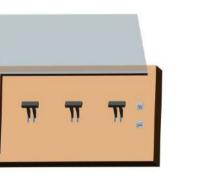


Fig 5.1

Remote Control Operating Instructions:

Pairing the Remote Control to Your Fan

Within 10 min. of plugging fan to power source, press and hold @ button for 5 sec. to pair remote

Remote Control button definitions

Turns the fan off

Switches between summer mode and winter mode.

 Summer mode - (Counter-clockwise) A downward airflow creates a cooling effect.

Winter model - (Clockwise)

An upward airflow moves warm air away from the ceiling area and redistributes it around the living space.

Turns the fan on and decreases fan speed.

Turns the fan on and Increases fan speed.

Nature Switches the fan speed between nature mode and normal mode. Simulates a natural breeze gentle enough not to disturb while you sleep.



F/R

Nature

(OFF)

Turns the lights on or off and RF pairing.

Note: Press/hold button for 5 sec. within 10 min. of plugging fan to power source to pair remote and fan.

Switches between warm light and cool light. WIFI Troubleshooting.

on APP, follow the APP control instructions and enable fan Wi-Fi.

Note: Press/hold button for 5 sec. The fan will switch to AP Mode, then select AP Mode

Press/Hold button to decrease the light intensity.

Press/Hold to button to increase the light intensity.

Warning: Do not expose the remote control to direct contact of water.

Smart switch: Press and hold the "OFF" button for 10 seconds till the indicator light blinking

the sidebar menu then select "Ceiling Fan Switch" or "Ceiling Fan" and tap next.

APP Control Connection:

1. First download the free Carro Home app from the App Store or Google Play or scan the QR Code as below.

2. Open the Carro Home app to create your account. The account with "Carro Home" can be registered through E-mail or Mobile phone.

3. Connect the device to the Carro Home app (Four ways connection):

1 Bluetooth connect (WIFI & Bluetooth on)

a. Press "+" button into the device list, then a window will pop up to show you some devices can be connected.

b. Click "Go to add" (If you click "Do not add" in mistake, please see "Do not add" steps).

c. Choose the device.

d. Connect to your home WIFI, then back to the app and wait for connecting.

"Do not add" steps:

a. Select "Electrical" (smart switch) or "Air Circulation" (smart ceiling fan) on the sidebar menu then select "Ceiling Fan Switch" or "Ceiling Fan" and tap next.

b. Connect to your home WIFI and tap "Next" to wait for connecting.

② Auto Scan (WIFI & Bluetooth on)

a. Press "+" button into the device list.

b. Tap "Auto Scan" on the top.

c. Wait for the device comes out and tap "Next".

d. Press "+" button to add device

e. Connect to your home WIFI. f. Wait for connecting.

③ WIFI connect-EZ Mode (WIFI on & Bluetooth off)

a. Press "+" button to select "Electrical" (smart switch) or "Air Circulation" (smart ceiling fan) on the sidebar menu then select "Ceiling Fan Switch" or "Ceiling Fan" and tap next.

b. Connect to your home WIFI (Only for 2.4Ghz).

c. EZ Mode is set as default, just tap "Next" button to wait for the connection to complete.

4 WIFI connect-AP Mode (WIFI on & Bluetooth off)

a. Smart ceiling fan: Press and hold the WIFI button on the remote for 5 seconds till hear beep into AP Mode.

slowly to into AP Mode.

b. Press "+" button to select "Electrical" (smart switch) or "Air Circulation" (smart ceiling fan) on

Care and cleaning:

- 1. Check the support connections, brackets, and airfoil attachments twice a year. Make sure they are secure. Because of the fan's natural movement, some connections may become loose over time. It is not necessary to remove the fan from the ceiling.
- 2. Clean your fan periodically. Use only a soft brush or lint-free cloth to avoid scratching the finish. The plating is sealed with a lacquer to minimize discoloration or tarnishing.
- 3. (Optional) Apply a light coat of furniture polish to the wood blades.
- 4. (Optional) Cover small scratches with a light application of shoe polish.

Do not:

- 1. Use water when cleaning. Water could damage the motor, or the wood, or possibly cause an electrical shock.
- 2. Apply oil to your fan or motor. The motor has permanently lubricated sealed ball bearings. Note: Power off the fan before product maintenance or cleaning the fan.

FCC Statement:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Troubleshooting:

SYMPTOM

Try these troubleshooting steps before contacting the Customer Service. For additional operation, maintenance, and troubleshooting information, please contact our customer service center.

1. Make sure the fan is getting power.

POSSIBLE SOLUTION

Fan light not working 1. Make sure LED wires are connected to the circuit board. 2. Make sure the whole fan is powered. 3. Remote need to pair with the fan first.correctly and in the retention slot. 1. Check if the blade screws are NOT rubbing against the round plastic part of the motor. 2. Check the pin wire are NOT connected against the moving part. 3. Check the down fan cup is NOT blutting the motor. 4. Confirm the canopy is NOT touching the ceiling while the fan is in operation. 5. Check the down rod is NOT slanted. 6. Tighten any loose screws on the light kit, fan blades, motor coupling, down rod, brackets and mounting hardware. 7. Confirm the hanger ball is firmly seated in the mounting bracket. 8. The ceiling beam must meet the minimum tensile test strength of 30KG for installation. 9. Make sure the airfoils and brackets are NOT bent or deformed. 10. Verify the wire connections are not rattling against each other. 11. Verify the fan blades are not cracked. If the fan blades are cracked, replace the damaged blades with a new blade set from the same brand as your ceiling fan to ensure compatibility. 12. The light kit is NOT slanting and hitting the motor. 1. Check if the wires are connected in the right position or not. 2. Check the batteries in the remote. 3. Disconnect the power for 10 minutes, reconnect the power and pair the remote with the fan immediately, within 5 seconds. Also try pairing the App to reconnect. 4. The WiFi must be 2.4Ghz, incompatible with 5Ghz WiFi or combine with 5Ghz. 5. App must in the new version. 6. Connect with correct app "Carro Home" 1. Confirm the circuit breaker is not malfunctioning. 2. Verify the wire connections are not frayed. 3. Check the app is not set the timer or schedule 4. Cut the fan power for 10 minutes then power on again. 5. All the pine witing on the circuit breater are retained that the right position.	Fan not spinning	1. Make sure the fan is getting power. 2. Check your circuit breaker or fuse panel and wall switch for functionality. 3. Fan wires are connecting with the house wires correctly. 4. Remote control must be paired with the fan within 10 minutes after the fan getting power 5. If you have paired the app but the fan still didn't work (light and fan both didn't work) or couldn't pair the app to the fan, ry to reset the fan: to reset the fan, cut the power for 10 minutes, then turn the power on and press the pairing button on the remote for 5 seconds, then pair the Carrohome app again. 6. Use a multi-meter and test the adapter wiring harness to see if there is any electrical output. 7. All the pin wiring on the circuit board are inserted tight and in the right position. 8. Remote need to pair with the fan first. 9. Make sure the fan blades spin freely. 10. If you're using a wall control, check the power to the breaker from your control and try working your ceiling fan manually. (Normal switch only for the fan power on/off)
2. Check the pin wire are NOT connected against the moving part. 3. Check the down fan cup is NOT hitting the motor. 4. Confirm the canopy is NOT touching the ceiling while the fan is in operation. 5. Check the down rod is NOT slanted. 6. Tighten any loose screws on the light kit, fan blades, motor coupling, down rod, brackets and mounting hardware. 7. Confirm the hanger ball is firmly seated in the mounting bracket. 8. The ceiling beam must meet the minimum tensile test strength of 30KG for installation. 9. Make sure the airfoils and brackets are NOT bent or deformed. 10. Verify the wire connections are not rattling against each other. 11. Verify the fan blades are not cracked. If the fan blades are cracked, replace the damaged blades with a new blade set from the same brand as your ceiling fan to ensure compatibility. 12. The light kit is NOT slanting and hitting the motor. 1. Check if the wires are connected in the right position or not. 2. Check the batteries in the remote. 3. Disconnect the power for 10 minutes, reconnect the power and pair the remote with the fan immediately, within 5 seconds. Also try pairing the App to reconnect. 4. The WiFi must be 2.4 Ghz, incompatible with 5 Ghz WiFi or combine with 5 Ghz. 5. App must in the new version. 6. Connect with correct app "Carro Home" 1. Confirm the circuit breaker is not malfunctioning. 2. Verify the wire connections are not frayed. 3. Check the app is not set the timer or schedule 4. Cut the fan power for 10 minutes then power on again.	Fan light not working	2. Make sure the whole fan is powered.
Unable to pair remote and app 2. Check the batteries in the remote. 3. Disconnect the power for 10 minutes, reconnect the power and pair the remote with the fan immediately, within 5 seconds. Also try pairing the App to reconnect. 4. The WiFi must be 2.4Ghz, incompatible with 5Ghz WiFi or combine with 5Ghz. 5. App must in the new version. 6. Connect with correct app "Carro Home" Fan or light turning on or off by themselves 1. Confirm the circuit breaker is not malfunctioning. 2. Verify the wire connections are not frayed. 3. Check the app is not set the timer or schedule 4. Cut the fan power for 10 minutes then power on again.		2. Check the pin wire are NOT connected against the moving part. 3. Check the down fan cup is NOT hitting the motor. 4. Confirm the canopy is NOT touching the ceiling while the fan is in operation. 5. Check the down rod is NOT slanted. 6. Tighten any loose screws on the light kit, fan blades, motor coupling, down rod, brackets and mounting hardware. 7. Confirm the hanger ball is firmly seated in the mounting bracket. 8. The ceiling beam must meet the minimum tensile test strength of 30KG for installation. 9. Make sure the airfoils and brackets are NOT bent or deformed. 10. Verify the wire connections are not rattling against each other. 11. Verify the fan blades are not cracked. If the fan blades are cracked, replace the damaged blades with a new blade set from the same brand as your ceiling fan to ensure compatibility.
2. Verify the wire connections are not frayed. 3. Check the app is not set the timer or schedule 4. Cut the fan power for 10 minutes then power on again.	•	2. Check the batteries in the remote. 3. Disconnect the power for 10 minutes, reconnect the power and pair the remote with the fan immediately, within 5 seconds. Also try pairing the App to reconnect. 4. The WiFi must be 2.4Ghz, incompatible with 5Ghz WiFi or combine with 5Ghz. 5. App must in the new version.
3. An the pins withing on the circuit board are inserted ught and in the right position.	on or off by	Verify the wire connections are not frayed. Check the app is not set the timer or schedule

Carro USA Inc. 1431 S.Baker Ave. Ontario CA 91761 Tel: 888-253-2374 www.smafan.com | cs@carrohome.com



ITEM: CES523VL-FM

Technical Parameter: AC 120V 60Hz

SMART CEILING FAN INSTALLATION GUIDE

Please read and follow all the Instructions carefully before using this product The product pictures in the product specification are for reference only, please refer to the real product what you received.

c. Connect to your home WIFI (Only for 2.4Ghz).

e. Press "Next" button to go to connect the fan's WIFI signal.

b. Open Alexa app, go to the skill to search "Carro Home" skill.

d. Then the Alexa will find out the device automatically.

f. Choose the fan's WIFI signal "CarroHome-XXXX" then back to the app.

a. Make sure you have connected the device to the app and working normally.

a. Make sure you have connected the device to the app and working normally.

a. Make sure you have connected the device to the app and working in functional.

j. Enter the sentence you want to say to make the device works, Add to Siri.

Rated Wattage 49W(Fan 27W Lamp 22W)

Maximum Noise 58dB(A)

b. Open Google Home app, Set up a device, choose "Works with Google".

d. Then the Google Assistant will find out the device automatically.

c. Link the skill, log in with your Carro Home app account and password, then authorize and

c. Search "Carro Home", log in with your Carro Home app account and password, then authorize

d. Choose AP Mode.

g. Wait for connecting.

Connect the device to the Alexa:

connect with Carro Home app.

5. Connect the device to the Google Home

and connect with Carro Home app.

6. Connect the device to the Siri shortcuts

b. Tap "Smart" on the main menu.

f. Choose the device you want to control by Siri.

g. Select the function you want to control by Siri.

I. Add to Siri, choose the scene you just made, Add to Siri.

CES523VL-FM

16lbs.

4206CFM

d. Tap "launch Tap To Run".

Basic product parameters:

e. Tap "Run the device".

c. Tap "+" button.

h. Then save it.

Fan Blade Span

Fross weight

Maximum Airflow