


INSTALLATION INSTRUCTIONS


DeerValley®


LED Mirror Cabinet

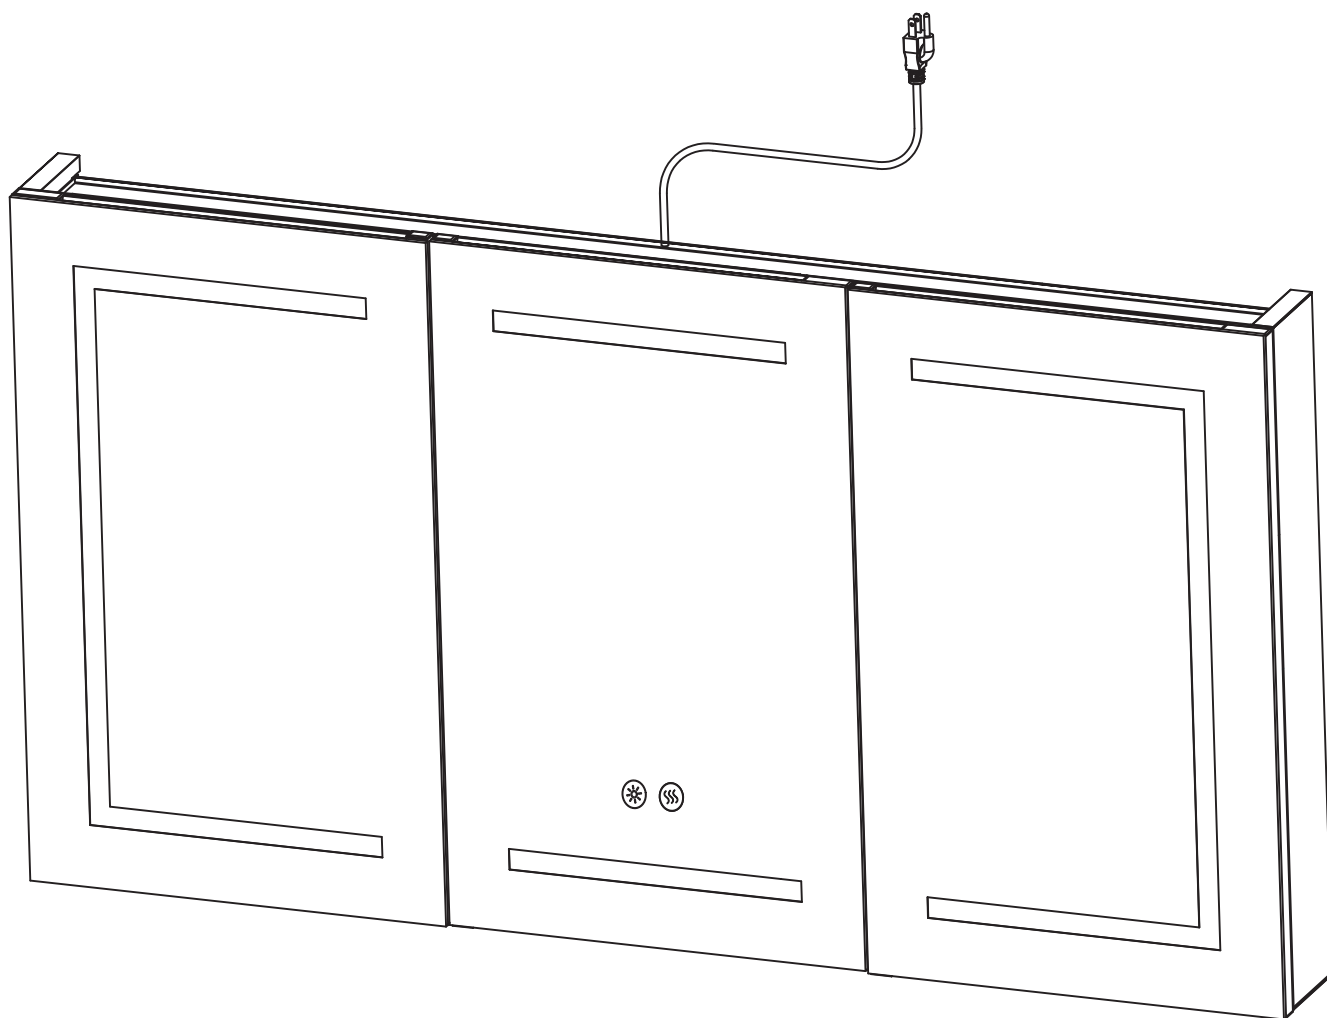


Important Safety Information

- Please read these instructions carefully to familiarize yourself with the required tools, materials, and installation steps. Follow the sections relevant to your specific installation to help avoid costly mistakes. In addition to proper installation, be sure to read all operating and safety instructions.
- These instructions include important information regarding care, cleaning, and warranty—please leave them with the end user.
- Before installation, carefully inspect the product for any signs of damage.

 **WARNING:** Risk of injury or product damage. Be cautious when opening the door to avoid pinching fingers.

 **WARNING:** Do not use acidic, alkaline, or alcohol-based cleaners on the surface. Clean only with a soft, damp cloth.

 **CAUTION:** Risk of electric shock. Electrical wiring may need to be relocated during installation.

- **Grounding Instructions**

This product must be properly grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing a safe path for the current.

 **WARNING:** Improper use of the grounding plug may result in a risk of electric shock.

- If repair or replacement is necessary, it must be carried out by qualified maintenance personnel.
- This product is pre-wired at the factory. If used in conjunction with other electrical products, wiring compatibility must be considered, and all connections must be made by qualified service personnel.

Read Before Installation

(1) Double Touch Switch

Light Control

- The button backlight is white when in standby mode, and turns blue when the function is active.
- Tap the switch on the mirror to turn the light on or off.
- Tap the switch again to change the light color.
- Touch and hold the switch for more than 5 seconds to adjust the brightness.












Fog Removal Function

- The button backlight is white when in standby mode, and turns blue when the function is active.
- Tap the switch to activate the defogging function.
- The defogging function will automatically turn off after 60 minutes, and the button backlight will return to white.
- If defogging is still needed, please turn it on manually again.

Attention:

There is a sensor light inside the cabinet. When the door is opened, the light will automatically turn on. When the door is closed, it will automatically turn off.

(2) Required Tools and Supplied Parts List

Required Tools (Not Included)					
 Electric Drill	 Drilling Bit (∅8mm / 0.31in)	 Tape	 Pencil	 Spirit Level	
Supplied Spare Parts (Included in Package)					
 Wall Plugs x6	 Screws x6	 Bottom Bracket x1	 Tempered Glass Shelves x4	 Laminated Glass Clips x8	 Connecting Terminals x3

(3) Required Tools and Supplied Parts List

All electrical connections must be performed by a licensed electrician in accordance with current building regulations. Please consult a qualified electrician.

(4) Installation Care & Safety


Wear appropriate eye protection when drilling. Use power tools with caution. Be aware of hidden electrical cables or plumbing behind walls. Take extra care when drilling into tiled surfaces to avoid slipping. Applying a strip of masking tape to the wall before marking the fixing holes can help prevent the drill bit from wandering.

(5) Important


DO NOT strike glass components with hard or sharp objects. DO NOT place extremely hot or cold items directly on or near glass surfaces unless a sufficiently thick insulating material is used to prevent direct contact. If the glass becomes chipped or broken, it must be replaced immediately.

Installation Steps


1. Remove the product from the packaging and take out the installation accessories.

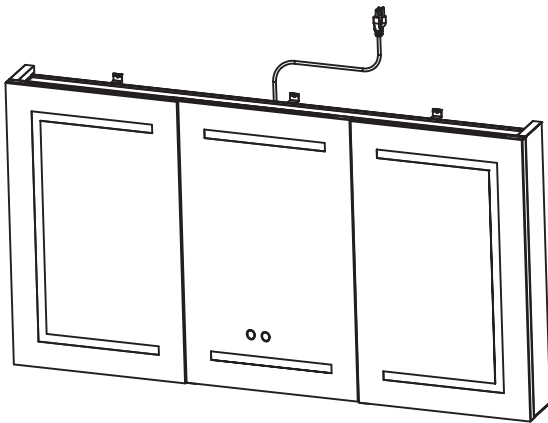


2. As shown in the diagram, fix the bottom bracket to the wall and follow the drilling steps.
Recommended installation height: 11.8–13.8 inches above the countertop.

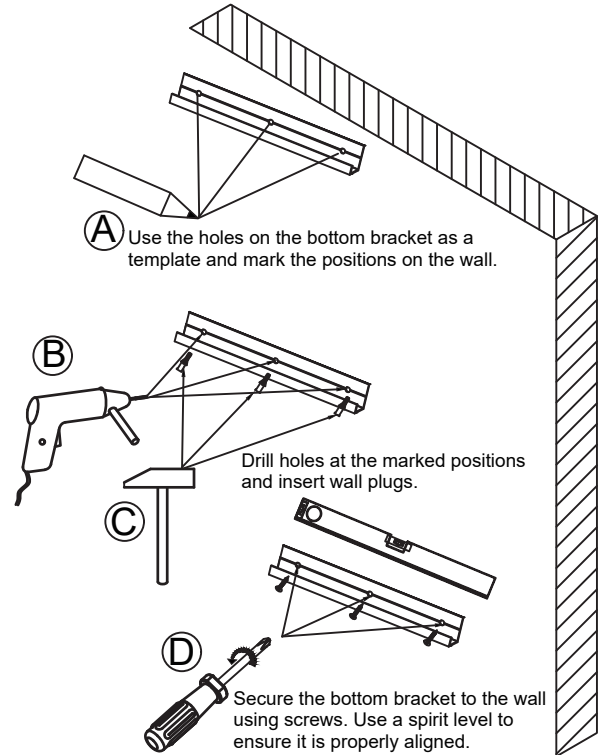

3. Place the cabinet onto the bottom bracket. Fasten the positioning buckle.

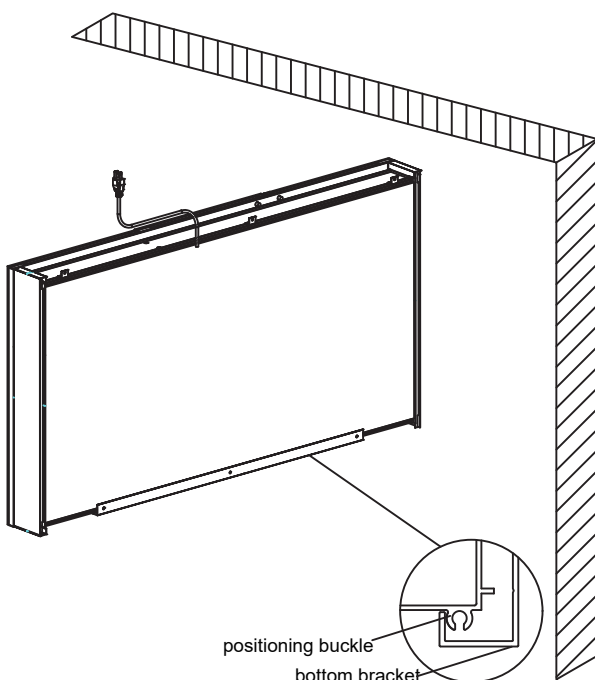


4. Refer to the drilling steps in Step 2 to install the top fixed bracket.

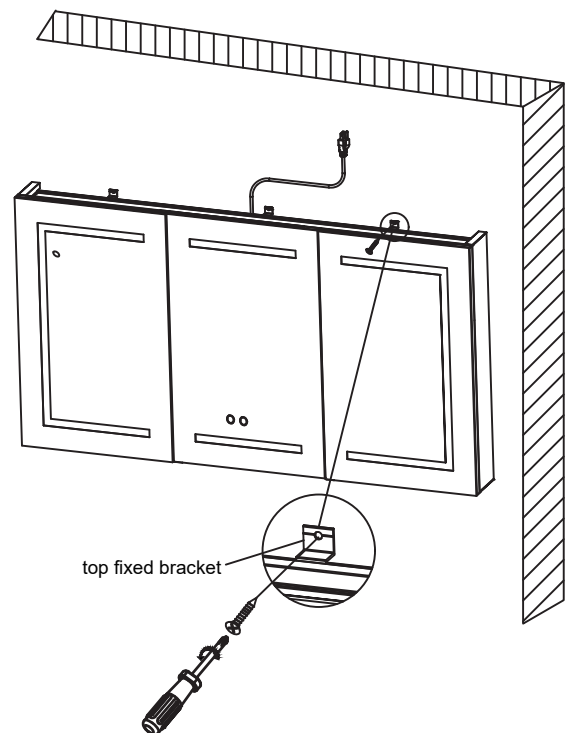


Option 1: Plug-in Installation

5-1. Insert the plug directly into a standard socket. (Pay attention to electrical safety.)

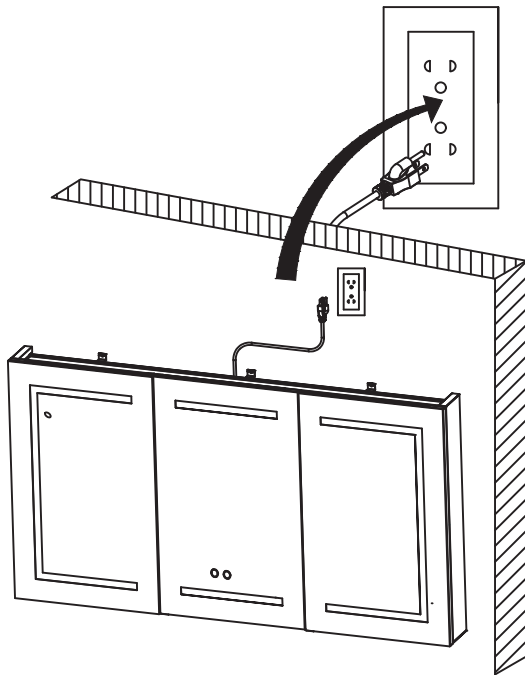


Option 2: Hardwired Installation


5-2. Disconnect the plug and connect the product wire to the power supply using the wire connector. (Pay attention to electrical safety.)

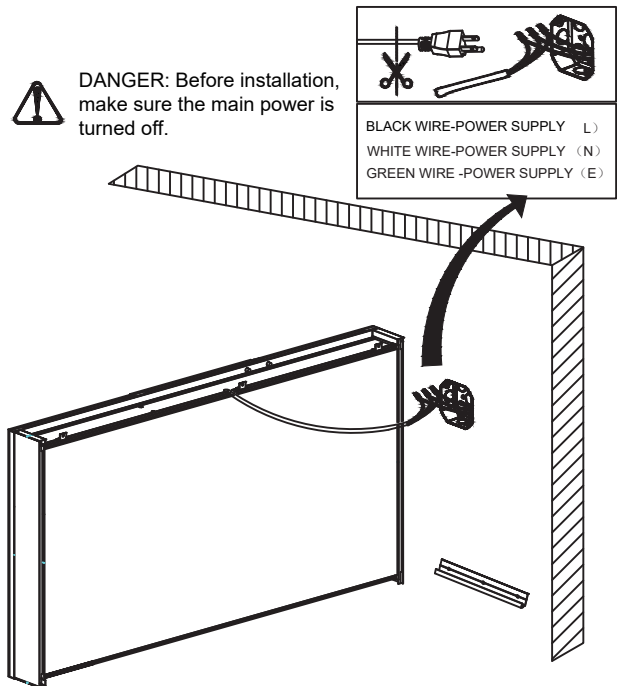



6. Take the glass clips and laminated tempered glass out of the package. Install the glass clips on both inner sides of the cabinet.

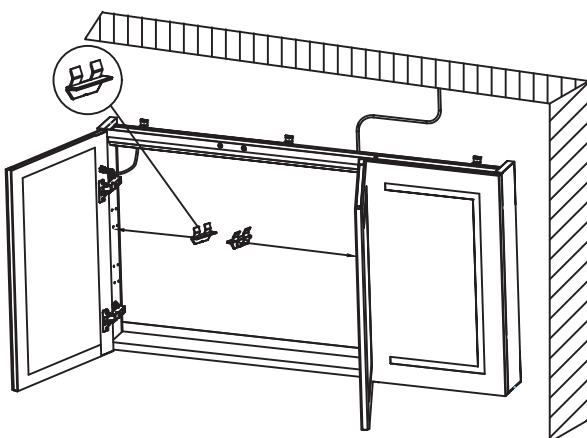

7. After installing the glass clips, insert the laminated glass shelf into the slot as shown in Figure A. Then press it down firmly with both hands as shown in Figure B to ensure it is securely fitted.

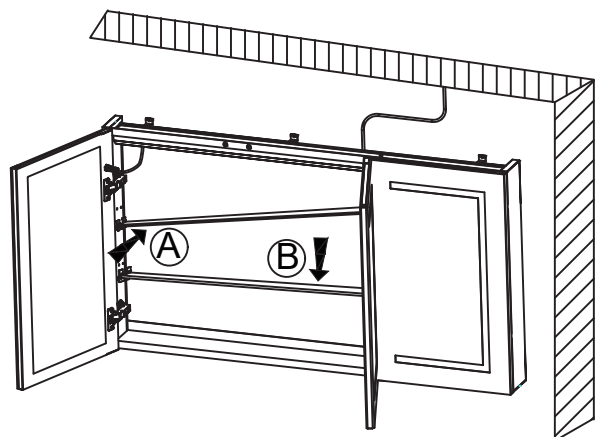

8. Adjust the cabinet door.

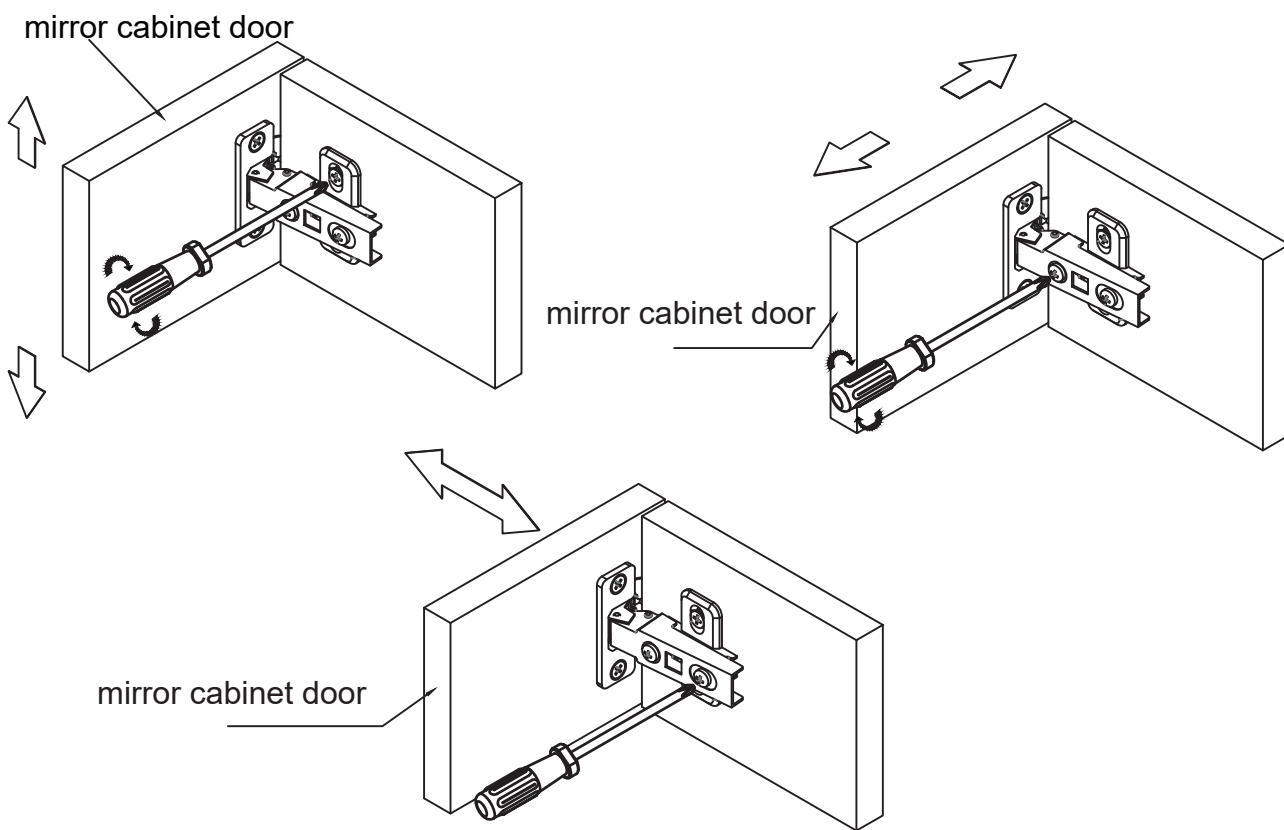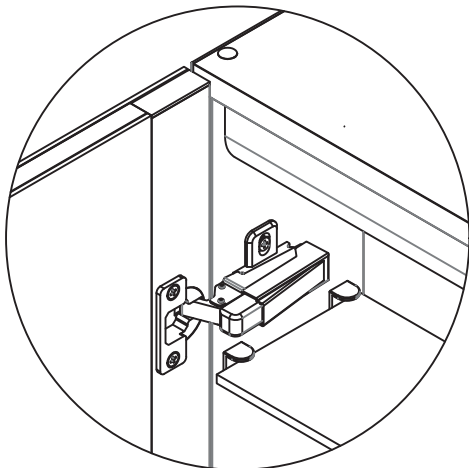

LIMITED WARRANTY COVERAGE

1-YEAR LIMITED WARRANTY

DeerValley products are made with quality materials and excellent craftsmanship to provide customers with a long-lasting product. If any defects in materials or craftsmanship are found under normal use within the first year of delivery, DeerValley will provide replacement parts at no charge or, at its option, replace any product or part of the product deemed defective under normal installation, use, service, and maintenance. This warranty applies only to the original purchaser. Proof of purchase will be required to process any claims. **SCRATCHES ARE NOT COVERED UNDER WARRANTY.**

The manufacturer warrants that this product will be free from manufacturing defects for the duration of the above-mentioned warranty period. Please retain a copy of the original invoice as proof of purchase.

DeerValley will, at its option, (1) repair or replace the defective part(s) or product(s) at no charge; (2) issue a refund for the original purchase price of the product(s) (valid within 30 days from the date of delivery); or (3) issue a credit to be applied toward the purchase of a new DeerValley product. Shipping/delivery charges may apply and are at DeerValley's sole discretion.

DeerValley recommends that installations be performed by a licensed, professional plumber. DeerValley will not be held responsible for any damage or product failure resulting from improper installation, misuse, or failure to hire a licensed professional. Additionally, DeerValley is not responsible for any removal or installation costs.

This limited warranty does not cover goods that have been subjected to accidents, negligence, improper installation, product abuse, product misuse, or the use of cleaners containing abrasives, alcohol, or other organic solvents. Such exclusions apply regardless of whether the actions were performed by a contractor, service company, or the purchaser.

DeerValley's responsibility under this limited warranty is limited solely to the replacement of parts and does not cover any other costs. DeerValley will not be responsible for labor charges or any damage incurred during installation, repair, or replacement, nor for any indirect, incidental, or consequential damages, losses, injuries, or costs of any kind related to this product. Except as required by law, this limited warranty replaces and excludes all other warranties, conditions, and guarantees, whether expressed or implied, statutory or otherwise, including but not limited to those regarding merchantability or fitness for a particular purpose.

RESPONSIBILITIES OF OTHERS

It is the responsibility of the installer or building contractor, acting on behalf of the user, to inspect the unit prior to installation. They are responsible for ensuring that the unit is free from defects or damage.

Notices are placed on and within the unit, as well as on the shipping carton, to inform the installer of their responsibility.

If a problem is identified, the unit must not be installed. DeerValley is not responsible for failures or damage that could have been identified, repaired, or prevented through proper inspection and testing prior to installation.

Damage occurring during transit is the responsibility of the carrier. The user or installer must open the crate and inspect the unit for damage upon delivery. If damage is discovered, it must be reported immediately to the seller and the carrier in writing, and an inspection must be requested. If the carrier fails to respond, the issue should be reported to both the seller and the carrier. Freight claims should be filed promptly thereafter.

LIMITATIONS AND EXCLUSIONS

This warranty does not cover negligence, misuse, abuse, improper installation, carelessness, accidents, hard water or mineral deposits, exposure to corrosive materials, misapplication, damages resulting from improper maintenance, alteration of the product, or failure to follow the care or installation instructions provided with your product. The warranty becomes void if the DeerValley product is altered or if repairs are attempted using unauthorized accessories or parts not provided by DeerValley.

DeerValley is not liable for the loss of use of its products, inconvenience, or any other incidental or consequential costs, expenses, or damages. Please note that some states do not allow the exclusion or limitation of incidental damages.

DISCLAIMER

Except as expressly stated, no warranties or obligations, whether express, implied, oral, or statutory, are provided. No dealer or other individual has the authority to make any warranties or representations regarding DeerValley or its products. DeerValley shall not be held responsible for any such unauthorized warranties or representations.

WARRANTY SERVICE

NOTE: When requesting warranty service, please ensure you have the following:

- A copy of the original invoice
- Date of installation
- Description and pictures of the defect
- Model number or product description

To obtain warranty service or replacement parts, contact DeerValley Customer Service. DeerValley will determine whether to repair or replace the product, issue a refund, or provide a credit.