 


Instruction

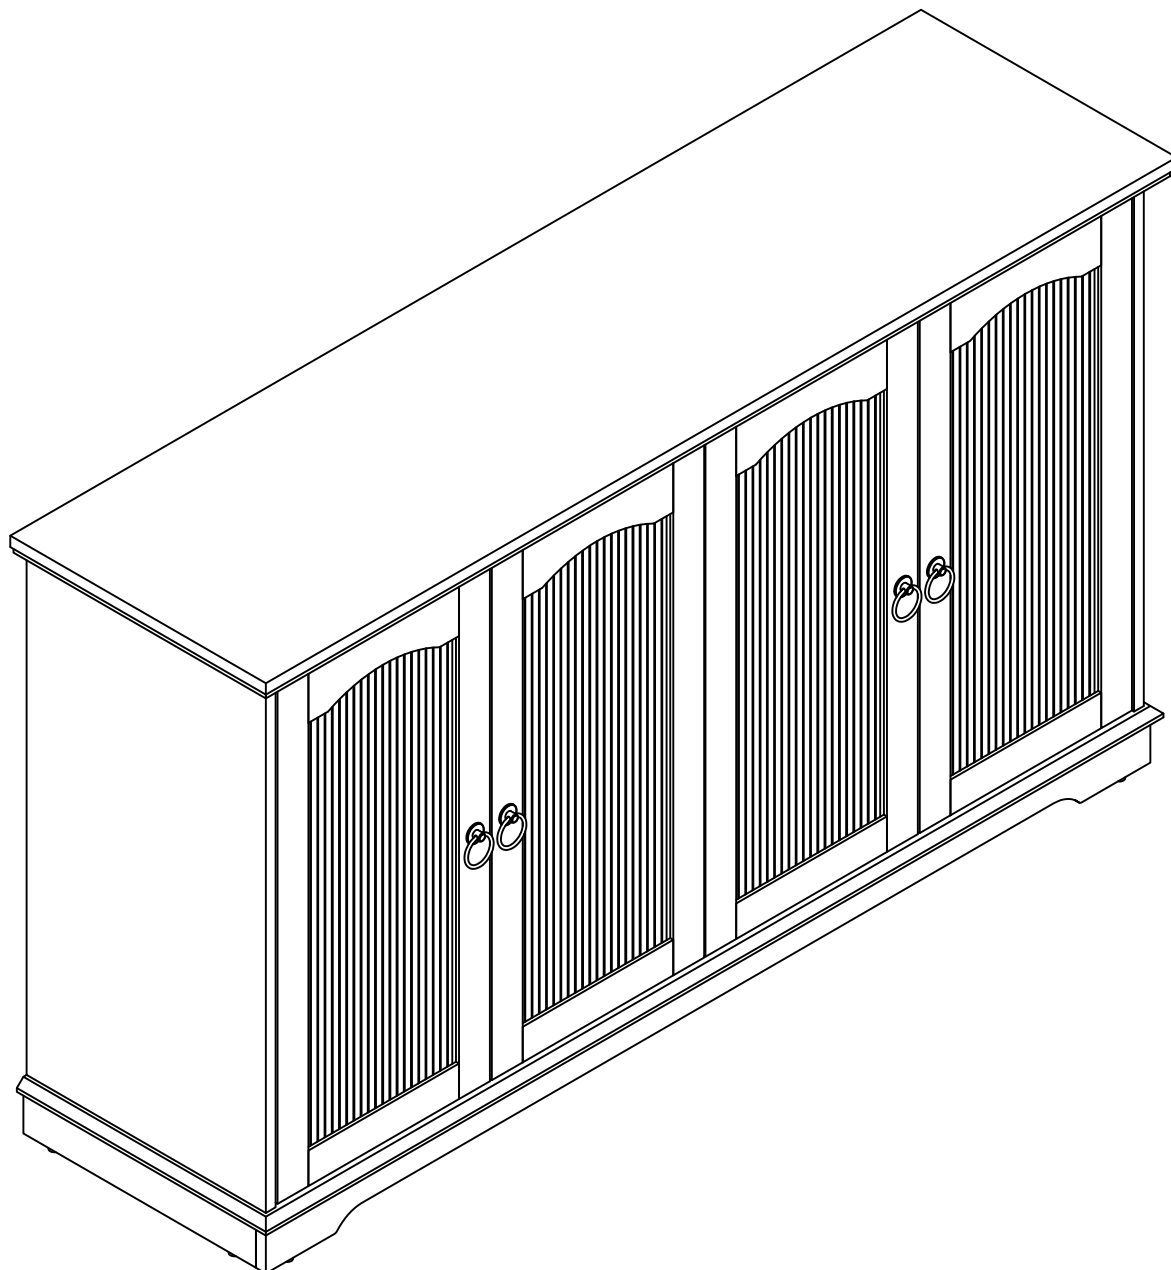

REMARK

We kindly recommend that you check the quantity and condition of the panels and accessories upon receiving the product, as outlined in the instruction manual. If you find any missing parts, damages or encounter assembly issues, please feel free to contact us, and we will be happy to assist you within 24 hours.



IMPORTANT INFORMATION

READ CAREFULLY.

KEEP THIS INFORMATION FOR FURTHER REFERENCE.

GENERAL GUIDELINES

- Please read the following instruction carefully and use the product accordingly.
- Please keep this manual and hand it over when you transfer the product.
- This summary may not include every detail of all variations and considered steps. Please **contact us** when further information and help are needed.

NOTES

 
 
 
 
- Please follow the assembly instructions precisely and only use the product as intended.
- If an odor is present when first opening the package, please leave the unwrapped product in a shaded and ventilated area for a few days to air out.
- Prior to assembly, please check the product for defects or missing accessories. If any defects are found or accessories are missing, do not use product as damage or injury may occur; Please **contact us** for assistance and replacement.
- It is suggested you regularly check the products bolts and connections to ensure safe use.
- Assemble the item on a soft flat and clean surface to avoid scratches and damage.
- It is recommended that two people assemble this product.

WARNINGS

- During assembly, keep parts and packaging materials away from children and pets as there could cause injury and are a potential choking hazard.
- Avoid sharp objects or corrosive chemicals to prevent damage to the product.
- Please open the item slowly and cautiously to avoid pinching your hands by metal joints, especially children.


ANTI-TIP WARNING

- Serious or fatal crushing injuries can occur from furniture tip-over. To prevent this furniture from tipping over it must be permanently fixed to the wall.
- Since different wall materials require different types of fixing device, for advice on suitable fixing systems, contact your local specialized dealer.



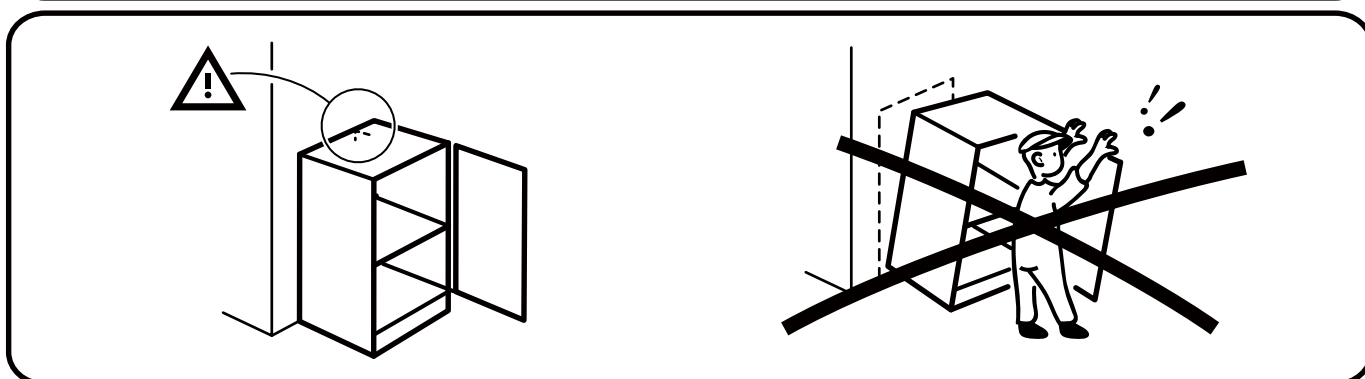
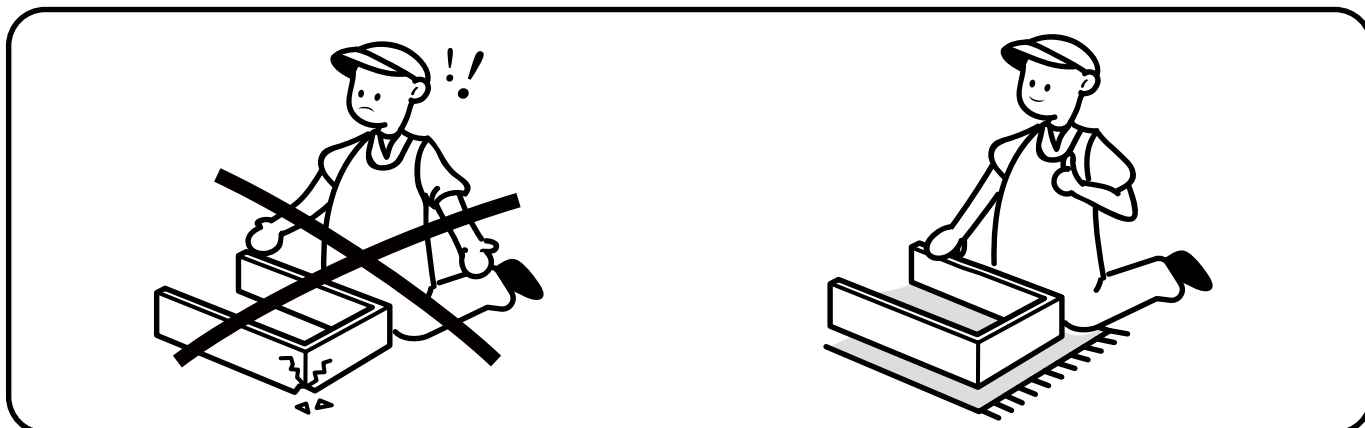
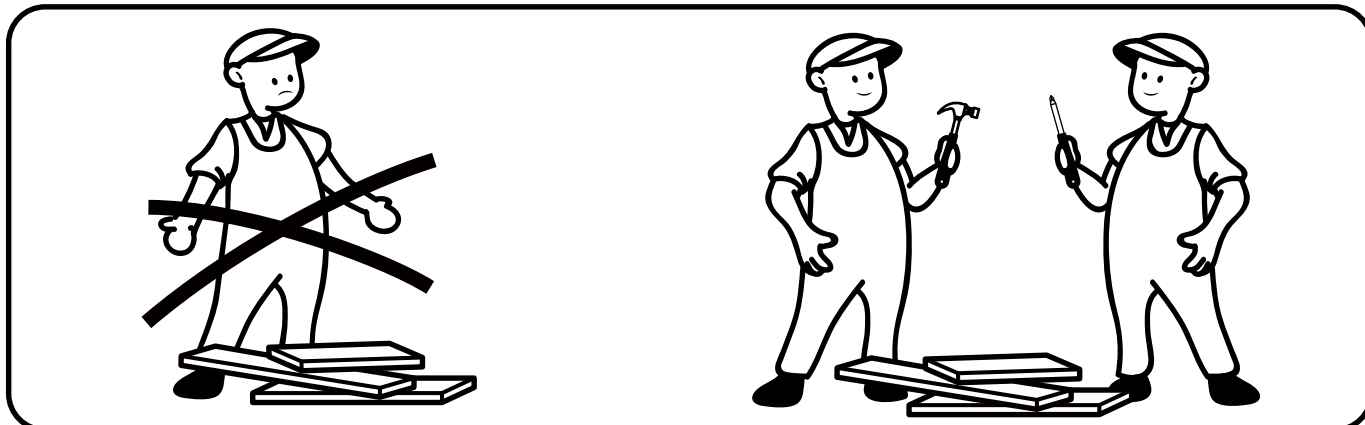
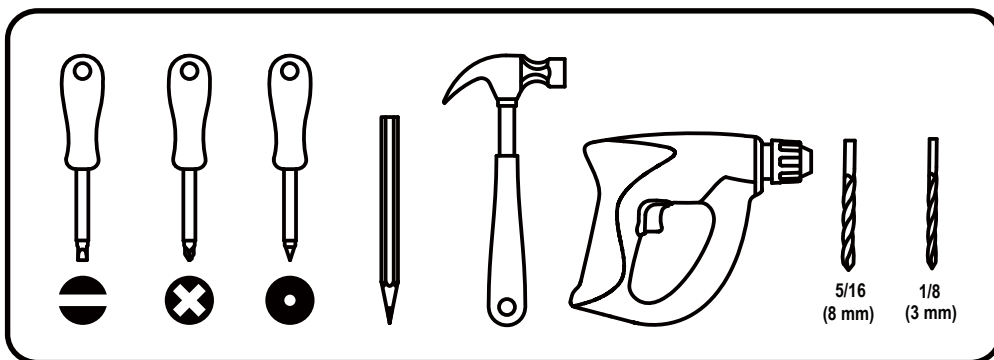


- Before installation, please make sure you have all the hardware, the serial numbers are properly labeled corresponding to the list, and the quantity is correct.
- If there are missing accessories or any quality problems or installation problems, please contact our professional customer service first, and we will reply ASAP. Please do not return the product without authorization. If you return it by yourself, you should bear the corresponding labeling fee.
- Enjoy your new purchase!



 
EXPLODED DRAWING

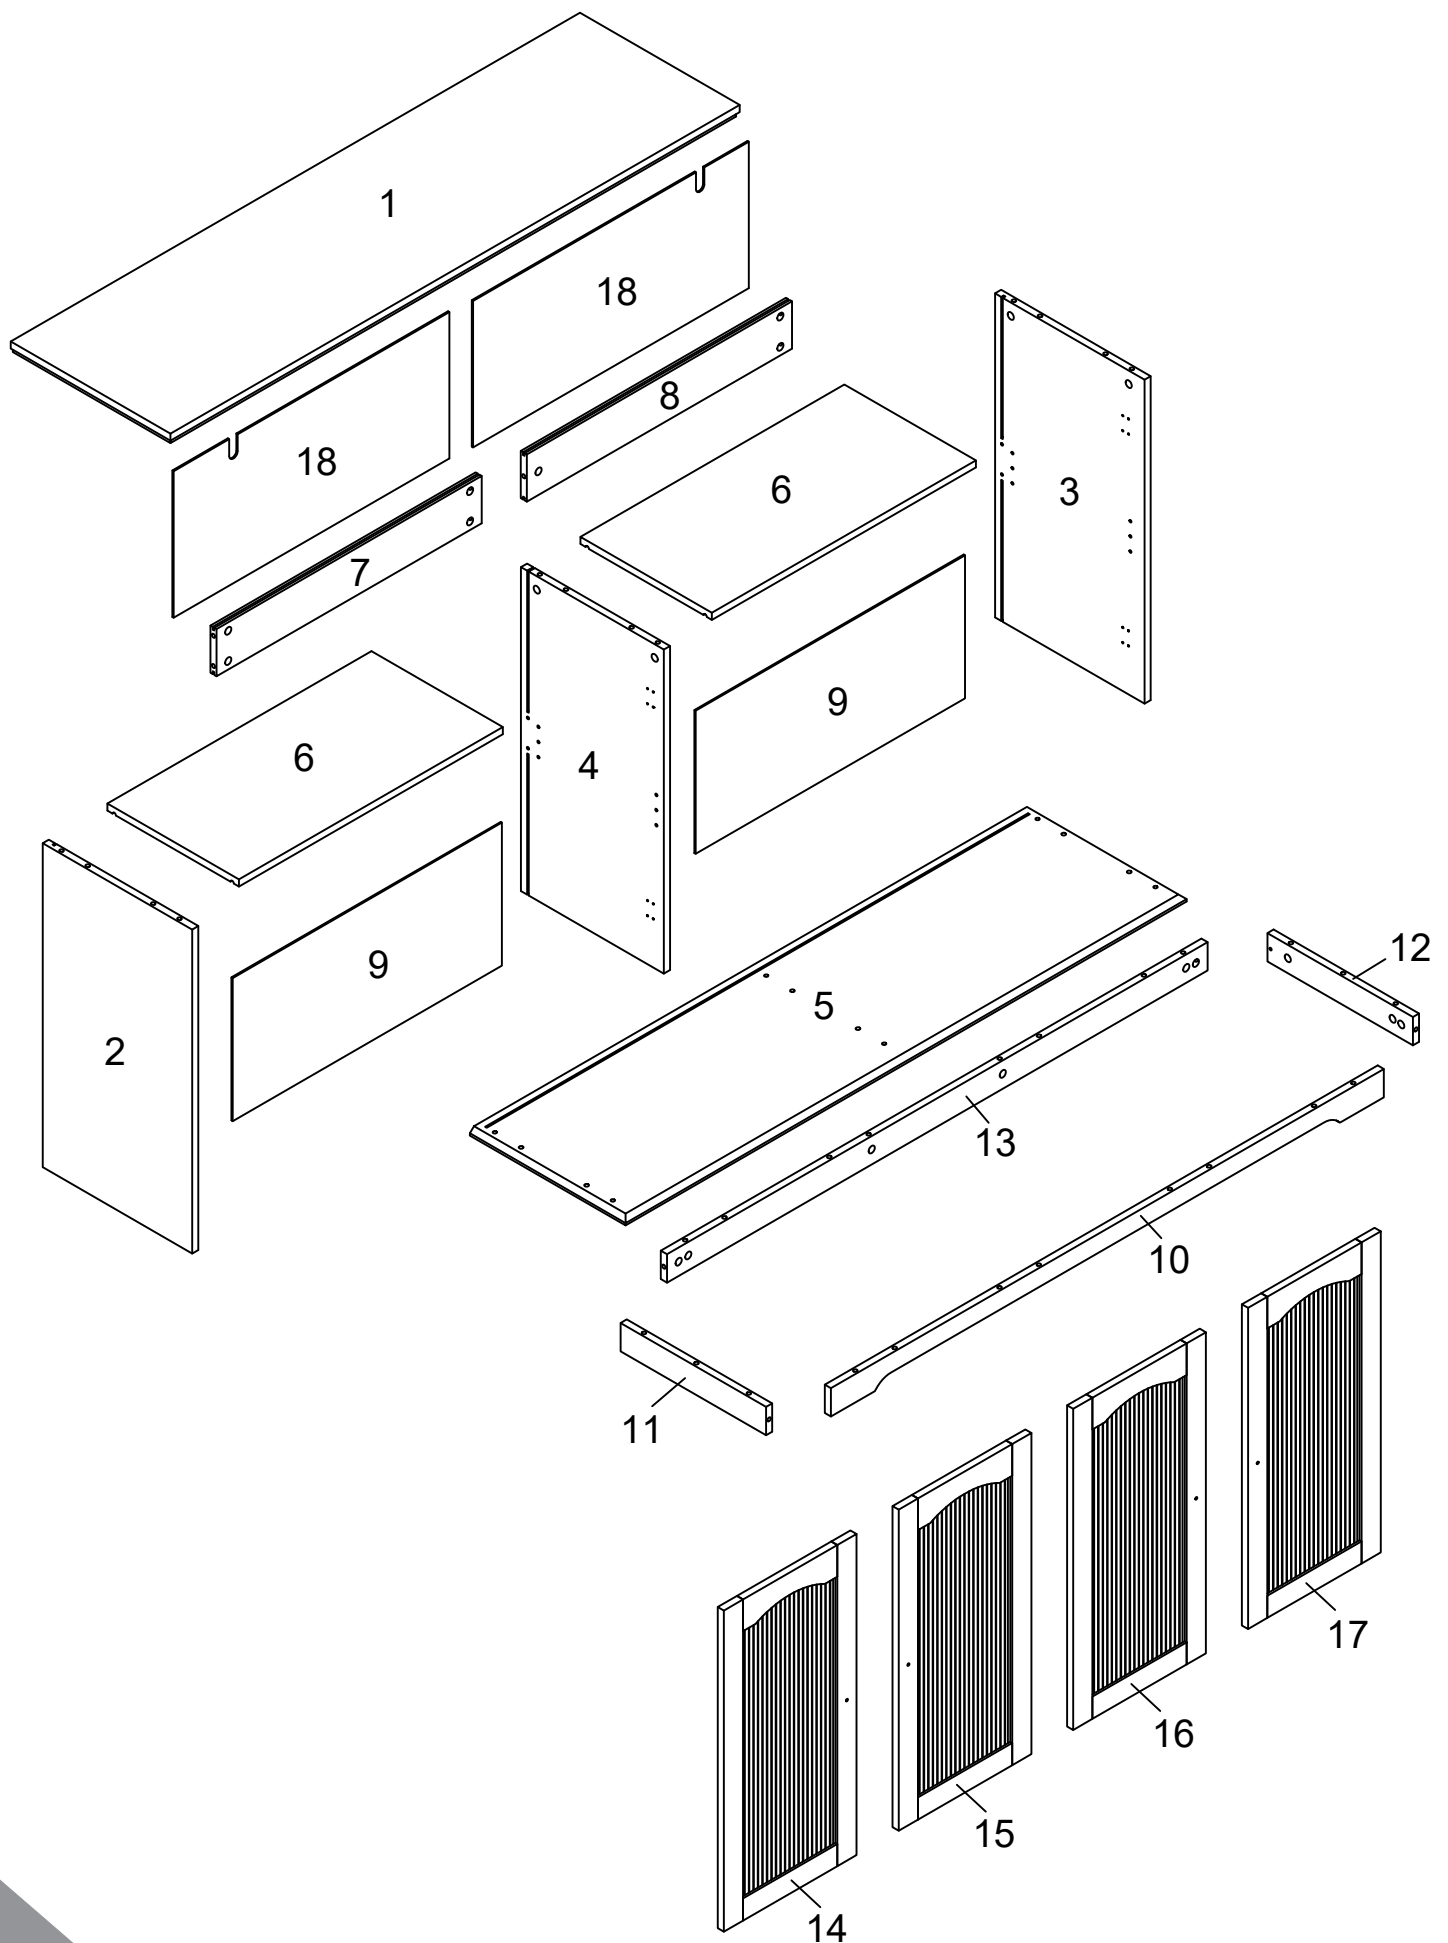

PARTS

      	A X29+3 Ø15X9.5		B X29+3 Ø6.5X35		C X22+2 Ø8X30
	D X8+1 Ø5X16		E X48+3 Ø3.5X12		F X6+1 Ø6.3X40
	G X4 M4X19		H X4 Ø25X15		I X4 Ø35
	J X4 Ø35		K X2set		L X1 70X30X5
	M X6+1 Ø21		N X12+2		

   
MINIFIX POSITION

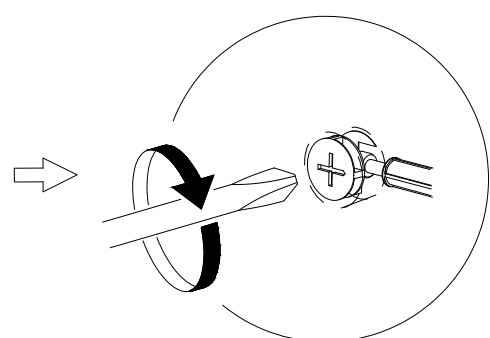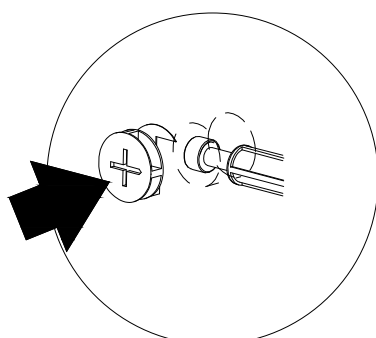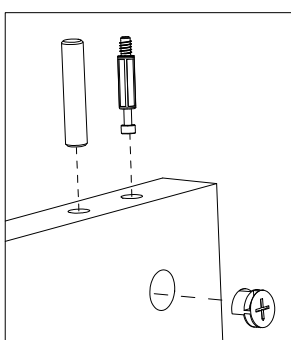



1




 
We kindly recommend that you check the quantity and condition of the panels and accessories upon receiving the product, as outlined in the instruction manual. If you find any missing parts, damages or encounter assembly issues, please feel free to contact us, and we will be happy to assist you within 24 hours.

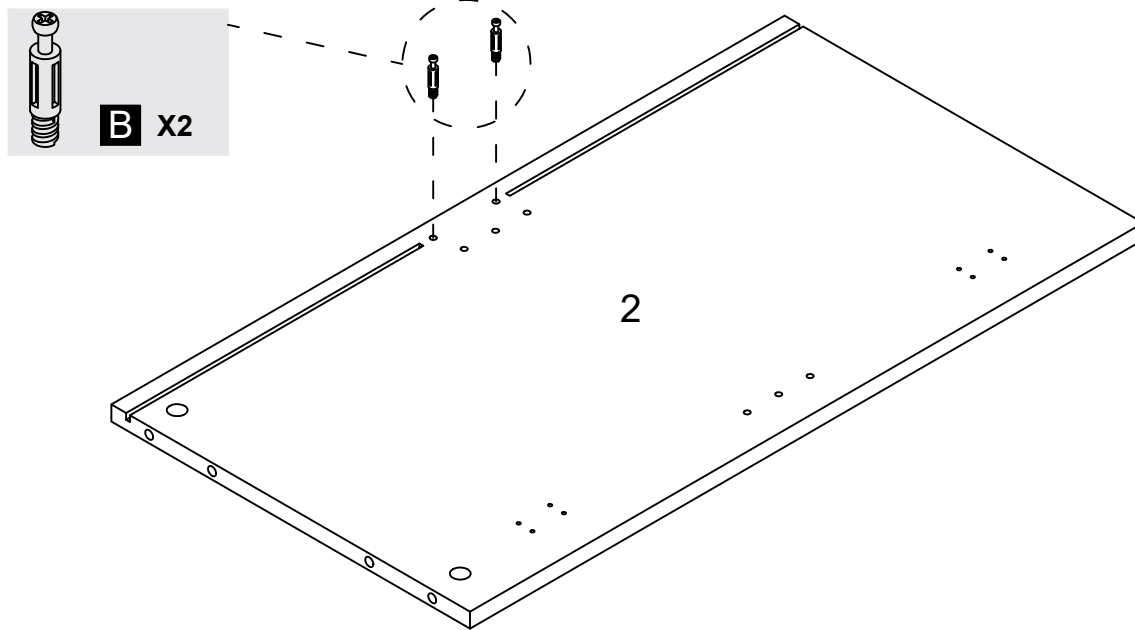


2

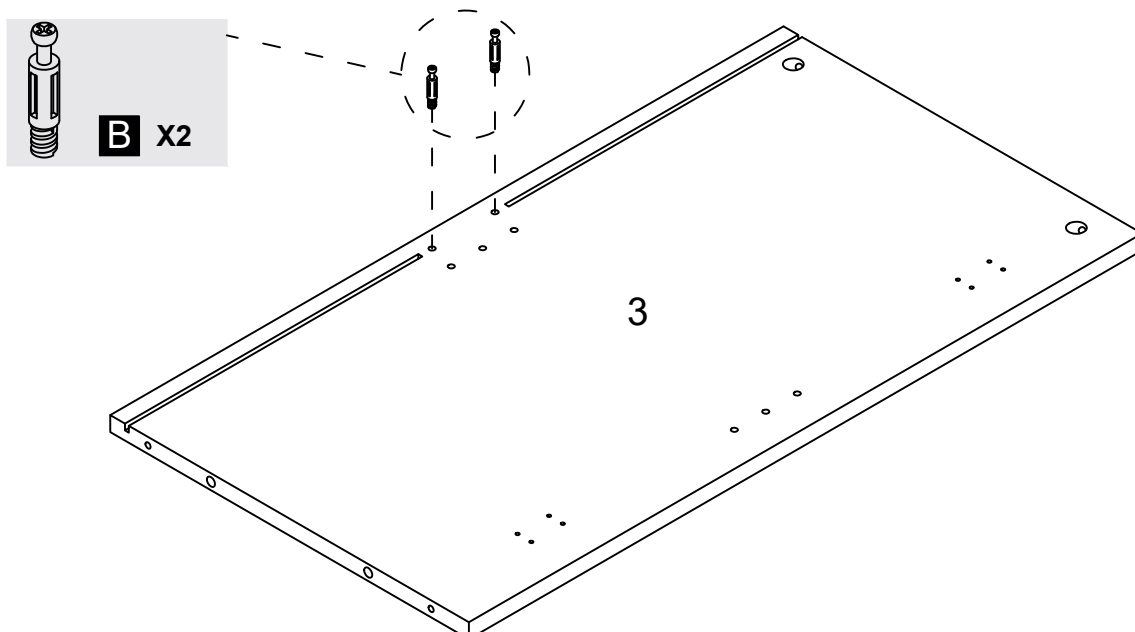  


3

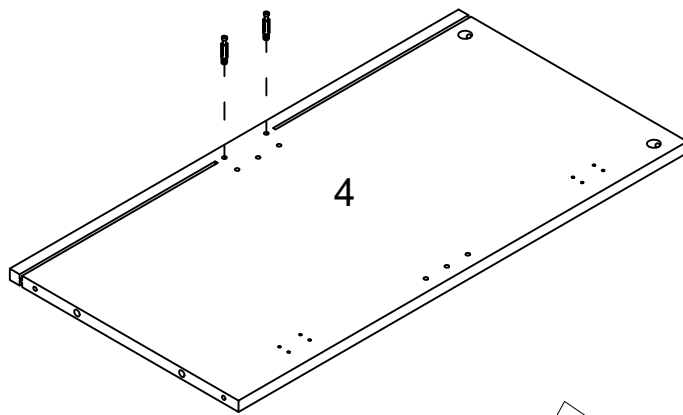  

B x3

 

REVERSE

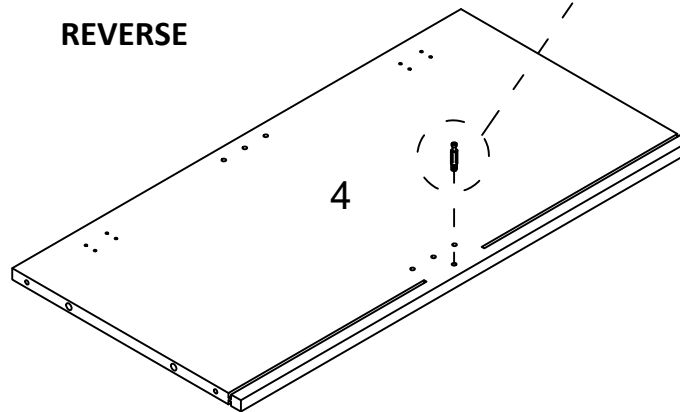 


B x3

4



 A x4

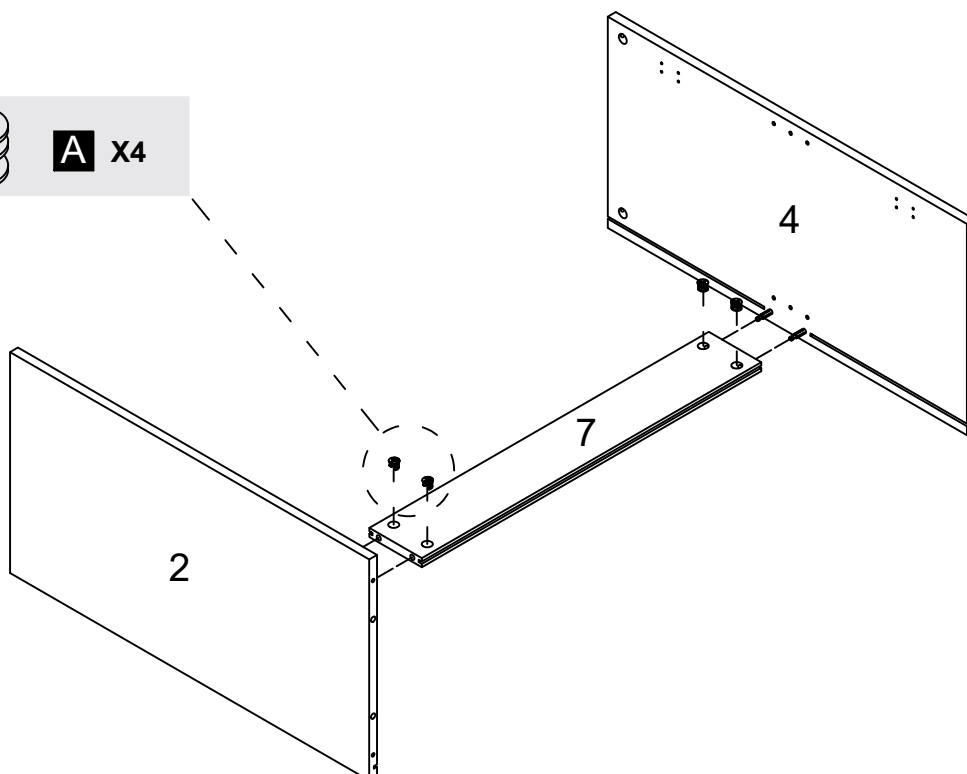


A x4

5



 
A X3

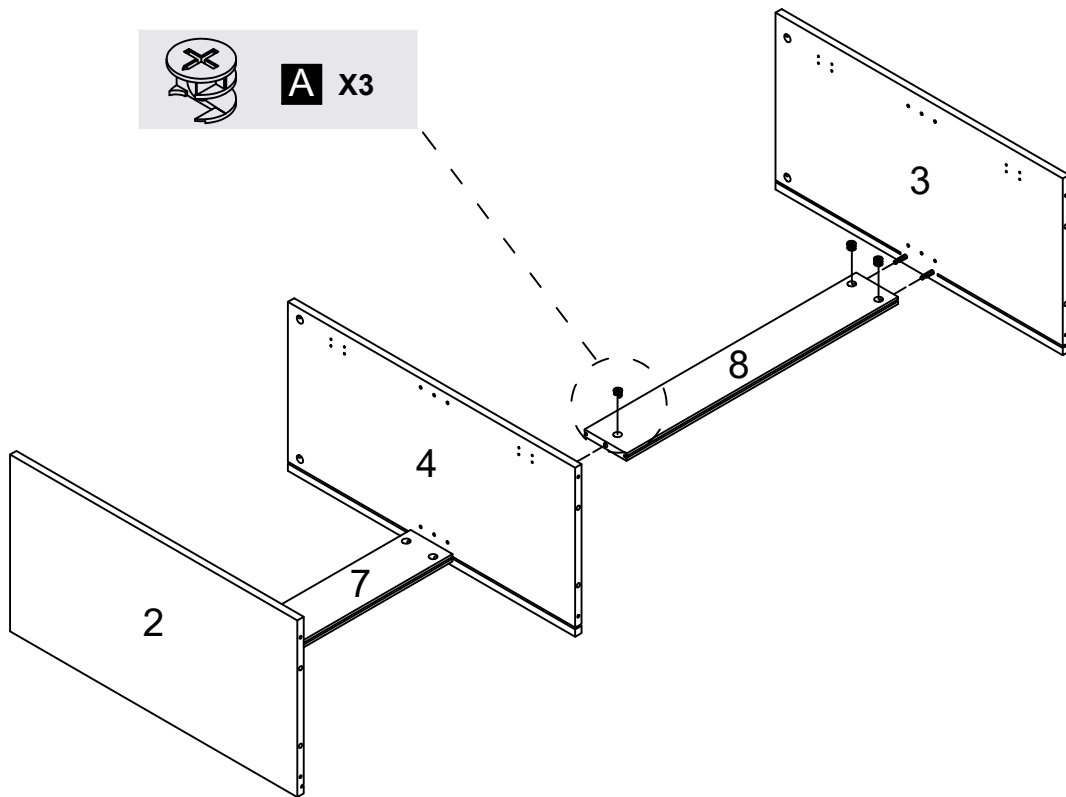

6






 
Need two people to flip

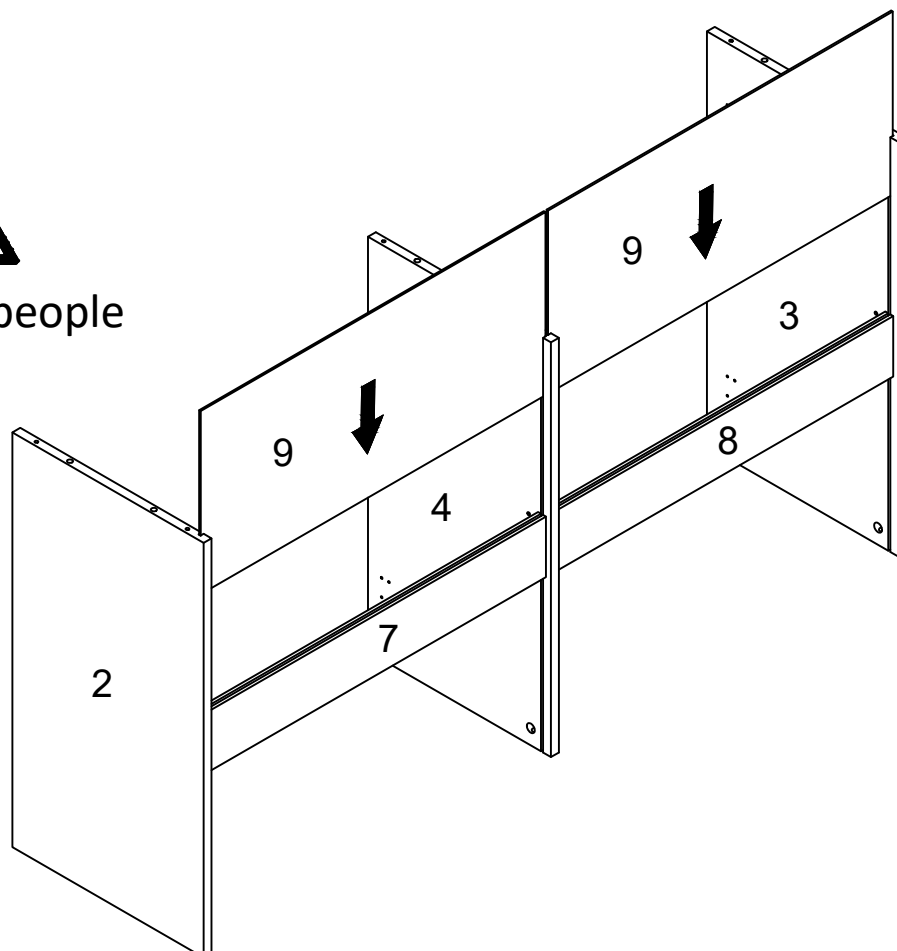

7



  
 
 
For this step, you need one helper.

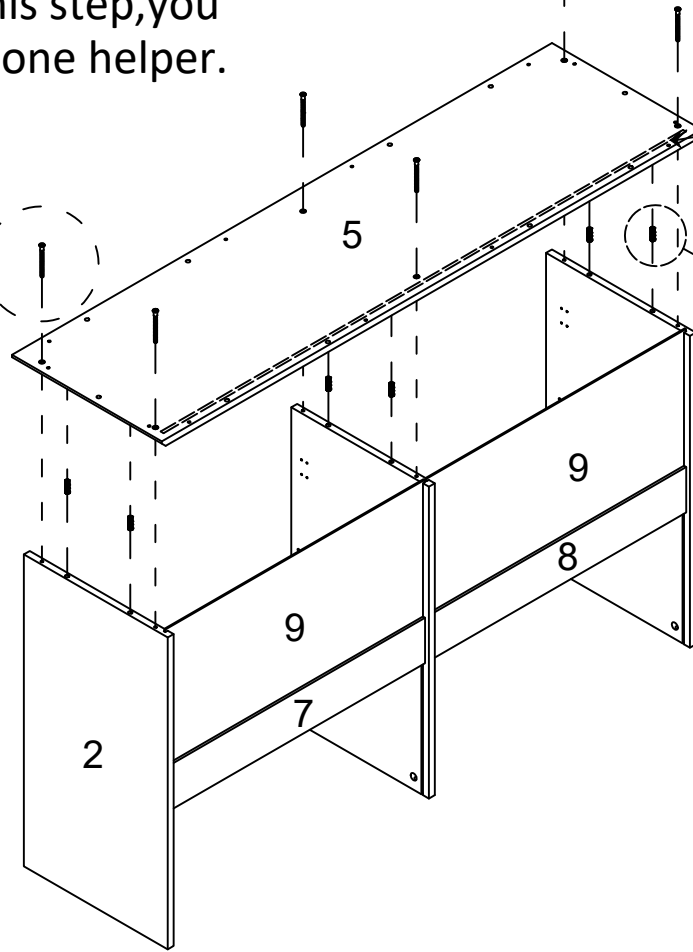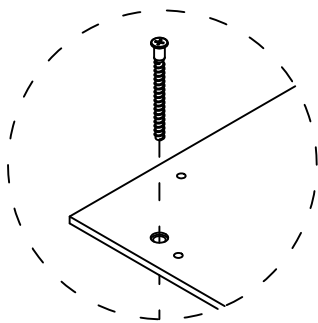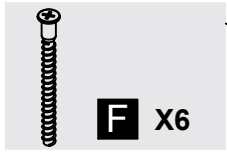


There are grooves below



   
8

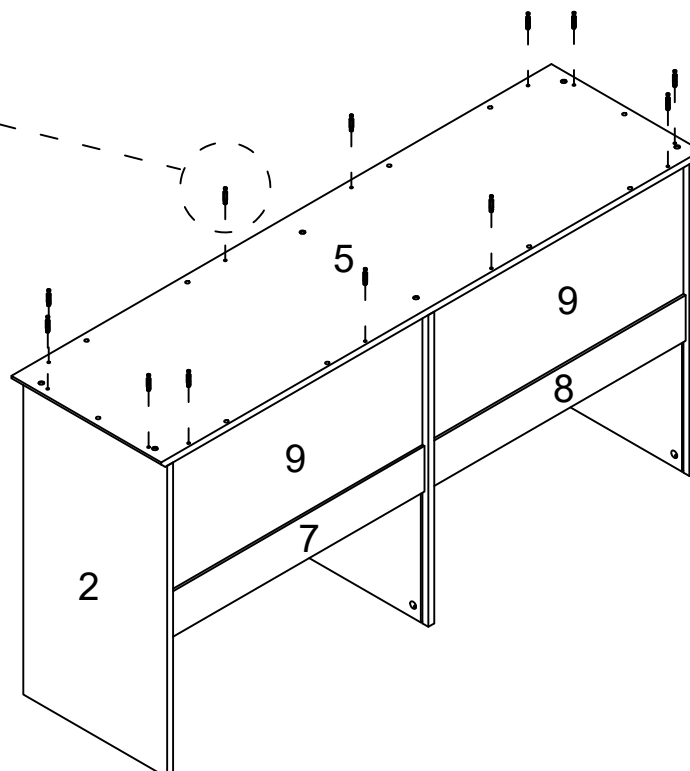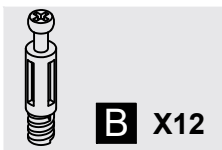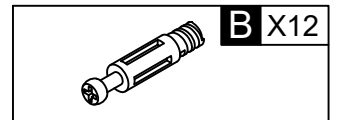



9

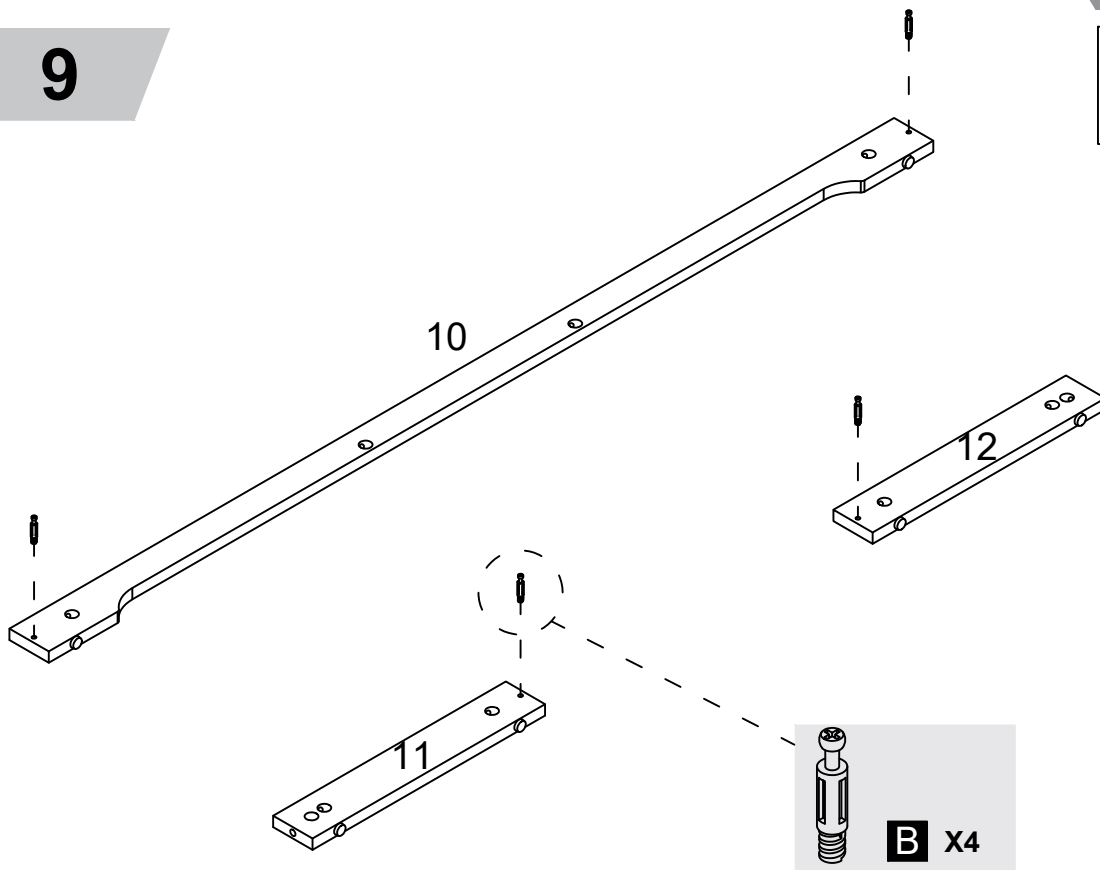 



10

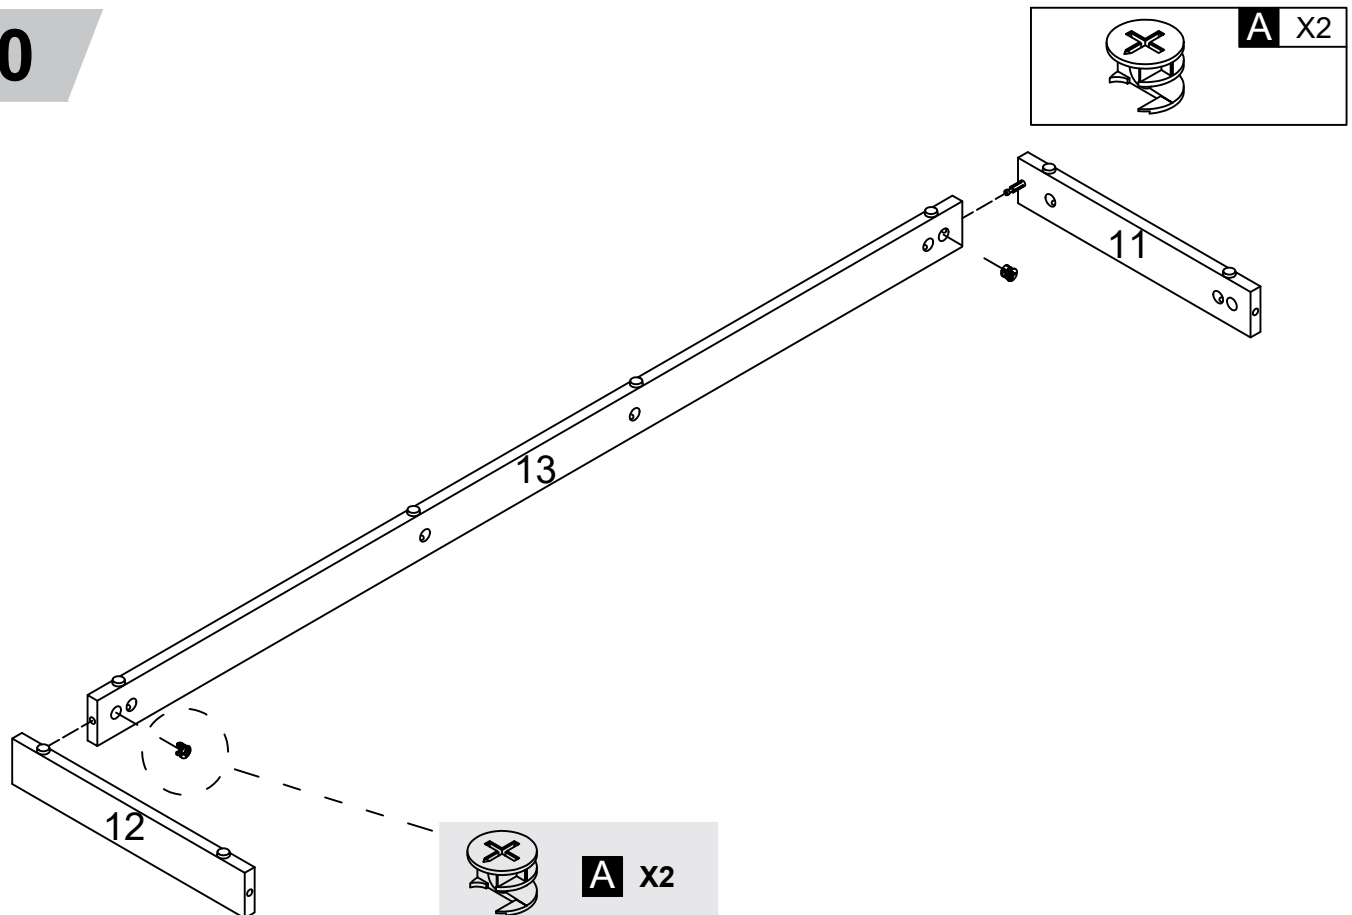 

11

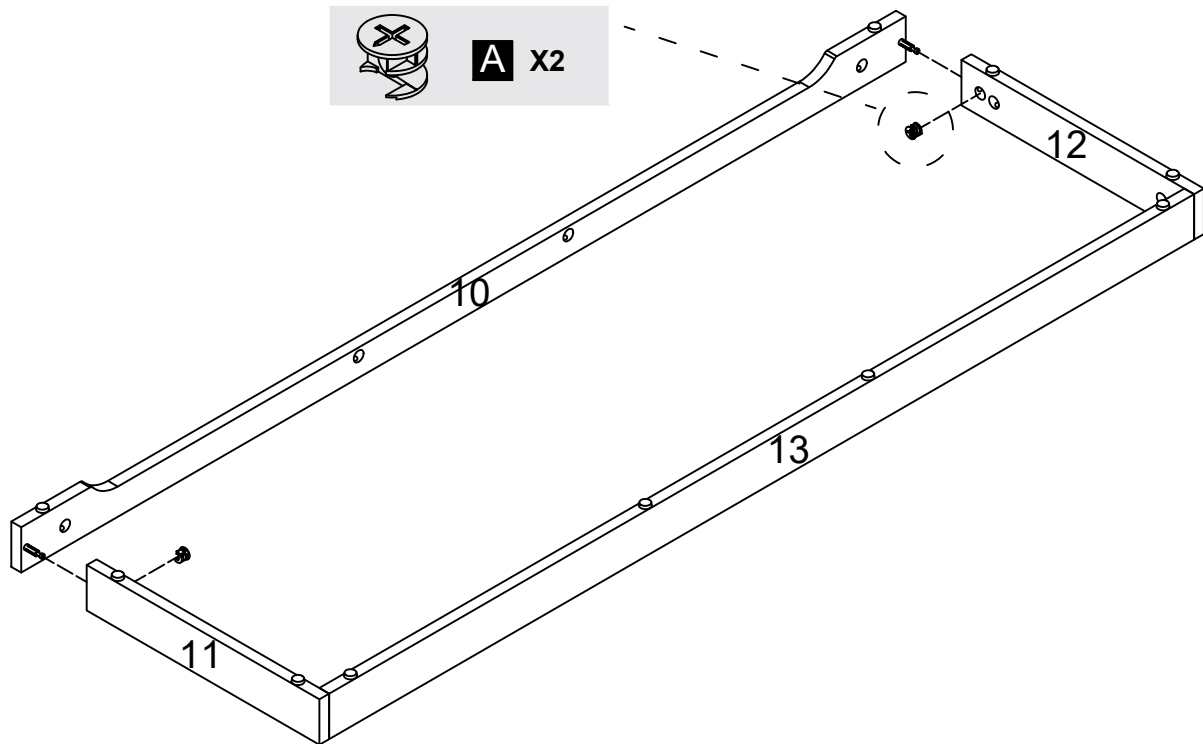  

12

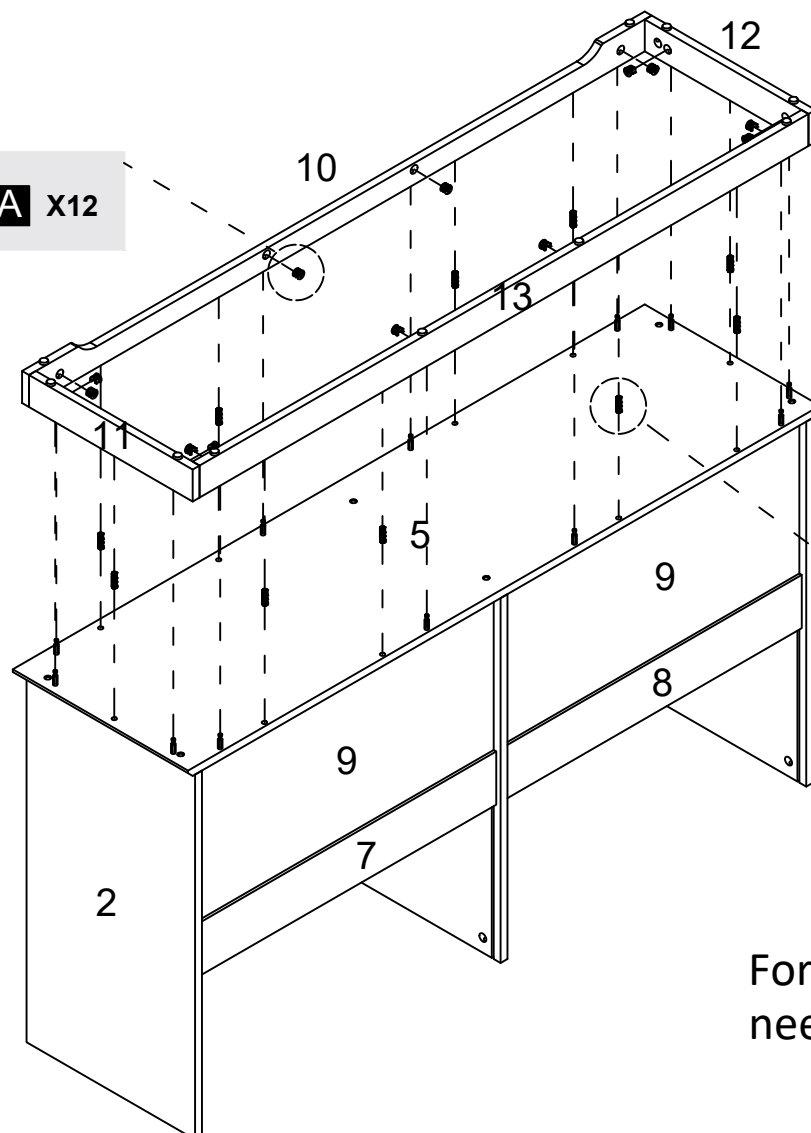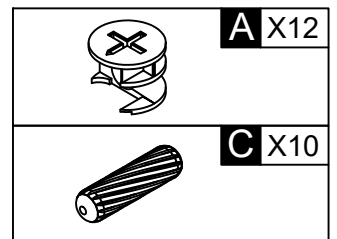  


For this step, you need one helper.




13



 
Need two people
to flip

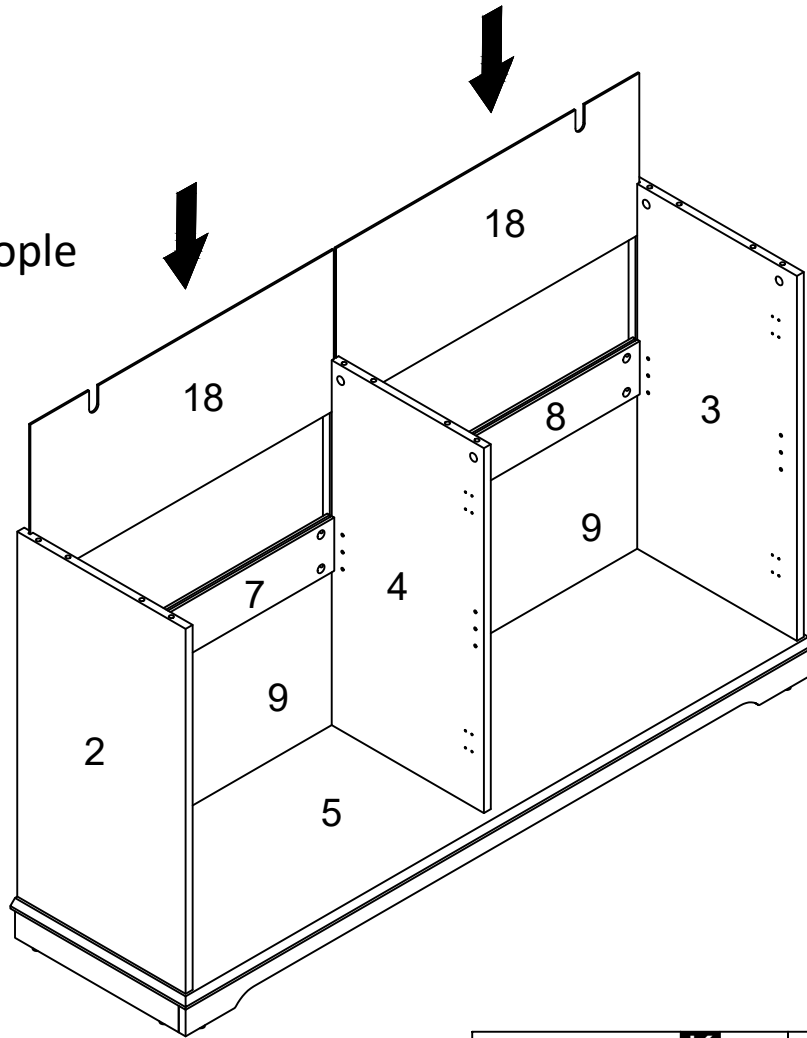




14

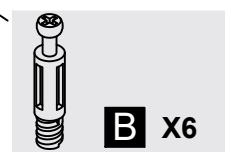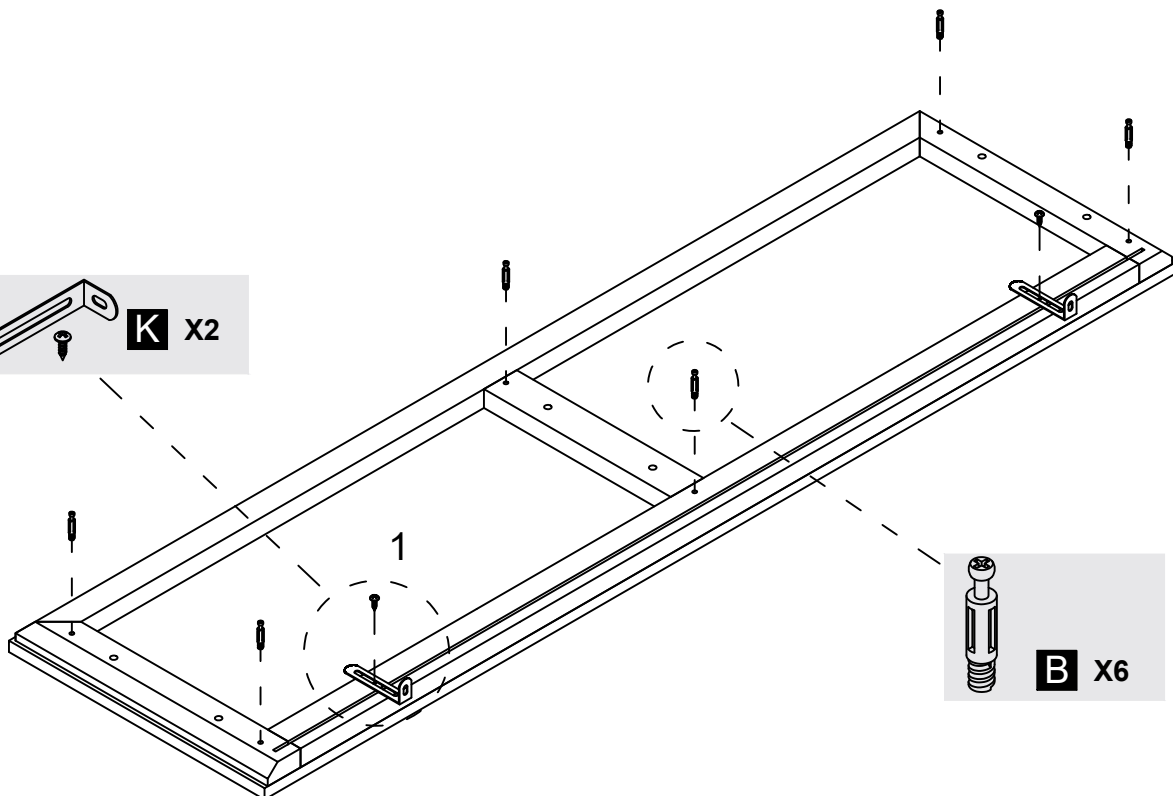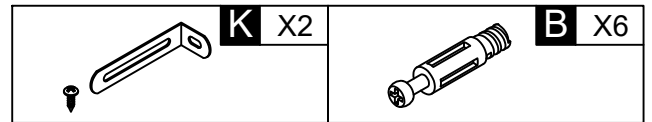   



15

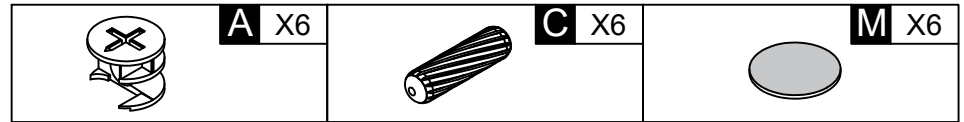 

  
 
There is a groove at the bottom of the panel.

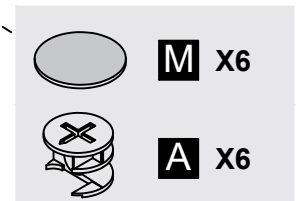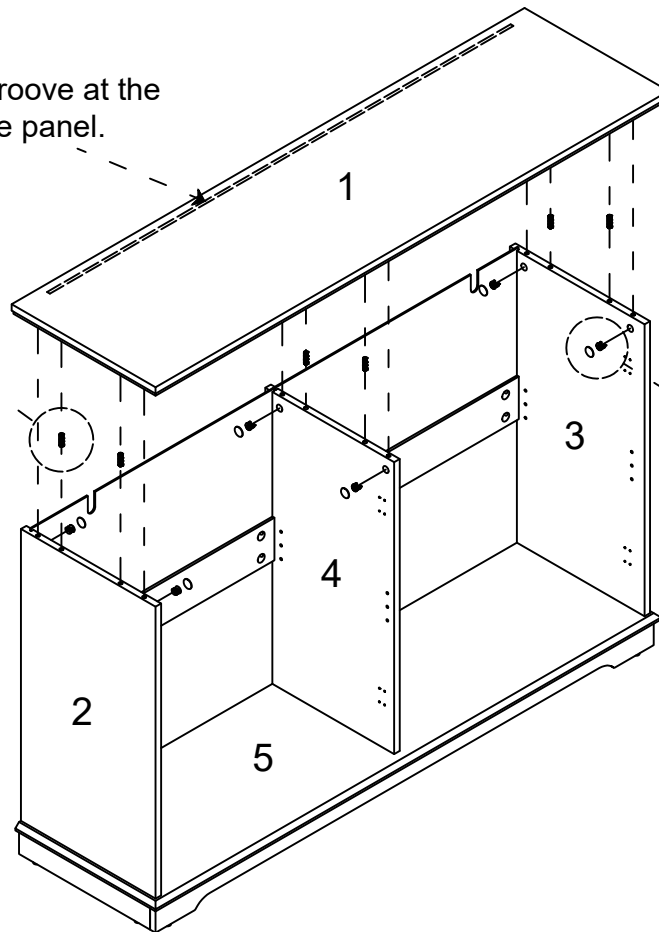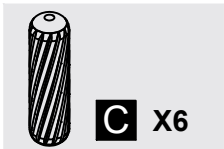

16


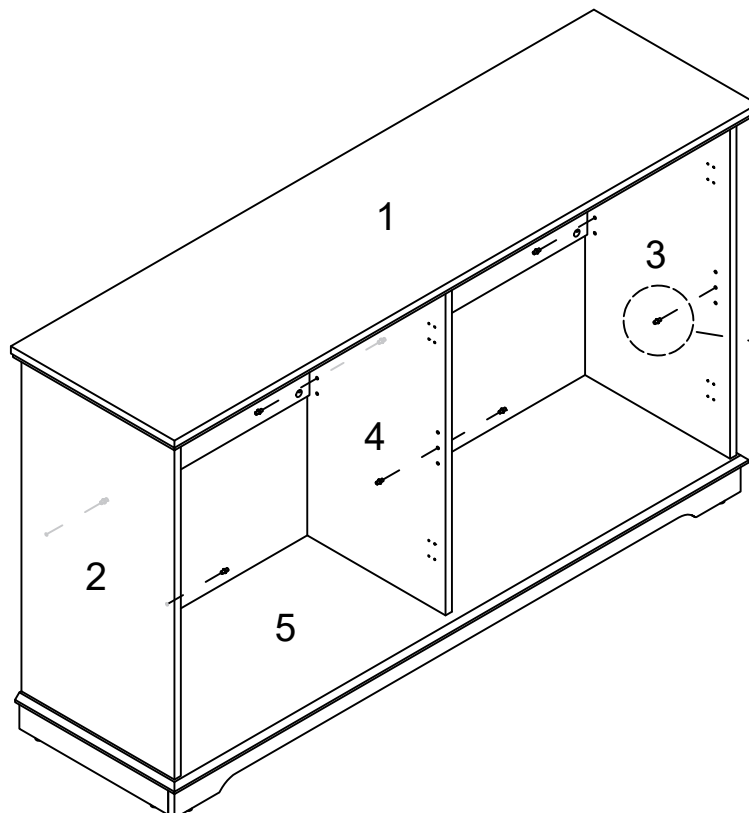 
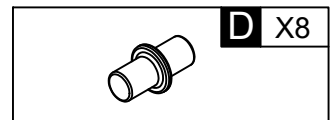 


17

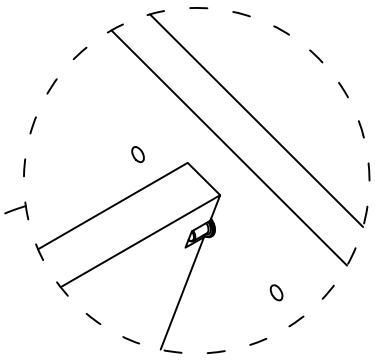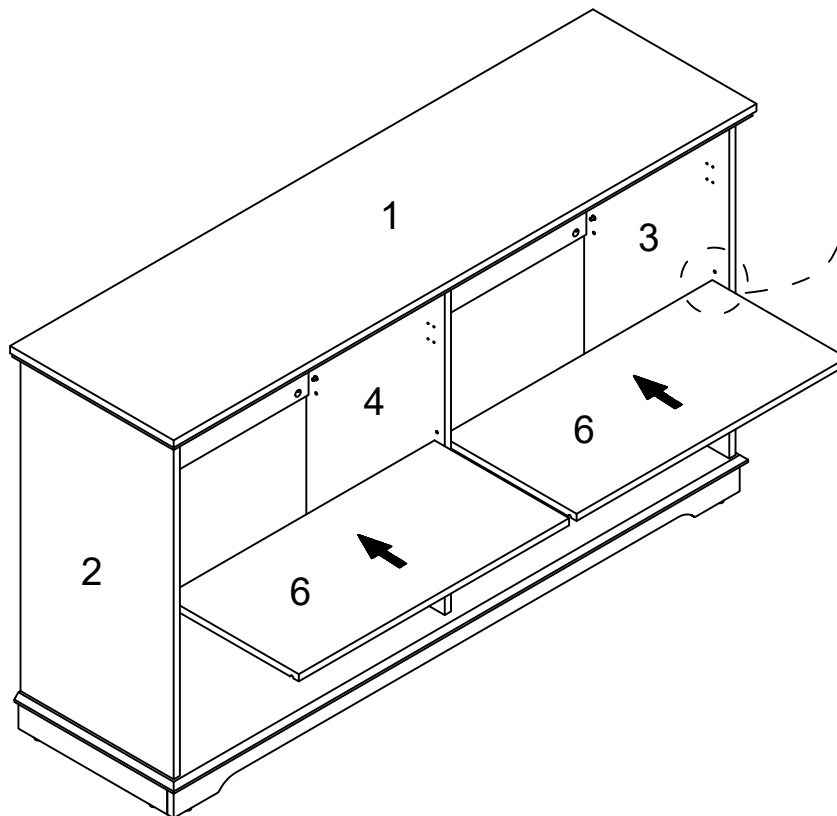  

18

   Hinge Installation Note: Match the correct hinge type to the designated door panel number. The two types are not interchangeable.

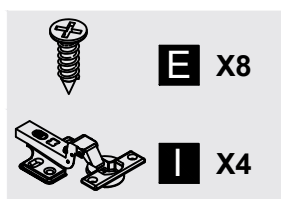
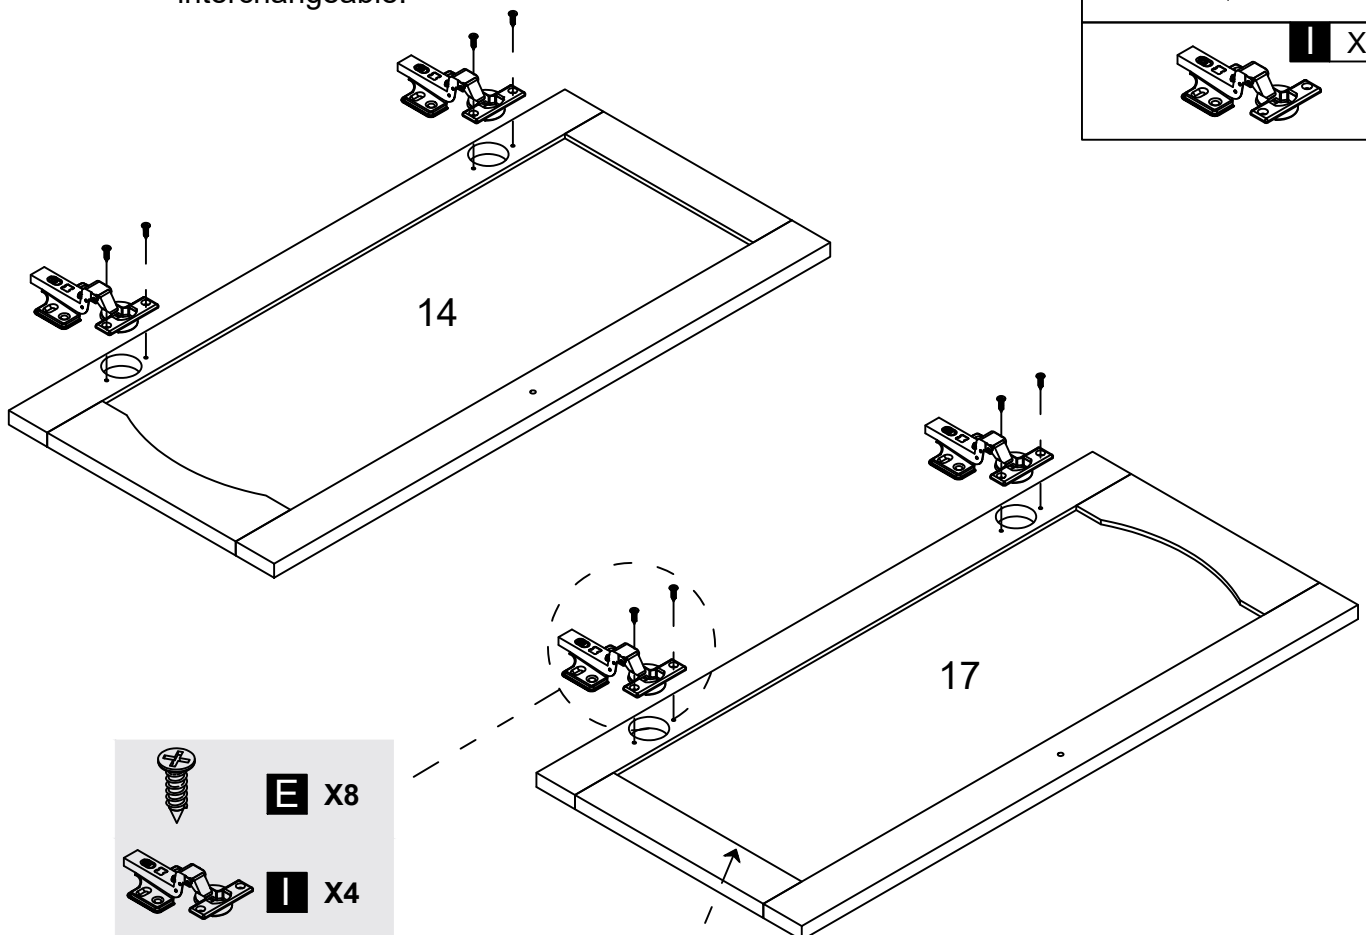
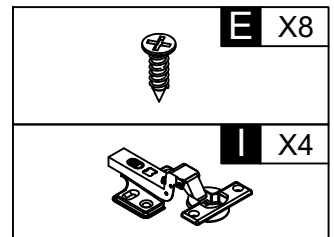


Right-right opening cabinet door



19

Hinge Installation Note: Match the correct hinge type to the designated door panel number. The two types are not interchangeable.

   Left-right opening cabinet door

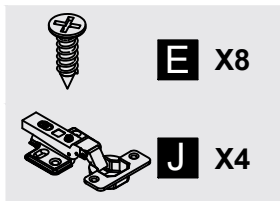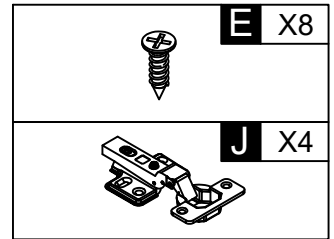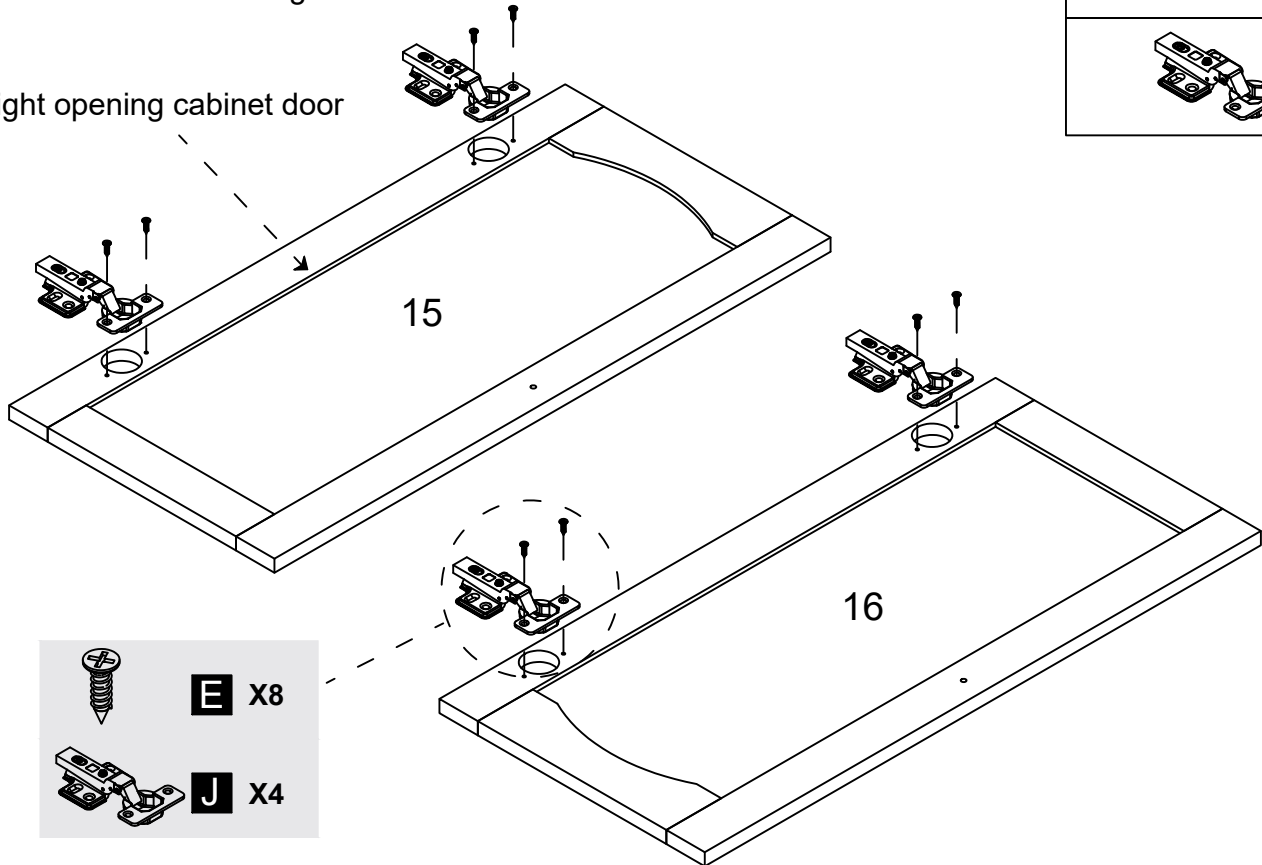


20

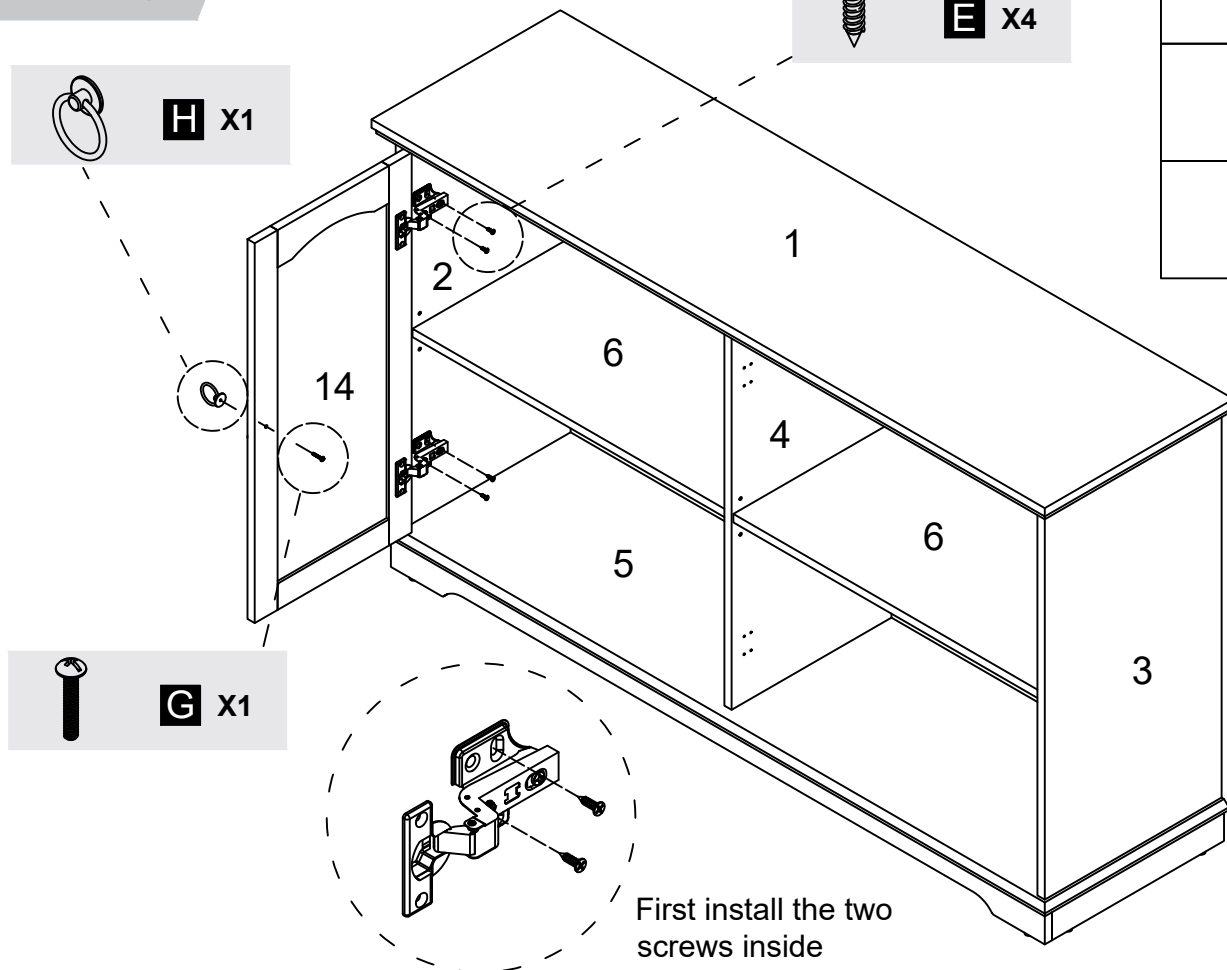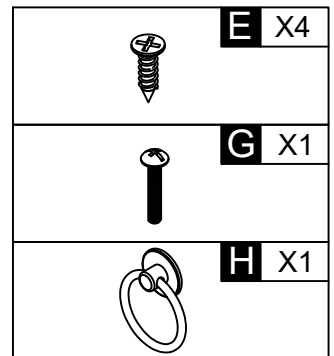  


First install the two screws inside

 
21

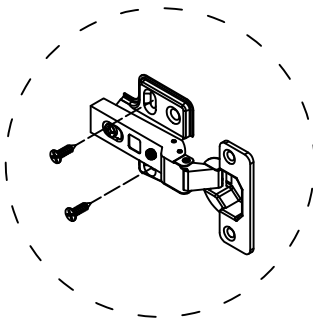


First install the two screws inside

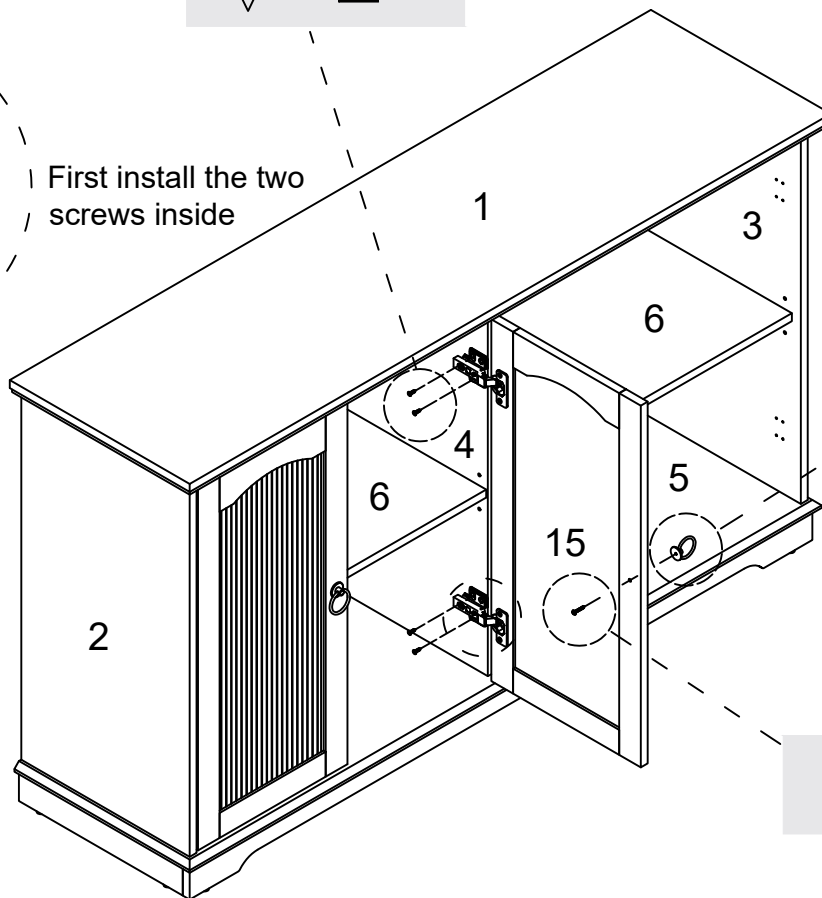 


E X4

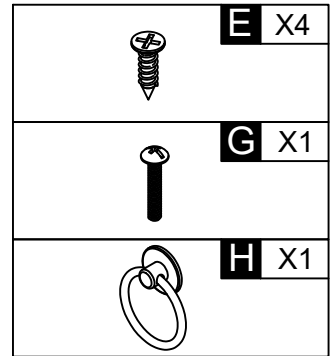 


22

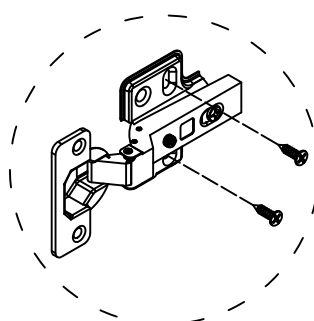 


First install the two screws inside

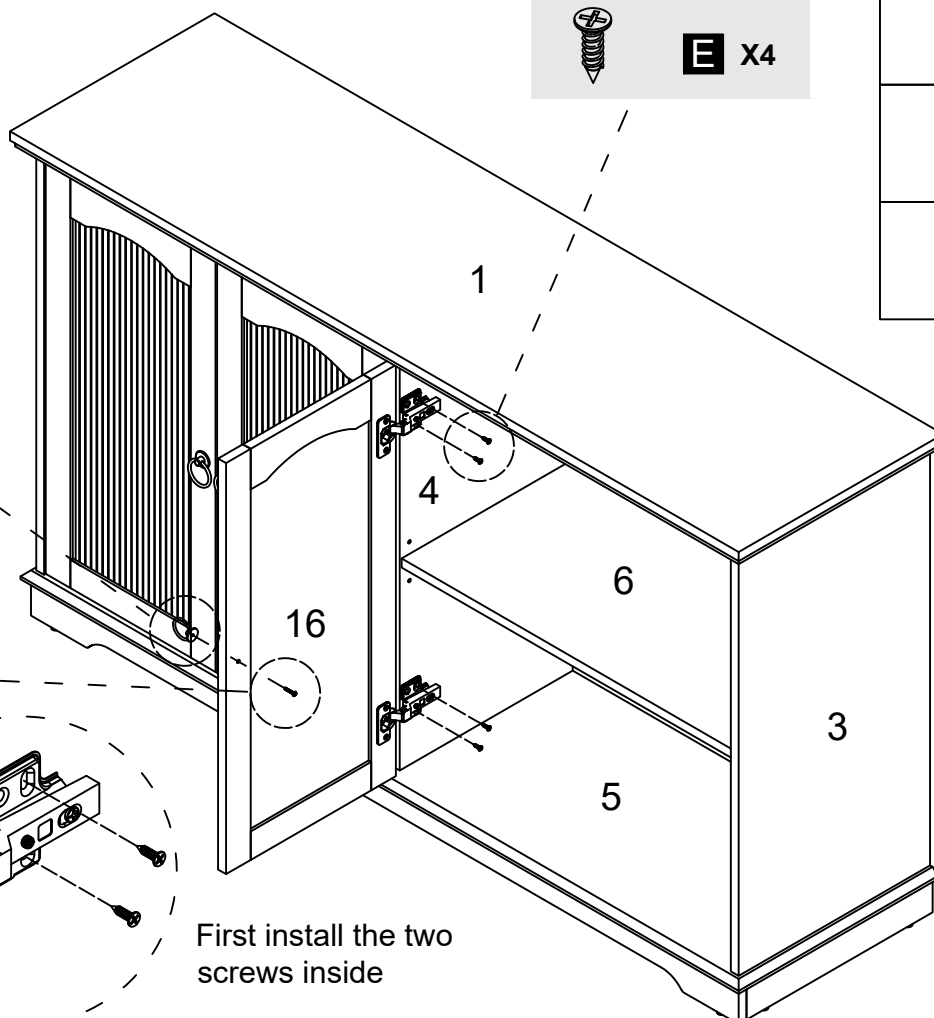 


E X4

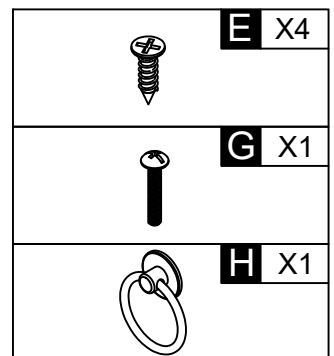 

23


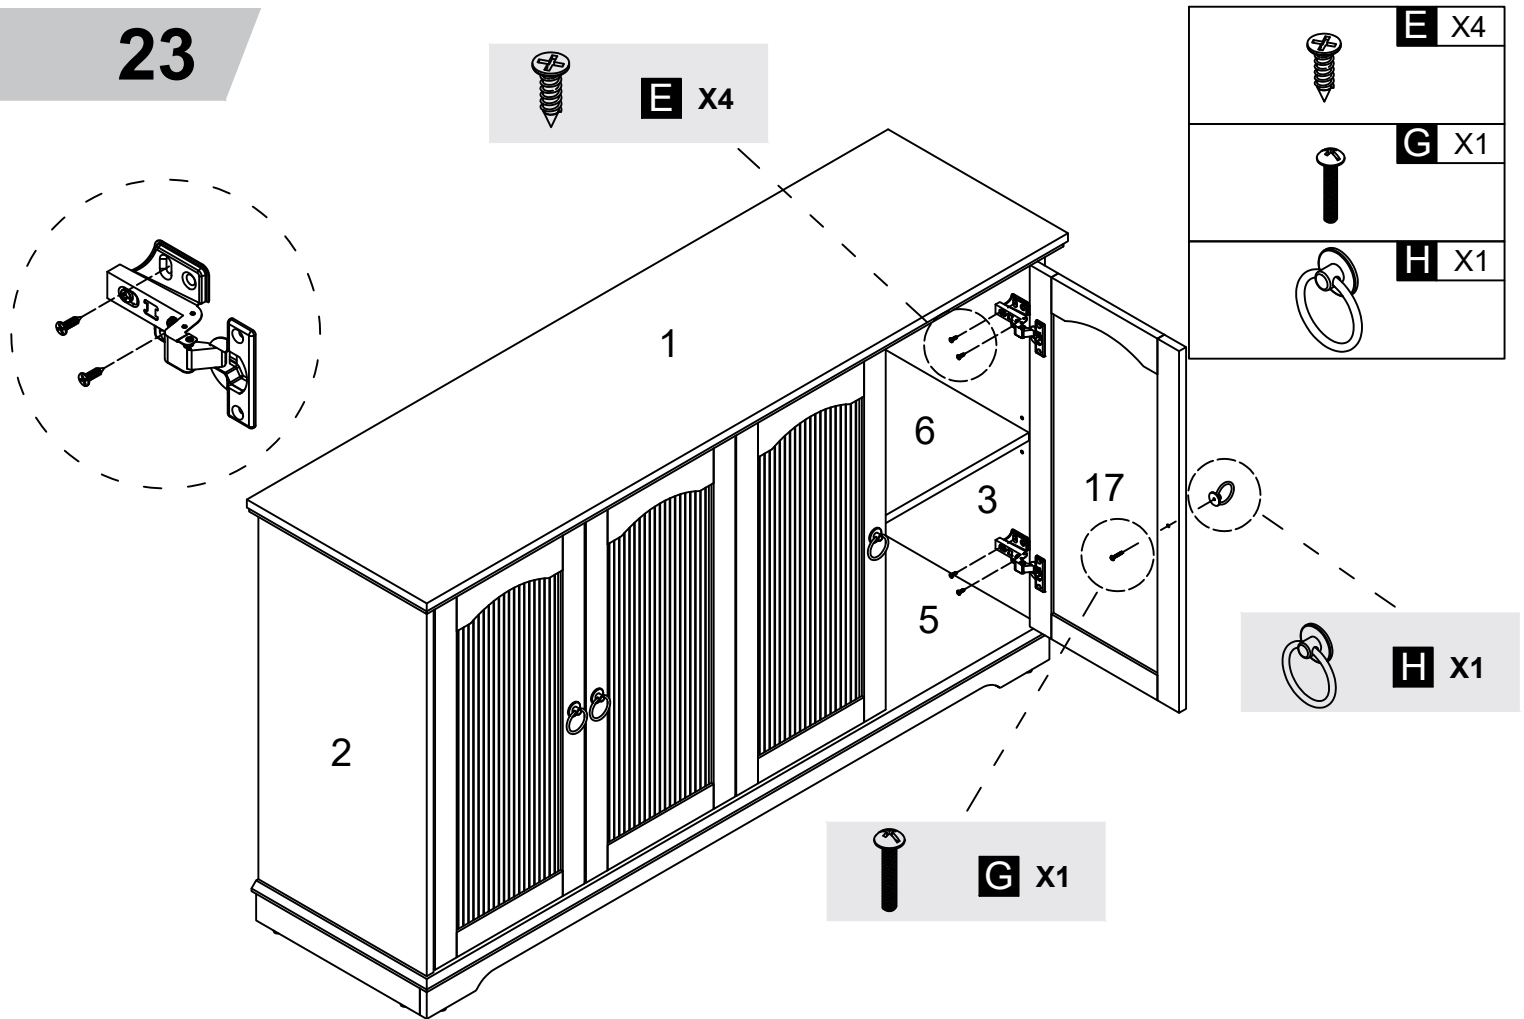 


24

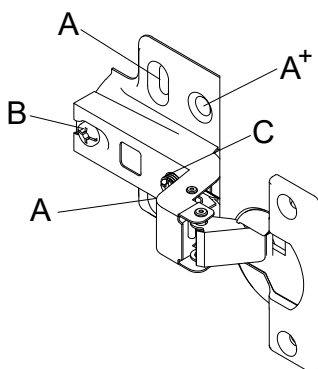 

NOTE: If you encounter a gap or difficulty closing the door after installation, Please adjust the hinge according to the following operation.

  The method is as follows:

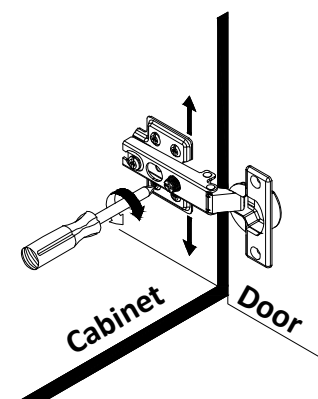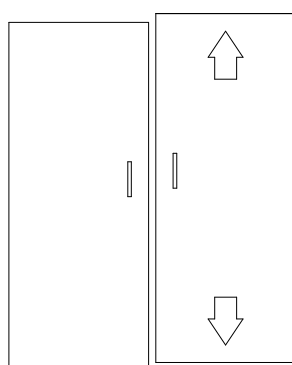

[How to adjust vertical height of the door]

- Loosen the 2 screws "A" on the hinge so that it can be adjusted up or down a few millimeters.

 
25



E X4



E X4

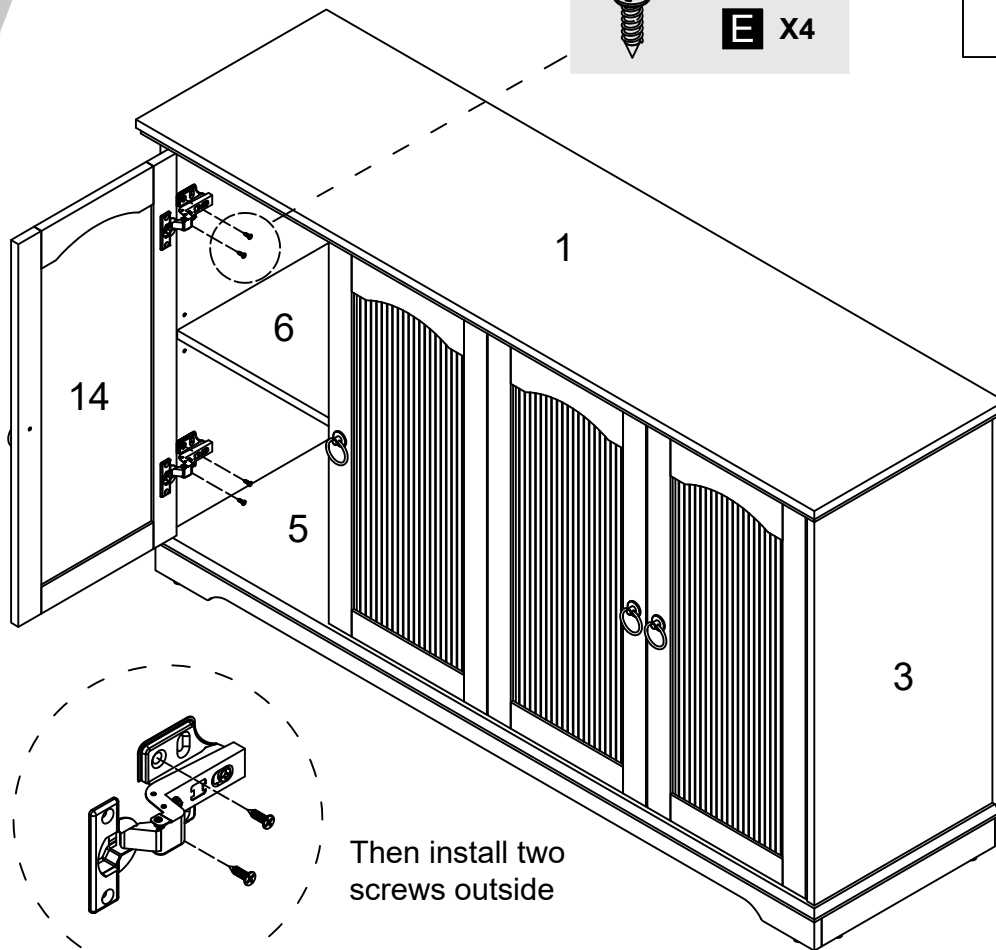

Then install two screws outside

 
26



E X4



E X4

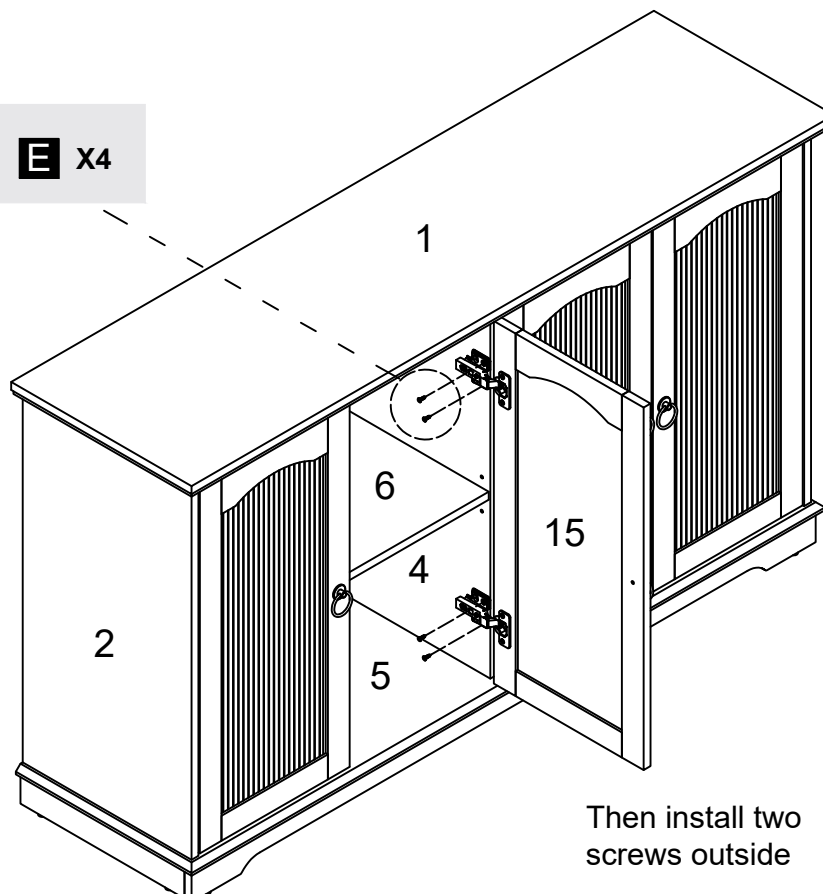


Then install two screws outside


27



 E X4

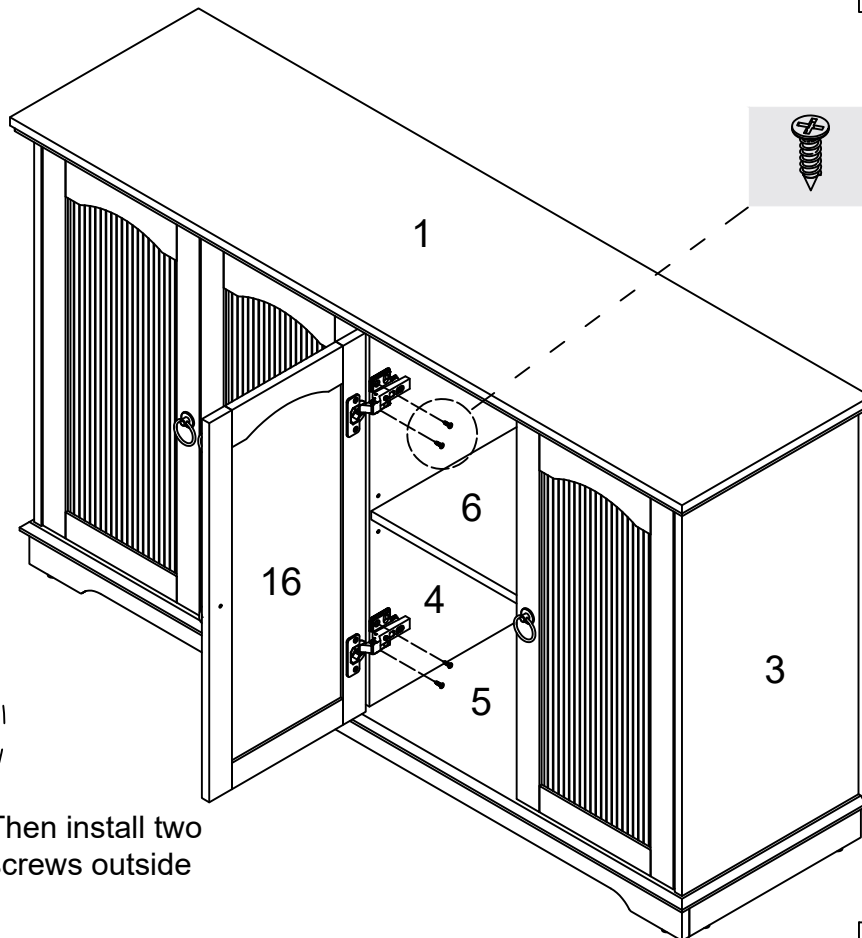

E X4

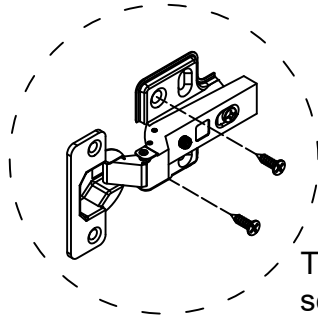 


Then install two screws outside


28



 
E X4

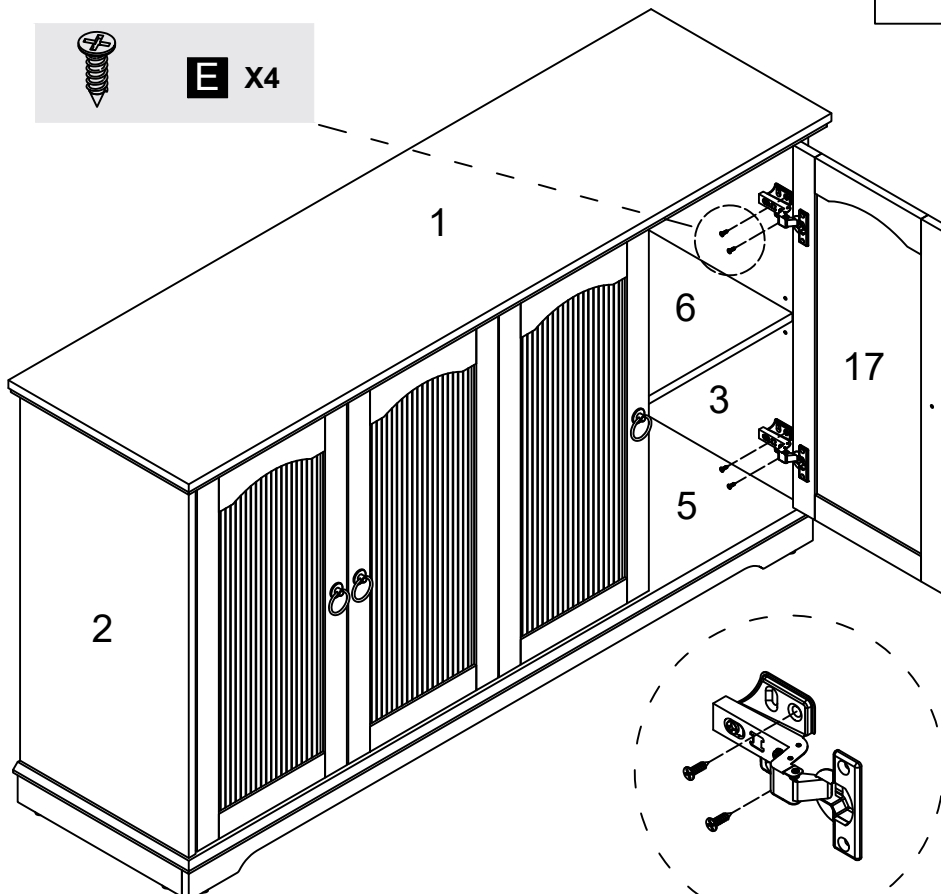

E X4


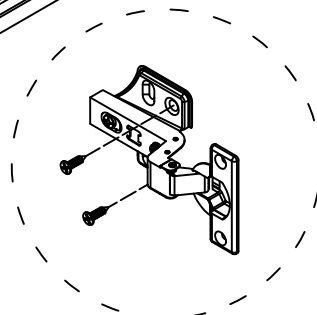 


Then install two screws outside

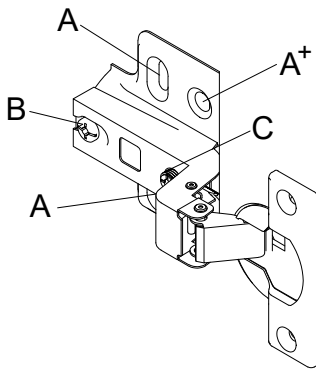 



NOTE: If you encounter a gap or difficulty closing the door after installation, Please adjust the hinge according to the following operation.

  The method is as follows:

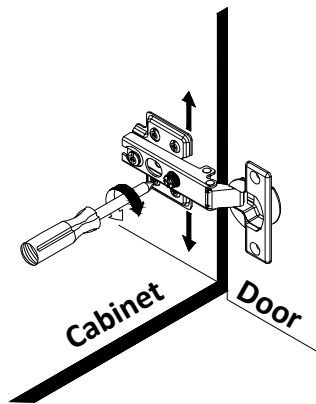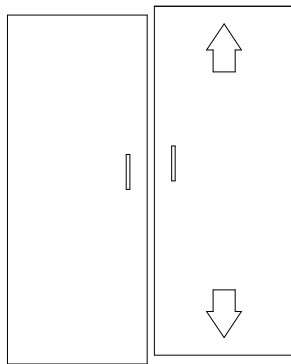



[How to adjust vertical height of the door]

  - First remove the 2 screws "A+" on the hinge.
- Then loosen the 2 screws "A" on the hinge so that it can be adjusted up or down a few millimeters.
- Then tighten "A" and reinstall "A+".

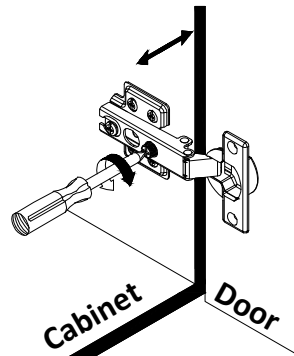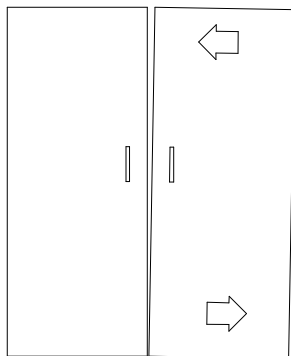



[How to adjust the level of the door]

  - Turn screw "C" on hinge to adjust the level of the door.

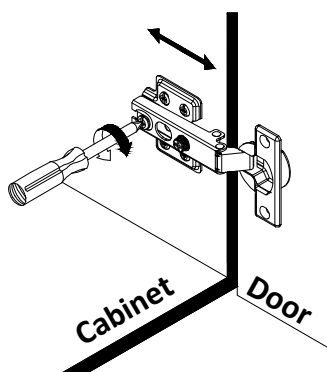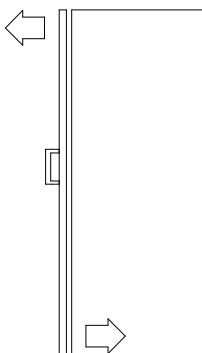


[How to adjust depth of the door]

  - Loosen screw "B" and adjust the depth of the door.
- If screw "B" is loose, the depth of the door still cannot be adjusted. Simply loosen the screw "C" slightly to adjust the position of the door forward and backward.
- After adjusting the position, tighten screw "B" last.

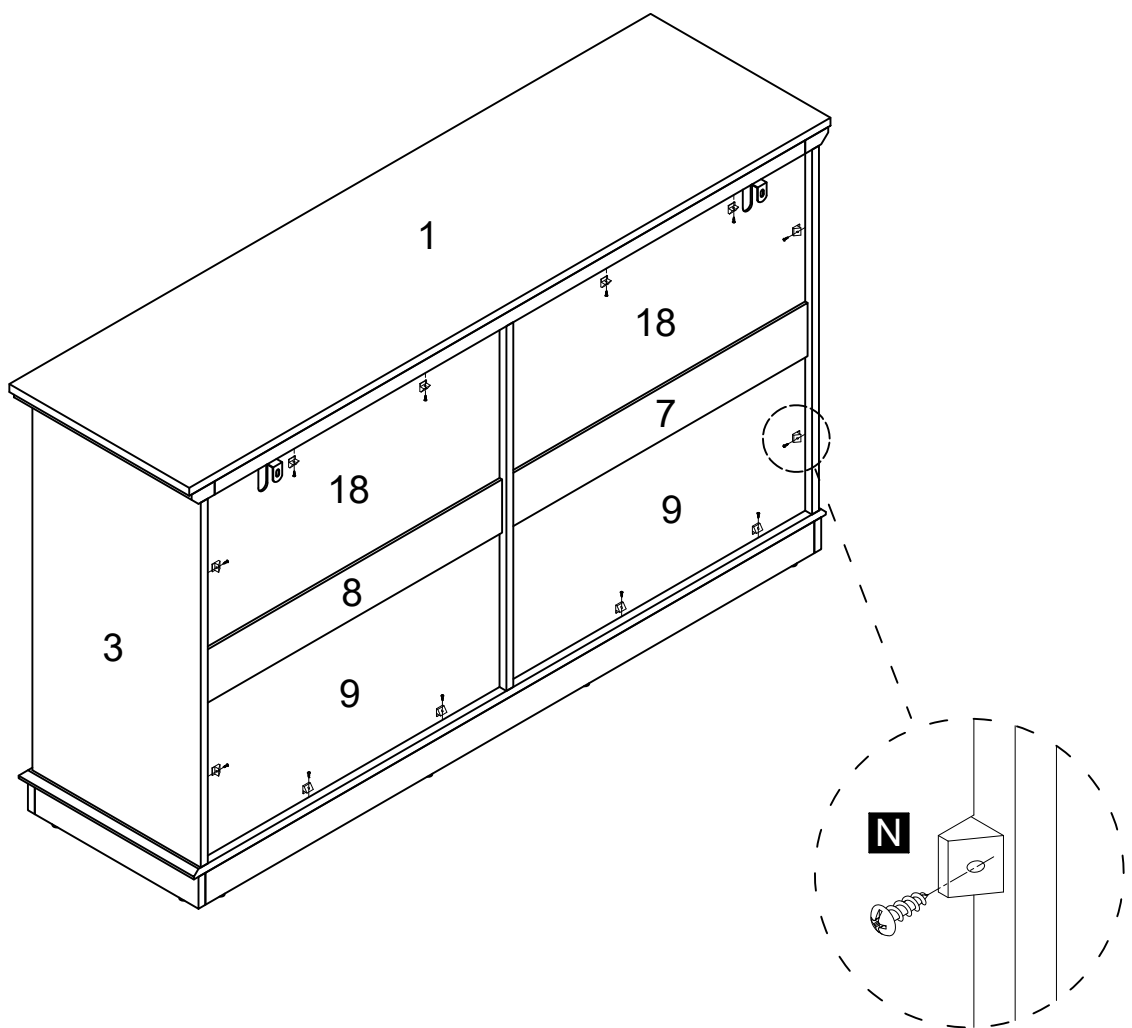


31

 


Install the tipping restraint hardware

 
NOTE: The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction different anchor hardware maybe required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent and are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.

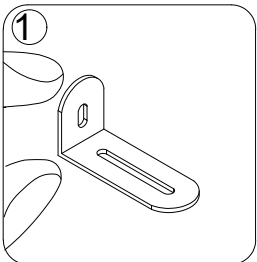

 
1. make mark on the wall

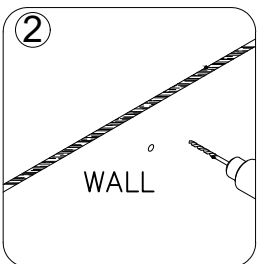

 
2. drill two Ø6 holes on the wall

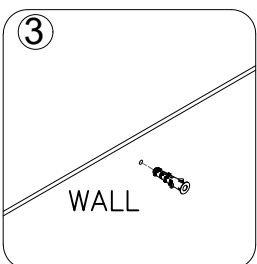

 3. put two anchors in the holes

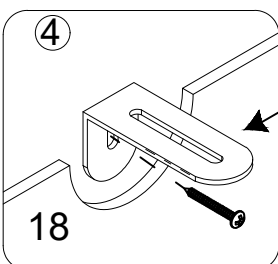

 4. fix the device on the wall by the long screws

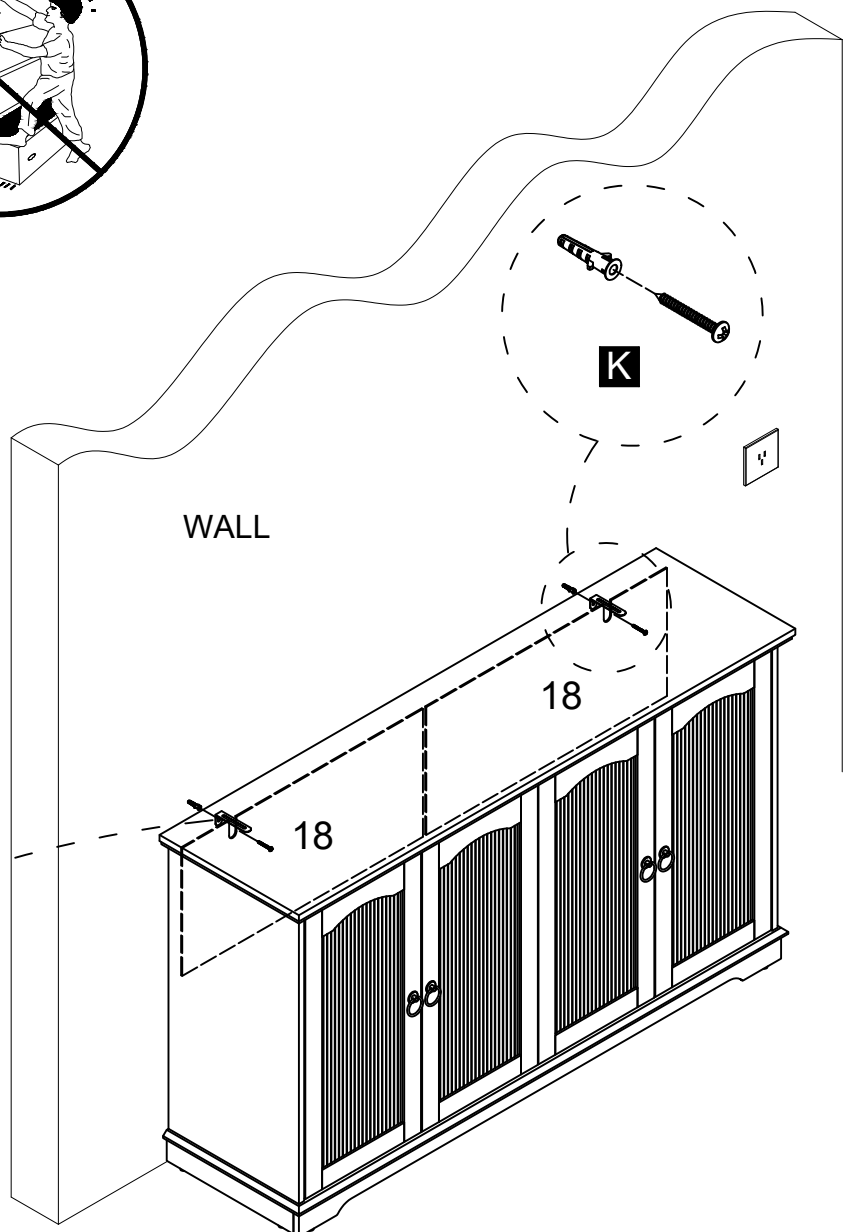

Here the door panel needs to be opened and the anti-tipping device installed.