


User's Manual

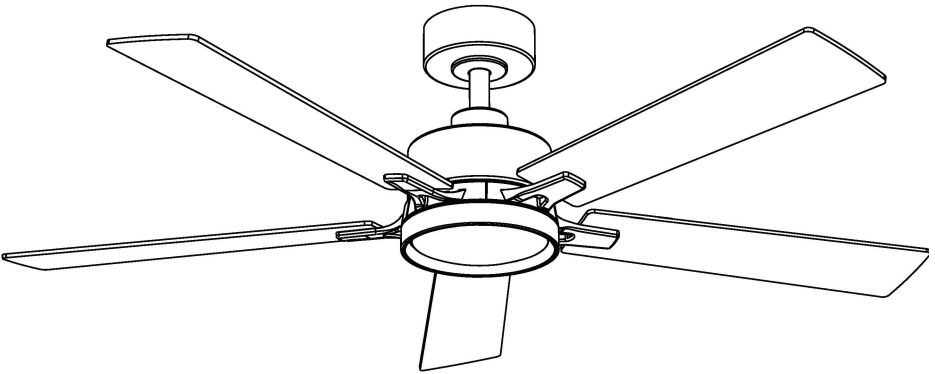

WARNING!!!


To avoid fire, shock and serious personal injury, follow these instructions.

1. Read your user manual and safety information before installing your new fan. Review the accompanying assembly diagrams.
2. Before servicing or cleaning the unit, switch off the power at the service panel and lock it to prevent accidental power restoration. If the service disconnecting means cannot be locked, securely fasten a warning device, such as a tag, to the service panel.
3. Exercise caution around the fan and its blades when clearing, repairing, or working near it. Always turn off the power to the ceiling fan before performing any maintenance
4. Do not insert anything into the fan blades while the fan is in operation.
5. This appliance is not intended for use by young children or individuals with disabilities without supervision. Young children should be supervised to ensure they do not play with the appliance.
6. Before installing your ceiling fan, refer to the section on the proper method of wiring your fan. If you feel you lack sufficient wiring knowledge or experience, it is recommended to have your fan installed by a licensed electrician.


Tools May Required




Ladder

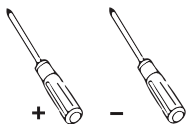

Screwdriver

 

Wire Strippers

 

Tape



Goggles

Fan Components

NOTE: Place the parts from the loose parts bags in a small container to keep them from being lost. If any parts are missing contact us.

- — Mounting bracket (1)
- — Receiver (1)
- — Canopy cover (1)
- — Downrod (2)
- — Magnetic deco cover (1)
- — Coupling cover (1)
- — Fan motor host (1)
- — Fan blade (5)
- — Blade arm (5)
- — Lamp body (1)
- — Lampshade (1)

Remote controller (1)

(A) 2 Expansion screws	(B) 2 J-box screws	(C) 4 Washers	(D) 4 Self-tapping screws	(E) 15+1 spare Blade screws
(F) 15+1 spare Red washers	(G) 10+1 spare Blade arm screws	(H) 3 Wire connector	(I) 2+1 Balance kit	

Energy-Saving Usage

Ceiling fan performance and energy savings rely heavily on the proper installation and use of the ceiling fan. Here are a few tips to ensure efficient product performance.

Choosing The Appropriate Mounting Location

Ceiling fans should be installed or mounted in the middle of the room and positioned at least 7 feet above the floor and 18 inches away from the walls.

If the ceiling height allows, it is recommended to install the fan 7~9 feet above the floor to achieve optimal airflow.

Turn Off When Not In The Room

If the room is unoccupied, turn off the ceiling fan to conserve energy.


Using The Ceiling Fan Year Round

Summer Season: Use the ceiling fan in the counterclockwise direction. The airflow created by the ceiling fan produces a wind-chill effect, making you feel cooler. Select a fan speed that provides a comfortable breeze; lower speeds consume less energy.


Winter Season: Reverse the motor and operate the ceiling fan at a low speed in the clockwise direction. This produces a gentle updraft, which pushes the warm air near the ceiling down into the occupied space. Remember to adjust your thermostat when using your ceiling fan. This simple step can lead to additional energy and cost savings.

Installation

1

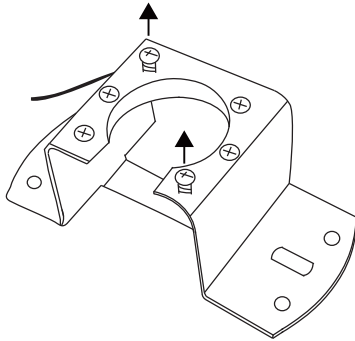


2

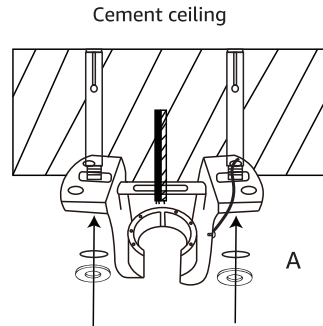


- Unscrew the two diagonal screws on the mounting bracket 2~3 circles, and ensure that them remains securely fixed to the bracket.
 - Mount the bracket onto the ceiling and secure it using appropriate accessory screws based on the type of ceiling material.
- Cement ceiling: Drill a hole in the cement ceiling, then use expansion screws to fix it.

3

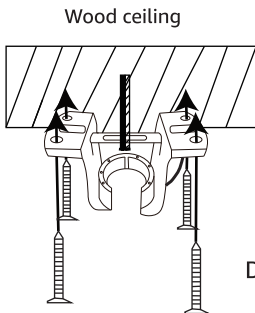


4

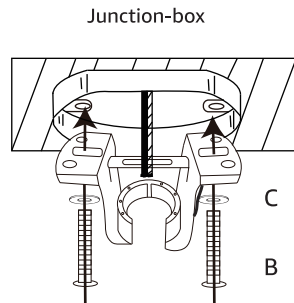


- Wood ceiling: Use self-tapping screws to drive into the wooden ceiling.
- Junction box: Use j-box screw and washer to fix the bracket to the ceiling.

5


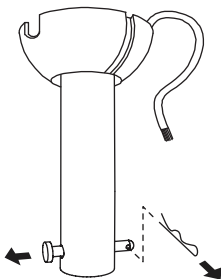


6


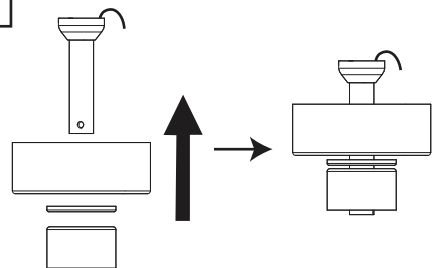


- Take out the downrod pin of the downrod assembly.(If it is necessary to replace the downrod, please refer to the last page)
- Thread the canopy cover, magnetic deco cover, and coupling cover onto the downrod in the order listed.



Installation

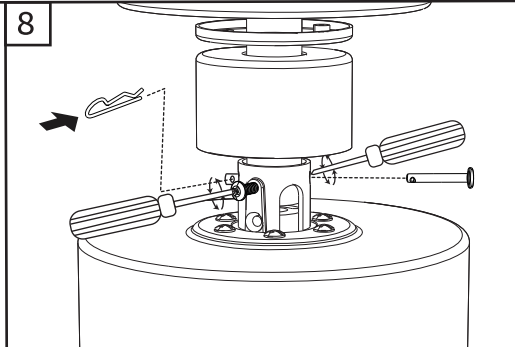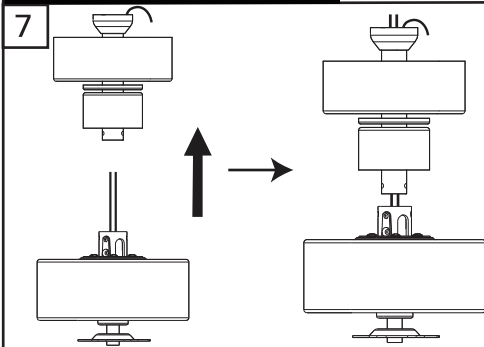

- Thread the wires of the fan motor host through the downrod.
- Insert the downrod into the motor host and secure it with the pin, then tighten the two screws on the yoke.

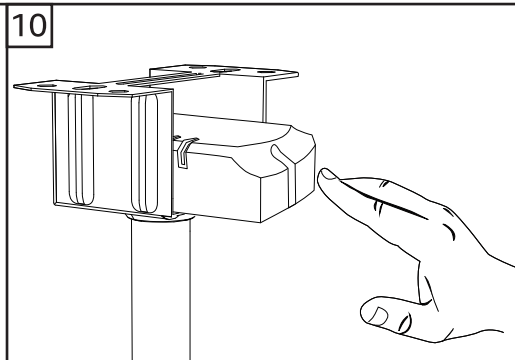
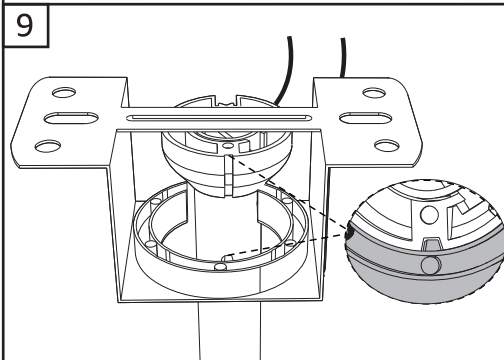


- Hang the downrod onto the bracket, ensuring that the two slots align.
- Place the receiver on the bracket.

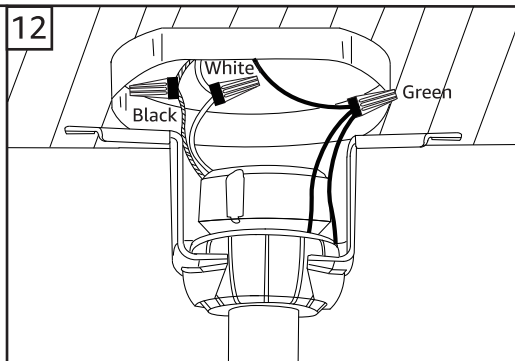
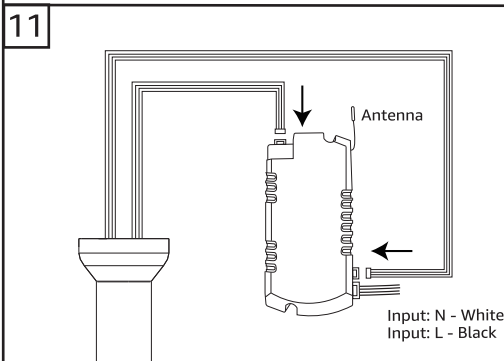


- Connect the wires between the receiver and the fan motor host to the diagram.
- Wiring:
Connect the "Neutral wire" (white wire) from ceiling to the white wire.
Connect the "Live wire" (black wire) from ceiling to the black wire.
Connect the "Ground wire" (green or yellow/green or bare) from ceiling to the green wire.



Installation

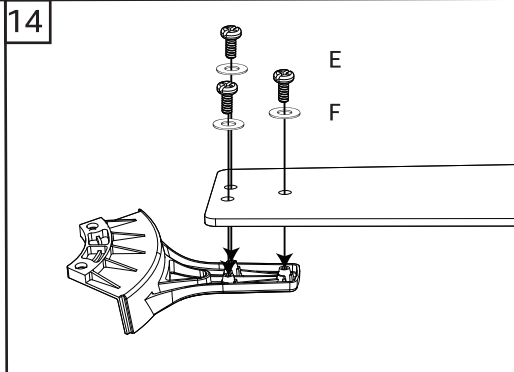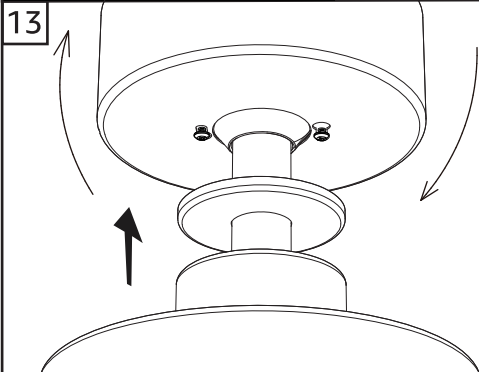

- Push the canopy cover upward, align it with the two screws from step one, rotate and tighten the screws to secure canopy cover. Then, slide the magnetic deco cover upward.
- Assemble the fan blade to the blade arm using three blade screws and three red spacers. (Repeating for all remaining blades)

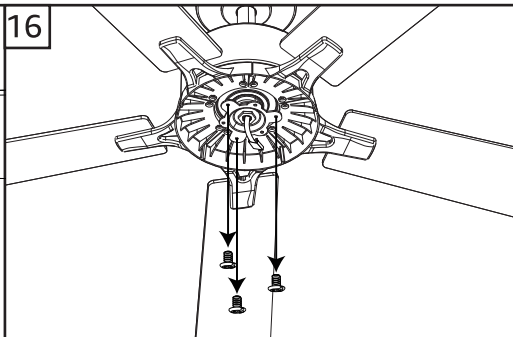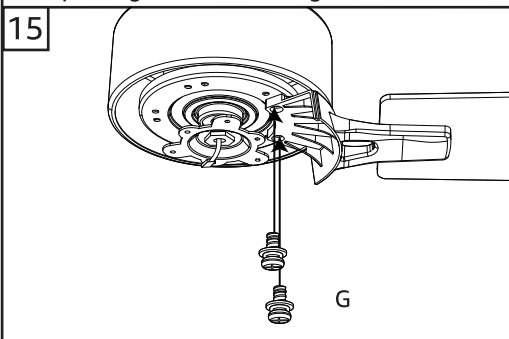


- Secure the blade arm to the motor using the blade arm screws.(Repeating for all remaining)
- Remove the three pre-installed light panel screws from the motor.

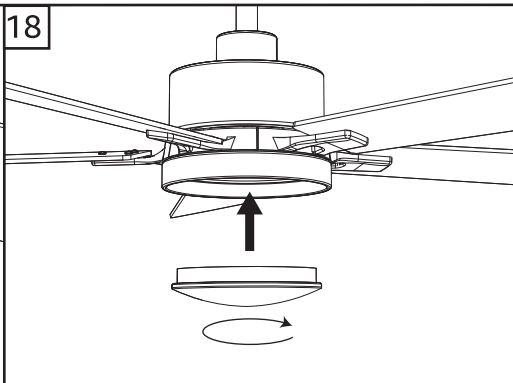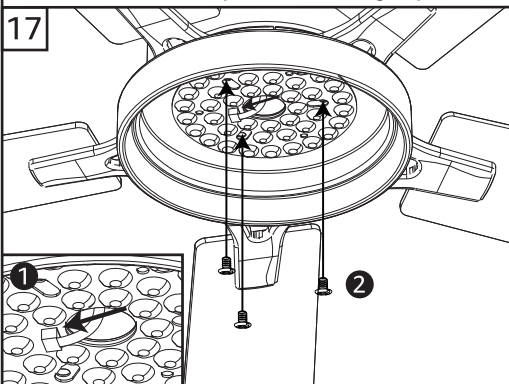

- First,after pushing the lamp body upward and routing the wires through it, connect the LED board wire connector. Then,Secure the lamp body to the motor using the three screws from step 16.
- Locate the locking point and secure the lampshade by rotating it .

Remote Control

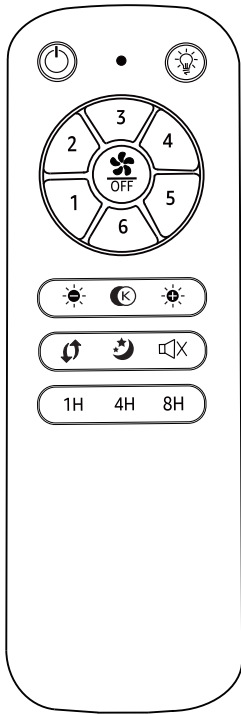

All off
(Press and hold to pair)



Light on/off

1-6

Fan speed



Fan on/off



Brightness -



Change color temperature



Brightness +



Forward/reverse



Night light




Remote controller mute

1H/4H/8H

All off after 1H/4H/8H

Attach wall plate using the two screws provided.

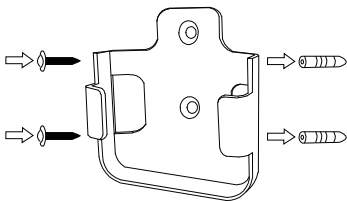

To operate the fan, please install 2 AAA batteries (included) in the handheld remote control. If not used for extended periods of time, remove the batteries to prevent damage to the remote control. Store the remote away from excessive temperatures and humidity.


Pairing method: (single/multiple fans)

The remote control transmitter can be used to control multiple receivers.

1. For the ceiling fan you want to pair, turn the main power switch off for at least 60 seconds.
2. Power on, press and hold the  button immediately (light will flash or beep sound).
3. If the pairing process is unsuccessful, please repeat the above steps.

APP Control

NOTE: For iPhone users, you can search for APP in the AppStore. For Android users, please download app. (Please enable Bluetooth and pair the fan with app to control it!)

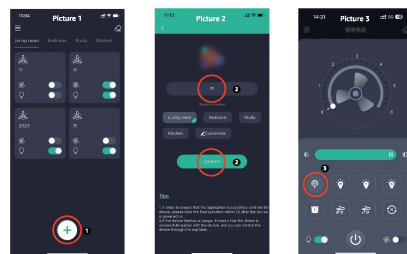

Turn on the fan's power wall switch, once the light is on, press the pairing button within 5s. When the fan light flashes twice, it indicates that the fan has been successfully paired with the phone and can now be controlled through the phone.



Slide to change the fan speed



Slide to change the brightness of the light



Quick switch for "Natural" light color



Quick switch for "Yellow" light color



Quick switch for "White" light color



Not available for this model



Timer the fan



Natural wind: fan speed will change automatically when use this function



Not available for this model



Night light (10% brightness in neutral white)



Not available for this model



Fan moves forwards



Fan moves reversely




Not available for this model




Light off/on



Fan off/on

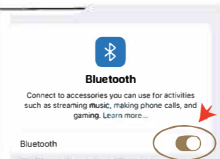

 
1. Ensure Bluetooth is enabled on your mobile device.



2. Make sure you allow this app to access Bluetooth.

(For iPhone users, Android users can ignore this step.)
Method 1: Click "Allow" when opening the app for the first time.

Method 2: Go to your phone's settings, find the app, and enable Bluetooth access.

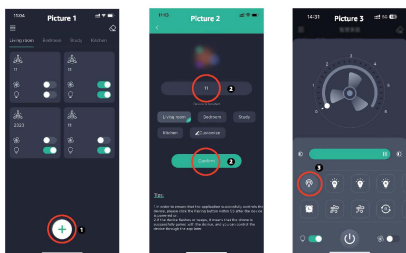

Picture 1

3. Enter the app page and click the plus sign below (Add group).

Picture 2

4. Enter any name, then click Confirm.


Picture 3

5. Turn on the fan's power wall switch, once the light is on, press the pairing button within 5s. The fan light will flash twice to indicate successful pairing.

Troubleshooting

PROBLEM	SUGGESTED REMEDY
If fan does not start	1. Check main and branch circuit fuses or circuit breakers. 2. Make sure that the wall control is turned "ON" 3. Check line wire connections to fan and switch wire connections in switch housing. CAUTION: Make sure main power is turned off. 4. Make sure battery has power, change battery(2*AAA) to try again. 5. The remote controller is not paired, check Page 7 to pair. 6. The motor or receiver or remote controller is fault, contact our customer service.
If fan sounds noisy	1. Make sure all screws in motor housing are snug. (not over tightened) 2. Make sure the screws which attach the fan blade bracket to the motor are tight. 3. Make sure the blade is correct installed, "UP" side up. 4. Too close to the wall, make sure the blades at least 3ft to the wall. 5. Make sure wire connectors in switch housing are not rattling against each other or against the interior wall of the switch housing. CAUTION: Make sure main power is turned off before entering switch housing. 6. If using an optional ceiling fan lightkit, make sure the screws securing the lampshade tight. 7. Some fan motors are sensitive to signals from Solid State variable speed controls. DO NOT USE a Solid State variable speed control. 8. Allow "break-in" period of 24 hours. Most noises associated with a new fan will disappear after this period.
If fan wobbles	All blades are weighed and grouped by weight. The following procedures should eliminate most of the wobble. Check for wobble after each step. 1. Check that all blades are screwed firmly into motor housing. 2. Make sure that canopy and mounting bracket are tightened securely to ceiling junction box and junction box is mounted firmly to ceiling joist. 3. Make sure the ball head into the slot. 4. Make sure the downrod is well fixed by screws 5. Interchanging two adjacent blades could redistribute the weight and possibly result in smoother operation.

Troubleshooting

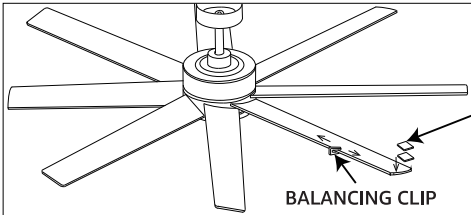PROBLEM	SUGGESTED REMEDY
If fan wobbles	6. The balancing kit should only be used if there is an unacceptable amount of fan wobble after completing all the steps: <u>How to use balancing kit:</u> (1) Turn the fan on and set the speed control setting to a speed at which the wobble is the greatest. (2) Turn off the fan and allow it to come to a complete stop. Select one blade and place the balance clip on it, halfway between the blade holder and the blade tip on the trailing edge of the blade. (3) Turn the fan on. Note whether the wobble has increased or decreased. Turn the fan off, move the clip to another blade, and retest. Repeat this procedure on all blades, noting the blade on which the greatest improvement is achieved. (4) Move the clip back to the blade that showed the greatest improvement. Move the clip inward and outward on this blade and operate the fan to find the position where the clip gives the greatest improvement. (5) Remove the clip and install a balancing weight to the top of the blade along the centerline, near the point where the clip was positioned. (6) If the fan wobble problem has not been corrected, you can try to improve the balancing further by using the balancing clip and additional weights.  The diagram shows a top-down view of a ceiling fan with five blades. One blade has a small arrow pointing to a 'BALANCING CLIP' attached to its trailing edge. Another arrow points to a small weight on the top of the same blade, labeled 'WEIGHT BALANCING'.
If light does not work or flickering	1. Check for loose or disconnected wires in fan switch housing. 2. Check the wiring of receiver to the light kit. 3. Check for loose or disconnected wires in light kit, make sure connector is correct inserted. 4. Check for faulty light bulbs. (light bulb version only) 5. There is too many ceiling fans with different control system in the same area, shut down other ceiling fansto check if still flickering. CAUTION: Make sure main circuit is turned off before entering switch housing.

Customer Service

30-Days Full Refund Guarantee

If you are not completely satisfied or the item isn't what you expected, just tell us within 30 days. We will give you a full refund unconditionally.

Friendly Reminder

It's better to contact us than leaving a negative shopping experience. Nothing is more important than your satisfaction, and we will do our best to serve you.

Quick Response Within 12 Hours

You can contact us without any hesitation at any time of the day, and we will reply to you within 12 hours. (It would be appreciated if you could provide us with a video or pictures, if available)

2-Year Warranty


Your fan light comes with a two-year warranty. If a malfunction occurs due to product quality issues, we will assist in diagnosing the problem and provide replacement parts free of charge to ensure your fan light resumes normal operation.

Contact Information



: You can contact us by sending an email to

Replace The Downrod

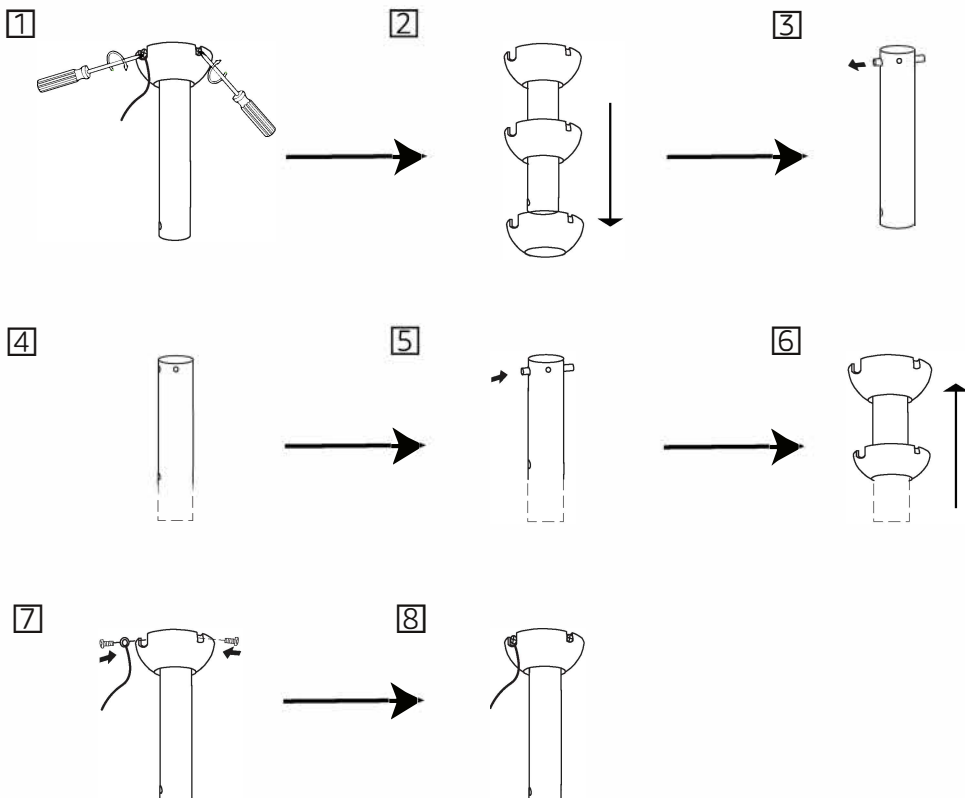

WARNING

Fan fall hazard

To prevent serious injury or death:

- Always follow the downrod assembly instructions exactly.
- Verify the downrod is assembled correctly by firmly pulling on the hanger ball.
- Pin must be reinserted to secure downrod assembly

