

ASSEMBLY INSTRUCTIONS

ITEM : PC 303

Please read instructions carefully



Remove all wrapping materials, staples and packing straps from the carton. Refer to Parts List and Hardware List and ensure they are complete before you start assembling. Place all wooden parts on a clean, flat and soft surface (e.g carpet or rug) to prevent parts from being scratched.


CAUTIONS: 1) DO NOT FULLY TIGHTEN BOLTS AND NUTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.

2) DO NOT OVER-TIGHTEN BOLTS AND NUTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.

3) KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.



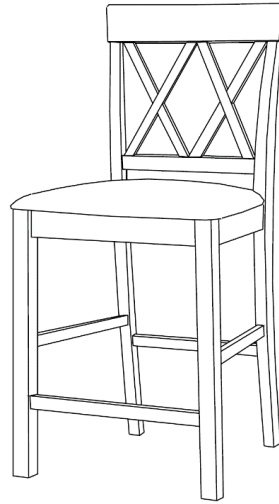

 

PARTS LIST (FOR 2 NOS. OF CHAIR)

NO.	COMPONENT	QTY.
P1	CHAIR BACK	2
P2	CHAIR SEAT	2
P3	FRONT LEGS with sticker 	2
P4	FRONT LEGS	2
P5	SIDE STRETCHER with sticker 	2




COMPLETE ASSEMBLY


HARDWARE LIST (FOR 2 NOS. OF CHAIR)

NO.	DESCRIPTION	QTY.
H1	JCBC BOLT M6 X 35MM 	4
H2	JCBC BOLT M6 X 80MM 	16
H3	SPRING WASHER 	20
H4	FLAT WASHER 	20
H5	SCREW M4 X 38MM 	12
H6	ALLEN KEY 	1


STEP 1

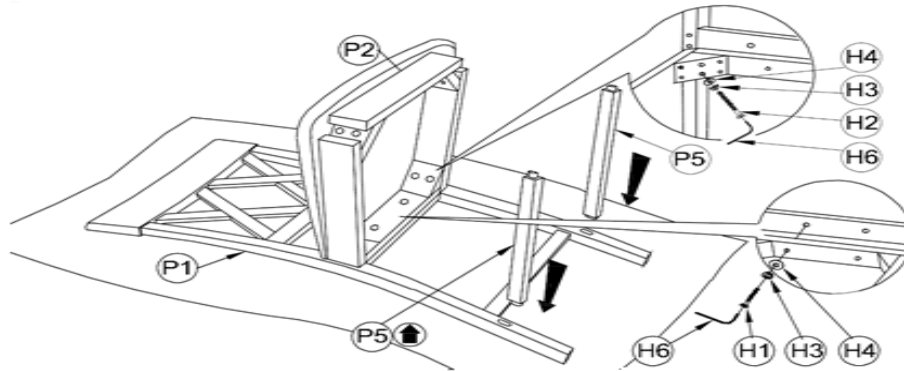

STEP 2

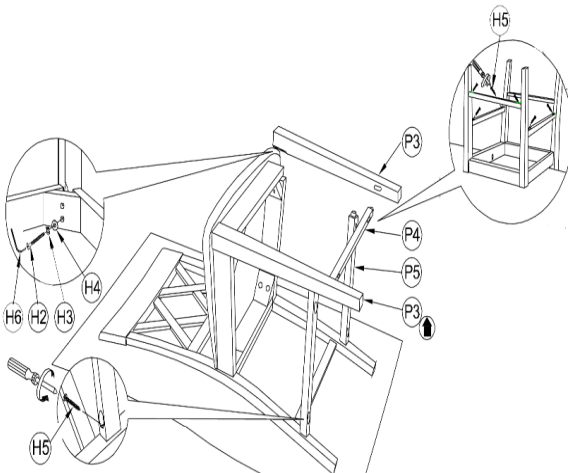

STEP 3

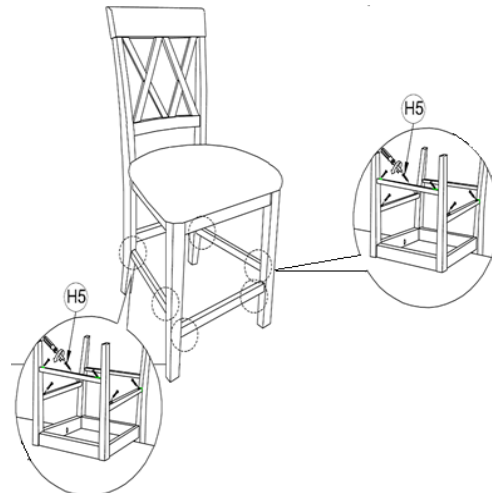

CARE AND MAINTENANCE

SAFETY - To avoid any risk of suffocation to children or animals, dispose off the plastic bags immediately.

CLEANING - Clean with damp cloth and mild detergent. Do not use bleach or abrasive products.

FITTINGS - Tighten bolts and nuts from time to time to ensure all parts of product are securely fitted.