

Remote Control Instruction

Thank you for choosing our product. Please read the instructions carefully before installation and keep it available for future maintenance or reference.

Content

Installation preparation

01. Remote control installation	01
02. Battery installation	01

Usage instruction

 
01. Remote control installation	02
02. Rear/Front cleaning operation	03
03. Drying/Dryer temperature	04
04. Water volume adjustment	04
05. Spray nozzle position adjustment	04
06. Energy saver	04
07. Water temperature adjustment	05
08. Seat temperature adjustment	05
09. Night light	05
10. Full flush/Half flush	05
11. Water tank flush volume adjustment	06
12. Other operations	06

Installation Preparation

Remote control installation


Remote control hanger installation 1 :

1. Drill a 6 mm diameter hole in the wall to a depth of about 35 mm.
2. Tear off the double-sided adhesive sticker on the back of the hanger.
3. Install the expansion pipe into the wall hole, and align it with the hanger hole. Attach the double-sided adhesive sticker on the back of the hanger to the wall, lock the screw, and tear off the double-sided adhesive sticker on the back of the patch and stick it on.

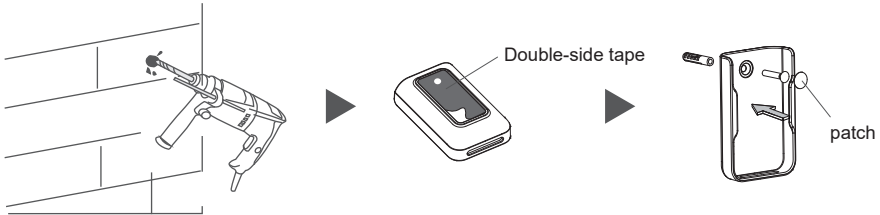


Remote control hanger installation 2 :

 1. Clean and wipe dry the pre- installed area of the remote control hanger on the wall.
2. Tear off the double-sided adhesive sticker on the back of the hanger.
3. Stick to the wall vertically, tear off the double-sided adhesive sticker on the back of the patch and stick it on.

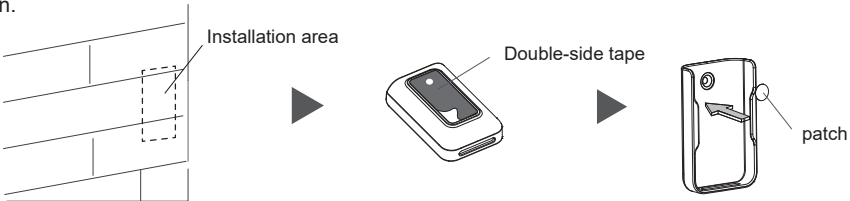

Battery installation:

 
1. Install the new battery into the remote control and cover the battery cover.
2. Put the remote control in the hanger.

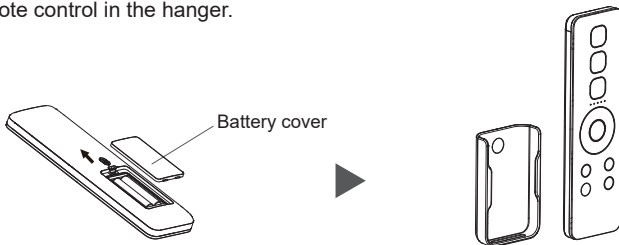

- Notice:**
1. When determining the installation position, it is necessary to ensure that the remote control can be reached by hand when the person is sitting on the seat.
 2. It is forbidden to install and use the product in the bathroom and other wet places. And do not put it in the place where it is easy to be drenched by water.

Installation Preparation

 Remote control installation

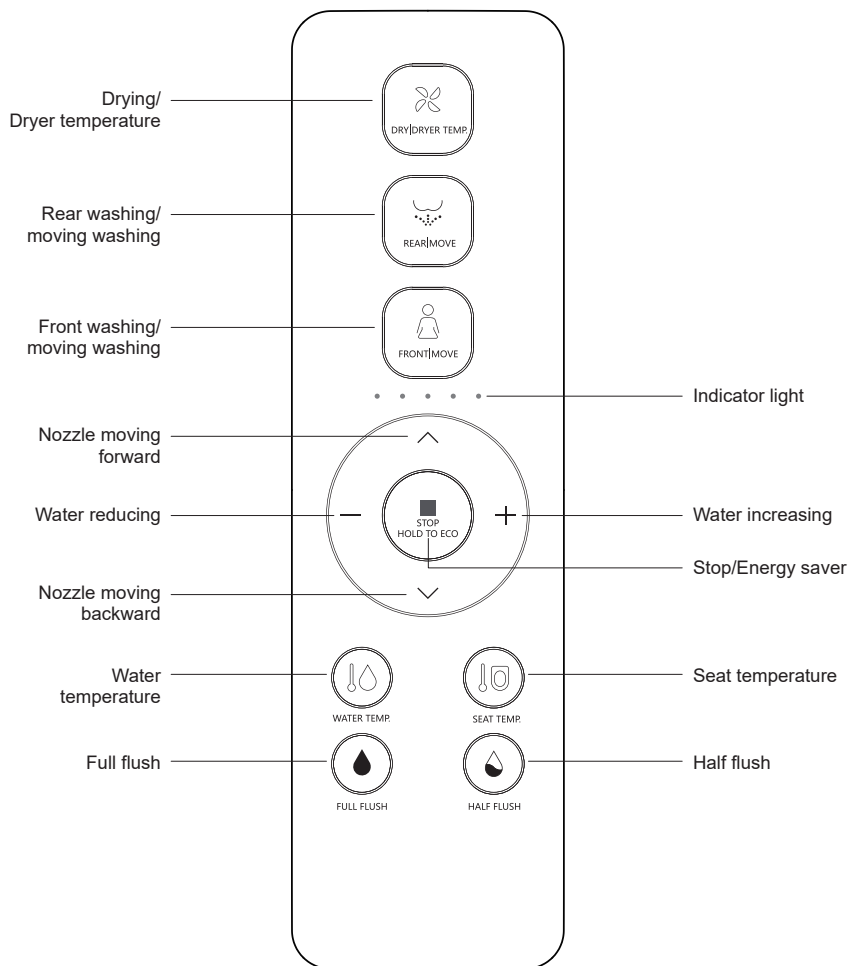


 

Usage Instruction

Notice :

- The body should touch the seat and the buzzer rings “CLICK”, which means functions of front cleaning, rear cleaning and drying are in operation.
- Please stay backward when sitting on the seat. So that the cleansing position can be easily aligned and there will be no splash.
- The nozzle will continue to spray for 1-2 seconds after user stands up during spray operation, so please press “STOP” button before standing up.




REAR|MOVE





· Press “” button, the indicator light is on showing current water temperature level, it starts rear cleaning; Press again “” button to shift to moving cleaning (nozzle moves forward and backward to expand cleaning area). The cleaning will last for a circle and stop automatically, while it will stop immediately if the user presses “” button.


FRONT|MOVE



· Press “” button, the indicator light is on showing current water temperature level, it starts front cleaning; Press again “” button to shift to moving cleaning (nozzle moves forward and backward to expand cleaning area). The cleaning will last for a circle and stop automatically, while it will stop immediately if the user presses “” button.

Pulse flushing function (This function only applies to product with pulse cleaning mode.)

 · During front/rear cleaning, long press “” or “” button to turn on/off pulse cleaning mode.

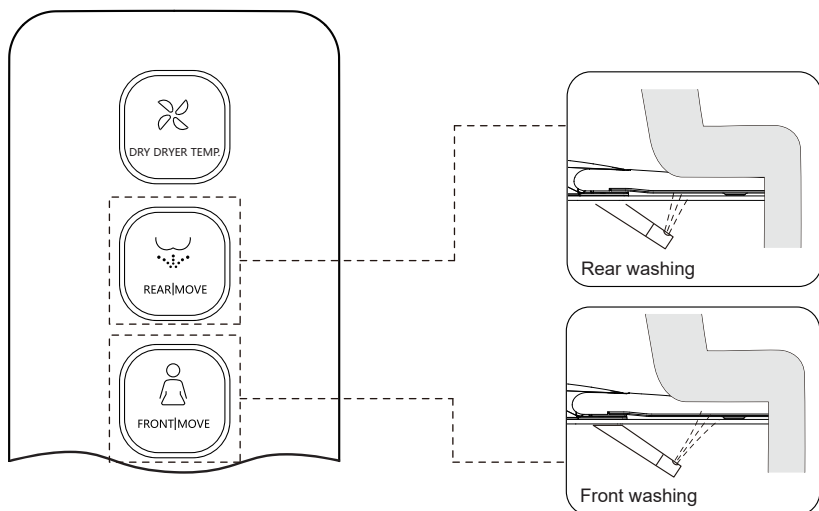


Usage Instruction


DRY|DRYER TEMP (Only applicable to implement with drying function)



 ① Press the "🌸" button, the indicator light will light up, showing the current air temperature range. It will stop drying automatically after a cycle or after the human body leaves the seat.

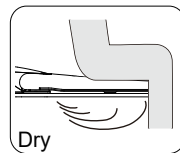

 ② In the process of drying, press the "🌸" button to adjust the air temperature, and the indicator light will light up to display the wind temperature range. When the indicator light is not on, it is 0 grade (normal temperature range), and the range adjustment mode is 0-5 grade in turn.




Water volume adjustment

- Press "+" or "-" button when it is under function of rear cleaning or front cleaning, the indicator light will be on showing current water volume level, adjust water volume by 3 levels.

Spray nozzle position adjustment

 - Press "∧" or "∨" button when it is under function of rear cleaning or front cleaning, the indicator light will be on showing current nozzle position, adjust nozzle position by 5 levels.

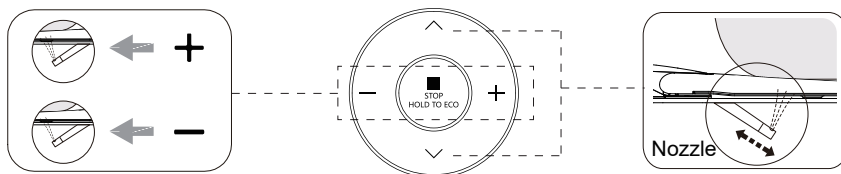

Energy saver



Long press "■" button to enter energy saving mode, long press "■" button again to exit energy saving mode.

Energy saving

Under energy saving mode, seat temperature is low (level 1) to achieve energy saving. (Note: If the seat temperature before energy saving is neutral, keep the neutral after energy saving)

Remark

 
Energy saving mode will be suspended and goes to function mode if someone uses the seat in the middle of energy saving. The seat starts to heat immediately (without closing the seat temperature), and the energy saving mode is restored after the human body leaves the seat.

Usage Instruction

Water temperature adjustment



WATER TEMP.

Short press the “” button to adjust the water temperature. The indicator will show the water temperature level if it's on. When the indicator is off, the water level is 0. Short press this button to adjust water temperature level from 0 to 5 in cycle.



Normal
temperature



Grade 1



Grade 2



Grade 3



Grade 4




Grade 5

Seat temperature adjustment



SEAT TEMP.

Short press the “” button to adjust the seat temperature. The indicator will show the seat temperature level if it's on. When the indicator is off, the seat level is 0. Short press this button to adjust seat temperature level from 0 to 5 in cycle.



Normal
temperature



Grade 1



Grade 2



Grade 3






Grade 4



Grade 5




Night light (Only for toilet with night light function)

- Night light adjustment: Long press “” button to turn on/turn off night light.
- Smart mode: Long press “” button to enter into intelligent mode (Night light will be on or off by detecting the lightness of surroundings). If the product is on intelligent mode, long press “” button to exit intelligent mode. (Night light factory default setting is intelligent mode)

Half flush/Full flush (Only for the toilet with auto flush function)



 
HALF FLUSH

- Short press “” button, the toilet starts full flushing.
- Short press “” button, the toilet starts half flushing.
- Long press “” button to turn on/off auto flush function.



FULL FLUSH



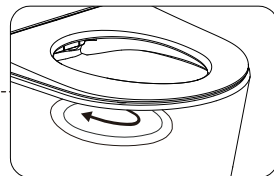

When the auto flush function is turned on, toilet will automatically flush after detecting user leaving the seat.



Usage Instruction

Water tank flush volume adjustment



(Only for toilets with water tank flush volume adjustment function)

- Press and hold the "  " button, and press the water volume " + " button to enter the full flush volume plus 1 gear adjustment;
- Press and hold the "  " button, and press the water volume " - " button to enter the full flush volume reduce 1 gear adjustment;
- Press and hold the "  " button, and press the water volume " + " button to enter the half flush volume plus 1 gear adjustment;
- Press and hold the "  " button, and press the water volume " - " button to enter the half flush volume reduce 1 gear adjustment.


 


Other operations

 
User code

· Radio frequency remote control



- ① Unplug to cut off the power supply of the toilet
- ② First press "  " button, then press "  " button, the indicator light will flash.
- ③ Plug in the toilet and press the "reset" button.
- ④ The indicator stops flash and is on for 2s, means the remote control and the toilet are matched successfully. The self-inspection of main unit is finished when it beeps once. Then the remote control is ready for use.

· IR remote control

- ① Plug in the toilet. It will execute self-inspection. When finished, it beeps once.
- ② First press "  " button, then press "  " button, the indicator light will flash.
- ③ Press the Pressure " + " or " - " button to select user 1-9 (as shown the figure below). The indicator light displays the corresponding user code and flashes.
- ④ Press "  " button, then press "  " button. The main unit beeps once, means the remote control and the toilet are matched successfully.




Auto deodorization

 
- Press and hold the "  " button and press the "  " button to turn on/off auto deodorization function. While the auto deodorization function is on, when it's detected that the user is seated, it'll start deodorizing and stops when user leaves. When warm air is working on, deodorization function is off. (This function only applies to product with auto deodorization function. This function is set to on by default.)

Usage Instruction


Quite mode

- Press and hold the " ■ " button and press the "  " button to turn on/off quite mode.


Sterilization function

- When user is not seated and cleaning/drying is off, long press "" button to turn on plasma sterilization function. This function will stop automatically after 2 hours. During this mode, if any other button is pressed or user is seated, it'll stop automatically. (This function only applies to product with sterilization function.)

Automatic pre-wetting button

- Press and hold the " ■ " button and press the "  " button to turn on or off the automatic pre-wetting function. After the automatic pre-wetting function is turned on, the pre-wetting function is performed when the user is detected to be seated. (This button combination is only for toilets with automatic pre-wetting function.)



Foot sense switch

- Long press "  " button to turn the foot sense function on or off. In the seated status, foot sense function is invalid. (This function only applies to product with foot sense function.)



Foot-sensing indicator light

- Press " ■ " button first, and then press "  " button to turn on/off the foot-sensing indicator light. (This combination button only applies to the toilet with the foot-sensing indicator.)

APP code matching

 
- Hold down the buttons "  " and "  " simultaneously to start APP code matching. (This button combination only applies to product with APP)

Flush by water tank with electronic cover

- Hold down the buttons "  " and "  " simultaneously to start the flush by water tank with electronic cover. (This button combination is only for the toilets with flush by water tank with electronic cover.)

Tips:

- The buzzer will sound " BEEP " when the user presses one button which means the main unit receives the signal and conduct the operation accordingly. If the buzzer doesn't sound, it means the main unit doesn't receive the signal, please adjust the remote control direction and repress the button.
- In case of power cut during nozzle spray operation, the nozzle cannot go back to place, please wait until the power is reset. In case of a power cut for a long period, please push the nozzle softly back by hand. Do not push hard, to avoid damage to nozzle and electrical machine.

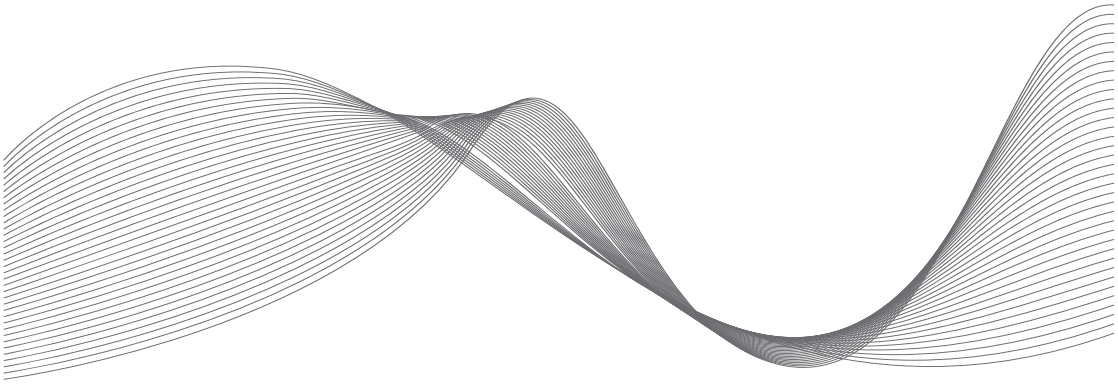

The picture of product may not entirely consistent with actual appearance and color because of products improvement, please in kind prevail.