

Remote Control Instructions

■ Model: EP-E18PRO / EP-E13PRO

Thank you for choosing our product. Please read the instructions carefully before installation and keep it available for future maintenance or reference.

E-mail: service@eplo.com

Content

Installation preparation

01. Remote control installation	01
02. Battery installation	01

Usage instruction

 
01. Remote control illustration	02
02. Rear/Front washing	03
03. Drying/Dryer temperature	04
04. Water volume adjustment	04
05. Nozzle position adjustment	04
06. Energy saving	04
07. Water temperature adjustment	05
08. Seat temperature adjustment	05
09. Night light	05
10. Full flush/Half flush	05
11. Auto lid open/close	06
12. Foam setting	06
13. User code	06
14. Other operations	07

Installation Preparation

Remote control installation

 
Remote control holder installation 1:

1. Drill a 6 mm diameter hole in the wall to a depth of about 35 mm.
2. Remove the double-sided adhesive tape on the back of the holder.
3. Install an anchor into the hole, stick the holder to the wall and secure with screws and then stick the patch with tape.

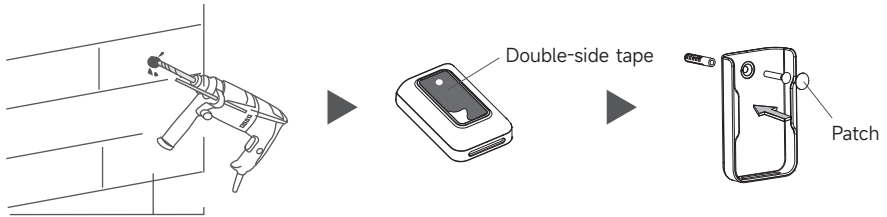

 
Remote control holder installation 2:

1. Clean and dry the pre-installation area of the holder.
2. Remove the double-sided adhesive tape on the back of the holder.
3. Stick the holder to the wall vertically and then stick the patch with tape.

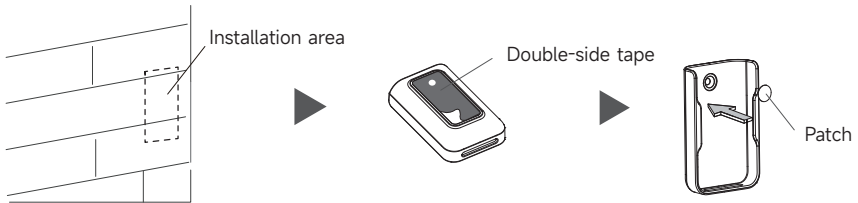

Battery installation:

1. Insert batteries into the remote control.
2. Put the remote control to the holder.

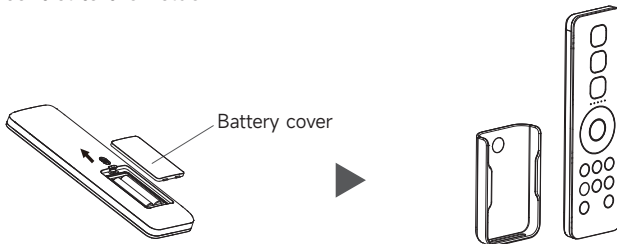 


Notice:

1. Please ensure the remote control is within reach when a person on the seat.
2. Do not install and use the product in damp places such as a shower room.
3. Do not place the product in a place where it is easily exposed to water.

Installation Preparation

Remote control illustration

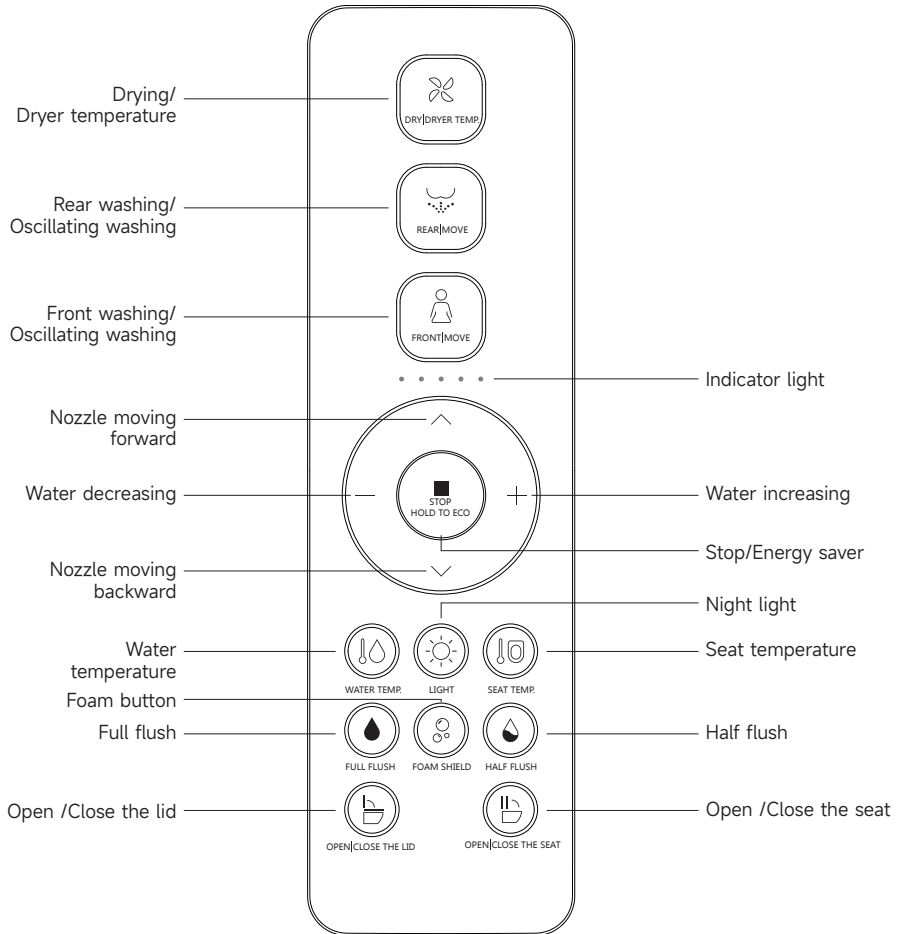

Usage Instruction

Notice :

- Only when the user is seated and the buzzer beeps can the functions of front/rear washing and drying be activated.
- Please sit backward on the seat for correct washing position and to avoid splashing.
- The nozzle will continue to spray for 1-2 seconds after user stands up during washing, so please press "STOP" button before standing up.

REAR|MOVE

 


- Press " " button, the indicator light is on showing current water temperature level, it starts rear washing; Press again " " button to shift to oscillating washing (nozzle moves forward and backward to expand washing area). The washing will stop automatically after one cycle, while it will stop immediately if the user presses " ■ " button.

FRONT|MOVE




 
- Press " " button, the indicator light is on showing current water temperature level, it starts front washing; Press again " " button to shift to oscillating washing (nozzle moves forward and backward to expand washing area). The washing will stop automatically after one cycle, while it will stop immediately if the user presses " ■ " button.

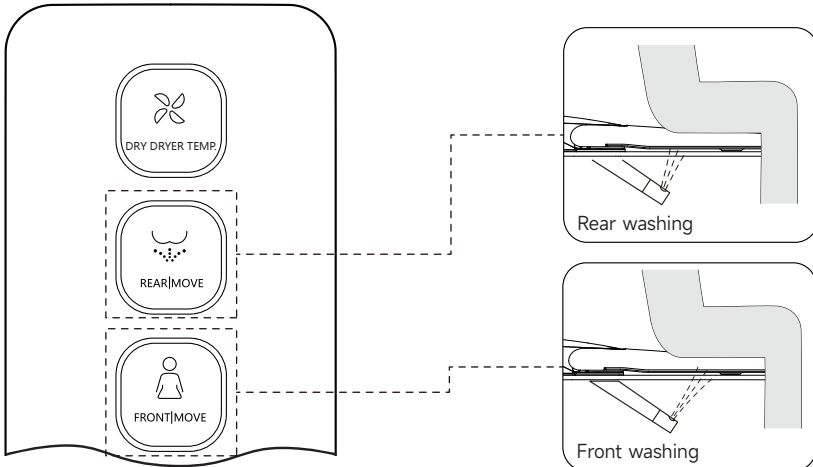 


DRY|DRYER TEMP



① Press "  " button, the indicator is on, showing the current air temperature level. It will stop drying automatically after one cycle or after leaving.

② Under drying, press "  " button to adjust the air temperature between 0-5 level, and the indicator light is on showing the air temperature level. When the indicator light is off, the temperature is at level 0 (room temperature).

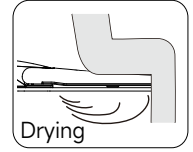

○ ○ ○ ○ ○

Room
temperature

● ○ ○ ○ ○

Level 1

● ● ○ ○ ○

Level 2

● ● ● ○ ○

Level 3

● ● ● ● ○

Level 4

● ● ● ● ●

 
 
 
Level 5

Water volume adjustment

· Press "+" or "-" button when it is under function of rear washing or front washing, the indicator light is on showing current water volume level, and water volume can be adjusted.



Nozzle position adjustment

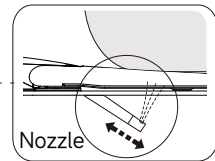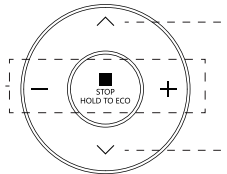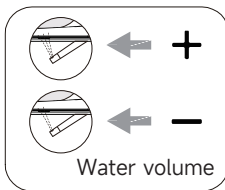· Press "A" or "V" button when it is under function of rear washing or front washing, the indicator light is on showing current nozzle position, and nozzle position can be adjusted in 5 levels.



Energy saving



Long press "  " button to enter energy saving mode, long press "  " button again to exit energy saving mode.

Under energy saving mode, seat temperature is set to Level 1 for energy saving. (Note: If the seat temperature before energy saving is neutral, then it will be neutral as well.)


Remark:







Energy saving mode will be suspended and the product will enter functional mode if the seat is used. The seat starts to heat immediately (without turning off the seat temperature), and the energy saving mode is restored once the seat is no longer being used.

Water temperature adjustment

 


WATER TEMP.


Short press "  " button to adjust the water temperature between 0-5 level. The indicator light is on showing current water temperature level. When the indicator is off, the temperature is at level 0 (room temperature).


 Room temperature
 Level 1
 Level 2
 Level 3
 Level 4
 Level 5

Seat temperature adjustment



SEAT TEMP.

 


Short press "  " button to adjust the seat temperature between 0-5 level. The indicator light is on showing current seat temperature level. When the indicator is off, the temperature is at level 0 (room temperature).

 Room temperature
 Level 1
 Level 2
 Level 3
 Level 4
 Level 5

Night light






LIGHT

- Night light adjustment: Short press "  " button to turn on/turn off night light.
- Intelligent mode: Long press "  " button to enter into intelligent mode (Night light will be on or off depending on the surrounding light.). If the product is on intelligent mode, short press "  " button to exit intelligent mode. (Factory setting: intelligent mode)

Half flush/Full flush



 
 
HALF FLUSH

- Short press "  " button, the toilet starts half flushing.
- Short press "  " button, the toilet starts full flushing.
- Long press "  " button to turn on/off auto flush function.



FULL FLUSH


When the auto flush function is turned on, toilet will automatically flush after detecting user leaving the seat.

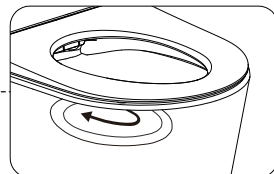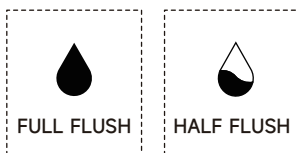



Auto lid open/close



OPEN/CLOSE THE LID

 

Short press "  " button, open or close the lid.

Short press "  " button, open or close the seat.

Long press "  " button to turn on/off auto lid open function.




OPEN/CLOSE THE SEAT


Press and hold "  " button and press "  " button to turn on/off auto lid close function.

 

Foam setting

 



FOAM SHIELD

① Short press "  " button to activate the foam shield function.

② Long press "  " button to turn on pumping quickly until the foam comes out and then release it . (Note: This operation is only used when the toilet has just been installed or the foam agent is used up, and the foam agent is added again. The use of the rest of the time will cause foam agent to be wasted.)




 
③ Press "  " button first, then press "  " button to turn on the automatic foaming function, and the buzzer will beep once.

④ Press "  " button again and press "  " button to turn off the automatic foaming function, and the buzzer will beep twice.

· After the automatic foaming function is on, when it is detected that the user is sitting, the foam shield function will be turned on automatically. (The automatic foaming function is turned off by default)

User code


· IR remote control

- ① Power on the toilet and the self-inspection starts. It beeps once when the self-inspection completes.
- ② Press and hold "  " button, then press "  " button, the indicator light will flash.
- ③ Press the Pressure " + " or " - " button to select user 1-9 (as shown below). The indicator light displays the corresponding user code and flashes.
- ④ Press "  " button, then press "  " button. The main unit beeps once, indicating that the remote control and the toilet are matched successfully.


●○○○○	○●○○○	○○●○○	○○○●○	○○○○●	●●○○○
User 1	User 2	User 3	User 4	User 5	User 6
○●●○○	○○●●○	○○○●●			
User 7	User 8	User 9			

Other operations


Quiet mode


- Press and hold the " ■ " button and press the "  " button to turn on/off quiet mode.

Automatic pre-wetting function

- Press and hold " ■ " button and press "  " button to turn on or off automatic pre-wetting function. After the automatic pre-wetting function is turned on, the pre-wetting function will be performed when the user is detected to be seated.

Auto deodorization


① Press " ■ " button, and press "  " button to turn on the auto deodorization function, and the buzzer will beep once.

② Press " ■ " button again, and press "  " button to turn off the auto deodorization function, and the buzzer will beep twice.

- Under auto deodorization, the deodorization function will be on when it is detected that the user is seated, and it will automatically stop when the user leaves the seat.

- Under drying, the deodorization function is turned off. (This button combination is only applicable to toilets with auto deodorization function, and the auto deodorization function is turned on by default when the power is on every time.)

Foot sensor function

- Long press "  " button to turn on/off foot sensor function. Foot sensor is deactivated when the user is seated.

Remark:

- The buzzer will "BEEP" once when the user presses one button indicating that the main unit receives the signal and conduct the operation accordingly. If the buzzer doesn't sound, it means the main unit doesn't receive the signal, please adjust the remote control direction and repress the button.
- In case of power cut during nozzle spraying, the wand cannot be retracted, please wait until the power is restored. In case of a power cut for a long period, please push the wand softly back by hand. Do not push hard, to avoid damage to wand and electrical machine.

EPLO[®]
WWW.EPLO.COM

WhatsApp



E-mail:service@eplo.com

The picture of product may not entirely consistent with actual appearance and color because of product improvements, please in kind prevail.