 


Colorful lighting speaker

DF-720

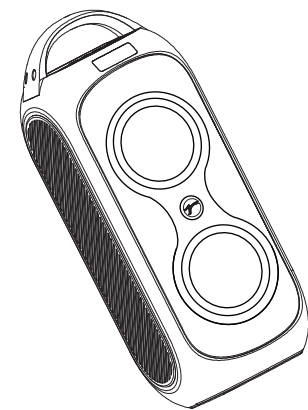

The instruction manual includes the product usage method and important precautions. When the charging light shows off, please unplug the charging cable. And it may not be able to charge. Please check and keep it properly.

 
Contents

- Guidelines for Safe Use-----01
- How to use your speaker-----02
- How to Charge Your speaker-----03
- Usage of Bluetooth/TF and other audio systems-----04
- Usage of USB flash drive-----05
- How to use the radio-----05
- Reminder-----05
- Specification parameters-----06

Thank you very much for your purchase this time. Please read this manual carefully and be sure to read the "Safety Usage Guidelines" before using it correctly. After completion of reading, please also keep this manual properly.

Guidelines for Safe Use

In order to prevent harm or damage to users and their surroundings, this manual contains instructions that you are expected to follow. For safe use of the product, please fully understand the relevant content.






Attention This symbol indicates that if the content is ignored, it is expected to cause damage to people or objects

- Please do not use in unstable places or conditions.
- Please do not use, install or store in places close to fire such as stoves.
- Please do not tie up the charging cable for use or place objects on it.
- Please do not operate or use with wet hands.
- Please do not subject the machine to strong impacts such as drops or collisions.
- Avoid placing the device in a place facing the sun or sunlight for a long time.
- It cannot be disassembled or modified.
- Please do not insert foreign objects into the ports or connectors of the product.
- Please do not let it fall into water, soak it in water, or leave it in the rain for a long time
- Please do not use diluents, gasoline, or alcohol to wipe the body.
- Please add a small amount of neutral cleaning solution to the water and use a hard cloth to wipe off stains
- Do not use if there is any abnormal odor, heat, discoloration, deformation, etc. during use or storage.
- Only for use by children and above, please do not place it in a place accessible to young children.
- Please unplug the USB charging cable when not in use for a long time.
- Please do not use or store the machine while it is in contact with oil or other substances.
- When disposing of waste, please follow the waste disposal instructions in various places.

We do not assume any responsibility for anything caused by incorrect usage methods. Please be informed* The LED inside the product cannot be replaced. Please be informed.

   How to use your speaker

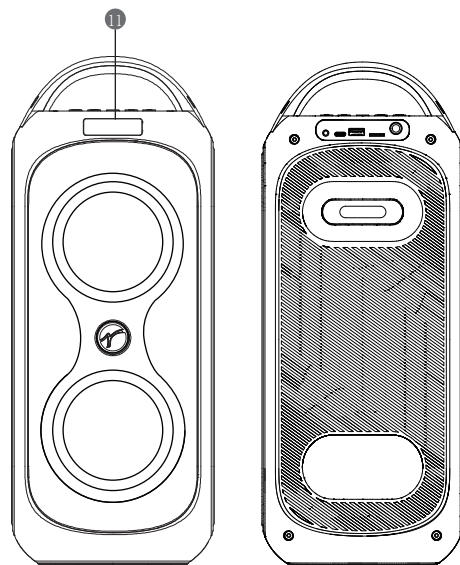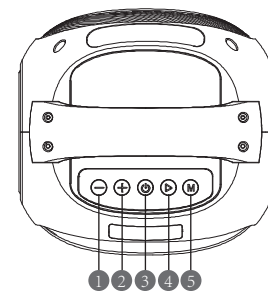

- 1 Bluetooth mode: Short press to decrease volume/long press to move to previous track
Radio mode: Short press to decrease volume, long press to switch to previous radio station
- 2 Bluetooth mode: Short press volume up/long press for next track
Radio mode: Short press to Volume Up/long press to switch to the next radio station
- 3 Long press to turn on/off, short press to switch color lighting effects
- 4 Bluetooth Mode: Short press to pause/play
When a device (phone) is connected: Press and hold to disconnect it
No device connection duration: Press to open TWS
TWS connection duration: Press to disconnect TWS connection
Radio mode: Short press to automatically search for radio stations
- 5 Short press to switch modes BT/FM/TF/USB/AUX (the corresponding mode will be displayed on the screen)
Long press to turn off and turn on the flash light
- 6 AUX port external 3.5mm audio signal cable
- 7 Type-C charging port
- 8 USB charging output/USB disk playback
- 9 TF card slot
- 10 Microphone interface
- 11 Display Screen

How to Charge Your Speaker

1. Use a 5V charging adapter
2. Insert the included Type-C charging cable into the input port of the device and connect the other end of the charger to the charging port. During the charging process, the charging indicator light on the charging port will turn red. After charging is completed, the charging indicator light will turn off.
3. After fully charged, unplug the charging cable.



- Attention**
- Do not use non-included chargers for charging
 - When using this device for the first time, please fully charge it.
 - When using a USB hub for charging, it may not charge properly. Please make sure to use the provided charger for charging, and do not use inferior chargers to charge the device. Charge in an environment with stable power supply.

It takes 4 hours to fully charge when the battery is depleted. When the charging light shows off, please unplug the charging cable.

Try not to use this device while charging. This will accelerate battery degradation and lead to battery damage.

Volume adjustment method

- Short press 1 to decrease the volume.
- Short press 2 to increase the volume. The volume can be adjusted between U-00 and U-30. In the case of U-00, it is silent.
- The volume can be adjusted in any mode.

How to use Bluetooth speaker

- Long press 3 to power on, press 5 "M" key to switch to "BT" mode.
When the display screen "BLUE" is flashing, turn on your phone's Bluetooth, find "DF-720", click and connect. When the device is in a connected state, "BLUE" will not flash.

Pause/Play

Short press 4 to pause or play

Switch to the previous track

Long press 1 "-" to play the previous song

Switch to the next track

Long press 2 "+" to play the next song

Long press the 1 button to disconnect the device from other devices via Bluetooth and put it in a waiting state. At this time, "BLUE" will continuously flash

TWS usage method

When two machines are not connected to any device, long press the 4 key on either machine to open the TWS pair (a prompt sound will be heard when opening TWS, and a prompt sound will also be heard after successful connection). (When TWS needs to be connected, both devices switch to Bluetooth mode, and either one opens TWS pairing to wait for the other Bluetooth connection. Note that this operation requires disconnecting any Bluetooth device)

TF card usage method

- Switch to Bluetooth mode when turned on, insert the TF card into the TF port, and the device will automatically switch to "TF" mode and start playing audio files
- Attention
Supports up to 32GB TF card and supports MP3/WAV audio file formats

Pause/Play

Short press 4 to pause or play

Switch to the previous track

Long press 1 "-" to play the previous song

Switch to the next track

Long press 2 "+" to play the next song

How to use AUX Input

Press the "M" key to switch to AUX mode
Connect the external device to the device using a 3.5mm audio signal cable to play audio.
Press the 4 key to mute playback (note: using this function in AUX mode will mute, not pause playback)

Usage of USB flash drive

- Switch to Bluetooth mode when turned on, insert the USB flash drive into the USB port, and the device will automatically switch to "USB flash drive" mode and start playing audio files

Pause/Play

Short press 4 to pause or play

Switch to the previous track

Long press 1 "-" to play the previous song

Switch to the next track

Long press 2 "+" to play the next song

How to use radio FM

Automatic channel search method

Short press the "M" key to switch FM radio mode
Short press the 4 key to automatically start frequency search from low values, select and save the available channels.
When the first receivable channel is retrieved, the numerical value will stop once and display "P001"
When the second channel is retrieved, the numerical value stops again and displays "P002".
It automatically continues to receive until all channels are reached.

Long press the 1 key to switch to the previous radio station with a signal.
Long press the 2 key to switch to the next radio station with a signal.

* The number of channels that can be received may vary depending on the radio wave conditions in the usage location

Reminder

- When this product is damp, please wipe the moisture with a soft cloth
- When this product is contaminated, please put a small amount of neutral detergent in water and wipe it off with a soft cloth.
- After wiping with water, please air dry it in the shade.
- Please do not use diluents, gasoline, or alcohol to wipe the speaker.

Long term disuse

- Please charge once every 2-3 months.
- * Due to the characteristics of batteries, an empty battery may significantly shorten its lifespan and may not be able to charge.
- Please cut off the power supply for safekeeping.
- * Charging the battery for too long may significantly shorten its lifespan.
- Please do not store in a humid environment.
- * The metal parts may rust.

Specification parameters

Bluetooth Name	DF-720
Specifications	Size: 430*175*170mm Weight: 1.9KG
Battery	2000mAh
Usage time	Bluetooth mode 6H (*Playtime is measured at 50% volume and will vary based on type of music, level of bass and environmental factors)
Sound source	BT/AUX/TF/USB/FM/MIC
Charging input	5V1A
Charging time	approximately 2.5 hours
Power	10W
Speaker unit	4-inch low-frequency speaker*2
FM frequency	FM: 87.5--108MHz;
Accessory	Charging cable, instruction manual, AUX audio cable

Please assist in the recycling of batteries when disposing of products. The body of this product uses lithium polymer batteries. In order to effectively utilize resources, please follow the waste disposal instructions of each local autonomous body when disposing of waste.