



Barber Chair

OWNER'S MANUAL

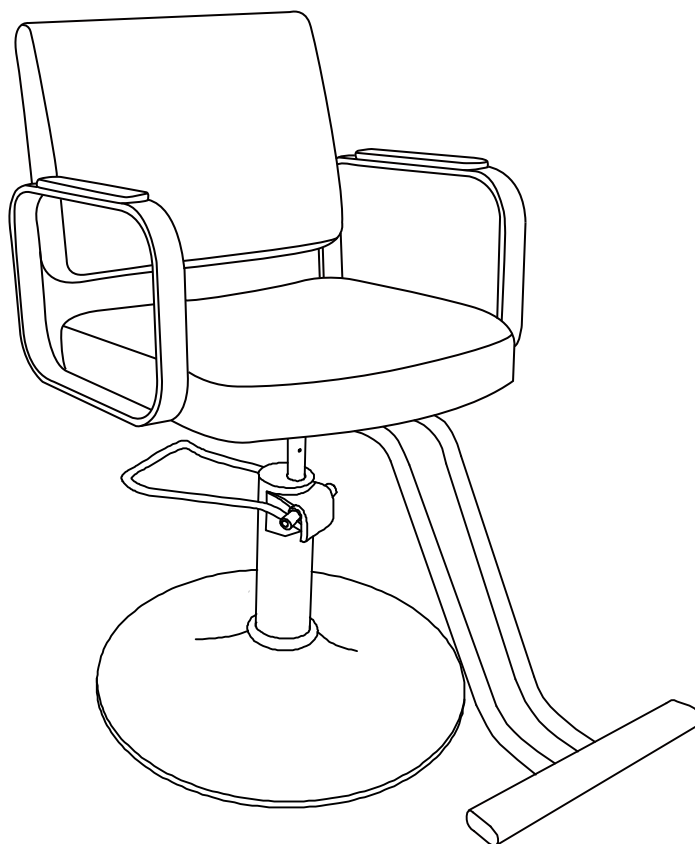

“

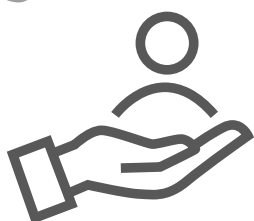


Warm Reminder






If you experience any issues with our product (including missing parts, damage, installation issues, or not meeting expectations), please contact us. We'll ensure satisfactory assistance within 24 hours.

Email: dslimited@163.com

”

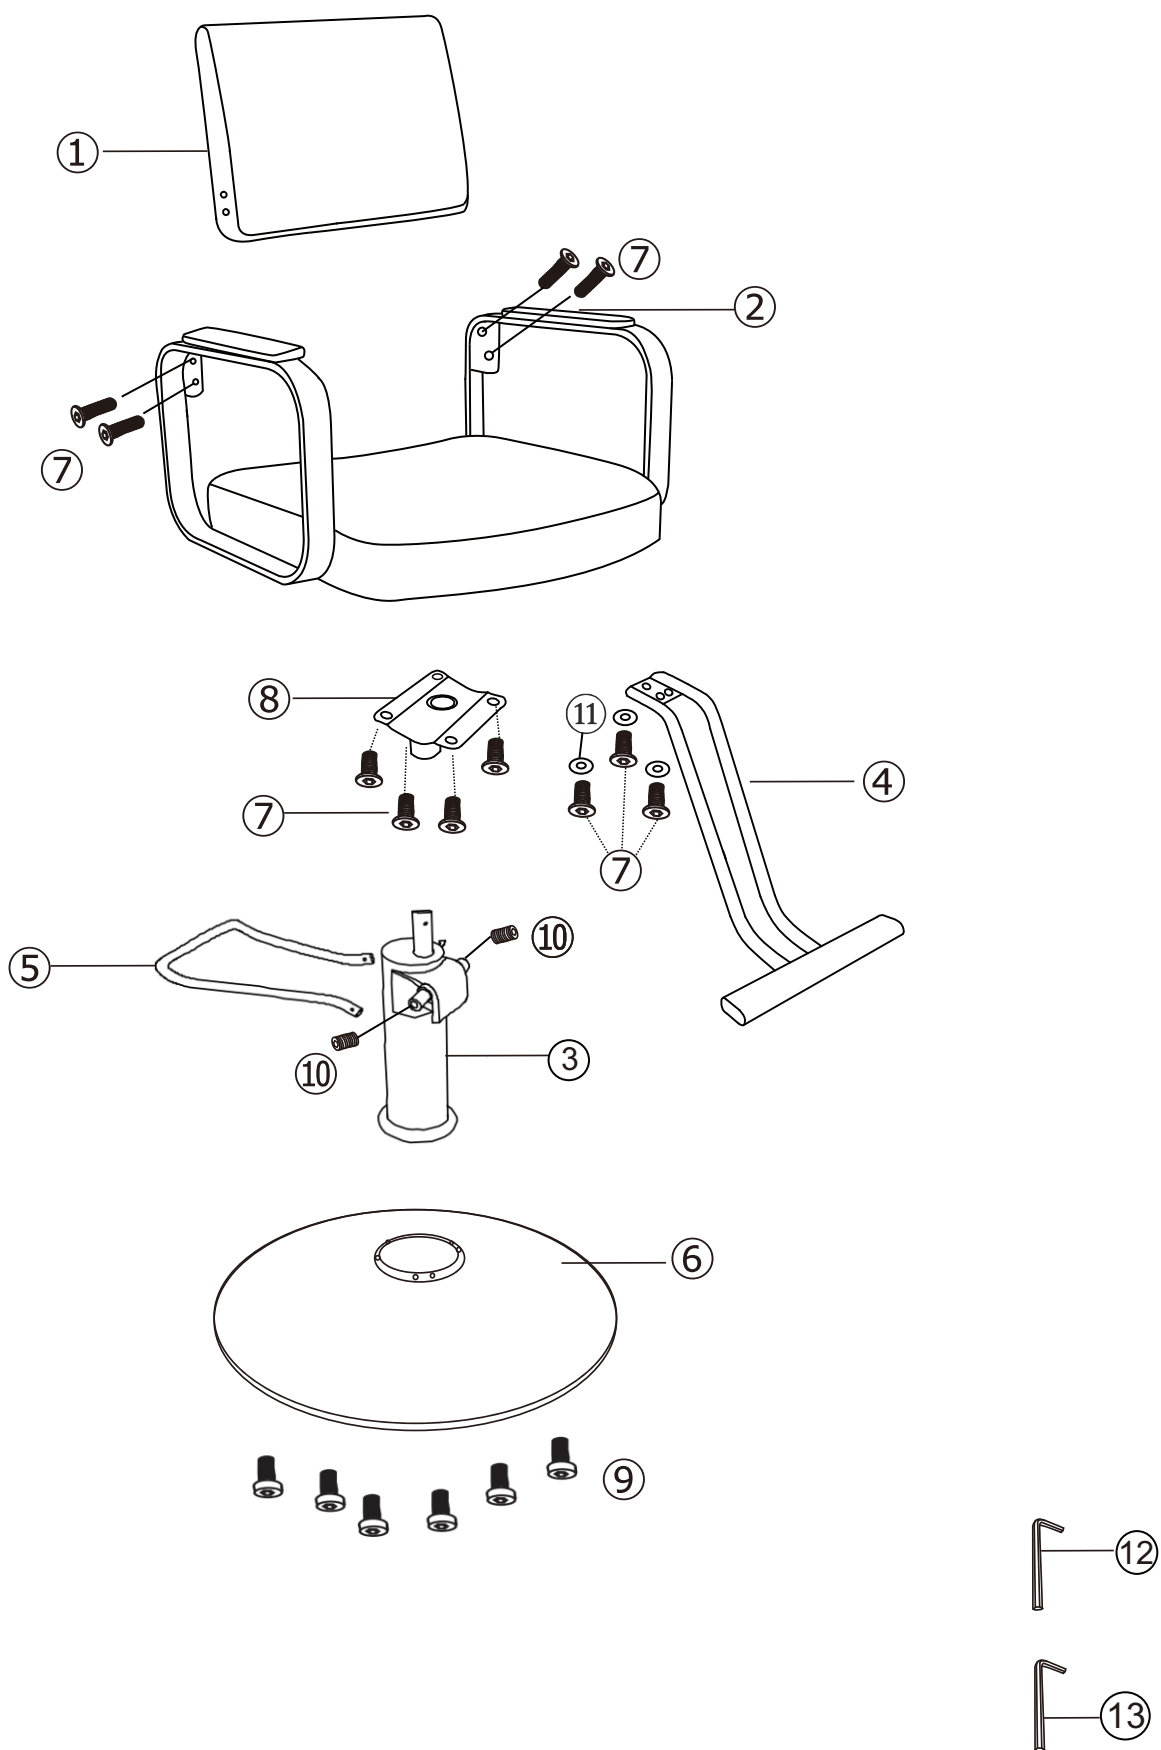

Parts

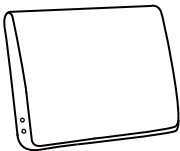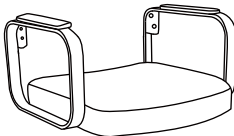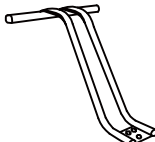  Code	Image	Parts Name	Qty(Pcs)	Code	Image	Parts Name	Qty(Pcs)
1		Backrest	1	2		Seat	1
3		Oil Pump	1	4		Footrest	1
5		Foot Pump Rod	1	6		Base	1
7		Hex Screw M6*20	11	8		Tray	1
9		Hex Nut M6	6	10		Lock Nut M8	2
11		Washer	3				
Some screws and nuts are pre-installed on the components and can be removed and used during installation							


Tools

Code	Image	Tools Name	Qty(Pcs)
12	 M6	Allen Key	1
13	 M4	Allen Key	1

Installation Diagram


Step One:

Put the Oil Pump (3) on the base (6)

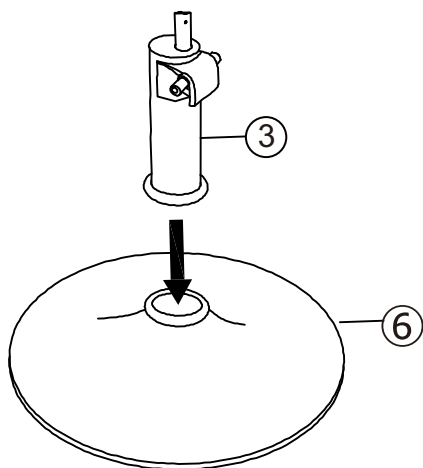


Step Two:

Turn the base (6) over and fix by six screws (9)

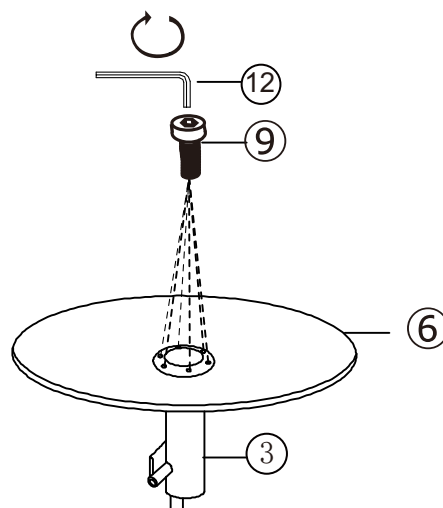


Step Three:

Use (13) to loose the two Lock Nuts M8
insert the Foot Pump Rod (5) to the Oil Pump (3)

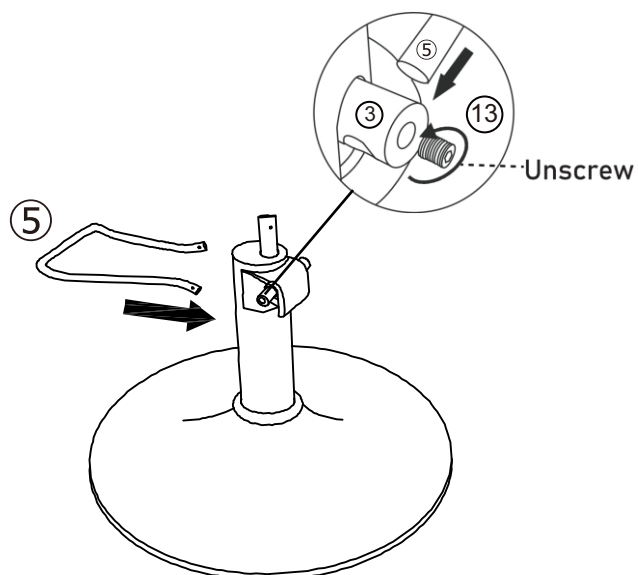


Step Four:

Tighten the two Lock Nuts M8 to fix the Foot
Pump Rod (5)

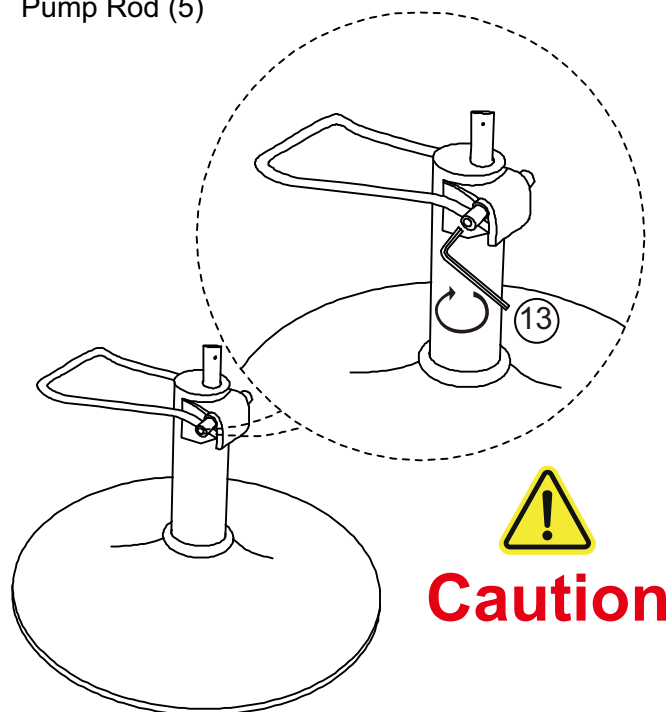

Step Five :

Loosen the 4 screws on the armrests counter-clockwise by 50% to facilitate the subsequent assembly of the backrest.

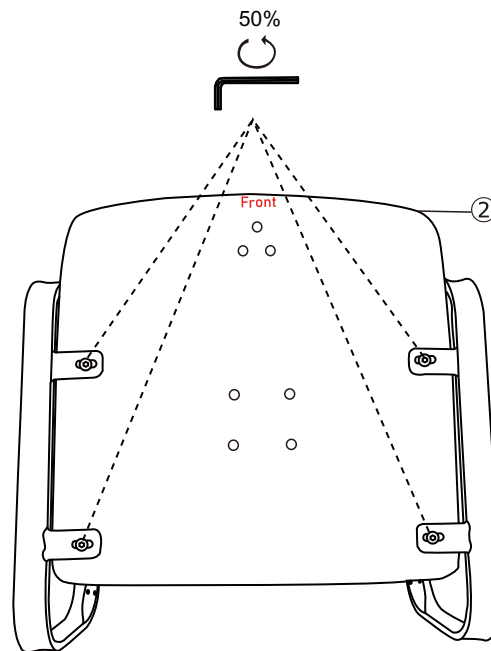

Step Six :


Attach the Tray (8) to seat (2) by using four Hex Screws M6*20 screw (7)



Step Seven:


Secure the Footrest (4) with three Hex Screws M6*20 (7) and three washer (3) to the seat (2)

⑦		x 3
⑪		x 3

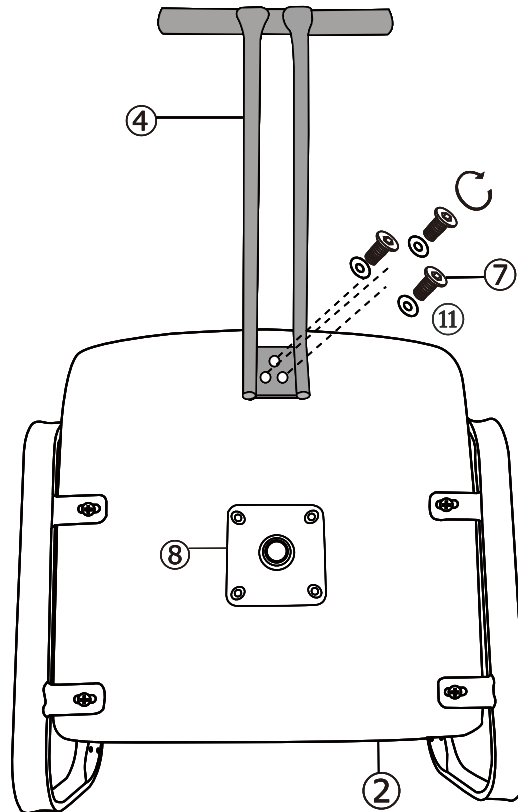


Step Eight :

Attach the assembled seat to the pump (3)

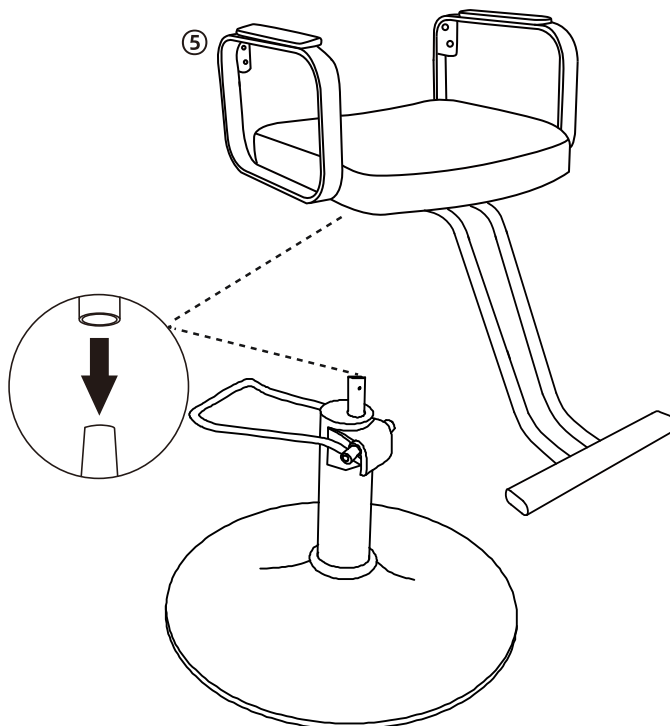


Step Nine :

Use four Hex Screws (7) to attach backrest (1) with right and left arms

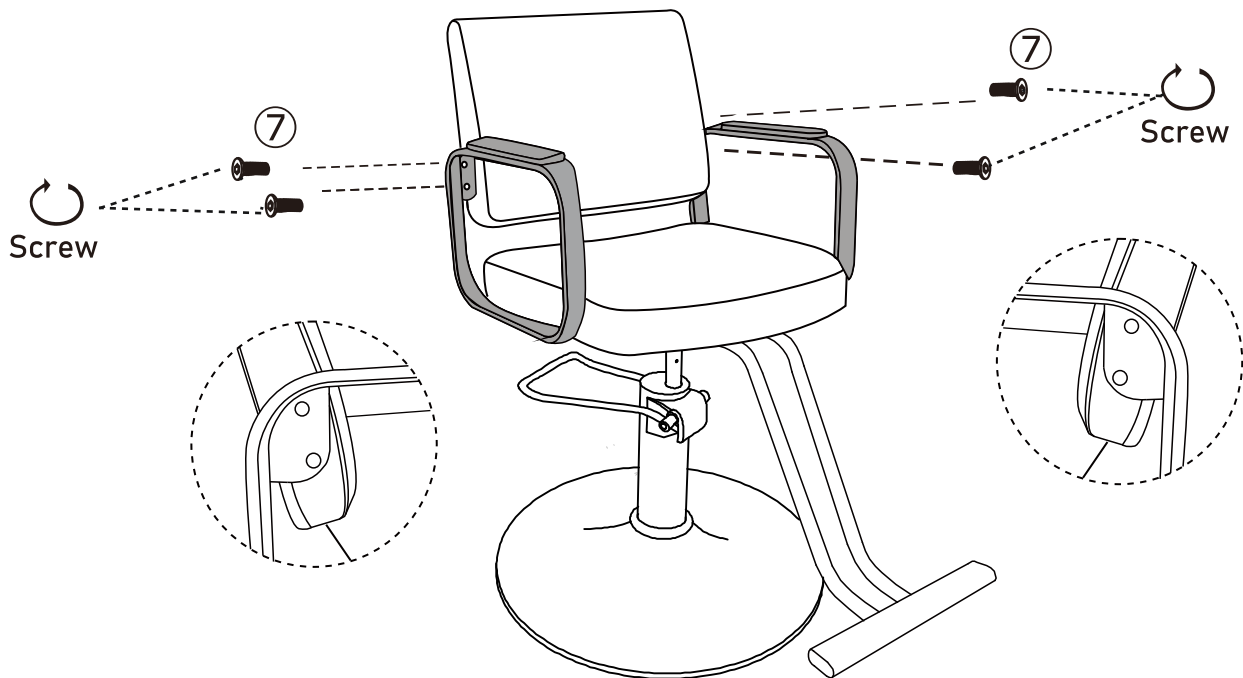

Step Ten :


Tighten four screws on arms to 100%

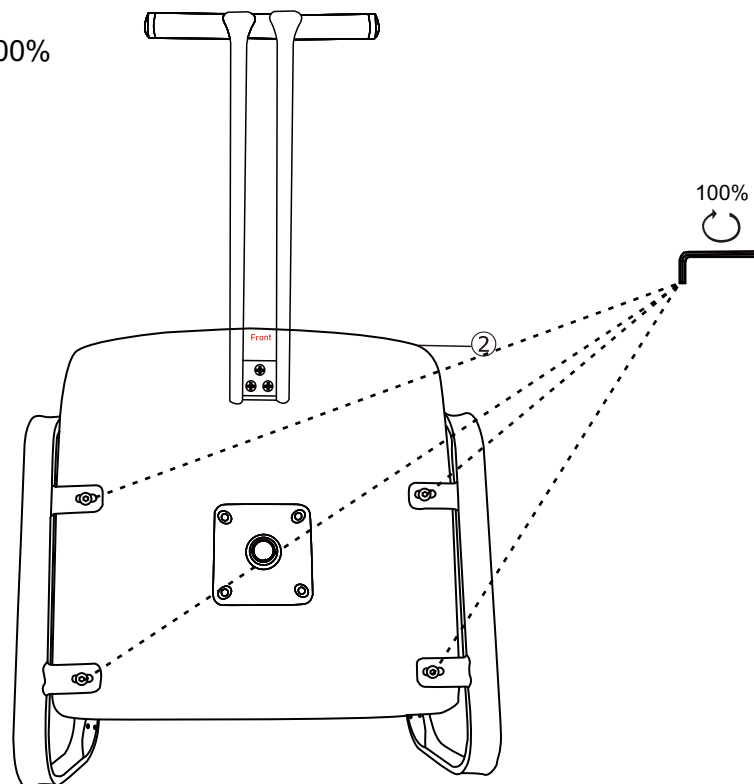

Instruction for use

Seat Lifting Operation Method

Step on the foot pump rod repeatedly; stop once the seat reaches the desired height
Pay attention to the stepping range

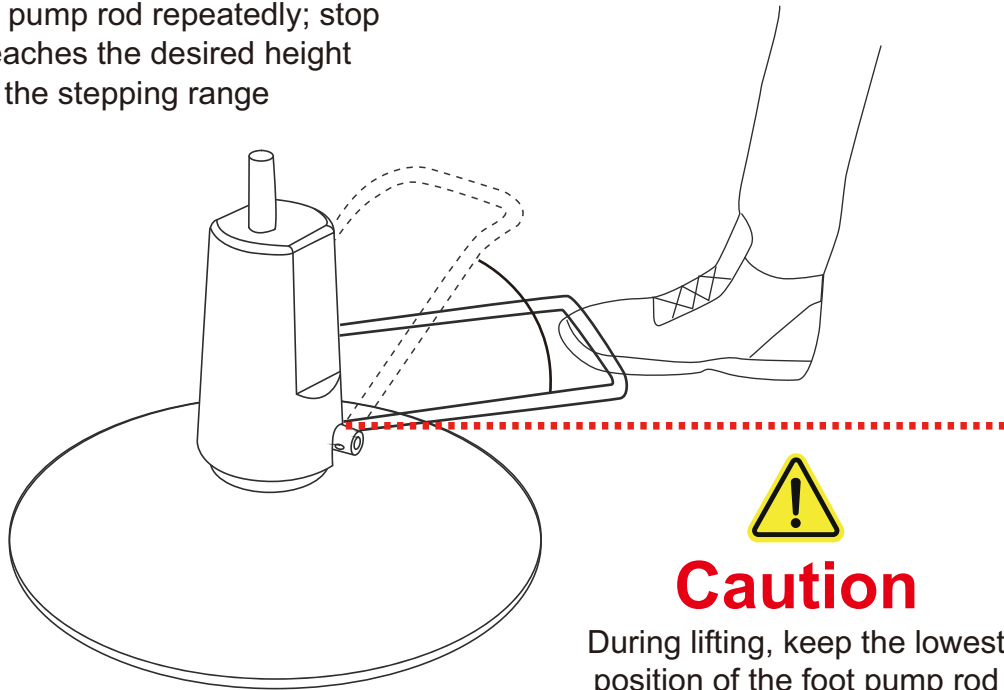


Caution

During lifting, keep the lowest position of the foot pump rod above the horizontal line

Seat Lowering Operation Method

Step on the foot pump rod fully and hold it; when the seat reaches the desired height, lift your foot and stop stepping

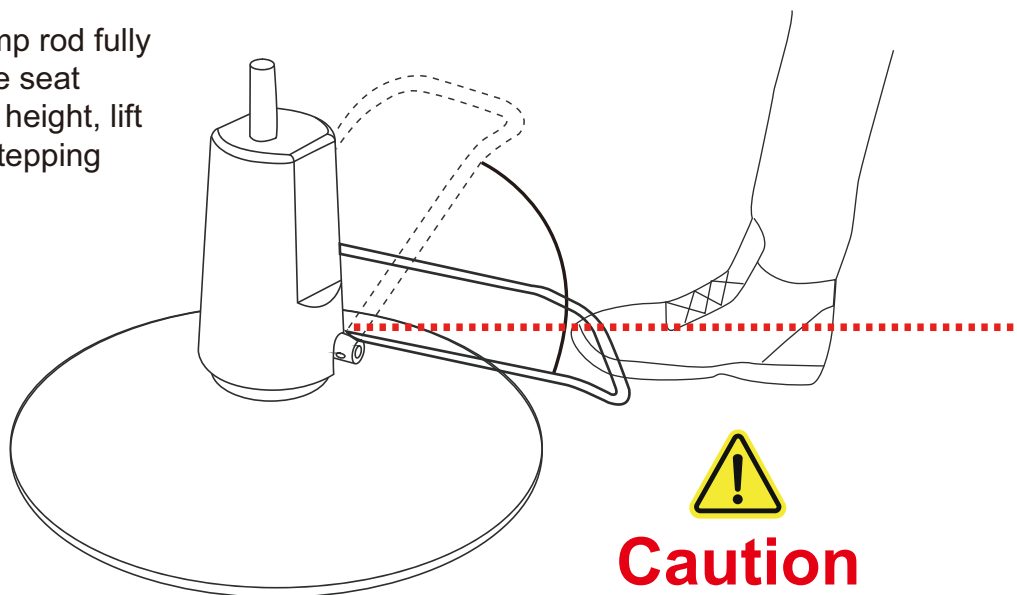

Caution

During lowering, press the foot pump rod to the lowest point (foot pump rod is below the horizontal line at this time)