

# INSTRUCTIONS MANUAL



## PATIO WICKER STORAGE TABLE

---

**Loosely assemble before tightening.**

IF YOU PURCHASED THE TABLE ONLINE AND HAVE ANY  
QUESTIONS OR CONCERNS  
PLEASE CONTACT US VIA EMAIL, TEXT, OR PHONE

---

EMAIL: [service2outdoor@gmail.com](mailto:service2outdoor@gmail.com)  
TEXT: +1 628-263-4608 (TEXT ONLY)  
PHONE: +1 877-561-6450

Date of Manufacture: 25W12

## Warning and Cautions:

Thank you for choosing our furniture. Please read and understand this entire manual before attempting to assemble or install the product.

### GENERAL BEST PRACTICES FOR ASSEMBLY

1. Familiarize yourself with the product and check all parts against the packing list. If any Parts are missing or damaged, do not install. Contact us immediately.
2. Some parts may contain sharp edges. Wear protective gloves, if necessary, during assembly.
3. Check all nuts and bolts periodically for tightness and, when required, tighten them again.
4. Pay attention to the parts orientation.
5. Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.

### IMPORTANT

- Make sure to place the washer on the bolt before inserting it into the bolt hole.
- To ensure the best fit, assemble loosely before tightening.
- Tighten all bolts after all parts are assembled.

### WARNINGS



**Keep children and pets away from the working area during assembly and adjustments.**

1. Keep the assembly area at least 6 feet from any obstruction, such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
2. When assembling and using this product, always follow basic safety precautions to reduce the risk of personal injury and product damage. Please read all instructions before assembly and use.
3. Check all bolts for tightness before use. **IMPORTANT** - check and tighten bolts often to keep them secure!
4. The table is not to be used for standing purposes and will not function as a stool or step-ladder. Use on even surfaces only.
5. The table supports a weight of 70lb (31.8 kg). Improper use of this product or failure to use it as directed may result in injury. Not intended for commercial use.

## WARRANTY

### •WHAT IS COVERED?





- The limited warranty is extended to the original purchaser and covers material and manufacturing defect, provided the item is properly maintained and used for personal residential purposes only.
- Warranty: 180 DAYS.
- Lost Accessories or Parts Policy: Costs for lost accessories or parts will be charged after 90 days from the date of purchase.





## MAINTENANCE




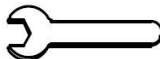 
### • RESIN WICKER PRODUCT CARE:

1. General Cleaning: Before use, clean the product with a soft, dry towel. When not in use, wipe off any dirt or loose debris. For regular cleaning, use a mild soap and water solution, rinse thoroughly, and dry completely.
  2. Weather Protection: To prolong the life of your resin wicker, avoid prolonged exposure to intense sunlight or heavy rain. Whenever possible, use a protective cover when the furniture is not in use, especially during extreme weather conditions.
  3. Avoid Harsh Cleaners: Do not use strong detergents or abrasive cleaners, as these may damage the finish.
- Regular Maintenance:** Over time, nuts and bolts may loosen. Occasionally check and re-tighten them on all products as needed.



## Assembly Instructions for 1PC Chair


<b>A</b>	<b>B</b>	<b>C1</b>	<b>C2</b>
			
1PC Bottom Board	1PC Table Top	1PC Front Board	1PC Back Board

<b>D</b>	<b>E</b>	<b>F</b>	<b>G</b>
	 <b>M6*15mm</b>	 <b>Ø16*Ø6.5*1mm</b>	 <b>M6*44mm</b>
2PCS Side Board	8PCS Bolt	8PCS Washer	2PCS Bolt


<b>H</b>	<b>I</b>	<b>J</b>	<b>K</b>
 <b>M5</b>			
2PCS Nut	2PCS Iron Chain	1PC Allen Wrench	1PC Open End Wrench



**1. Hook side boards (D) by front board (C1) shown in below diagram. Then secure side boards (D) to front board (C1) by using 2 bolts (E) and 2 washers (F) with allen wrench (J). Do not fully tighten the bolts now.**
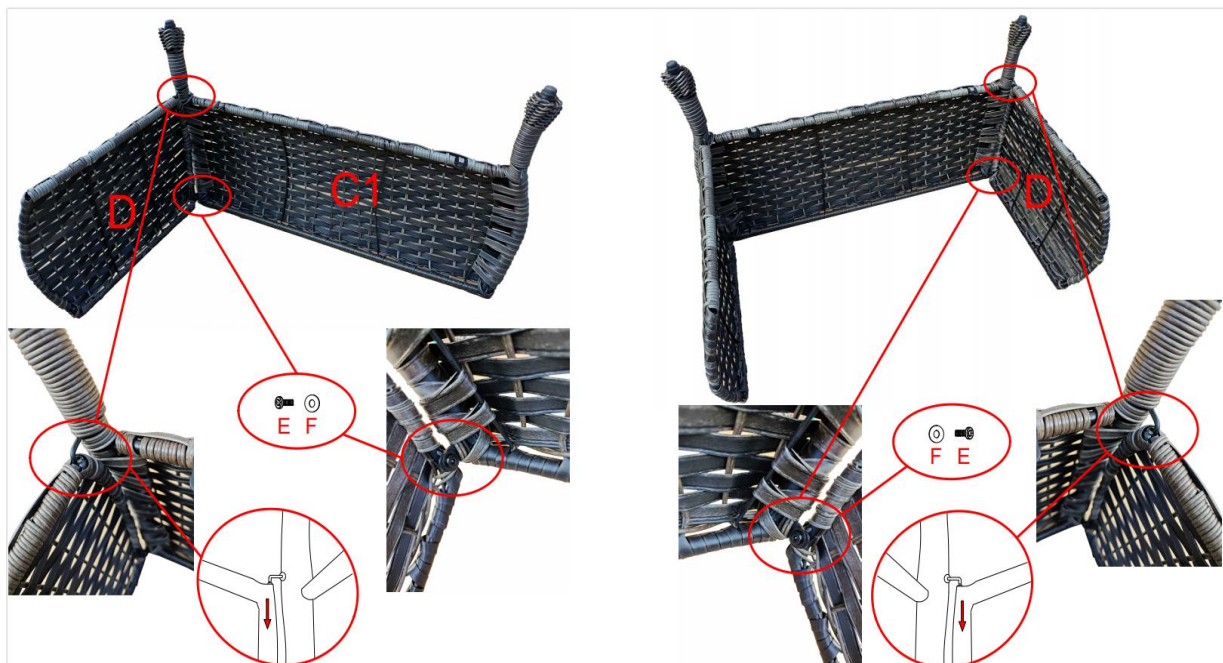
<b>E</b>		<b>M6*15mm</b>	<b>2</b>
<b>F</b>		<b>Ø16*Ø6.5*1mm</b>	<b>2</b>




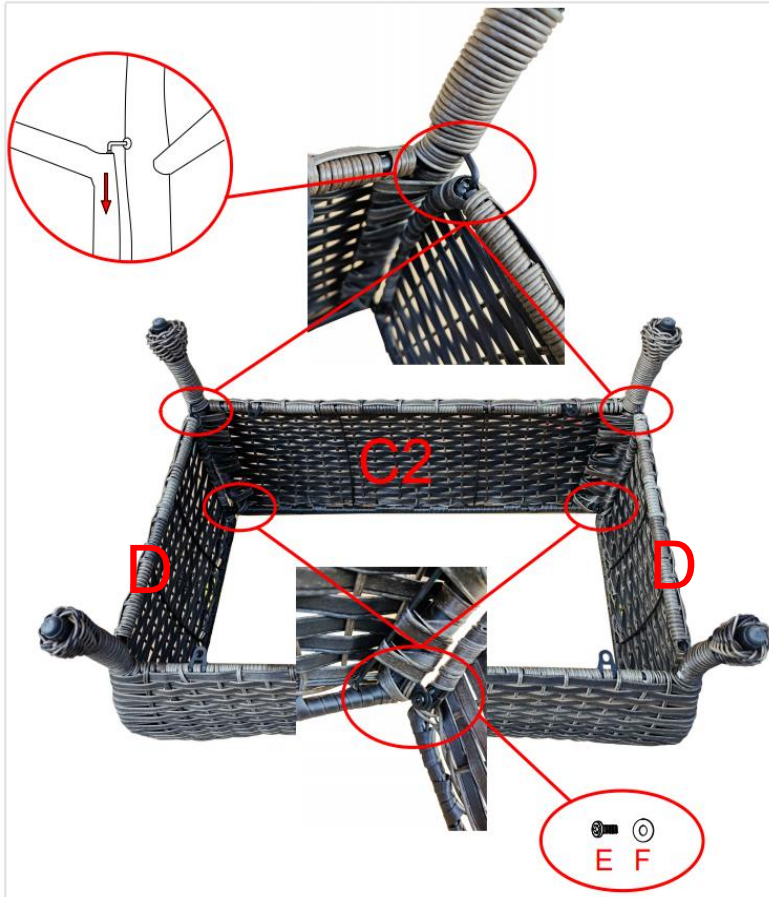

2. Hook side boards (D) by back board (C2) shown in below diagram. Then secure side boards (D) to back board (C2) by using 2 bolts (E) and 2 washers (F) with allen wrench (J). **Do not fully tighten the bolts now.**



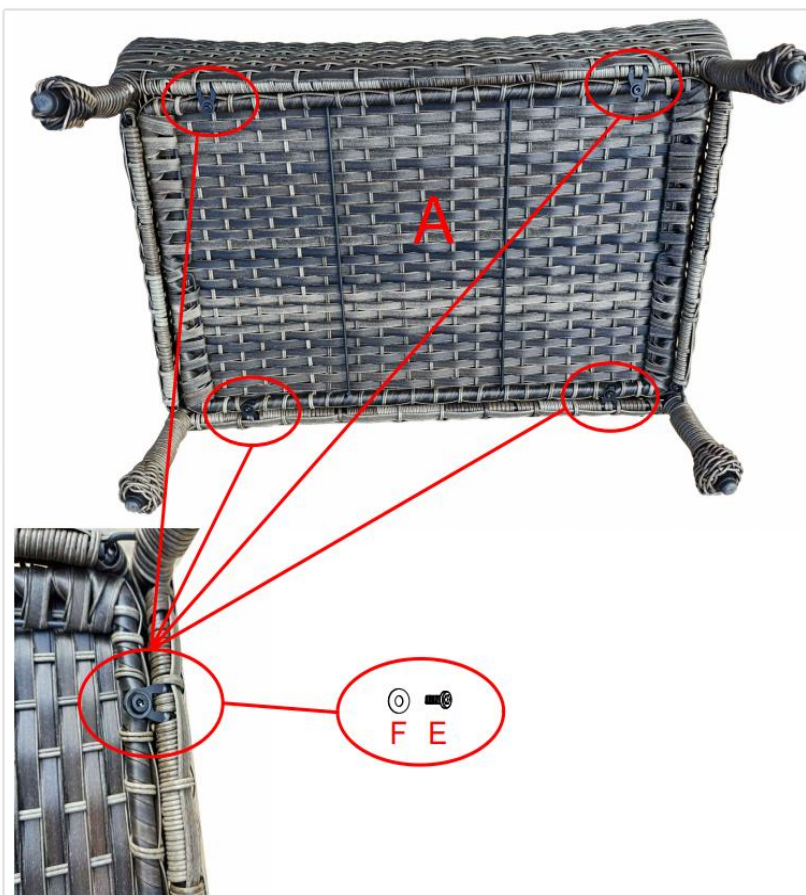

E		M6*15mm	2
F		Ø16*Ø6.5*1mm	2


3. Secure bottom board (A) to assembled front and backs boards (C1&C2) back board (C2) by using 4 bolts (E) and 4 washers (F) with allen wrench (J). **Fully tighten all the bolts now.**



E		M6*15mm	4
F		Ø16*Ø6.5*1mm	4

4. Secure table top (B) to assembled table frame by using 2 bolts (G) and 2 nuts (H) with allen wrench (J) and open end wrench (K).

G		M6*44mm	2
H		M5	2

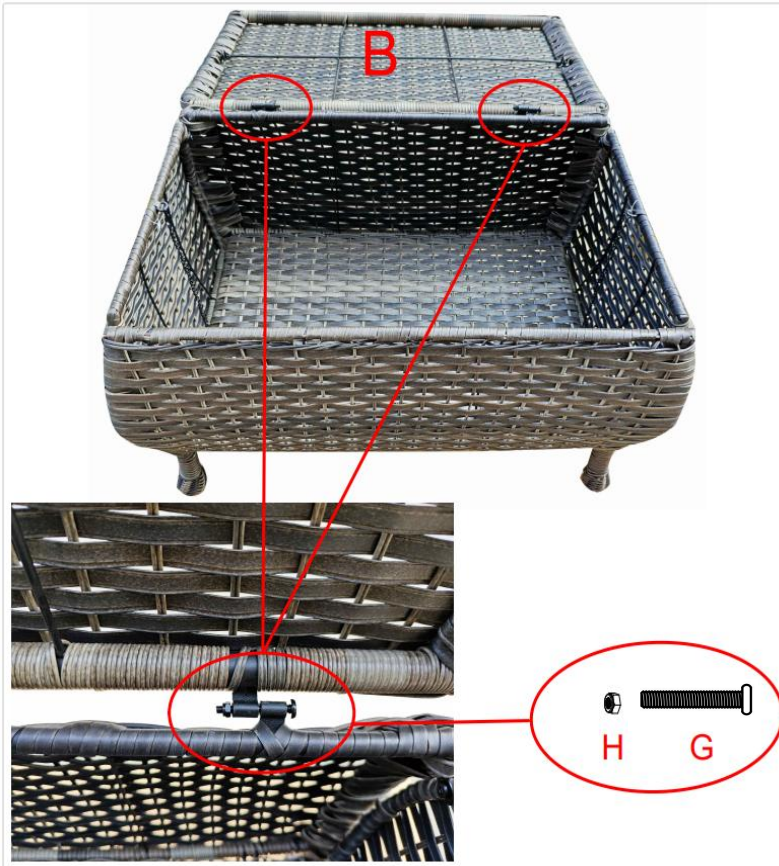

5. Lock 2 iron chains (I) on 2 side boards (D) and table top (B).  
Cover the table top (B), and it is ready to use now.

