 


Power Swivel Rocker Recliner

US-PRC322

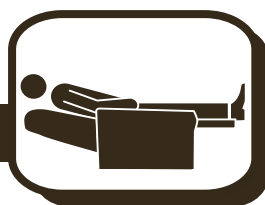

OWNER'S MANUAL

SAFETY GUIDELINES

1. **Mandatory**



Please read the safety instructions and other instructions carefully. Failure to follow the guidelines and warnings in this manual and on the product may result in personal injury or product damage and will void the product warranty. Please keep this manual in a safe place for future reference.

2. **⚠ Danger**



Electrical Hazards



Do not connect an extension cord to an AC/DC converter or battery charger.



Use a UL listed or UL certified single outlet plug style surge protector with a protection capacity of at least 1000 joules. The surge protector must plug directly into the electrical outlet.



To prevent suffocation, keep plastic bags out of the reach of children.



Do not allow children and pets to play on or near the chair while in use. Serious injury or even death may result if children or pets hide under the chair while it is in motion.



Keep cord out of reach of small children, and do not use where it may be a trip hazard.



Avoid exposing upholstered seating to burning cigars or cigarettes, open flames, and high temperatures.



Do not use this product if it is wet, submerged, or in contact with water or any liquid.



Do not place objects under the chair.



Always keep the seat upright and closed. Keep hands and feet away from the mechanism and all moving parts. The footrest must be fully closed before entering or exiting the seat. Only the user may operate the seat.

ASSEMBLY INSTRUCTIONS

1. Part List

Box 1 of 2

A-R wing



B Armrest Cover



C Chair Base



D Pillow



Box 2 of 2

A-L wing



B Armrest Cover



E-L Left Armrest



E-R Right Armrest With Button



F Backrest



G Tablet Holder



H Power Cord



I Remote Control



 
J Power Source



2. Assembly Steps

Step1 - Armrest Assembly

1. Ensure the armrest which has USB charge port is located on right of base.
2. Slide the left and right armrest into the brackets of the base.
3. Press each armrest down as far as it will go (Figure).

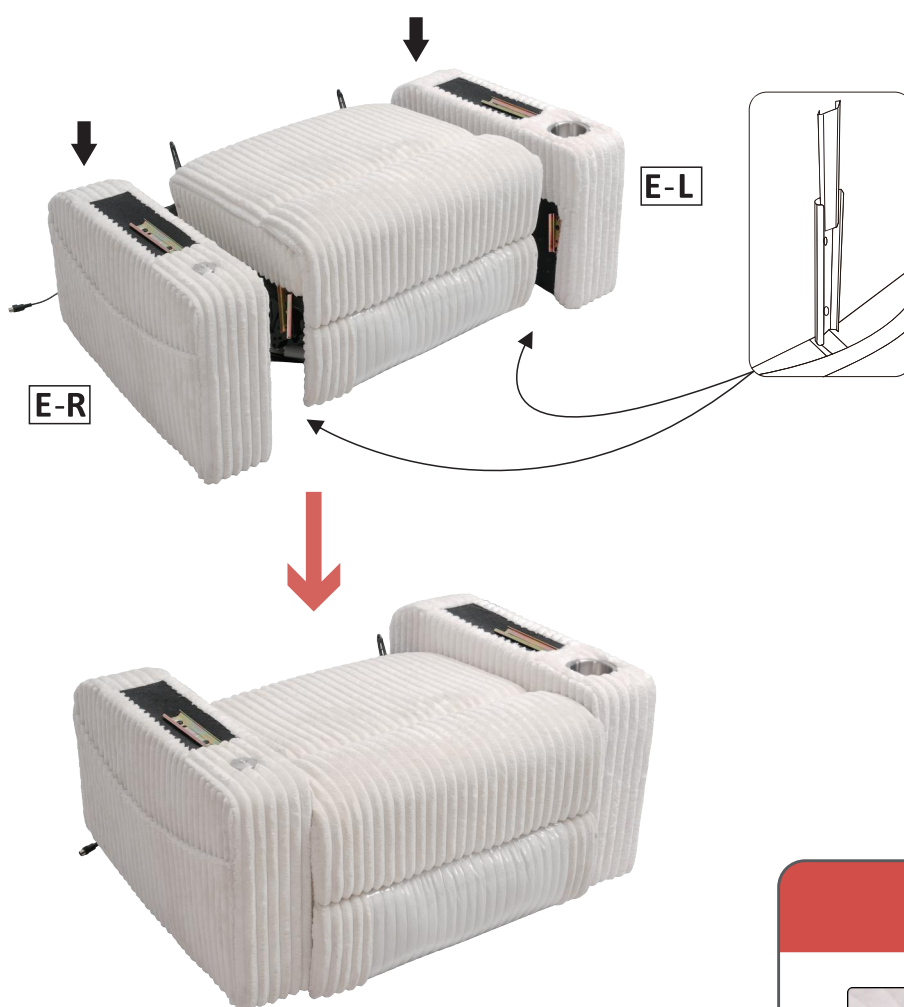


ATTENTION



Ensure the two connections on each armrest are all inserted onto the seat tightly.

Step2 - Armrest Cover Assembly

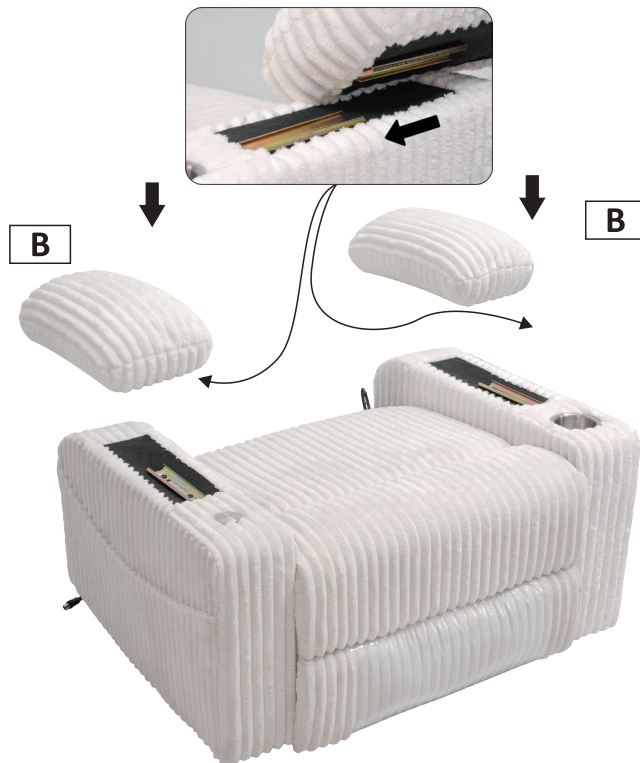

Step3 - Backrest Assembly

1. Align the brackets of backrest at the clips of seat-back (Figure).
2. Push the brackets into the seat-back tightly. Listen for a “click” sound on each side to ensure the backrest is locked in properly.




NOTE:

Align the slots at the bottom of the backrest with the corresponding protrusions on the chair base. Push the backrest firmly into the base until you hear a click, indicating it's securely in place.

Step4 - Wing Assembly

1.Insert the Connectors on the Wing [A-L] and Wing [A-R] into the Connectors on the Backrest Panel[F].

2.Push firmly down on Wings to sure they are fully locked into position.

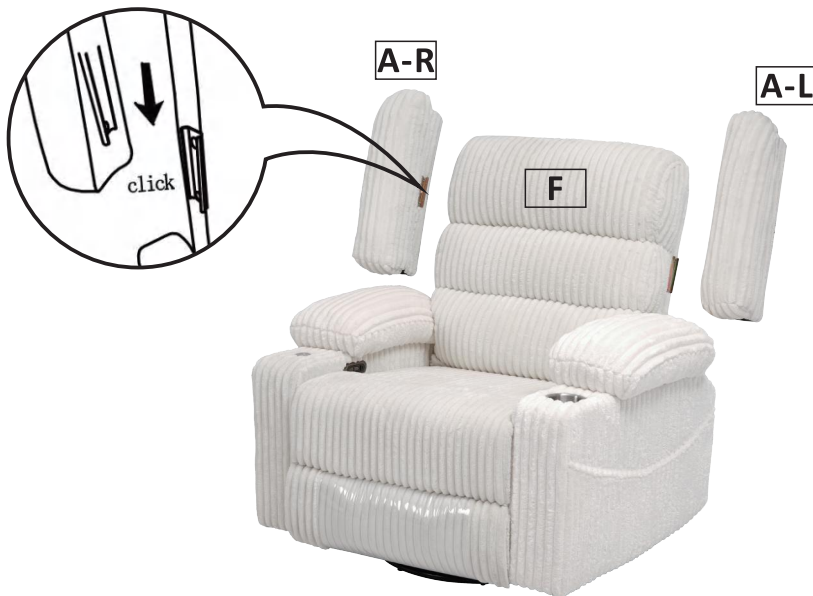

Step5 - Tablet Holder Assembly



Step6 - Motor & Massage Remote Connections

- ① and ② wire connect with the backrest and chair base.
- ③ wire connects with backrest and power cord(H).
- ④ wire connects with backrest and remote control(I).



NOTE: 1:Two same color wires connect.

2:Plug power cord and power source into outlet,then you can use all function.

Step7-Final Check

1. Make sure both metal brackets on each armrest are mounted on the base.
(There are two metal brackets on each side of the base, it looks like assembly finished when you insert armrest into only one bracket instead of two, however all pressure will apply to one bracket, that is one likely reason that the armrest fall apart from the seat.)
2. Make sure the backrest inserts are locked to the base.
(Pull up the backrest to check if it is locked in place.)
3. Make sure all wires are connected tightly.
4. Make sure all wires are not placed on the bottom of the rack and will not be pressed by frame.
(If the wire is pressed by the frame, the wire will be broken by the frame and the chair will stop working.).
5. Make sure the anti-tilt fitting screws are tightened.



RETURN/ REPLACEMENT POLICY

■ Notice

Why don't we recommend returning the item by yourself?

- Huge cost- UPS/FedEx oversize fee.
- Need you to take the box to UPS/FedEx facility.

Return/ Replacement Policy

You have 30 days from the date of purchase to return any item purchased from our store.

Please securely pack the item in its original packaging, including any accessories or manuals that came with the product. To initiate a return, please contact our customer service team .

Return Conditions

We accept the return of items that are in new, unused condition, with original tags attached and all original packaging and other components included. Refunds will be issued in the original form of payment for the price of the item, including taxes.

NOTE:

- Please keep the original packaging in case the product needs to be returned. If the original packaging is not available, the newly found packaging needs to meet the following size standard:
UPS/FedEx packaging size standard: (width+ height) * 2+ length< 128 inch.
- Please disassemble the product before you return it, otherwise there will be a huge cost as oversized and it could even exceed your order amount.
- Please do not purchase return label for a damaged/defective product by yourself.
- If you have any problem to return the product, please contact us immediately, we will do our best to help you with a reasonable solution.